# SCA.1, SCA. 2 INTERFACE CONNECTOR

# 240 SERIES (SCA)

**RoHS Compliant** 

#### **■ FEATURES**

- Half pitch connector conformed to SCA system (80 pins).
- Add mating guide and ESD protection to do plug-in safety and reliability (They are newly added on SCA. 2CN).
- Hot-plugging. Ground contacts mate first before other contacts mate when engagement is done (conforms to SCA.2 specification).
- · To prevent pin-bending, bellows contacts are used.
- Plug: 2 types are available.
  - 1) The center of a SMT plug mates the center of a PCB.
  - 2) 0.9 mm (0.035 in.) off-set from center



#### **■** SPECIFICATIONS


Item	Specifications	
Operating temperature range	–55°C to +105°C	
Current rating	DC 1 A	
Voltage rating	AC 240 V	
Contact resistance	40 mΩ max. (DC 6 V, 0.1 A)	
Insulation resistance	1000 MΩ min. (DC 500 V)	
Dielectric withstand voltage)	AC 750 V for 1 minute	

#### **■ MATERIALS**


Item	Materials				
Insulator	Polyester (UL94V-0)				
Conductor	Copper alloy				
Plating	Contact	Gold plating			
Tlating	Terminal	Palladium plating			

#### PLUG, SMT (STRADDLE MOUNT) FIBER CHANNEL

#### DIMENSIONS

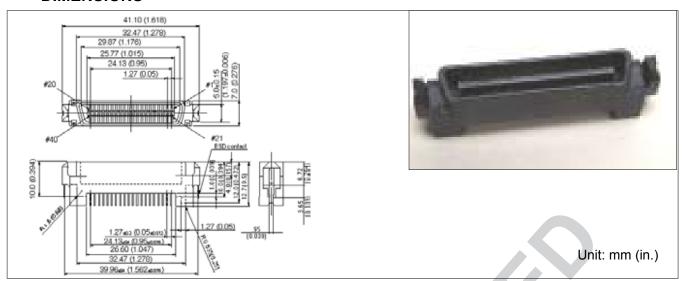

#### **■ PC BOARD LAYOUT**

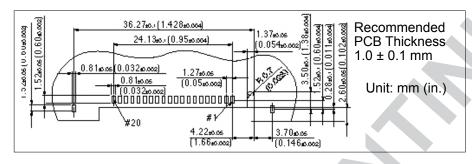


### ■ PART NUMBER

FCN-248Q040-L/ES


#### SOCKET, VERTICAL MOUNT FIBER CHANNEL

#### DIMENSIONS

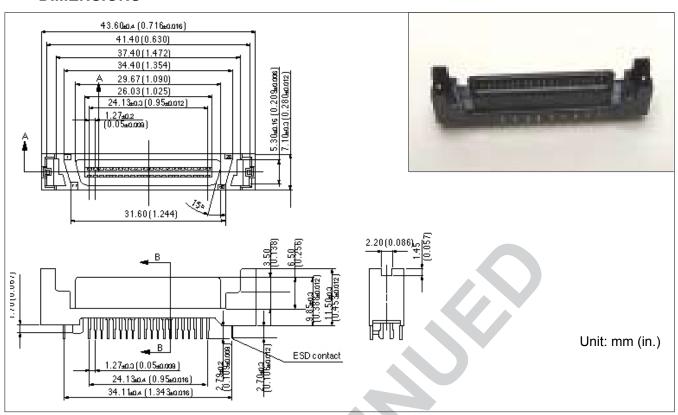

RECOMMENDED PWB THICKNESS	PART NUMBER	SIGNAL CONTACT POST LENGTH (A)	ESD CONTACT POST LBNGTH (B)
PT: 0.8 mm	FCN-2448040-L/CS	1.88 (0.074)	1.88 (0.074)
PT : 1.6 mm	FCN-244804-0478S	2.79 (0.110)	270 (0.106)
PT : 2.0 mm	FCN-2448040-L/DS	3.12 (0.123)	3.12 (0.123)
PT: 24 mm	FCN-244804047ES	3.14 (0.124)	345 (0.136)
PT: 3.2 mm	PCN+244B0401./FS	4.06 (0.160)	4.27 (0.168)

#### ■ PC BOARD MOUNTING PATTERN

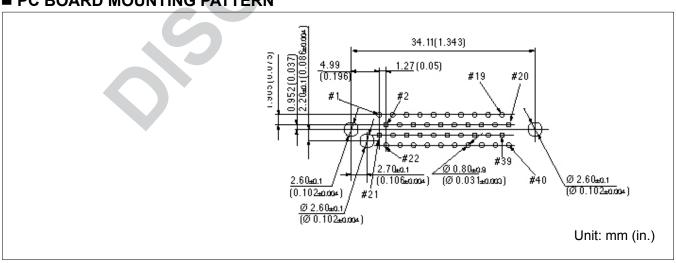

## 240 Series

#### Fujitsu Components International Headquarter Offices

Japar

Fujitsu Component Limited Gotanda-Chuo Building

3-5, Higashigotanda 2-chome, Shinagawa-ku

Tokyo 141, Japan Tel: (81-3) 5449-7010 Fax: (81-3) 5449-2626

Email: promothq@ft.ed.fujitsu.com

Web: www.fcl.fujitsu.com

North and South America

Fujitsu Components America, Inc. 250 E. Caribbean Drive Sunnyvale, CA 94089 U.S.A.

Tel: (1-408) 745-4900 Fax: (1-408) 745-4970

Email: components@us.fujitsu.com

Web: http://www.fujitsu.com/us/services/edevices/components/

Europe

Fujitsu Components Europe B.V.

Diamantlaan 25 2132 WV Hoofddorp Netherlands Tel: (31-23) 5560910 Fax: (31-23) 5560950 Email: info@fceu.fujitsu.com Web: emea.fujitsu.com/components/

**Asia Pacific** 

Fujitsu Components Asia Ltd. 102E Pasir Panjang Road #01-01 Citilink Warehouse Complex

Singapore 118529 Tel: (65) 6375-8560 Fax: (65) 6273-3021 Email: fcal@fcal.fujitsu.com

Web: http://www.fujitsu.com/sg/services/micro/components/

©2008 Fujitsu Components America, Inc. All rights reserved. All trademarks or registered trademarks are the property of their respective owners.

Fujitsu Components America or its affiliates do not warrant that the content of datasheet is error free. In a continuing effort to improve our products Fujitsu Components America, Inc. or its affiliates reserve the right to change specifications/datasheets without prior notice. Rev. October 20, 2008.