

# W33 series

## One- and Two-Pole, Switchable **Thermal Circuit Breaker / Power Switch** With Optional Indicator Lamp

(B) 117

#### **Features**

- Combines on/off switch and circuit protection in a single unit.
- 2 to 20 amp ratings (<2A types available as special order).</li>
- One or two pole sensing.
- Lighted or non-lighted rocker actuator in various colors.
- Convenient, snap-in mounting.
- · Optional auxiliary switch available.
- Trip-free operation.

#### Electrical Data @ 25°C

Calibration: Breaker will continuously carry 100% of rated load. It may trip between 101% and 135%, but must trip at 135% within one

hour at +25°C. Dielectric Strength: Over 2,000 volts RMS.

Maximum Operating Voltages: 50VDC, 250VAC to 400 Hz. Interrupt Capacity: 1,000 amps at 50VDC; 250VAC, 60 Hz. and

125/250VAC, 400 Hz.

1,500 amps at 125/250VAC, 60 Hz.

Resettable Overload Capacity: Ten times rated current.

#### **Agency Approvals**

W33 series is UL 1077 Recognized as Supplementary Protectors, File E69543, and CSA Accepted as Supplementary Protectors (Appliance Component Protectors), File LR15734.

Users should thoroughly review the technical data before selecting a product part number. It is recommended that users also seek out the pertinent approvals files of the agencies/laboratories and review them to ensure the product meets the requirements for a given application.

#### Mechanical/Environmental Data


Termination: Poles 1&2: .250" (6.35mm) guick connect/solder terminals. Opt. Aux. Sw.: .110"(2.79mm) quick connect terminals.

Mounting: Snaps into panel from front. Actuator: Rocker or lighted rocker. Shock: 30g tested to IEC 68-2-27, test Ea. Vibration: 8g tested to IEC 68-2-6, test Fc.


Switch Endurance Cycling: 50,000 operations at rated load.

1,000 operations at 200% rated load.

## Time vs. Current Trip Curve @ +25°C

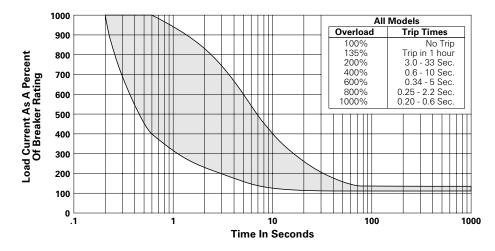

## **Ambient Compensation Chart**

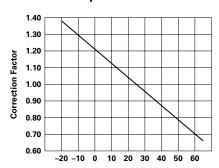


Ambient Temperature In Degrees Centigrade (°C)

To use this chart: Read up from the ambient temperature to the curve, and across to find a correction factor. Multiply the breaker rating by the correction factor to determine the compensated rating. Calculate the overloads in terms of the compensated rating to use the published trip curve.

Catalog 1308242 Issued 3-03 (PDF Rev. 9-05)

P&B


### **Ordering Information**

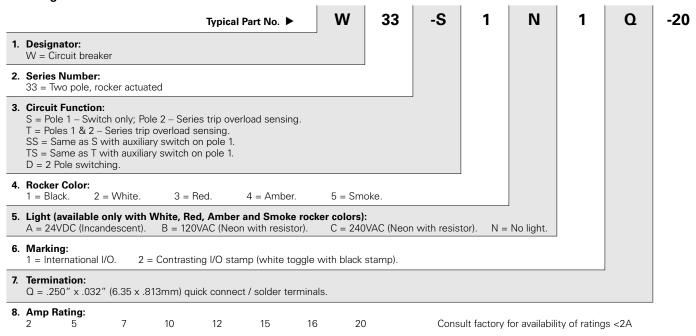

### Stock Items - Authorized distributors are more likely to stock the following items.

W33-S1N1Q-5 W33-S4B1Q-10 W33-T4B1Q-5 W33-S1N1Q-15 W33-S4B1Q-15 W33-T4B1Q-10 W33-T4B1Q-10 W33-T4B1Q-15

### **Outline Dimensions**

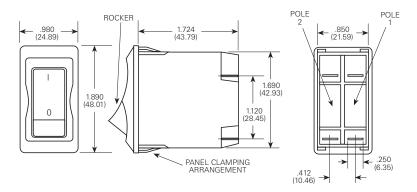

FITS .875 x 1.750 (22.22 x 44.45) PANEL OPENING FROM .032" - .250"(.813mm - 6.35mm) THICK

### **Schematic**

