Selection guide

<u>Home</u> > <u>Product Information</u> > <u>Noise Filters</u> > NBC Series

### PRODUCT INFORMATION ......



High-attenuation type(2-Stage filter)(Single Phase)
Difference from old single phase 250V noise filters:

- (1) Can select leakage current
- (2) Push-down style terminal block prevents screw drop-out and cover loss Can be used for many purposes.
- ▶ Product Lineup | NBC |
- CATALOG DATA DOWN LOAD

- Technical Data
- Specifications, circuit diagram and derating curve External view
- Characteristic data Instruction manual About noise filters

NBC Series: High-attenuation type of common mode noise from 150KHz to 1MHz(2-Stage filter)(single phase)

- Features
  - High attenuation type of common mode noise from 150kHz to 1MHz
  - Single Phase 250 VAC
  - Selectable leakage current
  - Quick and easy push-down terminal
     Just connect the wires, push down and tighten the screws with a screwdriver
  - DIN rail installation type(Option)
- Safety agency approvals
  - UL1283
  - CSA C22.2 No.8 (C-UL)
  - DIN EN60939 VDE0565 Teil 3-1
  - ENEC
- Environment
  - RoHS directive
- 5-year warranty

# **NBC** series

Ordering information

-10





①Model Name ②Rated Current

(3) Line to ground capacitor code: See table 1.1.

table1.1 Line to ground capacitor code

Code	Leakage Current (Input 125/250V 60Hz)	Line to ground capacitor (nominal value)		
681	75.5 μ A/ 150 μ A max	680pF		
102	0.13mA/ 0.25mA max	1000pF		
222	0.25mA/ 0.5 mA max	2200pF		
332	0.38mA/ 0.75mA max	3300pF		
472	0.5 mA/ 1.0 mA max	4700pF		

\*When the line to ground capacitor code is different, the attenuation characteristic is different.

D:DIN rail installation type

 $\ensuremath{\mbox{\$}}$  The dimensions change when the option is set. Refer to External view.

#### Features of NBC series

### High-attenuation type of common mode noise from 150kHz to 1MHz (2-stage filter)

The terminal cover is retracted inside the unit

· Single Phase 250 VAC


DIN rail installation type is option

· Quick and easy push-down terminal Just connect the wires, push down and tighten the screws with a screwdriver


#### **Specifications**

•								
No.	Items	NBC-06-472	NBC-10-472	NBC-16-472	NBC-20-472	NBC-30-472		
1	Rated Voltage[V]	AC 1 φ 250 / DC250						
2	Rated Current[A]	6	10	16	20	30		
3	Test Voltage (Terminal-Mounting Plate)	2,500 VAC (Cutoff Current = 20mA), 1 minute at room temperature and humidity						
4	Isolation Resistance (Terminal-Mounting Plate)	500 VDC 100M $\Omega$ min at room temperature and humidity						
5	Leakage current 125/250V 60Hz	0.5mA/1.0mA max						
6	Voltage drop	1.0V max						
7	Safety agency approval temperatures	-25 to +85°C (Refer to Derating Curve)						
8	Operating temperature	-40 to +85°C (Refer to Derating Curve)						
9	Operating humidity	20 to 95%RH (Non condensing)						
10	Storage temperature/humidity	-40 to +85°C/20 to 95%RH (Non condensing)						
11	Vibration	10 to 55Hz, 19.6m/s² (2G), 3min. Period, 1hour each X, Y and Z axis						
12	Impact	196.1m/s² (20G), 11ms Once each X, Y and Z axis						
13	Safety agency approvals	UL1283, CSA C22.2 No.8 (C-UL), DIN EN60939 VDE0565 Teil3-1, ENEC (At only AC input)						
14	Case size (without projection) /Mass	53×41×92 mm (W×H×D) /270g max (Option : -D refer to external view)						

#### **Circuit Diagram**

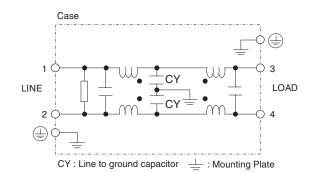

#### **Derating Curve**

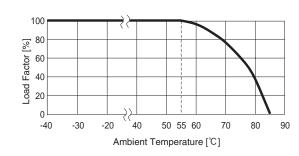




## **COSEL** | NBC,NBM series


#### **External view**

This product is shipped in the following condition, because it is equipped with push-down terminals.

- 1)The terminal cover is retracted inside the unit.
- ②The screws for connecting the terminals are held in the up right position.

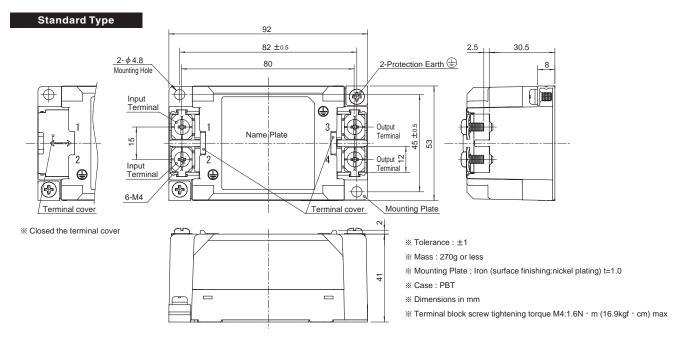

#### **DIN rail installation Type**

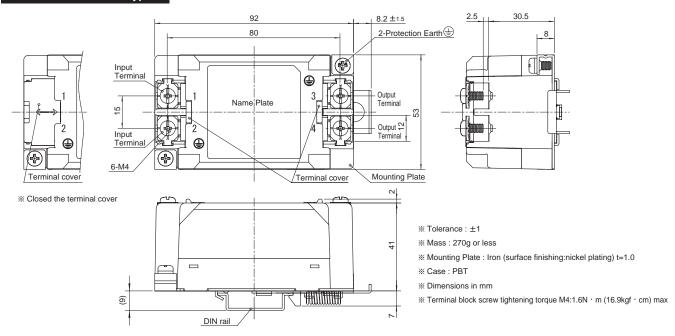

## ■Note when installing the noise filter on a DIN rail.

When the noise filter is grounded through the DIN rail, the proper noise attenuation may not be achieved.

Be sure to connect the protection earth (PE) of the noise filter body to the earth.

