








## **Model Number**

NCB15-30GM40-N0-10M

## **Features**

- · Comfort series
- 15 mm quasi-embeddable

## Connection



## **Accessories**


BF 30

Mounting flange, 30 mm

EXG-18

Quick mounting bracket with dead stop

## **Dimensions**

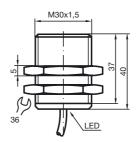

# **Technical Data**

General specifications		
Switching element function		NAMUR, NC
Rated operating distance	s <sub>n</sub>	15 mm
Installation		quasi embedd.
Output polarity		NAMUR
Assured operating distance	sa	0 12.15 mm
Reduction factor r <sub>Al</sub>		0.33
Reduction factor r <sub>Cu</sub>		0.29
Reduction factor r <sub>303</sub>		0.76
Nominal ratings		
Nominal voltage	Uo	8 V
Switching frequency	f	0 450 Hz
Hysteresis	Н	1 15 typ. 5 %
Reverse polarity protected		reverse polarity protected
Short-circuit protection		yes
Current consumption		
Measuring plate not detected		≥ 2.2 mA
Measuring plate detected		≤ 1 mA
Indication of the switching state		LED, yellow
Ambient conditions		
Ambient temperature		-25 100 °C (-13 212 °F)
Storage temperature		-40 100 °C (-40 212 °F)
Mechanical specifications		
Connection type		cable PVC , 10 m
Core cross-section		0.75 mm <sup>2</sup>
		a

Stainless steel PBT IP67 Housing material Sensing face Protection degree

## General information

see instruction manuals 1G; 2G; 3G; 3D Use in the hazardous area Category

## Compliance with standards and directives


Standard conformity

NAMUR EN 60947-5-6:2000 IEC 60947-5-6:1999 NE 21:2007 Electromagnetic compatibility EN 60947-5-2:2007 Standards IEC 60947-5-2:2007


## Approvals and certificates

FM approval	
Control drawing	116-0165F
UL approval	cULus Listed, General Purpose
CSA approval	cCSAus Listed, General Purpose
CCC approval	Products with a maximum operating voltage of ≤36 V do not bear a CCC marking because they do not require approval.

## Installation conditions



## Installation conditions



2

### ATEX 1G

Instruction

Device category 1G

Directive conformity Standard conformity

CE symbol

Ex-identification

EC-Type Examination Certificate

Appropriate type

Effective internal capacitance Ci

Effective internal inductance Li

Cable length

Explosion group IIA Explosion group IIB Explosion group IIC

General

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

### Special conditions

Protection from mechanical danger

Electrostatic charging

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-0:2006, EN 60079-11:2007, EN 60079-26:2007 Ignition protection "Intrinsic safety"

Use is restricted to the following stated conditions

**C** € 0102

⟨ II 1G Ex ia IIC T6

PTB 00 ATEX 2048 X

NCB15-30GM...-N0...

 $\leq$  120 nF; a cable length of 10 m is considered.

 $\leq$  150  $\mu$ H; a cable length of 10 m is considered.

Dangerous electrostatic charges on the fixed connection cable must be taken into account for lengths equal to and exceeding the following values:

78 cm 39 cm

6 cm

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual.

The EC-Type Examination Certificate has to be observed. The special conditions

must be adhered to!
Directive 94/9/EG and hence also EC-Type Examination Certificates apply in gene-

ral only to the use of electrical apparatus under atmospheric conditions. The use in ambient temperatures of > 60 °C was tested with regard to hot surfaces by the mentioned certification authority.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate. Note: Use the temperature table for category 1 !!! The 20 % reduction in accordance with EN 1127-1:1997 has already been accounted for in the temperature table for category 1.

Laws and/or regulations and standards governing the use or intended usage goal must be observed.

The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

The associated apparatus must satisfy the requirements of category ia. Due to the possible danger of ignition, which can arise due to faults and/or transient currents in the equipotential bonding system, galvanic isolation of the power supply and signal circuit is preferable. Associated apparatus without electrical isolation must only be used if the appropriate requirements of IEC 60079-14 are met.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20  $^{\circ}\text{C}$  the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding. When used in group IIC non-permissible electrostatic charges should be avoided on the plastic housing parts.

Pepperl+Fuchs Group

www.pepperl-fuchs.com

#### ATEX 2G

Instruction

### Device category 2G

Directive conformity Standard conformity

CE symbol

General

Ex-identification

EC-Type Examination Certificate Appropriate type Effective internal capacitance  $C_i$  Effective internal inductance  $L_i$ 

Highest permissible ambient temperature

Installation, Comissioning

Maintenance

### Special conditions

Protection from mechanical danger

Electrostatic charging

### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/EG

EN 60079-0:2006, EN 60079-11:2007 Ignition protection "Intrinsic safety" Use is restricted to the following stated conditions **C €** 0102

⟨ II 1G Ex ia IIC T6

PTB 00 ATEX 2048 X

NCB15-30GM...-N0...

 $\leq$  120 nF ; a cable length of 10 m is considered.

 $\leq$  150  $\mu H$  ; a cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The EC-Type Examination Certificate has to be observed. The special conditions must be adhered to!

Directive 94/9/EG and hence also EC-Type Examination Certificates apply in general only to the use of electrical apparatus under atmospheric conditions.

The use in ambient temperatures of > 60  $^{\circ}$ C was tested with regard to hot surfaces by the mentioned certification authority.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

The temperature ranges, according to temperature class, are given in the EC-Type Examination Certificate.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The intrinsic safety is only assured in connection with an appropriate related apparatus and according to the proof of intrinsic safety.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

**PEPPERL+FUCHS** 

ATEX 3D (tD)

This instruction is only valid for products according to EN 61241-0:2006 and EN 61241-1:2004 Note

Note the ex-marking on the sensor or on the enclosed adhesive label

Instruction Manual electrical apparatus for hazardous areas

Device category 3D for use in hazardous areas with non-conducting combustible dust

Directive conformity 94/9/EG

EN 61241-0:2006, EN 61241-1:2004 Standard conformity

Protection via housing "tD"

Use is restricted to the following stated conditions

CE symbol €0102

Ex-identification ⟨Ex⟩ II 3D Ex tD A22 IP67 T80°C X

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. General

The maximum surface temperature has been determined in accordance with method A without a dust layer on the equip-

The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be adhered to!

Installation, Comissioning Laws and/or regulations and standards governing the use or intended usage goal must be observed.

Maintenance No changes can be made to apparatus, which are operated in hazardous areas.

Repairs to these apparatus are not possible.

Special conditions

A minimum series resistance RV is to be provided between the power supply voltage and the proximity switch in accordance Minimum series resistance R<sub>V</sub>

with the following list. This can also be assured by using a switch amplifier.

Maximum operating voltage U<sub>Bmax</sub> The maximum permissible operating voltage UBmax must be restricted to the values given in the following list. Tolerances

are not permitted.

Maximum permissible ambient tempera-

ture  $T_{Umax}$ 

Values can be obtained from the following list, depending on the max. operating voltage Ub max and the minimum series resistance Rv. 58 °C (136.4 °F)

at U\_Bmax=9 V, R\_V=562  $\Omega$ using an amplifier in accordance with  $\,$  58 °C (136.4 °F)

EN 60947-5-6

Electrostatic charging

Protection from mechanical danger The sensor must not be exposed to ANY FORM of mechanical danger.

The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor Protection from UV light

is used in internal areas.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the

mechanical housing components can be avoided by incorporating these in the equipotential bonding. The connection cable must be prevented from being subjected to tension and torsional loading. Protection of the connection cable

Pepperl+Fuchs Group

www.pepperl-fuchs.com

### ATEX 3G (nL)

Instruction

#### Device category 3G (nL)

Directive conformity Standard conformity

CE symbol

Ex-identification

Effective internal capacitance C Effective internal inductance Li

General

Installation, Comissioning

Maintenance

#### Special conditions

Maximum permissible ambient temperature  $T_{Umax}$  at Ui = 20 V

for Pi=34 mW, Ii=25 mA, T6 for Pi=34 mW, Ii=25 mA, T5 for Pi=34 mW. Ii=25 mA. T4-T1 for Pi=64 mW, Ii=25 mA, T6 for Pi=64 mW, Ii=25 mA, T5 for Pi=64 mW, Ii=25 mA, T4-T1 for Pi=169 mW, Ii=52 mA, T6 for Pi=169 mW, Ii=52 mA, T5 for Pi=169 mW Ji=52 mA T4-T1 for Pi=242 mW, Ii=76 mA, T6 for Pi=242 mW, Ii=76 mA, T5 for Pi=242 mW, Ii=76 mA, T4-T1

Protection from mechanical danger

Protection from UV light

Electrostatic charging

Protection of the connection cable

Connection parts

### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist 94/9/FG

EN 60079-15:2005 Ignition protection category "n" Use is restricted to the following stated conditions €0102

II 3G Ex nL IIC T6 X

≤ 120 nF; a cable length of 10 m is considered.

 $\leq$  150  $\mu H$  ; A cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be observed!

Directive 94/9EG is generally applicable only to the use of electrical apparatus operating at atmospheric conditions.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with an energy-limited circuit, which satisfies the requirements of IEC 60079-15. The explosion group complies with the connected, supplying, power limiting circuit.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

55 °C (131 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 29 °C (84.2 °F) 29 °C (84.2 °F) 29 °C (84.2 °F)

The sensor must not be exposed to ANY FORM of mechanical danger. When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

The sensor and the connection cable must be protected from damaging UV-radiation. This can be achieved when the sensor is used in internal areas

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding

The connection cable must be prevented from being subjected to tension and torsi-

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.

FPEPPERL+FUCHS

### ATEX 3G (ic)

Instruction

### Device category 3G (ic)

Directive conformity
Standard conformity

CE symbol

Ex-identification

Effective internal capacitance  $C_i$  Effective internal inductance  $L_i$ 

General

Installation, Comissioning

Maintenance

#### Special conditions

Maximum permissible ambient temperature T<sub>Umax</sub> at Ui = 20 V

for Pi=34 mW, Ii=25 mA, T6
for Pi=34 mW, Ii=25 mA, T5
for Pi=34 mW, Ii=25 mA, T4-T1
for Pi=64 mW, Ii=25 mA, T6
for Pi=64 mW, Ii=25 mA, T5
for Pi=64 mW, Ii=25 mA, T5
for Pi=64 mW, Ii=52 mA, T4-T1
for Pi=169 mW, Ii=52 mA, T6
for Pi=169 mW, Ii=52 mA, T5
for Pi=169 mW, Ii=52 mA, T4-T1
for Pi=242 mW, Ii=76 mA, T6
for Pi=242 mW, Ii=76 mA, T5
for Pi=242 mW, Ii=76 mA, T5
for Pi=242 mW, Ii=76 mA, T5
for Pi=242 mW, Ii=76 mA, T4-T1
Protection from mechanical danger

Electrostatic charging

Connection parts

#### Manual electrical apparatus for hazardous areas

for use in hazardous areas with gas, vapour and mist

EN 60079-11:2007 Ignition protection category "io"
Use is restricted to the following stated conditions

( € □

⟨ II 3G Ex ic IIC T6 X

 $\leq$  120 nF ; a cable length of 10 m is considered.  $\leq$  150  $\mu H$  ; A cable length of 10 m is considered.

The apparatus has to be operated according to the appropriate data in the data sheet and in this instruction manual. The data stated in the data sheet are restricted by this operating instruction!

The special conditions must be observed!

Directive 94/9EG is generally applicable only to the use of electrical apparatus operating at atmospheric conditions.

If the equipment is not used under atmospheric conditions, a reduction of the permissible minimum ignition energies may have to be taken into consideration.

Laws and/or regulations and standards governing the use or intended usage goal must be observed. The sensor must only be operated with energy-limited circuits, which satisfy the requirements of IEC 60079-11. The explosion group depends on the connected and energy-limited supply circuit.

No changes can be made to apparatus, which are operated in hazardous areas. Repairs to these apparatus are not possible.

55 °C (131 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 41 °C (105.8 °F) 42 °C (84.2 °F) 43 °C (84.2 °F) 44 °C (84.2 °F)

The sensor must not be mechanically damaged.

When used in the temperature range below -20 °C the sensor should be protected from knocks by the provision of an additional housing.

Electrostatic charges must be avoided on the mechanical housing components. Dangerous electrostatic charges on the mechanical housing components can be avoided by incorporating these in the equipotential bonding.

The connection parts are to be installed, such that a minimum protection class of IP20 is achieved, in accordance with IEC 60529.

www.pepperl-fuchs.com