

### Endicott Research Group, Inc.

2601 Wayne St., Endicott, NY 13760 607-754-9187 Fax 607-754-9255 http://www.ergpower.com

## DMD43584F



# Specifications and Applications Information


07/02/07 Preliminary

The ERG DMD43584F (**DMD Series**) DC to AC inverter features onboard connectors and can be easily dimmed using the onboard PWM Dimming or an external PWM generator.

Powered by a regulated +12 Volt DC source, the DMD43584F is designed to power the backlight of the NEC NL10276BC30-18.

#### **Product Features**


- ✓ Small Package Size, lass than 13mm in height
- ✓ High Dimming Ratio
- ✓ High Efficiency
- ✓ Made in U.S.A.

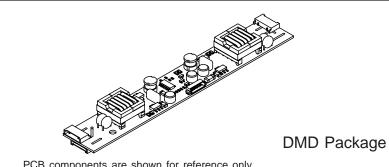

PCB components are shown for reference only. Actual product may differ from that shown.

Connectors			
Output (J2,J3,J8,J9)	Input (J1)		
JST SM02(8.0)B-BHS-1-TB	Molex 53261-0871		

## Four Lamp DC to AC Inverter

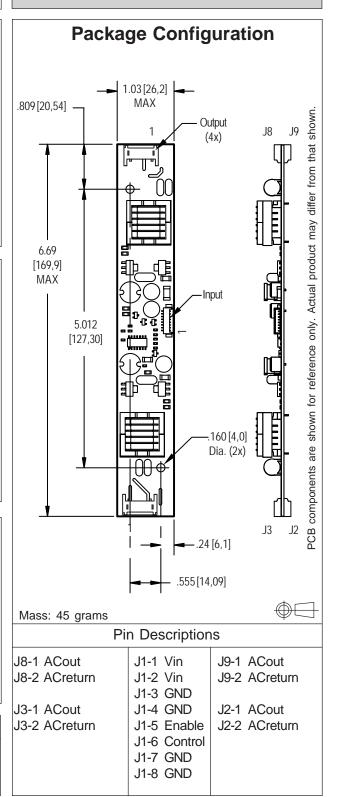

## DMD43584F





#### **Absolute Maximum Ratings**

Rating	Symbol	Value	Units
Input Voltage Range	V <sub>in</sub>	-0.3 to +13.2	Vdc
Storage Temperature	T <sub>stg</sub>	-40 to +85	°C

#### **Operating Characteristics**

With a load simulating the referenced display and lamp warm-up of 5 minutes. Unless otherwise noted Vin = 12.00 Volts dc and  $Ta = 25^{\circ}\text{C}$ .

Characteristic	Symbol	Min	Тур	Max	Units
Input Voltage	V in	+10.8	+12.0	+12.6	Vdc
Component Surface (note 2) Temperature	T <sub>s</sub>	-20	-	+80	°C
Input Current (note 1)	I in	-	1.66	2.00	Adc
Input Ripple Current	l rip	-	20	-	mA <sub>pk-pk</sub>
Operating Frequency	F <sub>o</sub>	26	31	36	kHz
Minimum Output Voltage (note 3)	Vout (min)	1800	-	-	Vrms
Efficiency	h	-	85	-	%
Output Current (per lamp)	l out	-	6.5	-	mArms
Output Voltage	V <sub>out</sub>	-	650	-	Vrms
Enable Pin					
Turn-off Threshold	V thoff	GND	-	0.5	Vdc
Turn-on Threshold	V <sub>thon</sub>	2.0	-	Vin	Vdc
Impedance to Vin	R <sub>Enable</sub>	9.5	10.0	10.5	kOhms

Specifications subject to change without notice.

(Note 1) Input current in excess of maximum may indicate a load/inverter mismatch condition, which can result in reduced reliability. Please contact ERG technical support.

(Note 2) Surface temperature must not exceed 80 degrees C; thermal management actions may be required.

(Note 3) Provided data is not tested but guaranteed by design.

#### **Application Notes:**

- 1) The minimum distance from high voltage areas of the inverter to any conductive material should be .12 inches per kilovolt of starting voltage.
- 2) Mounting hardware to be non-conductive.
- 3) Open framed inverters should not be used in applications at altitudes over 10,000 feet.
- 4) Contact ERG for possible exceptions.



## DMD43584F



#### **Onboard PWM**

Unless otherwise noted Vin = 12.00 Volts DC, T<sub>a</sub> = 25 °C and unit has been running for 5 minutes.

Characteristic	Symbol	Min	Тур	Max	Units
Frequency	f <sub>pwm</sub>	-	160	-	$H_Z$
Control Input Bias Current	I cbias	-	-	10	uA

#### **Pin Descriptions**

Vin Input voltage to the inverter. The two pins should be connected for optimum reliability and efficiency.

**GND** Inverter ground. The four pins should be connected for optimum reliability and efficiency.

**Control** Analog voltage input to the onboard pulse width modulator. Increasing this voltage increases the ON

time of the onboard PWM resulting in increased brightness. The inverter is full ON when this voltage is

near 5V.

**Enable** Inverter Enable. Pull this pin low to disable inverter operation. This pin must be high to enable the

inverter. The onboard PWM is always utilized.

#### **Application information**

The DMD series of inverters is designed to power up to four cold cathode fluorescent lamps. An external analog control interfaces with an onboard pulse width modulator to provide dimming control. The DMD inverter can reliably dim to less than 5% duty cycle.

External shutdown of the inverter is accomplished using the Enable pin. Pulling this pin low (below Vthoff) disables the inverter. Enabling the inverter is accomplished by pulling this pin high (above Vthon).


If analog voltage dimming is required, the analog voltage is applied to the Control pin. Figure 1 shows how to connect the inverter for onboard PWM operation. Graph 1 shows the relationship of PWM duty cycle to input control voltage.

If an external PWM is used, simply connect the Enable pin to the PWM source and connect the Control pin to inverter Ground. If the onboard PWM is used, connect the analog voltage to the Control pin.







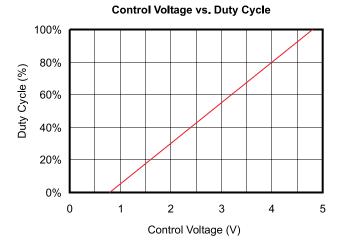

Graph 1

#### Typical Application

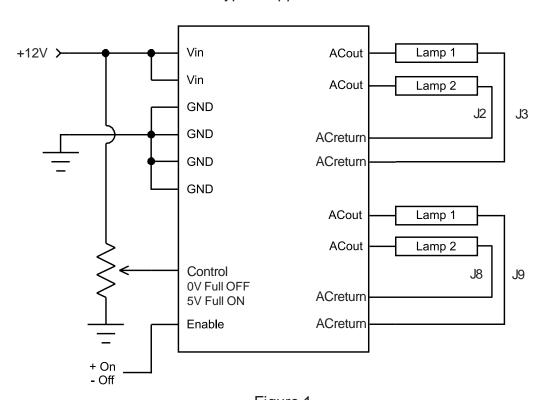


Figure 1



Endicott Research Group, Inc. (ERG) reserves the right to make changes in circuit design and/or specifications at any time without notice. Accordingly, the reader is cautioned to verify that data sheets are current before placing orders. Information furnished by ERG is believed to be accurate and reliable. However, no responsibility is assumed by ERG for its use.