

# LMX2542

# PLLatinum<sup>™</sup> Cellular and GPS Frequency Synthesizer System with Integrated VCO

### **General Description**

LMX2542 is a highly integrated, high performance, low power frequency synthesizer system optimized for Cellular-CDMA 1xRTT and IS-95 mobile handsets and data systems with GPS capabilities. Using a proprietary digital phase locked loop technique, LMX2542 provides very stable, low noise local oscillator (LO) signals for up and down conversion in wireless communications devices.

LMX2542 includes a Voltage Controlled Oscillator (VCO) for both the Cellular-CDMA and GPS frequency bands, a loop filter, and a Fractional-N RF PLL based on a Delta Sigma  $(\Delta\Sigma)$  modulator. In concert, these blocks form a closed loop RF synthesizer system. The RF synthesizer system operates from 2087.73 MHz to 2155.14 MHz.

LMX2542 includes an Integer-N IF PLL also. For more flexible loop filter designs, the IF PLL includes a 4-level programmable charge pump. Together with an external VCO and loop filter, LMX2542 makes a complete closed loop IF synthesizer system. The default IF frequency is 367.20 MHz. Serial data is transferred to the device via a three-wire MICROWIRE<sup>TM</sup> interface (DATA, LE, CLK).

Operating supply voltage ranges from 2.7V to 3.3V. LMX2542 features low current consumption: 22 mA at 2.8V. LMX2542 is available in a 28-Pin Leadless Leadframe Package (LLP).

#### **Features**

- Small Size
  - 5.0 mm x 5.0 mm x 0.75 mm 28-Pin LLP
- RF Synthesizer System

Integrated RF VCO

Integrated Loop Filter

Low Spurious, Low Phase Noise Fractional-N RF PLL Based on 11-Bit  $\Delta\Sigma$  modulator

5 kHz Frequency Resolution

Cellular-CDMA LO: 2105.28 MHz to 2155.14 MHz

(Requires an External LO /2 Circuit)

GPS LO: 2087.73 MHz

(Requires an External LO /1.5 Circuit)

■ IF Synthesizer System

Integer-N IF PLL

Programmable Charge Pump Current Levels

IF LO: 367.20 MHz

- Supports Various Reference Oscillator Frequencies: 19,20 MHz/ 19,68 MHz
- Low Current Consumption: 22 mA typical at 2.8V
- 2.7V to 3.3V Operation
- RF Digital Filtered Lock Detect Output
- Hardware and Software Powerdown Control

# **Applications**


- Cellular-CDMA 1xRTT and IS-95 Mobile Handsets with GPS
- Cellular-CDMA 1xRTT and IS-95 Mobile Data Systems with GPS

Leadless Leadframe Package (LQA28A)




PLLatinum™, MICROWIRE™ are trademarks of National Semiconductor Corporation. TRI-STATE® is a registered trademark of National Semiconductor Corporation.

# **Functional Block Diagram**

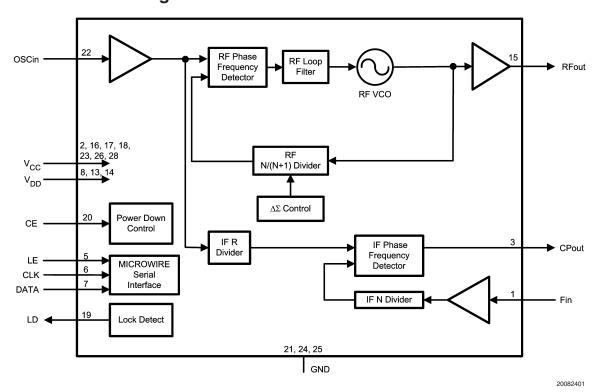

# **Connection Diagram**

# Leadless Leadframe Package (LQ) (Top View)

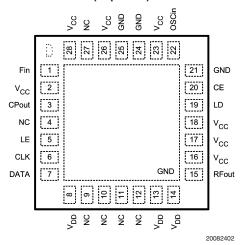

Note: Analog GND connected through exposed die attached pad.

# **Pin Description**

Pin No.	Pin Name	I/O	Description
1	Fin	I	IF PLL buffer/prescaler input. Small signal input from the VCO.
2	V <sub>CC</sub>	_	Power supply bias for the IF PLL analog circuits. V <sub>CC</sub> may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
			directly to the ground plane on the printed circuit board.
3	CPout	0	IF PLL charge pump output. The output is connected to the external loop filter, which
			drives the input of the IF VCO.
4	NC	_	No Connect. Do not connect to any node on the printed circuit board.
5	LE	I	MICROWIRE Latch Enable Input. High impedance CMOS input. When LE transitions
			from LOW to HIGH, DATA stored in the shift register is loaded into one of 6 internal
			control registers.
6	CLK	I	MICROWIRE Clock Input. High impedance CMOS input. DATA is clocked into the 24-bit
			shift register on the rising edge of CLK.
7	DATA	I	MICROWIRE Data Input. High impedance CMOS input. Binary serial data. The MSB of
_			DATA is shifted in first.
8	$V_{DD}$	_	Power supply bias for the RF VCO. V <sub>DD</sub> may range from 2.7V to 3.3V. Bypass
			capacitors should be placed as close as possible to this pin and be connected directly
9	NO		to the ground plane on the printed circuit board.
	NC	_	No Connect. Do not connect to any node on the printed circuit board.
10	NC	_	No Connect. Do not connect to any node on the printed circuit board.
11	NC	_	No Connect. Do not connect to any node on the printed circuit board.
12	NC	_	No Connect. Do not connect to any node on the printed circuit board.
13	$V_{DD}$	_	Power supply bias for the RF VCO. V <sub>DD</sub> may range from 2.7V to 3.3V. Bypass
			capacitors should be placed as close as possible to this pin and be connected directly
4.4	\ /		to the ground plane on the printed circuit board.
14	$V_{DD}$	_	Power supply bias for the RF VCO output buffer. V <sub>DD</sub> may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
15	RFout	0	directly to the ground plane on the printed circuit board.  Buffered RF VCO output.
16		0	·
10	$V_{CC}$		Power supply bias for the RF PLL prescaler. V <sub>CC</sub> may range from 2.7V to 3.3V. Bypass capacitors should be placed as close as possible to this pin and be connected directly
			to the ground plane on the printed circuit board.
			to the ground plane on the printed elicuit board.


# Pin Description (Continued)

Pin No.	Pin Name	I/O	Description
17	V <sub>CC</sub>	_	Power supply bias for the RF PLL charge pump. $V_{\rm CC}$ may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
			directly to the ground plane on the printed circuit board.
18	V <sub>CC</sub>	_	Power supply bias for the RF PLL digital circuits. $V_{CC}$ may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
			directly to the ground plane on the printed circuit board.
19	LD	0	Digital filtered lock detect output.
20	CE	I	Chip Enable input. High Impedance CMOS input. When this pin is set HIGH, the RF
			and IF synthesizer systems are powered up. Powerdown is then controlled through the
			MICROWIRE. When this pin is set LOW, the device is asynchronously powered down
			and the IF PLL charge pump output is forced to a high impedance state (TRI-STATE®).
21	GND	_	Ground for the RF PLL digital circuits.
22	OSCin	I	Reference oscillator input. The input is driven by an external AC coupled source. When
			the OSC_FREQ bit is set LOW, a 19.20 MHz reference frequency should be used.
			When the OSC_FREQ bit is set HIGH, a 19.68 MHz reference frequency should be
			used.
23	V <sub>cc</sub>	_	Power supply bias for the reference oscillator buffer. V <sub>CC</sub> may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
			directly to the ground plane on the printed circuit board.
24	GND	_	Ground for the reference oscillator buffer.
25	GND	_	Ground for the IF PLL digital circuits.
26	V <sub>cc</sub>	_	Power supply bias for the IF PLL digital circuits. V <sub>CC</sub> may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
			directly to the ground plane on the printed circuit board.
27	NC	_	No Connect. Do not connect to any node on the printed circuit board.
28	V <sub>CC</sub>	_	Power supply bias for the IF PLL buffer/ prescaler. V <sub>CC</sub> may range from 2.7V to 3.3V.
			Bypass capacitors should be placed as close as possible to this pin and be connected
			directly to the ground plane on the printed circuit board.

# **Ordering Information**

Model	RF Min Frequency (MHz)	RF Max Frequency (MHz)	RF Center Frequency (MHz)	IF Frequency (MHz)	Package Marking	Packing
LMX2542LQX2121	2087.73	2155.14	~2121	367.20	25422121	4500 Units on Tape and Reel
LMX2542LQ2121	2087.73	2155.14	~2121	367.20	25422121	1000 Units on Tape and Reel

# **Part Number Description**



# Absolute Maximum Ratings (Notes 1, 2,

If Military/Aerospace specified devices are required, please contact the National Semiconductor Sales Office/ Distributors for availability and specifications.

Power Supply Voltage

 $V_{\text{CC}}$  to GND -0.3V to +3.6V $V_{DD}$  to GND -0.3V to +3.6V

Voltage on any pin to GND (VIN)

 $V_{\rm IN}$  must be < +3.6V -0.3V to  $V_{\rm CC}$ +0.3V

-0.3V to  $V_{DD}+0.3V$ 

Storage Temperature Range (T<sub>S</sub>) -65°C to +150°C +260°C

Lead Temperature (solder 4 s) (T<sub>1</sub>)

# **Recommended Operating Conditions**

Power Supply Voltage

 $V_{\text{CC}}$  to GND +2.7V to +3.3V  $V_{\text{DD}}$  to GND +2.7V to +3.3V Operating Temperature (T<sub>A</sub>) -30°C to +85°C

Note 1: Absolute Maximum Ratings indicate limits beyond which damage to the device may occur. Recommended Operating Conditions indicate conditions for which the device is intended to be functional, but do not guarantee specific performance limits. For guaranteed specifications and test conditions, refer to the Electrical Characteristics section. The guaranteed specifications apply only for the conditions listed.

Note 2: This device is a high performance RF integrated circuit with an ESD rating < 2kV and is ESD sensitive. Handling and assembly of this device should be done at ESD protected work stations.

Value

Note 3: GND = 0V.

#### **Electrical Characteristics**

 $V_{CC}$  =  $V_{DD}$  = CE = 2.8V,  $T_A$  = +25 $^{\circ}$ C, unless otherwise specified

Symbol	Parameter	Conditions		Value		Units	
Syllibol	Parameter	Conditions	Min	Тур	Max	Units	
Icc PARAM	ETERS	·			•		
I <sub>CC</sub> + I <sub>DD</sub>	Power Supply Current	RF_EN Bit = 1		22.0	24.0	mA	
	(RF and IF Synthesizer Systems)	IF_EN Bit = 1					
		OB_CRL[1:0] Word = 00					
		VCO_CUR[1:0] Word = 11					
		IF_CUR[1:0] Word = 00					
(I <sub>CC</sub> +	Power Supply Current	RF_EN Bit = 1		20.0	22.0	mA	
$I_{DD})_{RF}$	(RF Synthesizer System)	IF_EN Bit = 0					
		OB_CRL[1:0] Word = 00					
		VCO_CUR[1:0] Word = 11					
$I_{PD}$	Powerdown Current	CE, CLK, DATA and LE = 0V			20.0	μA	
		OSCin = 0V					
		(RF_EN Bit = 0 and IF_EN Bit = 0)					
RF SYNTHE	ESIZER SYSTEM PARAMETERS						
RF VCO							
f <sub>RFout</sub>	RF VCO Operating Frequency		2087.73		2155.14	MHz	
	(Notes 4, 5)						
$p_{RFout}$	RF VCO Output Power	OB_CRL[1:0] Word = 00	-7.5	-4.5	-1.5	dBm	
		OB_CRL[1:0] Word = 01	-5.0	-2.0	1.0	dBm	
		OB_CRL[1:0] Word = 10	-2.5	0.5	3.5	dBm	
		OB_CRL[1:0] Word = 11	0.0	3.0	6.0	dBm	
$\phi_{eRF}$	RF VCO RMS Phase Error			1.3		Deg.	
$L_{RF}(f)$	RF VCO Single Side Band Phase	f = 100 kHz Offset		-109	-107	dBc/	
	Noise	TCXO Reference Source				Hz	
		OSC_FREQ Bit = 0 or 1					
		OB_CRL[1:0] Word = 11					
		IF_EN Bit = 0					
		f = 900 kHz Offset		-134	-133	dBc/	
		T01/0 D /				Hz	
		TCXO Reference Source					
		OSC_FREQ Bit = 0 or 1					

**Electrical Characteristics** (Continued)  $V_{CC} = V_{DD} = CE = 2.8V$ ,  $T_A = +25^{\circ}C$ , unless otherwise specified

Symbol BE VCO	Dama wastan	O a sa aliai a sa a		Value					
Symbol	Parameter	Conditions	Min	Тур	Max	Units			
RF VCO			•						
SPURS <sub>RF</sub>	RF Synthesizer Reference Spurs	OSC_FREQ Bit = 0 or 1			-75	dBc			
		IF_EN Bit = 0							
HS <sub>RF</sub>	RF VCO Harmonic Suppression	2 <sup>ND</sup> Harmonic			-25	dBc			
		OB_CRL[1:0] Word = 11							
		3 <sup>RD</sup> Harmonic			-25	dBc			
		OB_CRL[1:0] Word = 11							
t <sub>RFLOCK</sub>	Channel Switch Lock Time	f <sub>INITIAL</sub> = 2087.73 MHz		1.0	1.3	ms			
	(Note 6)	f <sub>FINAL</sub> = 2155.14 MHz							
IF SYNTHE	SIZER SYSTEM PARAMETERS	•	•						
f <sub>Fin</sub>	IF Synthesizer Operating Frequency	SPI_DEF Bit = 1		170.76		MHz			
	(Note 7)	IF_FREQ[1:0] Word = 00							
		SPI_DEF Bit = 1		367.20		MHz			
		IF_FREQ[1:0] Word = 01							
		(Default)							
		SPI_DEF Bit = 1		440.76		MHz			
		IF_FREQ[1:0] Word = 10							
$f_{\phi IF}$	IF Synthesizer Phase Detector			120		kHz			
	Frequency								
p <sub>Fin</sub>	IF Synthesizer Input Sensitivity		-12		0	dBm			
I <sub>CPoutIF</sub>	IF Synthesizer Charge Pump Output	IF_CUR[1:0] Word = 00		100		μΑ			
	Current	IF_CUR[1:0] Word = 01		200		μΑ			
		IF_CUR[1:0] Word = 10		300		μA			
		IF_CUR[1:0] Word = 11		800		μA			
REFERENC	E OSCILLATOR PARAMETERS		1						
f <sub>OSCin</sub>	Reference Oscillator Input Operating	OSC_FREQ Bit = 0	19.20			MHz			
	Frequency (Note 8)	OSC_FREQ Bit = 1			19.68	MHz			
V <sub>OSCin</sub>	Reference Oscillator Input Sensitivity			0.2	V <sub>CC</sub>	V <sub>PP</sub>			

### **Electrical Characteristics** (Continued)

 $V_{CC} = V_{DD} = CE = 2.8V$ ,  $T_A = +25^{\circ}C$ , unless otherwise specified

Cumbal	Davamatav	Conditions		Value		I I m i de
Symbol	Parameter	Conditions	Min	Тур	Max	Unit
DIGITAL IN	ITERFACE (CE, DATA, CLK, LE, L	D)				
V <sub>IH</sub>	High-Level Input Voltage		0.8 V <sub>DD</sub>		V <sub>DD</sub>	V
			0.8 V <sub>CC</sub>		V <sub>CC</sub>	V
V <sub>IL</sub>	Low-Level Input Voltage		0		0.2 V <sub>DD</sub>	V
			0		0.2 V <sub>CC</sub>	V
I <sub>IH</sub>	High-Level Input Current	$V_{IH} = V_{DD} = V_{CC}$			10	μΑ
I <sub>IL</sub>	Low-Level Input Current	V <sub>IL</sub> = 0V	-10			μΑ
Cı	Input Capacitance			3.0		pF
V <sub>OH</sub>	High-Level Output Voltage		0.9 V <sub>DD</sub>			V
			0.9 V <sub>CC</sub>			V
V <sub>OL</sub>	Low-Level Output Voltage				0.1 V <sub>DD</sub>	V
					0.1 V <sub>CC</sub>	V
Co	Output Capacitance				5.0	pF
MICROWIR	E INTERFACE					
t <sub>CS</sub>	DATA to CLK Set Up Time		50.0			ns
t <sub>CH</sub>	DATA to CLK Hold Time		10.0			ns
t <sub>cwн</sub>	CLK Pulse Width HIGH		50.0			ns
t <sub>CWL</sub>	CLK Pulse Width LOW		50.0			ns
t <sub>ES</sub>	CLK to LE Set Up Time		50.0			ns
t <sub>EW</sub>	LE Pulse Width		50.0			ns

Note 4: For other RF frequency ranges, please contact National Semiconductor Corporation.

**Note 5:** When the Cellular-CDMA mode is used, an external /2 circuit is required before the Cellular mixer LO port. Furthermore, if an external /1.5 circuit is available before the GPS mixer LO port, the GPS frequency of 1391.82 MHz can be achieved by using a fixed RF frequency of 2087.73 MHz.


Note 6: Lock time is defined as the time difference between the beginning of the frequency transition and the point at which the frequency remains within +/- 1 kHz of the final frequency. t<sub>LOCK</sub>= t<sub>FINAL</sub> - t<sub>INITIAL</sub>.

**Note 7:** For frequencies other than the default values, the SPI\_DEF bit should be set to 0 and registers R4 and R5 programmed appropriately. Refer to **Section 2.2.5** for further details on how to program the SPI\_DEF bit.


Note 8: For other reference oscillator frequencies, please contact National Semiconductor Corporation.

# **Typical Performance Characteristics**

RF VCO Output Impedance  $V_{DD} = V_{CC} = 2.8V$ ,  $T_A = 25$ °C

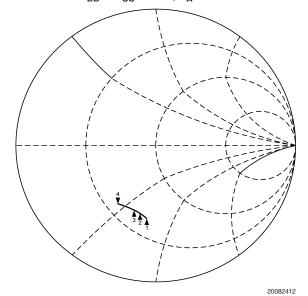

IF PLL Input Impedance  $V_{DD} = V_{CC} = 2.8V$ ,  $T_A = 25^{\circ}C$ 

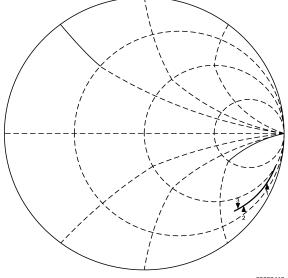


20082413

RFout (MHz)	<b>R</b> Ω	j <b>X</b> Ω	IR + jXl Ω
2087.73	26.406	-34.650	46.564
2105.28	25.385	-30.800	39.913
2121.00	23.898	-28.122	36.905
2155.14	19.979	-23.102	30.543

Fin (MHz)	R Ω	jX Ω	IR + jXl Ω
170.76	33.789	-239.220	241.595
367.20	26.992	-137.620	140.242
440.76	27.844	-126.470	129.499

# **Serial Data Input Timing**

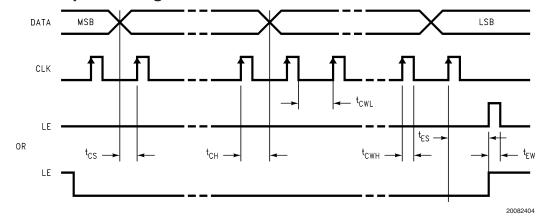

#### Notes:

- 1. DATA is clocked into the 24-bit shift register on the rising edge of CLK.
- 2. The MSB of DATA is shifted in first.

# 1.0 Functional Description

LMX2542 is a highly integrated, high performance, low power, frequency synthesizer system optimized for Cellular-CDMA 1xRTT and IS-95 mobile handsets and data systems with GPS capabilities. Using a proprietary digital phase locked loop technique, LMX2542 generates very stable, low noise local oscillator (LO) signals for up and down conversion in wireless communications devices.

LMX2542 includes a Voltage Controlled Oscillator (VCO) for the Cellular-CDMA and GPS frequency bands, a loop filter, and a Fractional-N RF PLL based on a  $\Delta\Sigma$  modulator which supports frequency resolutions as low as 5 kHz. In concert, these blocks form a closed loop RF synthesizer system. The RF synthesizer system operates from 2087.73 MHz to 2155.14 MHz. The need for external components is limited to a few passive elements for matching the RF output impedance, and bypass elements for power line stabilization.

The Fractional-N RF PLL ( $\Delta\Sigma$  modulator architecture) delivers low spurious thus providing a significant improvement over other PLL solutions. In addition, the Fractional-N RF PLL facilitates faster lock times, which reduces power consumption and system set-up time. Furthermore, the RF loop filter occupies a much smaller area as opposed to the Integer-N architecture. This allows the RF loop filter to be embedded into the circuit, thus minimizing the external noise coupling.

LMX2542 includes an Integer-N IF PLL also. For more flexible loop filter designs, the IF PLL includes a 4-level programmable charge pump. Together with an external VCO and loop filter, LMX2542 makes a complete closed loop IF synthesizer system. The default IF frequency is 367.20 MHz.

The circuit also supports commonly used reference oscillator frequencies of 19.20 MHz and 19.68 MHz.

#### 1.1 FREQUENCY GENERATION

#### 1.1.1 RF Frequency Selection

$$f_{RFout} = \left(8 \cdot RF\_B + RF\_A + \frac{10^4 \cdot RF\_FN}{f_{OSCin}}\right) \cdot f_{OSCin}$$
20082407

where:

 $RF_A < RF_B$ 

f<sub>RFout</sub>: RF VCO output frequency
f<sub>OSCin</sub>: Reference oscillator frequency
RF\_A: Preset divide ratio of the RF PLL
binary 3-bit swallow counter

 $(0 \le RF_A \le 7)$ 

RF\_B: Preset divide ratio of the RF PLL

binary 4-bit programmable counter

 $(2 \le RF_B \le 15)$ 

RF\_FN: Preset numerator of the RF PLL

binary 11-bit modulus counter

 $(0 \le RF\_FN < 1920 \text{ for } f_{OSCin} =$ 

19.20 MHz)

 $(0 \le RF_FN < 1968 \text{ for } f_{OSCin} =$ 

19.68 MHz)

**Note:** When the FREQ\_OFF bit is set to 1, frequencies with 5 kHz resolution can be generated. In the same way outlined above, the divide ratio for the desired frequency less 5 kHz should be programmed. When the FREQ\_OFF bit (R1[2]) is set to 1, the programmed frequency will be shifted by +5 kHz in order to achieve the desired frequency. Refer to **Section 2.3.1** for details on how to program the FREQ\_OFF bit.

#### 1.1.2 IF Frequency Selection

The IF synthesizer divide ratio can be calculated using the following equation:

$$f_{Fin} = (16 \cdot IF \_B + IF \_A) \cdot \frac{f_{OSCin}}{IF \_R}$$

where:

 $IF_A < IF_B$ 

f<sub>Fin</sub>: IF VCO output frequency
f<sub>OSCin</sub>: Reference oscillator frequency
IF\_A: Preset divide ratio of the IF PLL
binary 4-bit swallow counter

(0 : 15 A : 45)

 $(0 \le IF_A \le 15)$ 

IF\_B: Preset divide ratio of the IF PLL

binary 9-bit programmable counter

 $(1 \le IF_B \le 511)$ 

IF\_R: Preset divide ratio of the IF PLL

binary 9-bit programmable

reference counter  $(2 \le IF_R \le 511)$ 

From the above equation and with the SPI\_DEF bit set to 1, LMX2542 generates a fixed IF frequency of 367.20 MHz as follows:

f <sub>Fin</sub> (MHz)	IF_B	IF_A	f <sub>OSCin</sub> / IF_R (kHz)
367.20	191	4	120

# 1.0 Functional Description (Continued)

#### 1.2 VCO FREQUENCY TUNING

The center frequency of the RF VCO is determined mainly by the resonant frequency of the tank circuit. This tank circuit is implemented on-chip and requires no external inductor. LMX2542 actively tunes the tank circuit to the required frequency with the built-in tracking algorithm.

#### 1.3 POWER CONTROL

LMX2542 includes a powerdown mode to reduce the power consumption. LMX2542 can be powered down when the CE pin is set LOW, independent of the state of the powerdown bits. When CE is set HIGH, powerdown is controlled through the MICROWIRE. The RF and IF circuitries are individually powered down by setting the RF\_EN (R1[3]) and IF\_EN (R2[2]) bits LOW respectively. Refer to **Section 2.3.2** and **Section 2.4.1** for details on how to program the RF\_EN and IF\_EN bits.

CE Pin	RF_EN	IF_EN	RF	IF
			Circuitry	Circuitry
0	Х	Х	OFF	OFF
1	0	0	OFF	OFF
1	0	1	OFF	ON
1	1	0	ON	OFF
1	1	1	ON	ON

#### Note:

- 1. X refers to a don't care condition.
- 2. The RF circuitry includes the whole RF synthesizer system (synthesizer and VCO).
- 3. The IF circuitry includes the IF synthesizer block only.

# 1.0 Functional Description (Continued)

#### 1.4 RF DIGITAL FILTERED LOCK DETECT

A digital filtered lock detect status genrated from the RF phase frequency detector (PFD) is available on the LD pin (Pin 19) when the RF\_LD bit (R0[21]) is set to 1. The LD output is therefore used to indicate the lock status of the RF synthesizer system. Furthermore, the LD output can be forced to GND at all times when the RF\_LD bit is set to 0.

When used as a lock detect output, the two inputs to the PFD,  $f_N$  and  $f_R$ , are first divided by 64. The lock detect digital filter then compares the difference between the phases of the inputs to the PFD to an RC generated delay of approximately 10 ns. This delay is represented by  $t_W$  in *Figure 1* and *Figure 2* below. If the phase error is less than 10 ns ( $\Delta t < t_W$ )

for 4 consecutive PFD comparison cycles, the RF PLL enters a locked state and the LD output is then forced HIGH. Once the phase error becomes greater than 10 ns ( $\Delta t > t_W$ ) the RF PLL falls out of lock and the LD is forced LOW (~GND). The phase error in Figure 2 is measured on the leading edge. If the phase difference between the two inputs to the PFD is equal to 10 ns ( $\Delta t = t_W$ ), then the LD output becomes unpredictable. Refer to Section~2.2.4 for further details on how to program the digital filtered lock detect.

**Note:**  $f_R$  is the PFD input from the reference oscillator and  $f_N$  is the PFD input from the programmable feedback divider (N counter).

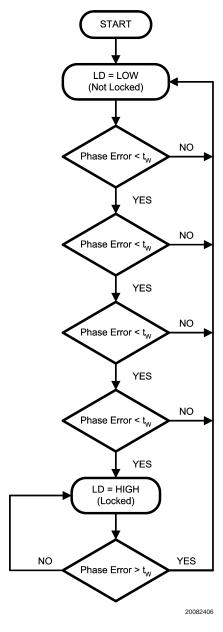


FIGURE 1. Lock Detect Flow Diagram

# 1.0 Functional Description (Continued)

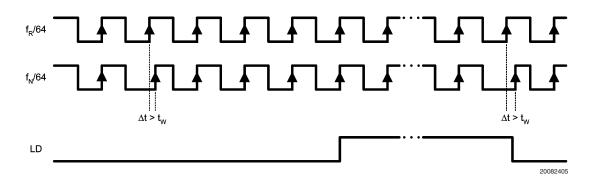


FIGURE 2. Lock Detect Timing Diagram Waveform

#### 1.5 MICROWIRE SERIAL INTERFACE

The programmable register set is accessed via the MI-CROWIRE serial interface. The interface comprises three signal pins: CLK, DATA, and LE. Serial data is clocked into the 24-bit shift register on the rising edge of CLK. The least significant bits decode the internal control register address.

When LE transitions from LOW to HIGH, DATA stored in the shift registers is loaded into one of six control registers. The MSB of DATA is loaded in first. The synthesizers can be programmed even in power down mode. A complete programming description is provided in **Section 2.0**.

# 2.0 Programming Description

#### 2.1 MICROWIRE INTERFACE

The MICROWIRE Serial Port Interface (SPI) has a 24-bit shift register to store the incoming DATA bits temporarily. The incoming DATA is loaded into the shift register from MSB to LSB. The data is shifted at the rising edge of the CLK signal. When the LE signal transitions from LOW to HIGH, the DATA stored in the shift register is transferred to the proper register depending on the state of the ADDRESS bits. The selection of the particular register is determined by the address bits equal to the binary representation of the number of the control register.

At start-up, the 24-bit shift register is loaded via the MICROWIRE interface. The loading requires 3 default words, with register R2 loaded first, and R0 loaded last. Once loaded, the RF VCO frequency can then be changed by only programming register R0 appropriately. If an IF frequency other than the default value is desired, the SPI\_DEF bit should be set to 0, and registers R4 and R5 programmed appropriately.

#### 2.1.1 Control Register Content Map

The control register content map describes how the bits within each control register are allocated to specific control functions. The bits that are marked 0 should be programmed as such to ensure proper device operation.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB							•		SHIF	T REC	SISTE	R BIT	LOCA	TION		•				•			LSB
R0	SPI_ DEF	1	RF_ LD	0		RF [3:	_B :0]			RF_A [2:0]		RF_FN [10:0]								0	0			
R1	0	1	1	0	1	0	0	0	1	0	1	0	1	0	1	0	0	1	OB_ [1:	CRL :0]	RF_ EN	FREQ_ OFF	0	1
R2	1	1	0	0	1	0	0	1	0	0	0	0	0 0 0 VCO_CUR OSC_ IF_FREQ IF_CUR IF_ [1:0] EN				IF.	1	0					
R3	0	0	0	0	0	0	0	0	0	0	0	1	0	1	0	0	1	0	0	1	0	0	1	1
R4	0	0	0	0	0	0	0		IF. [3	_A :0]			IF_B [8:0] 0 1					1	1	1				
R5	0	0	0	0	0	0	0	0	0	0			IF_R [8:0] 0 1 1					1	1					
R6	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	1	1	1	1	1

Note: Numbers in Bold represent the ADDRESS bits.

#### 2.2 R0 REGISTER

The R0 register contains the RF\_FN, RF\_A, RF\_B, RF\_LD, and SPI\_DEF control words. The register address bits are R0[1:0] = 00. The detailed descriptions and programming information for each control word is discussed in the following sections.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB SHIFT REGISTER BIT LOCATION															LSB								
	DATA[21:0] FIELD														ADDI [1 FIE	:0]								
R0	0         SPI DEF         1         RF_ LD         0         RF_B [3:0]         RF_A [2:0]         RF_FN [10:0]												0	0										

#### 2.2.1 RF\_FN[10:0] - RF Synthesizer Fractional Numerator Counter (R0[2:12])

The RF\_FN control word is used to setup the 11-bit  $\Delta\Sigma$  modulator. This corresponds to programming the fractional numerator counter portion of the RF feedback divider. The value programmed is dependent on the reference oscillator used.

#### 2.2.1.1 Programming RF\_FN[10:0] Using 19.20 MHz Reference Oscillator

When a 19.20 MHz reference oscillator is used (OSC\_FREQ bit = 0), the RF\_FN can be programmed to values ranging from 0 to 1919.

Numerator		RF_FN[10:0]										
		f <sub>OSCin</sub> = 19.20 MHz										
	10	10 9 8 7 6 5 4 3 2 1 0										
0	0	0	0	0	0	0	0	0	0	0	0	
1	0	0	0	0	0	0	0	0	0	0	1	
•	•	•	•	•	•	•	•	•	•	•	•	
1919	1	1	1	0	1	1	1	1	1	1	1	

#### 2.2.1.2 Programming RF\_FN[10:0] Using 19.68 MHz Reference Oscillator

Similarly, when a 19.68 MHz reference oscillator is used (OSC\_FREQ bit = 1), the RF\_FN can be programmed to values ranging from 0 to 1967.

Numerator		RF_FN[10:0]										
		f <sub>OSCin</sub> = 19.68 MHz										
	10	0 9 8 7 6 5 4 3 2 1 0										
0	0	0	0	0	0	0	0	0	0	0	0	
1	0	0	0	0	0	0	0	0	0	0	1	
•	•	•	•	•	•	•	•	•	•	•	•	
1967	1	1	1	1	0	1	0	1	1	1	1	

#### 2.2.2 RF\_A[2:0] - RF Synthesizer Swallow Counter (A Counter) (R0[13:15])

The RF\_A control word is used to setup the RF synthesizer's A counter. The A counter is a 3-bit swallow counter used in the programmable feedback divider. The RF\_A control word can be programmed to values ranging from 0 to 7.

Divide Ratio	RF_A[2:0] RF Mode											
	RF Mode											
	2	2 1 0										
0	0	0	0									
1	0	0	1									
•	•	•	•									
7	1	1	1									

#### 2.2.3 RF\_B[3:0] - RF Synthesizer Programmable Binary Counter (B Counter) (R0[16:19])

The RF\_B control word is used to setup the RF synthesizer's B counter. The B counter is a 4-bit programmable binary counter used in the programmable feedback divider. The RF\_B control word can be programmed to values ranging from 2 to 15. Divide ratios less than 2 are prohibited.

Divide Ratio		RF_B[3:0]									
	3	2	1	0							
2	0	0	1	0							
3	0	0	1	1							
•	•	•	•	•							
15	1	1	1	1							

#### 2.2.4 RF\_LD - RF Synthesizer System Lock Detect (R0[21])

The RF\_LD bit is used to indicate the lock status of the RF synthesizer system.

Control Bit	Register Location	Description	Fund	ction
			0	1
RF_LD	R0[21]	RF Synthesizer	Hard Zero	Lock Detect
		System Lock Detect	(GND)	

#### 2.2.5 SPI\_DEF - Serial Port Interface Default Register Selection (R0[23])

The SPI\_DEF bit selects between using the default IF counter values and user programmable values.

Control Bit	Register Location	Description	Function			
			0	1		
SPI_DEF	R0[23]	Serial Port Interface	Default Counter	Default Counter		
		Default Register	Values OFF.	Values ON.		
		Selection	Program Registers Program Register			
			R0 through R6 R0 through R2			

#### 2.3 R1 REGISTER

The R1 register contains the FREQ\_OFF, RF\_EN and OB\_CRL control words. The register address bits are R1[1:0] = 01. The detailed descriptions and programming information for each control word is discussed in the following sections.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB SHIFT REGISTER BIT LOCATION												LSB											
	DATA[21:0]												RESS :0] ELD											
R1	0	1	1	0	1	0	0	0	1	0	1	0	1	0	1	0	0	1	OB_ [1:	CRL 0]	RF_ EN	FREQ_ OFF	0	1

#### 2.3.1 FREQ\_OFF - RF Synthesizer System Frequency Offset (R1[2])

The FREQ\_OFF bit is used to offset the RF frequency by +5 kHz.

Control Bit	Register Location	Description	Function			
			0	1		
FREQ_OFF	R1[2]	RF Synthesizer	RF Synthesizer RF Synthesizer			
		System Frequency	System Frequency	System Frequency		
		Offset	Offset Disabled Offset Enabled			

#### 2.3.2 RF\_EN - RF Synthesizer System Enable (R1[3])

The RF\_EN bit is used to switch the RF synthesizer system (PLL and VCO) between a powered up and powered down mode.

Control Bit	Register Location	Description	Fund	ction			
			0	1			
RF_EN	R1[3]	RF Synthesizer	RF Synthesizer	RF Synthesizer			
		System Enable	System Powered	System Active			
			Down				

#### 2.3.3 OB\_CRL[1:0] - RF VCO Output Buffer Power Control (R1[5:4])

The OB\_CRL word is used to set the RF VCO output buffer power level. The power level can be set according to the system requirements.

OB_C	RL[1:0]	RF VCO Output Buffer Power Level (dBm)					
0	0	-4.5					
0	1	-2.0					
1	0	0.5					
1	1	3.0					

#### 2.4 R2 REGISTER

The R2 register contains the IF\_EN, IF\_CUR, IF\_FREQ, OSC\_FREQ, and VCO\_CUR control words. The register address bits are R2[1:0] = 10. The detailed descriptions and programming information for each control word is discussed in the following sections.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB SHIFT REGISTER BIT LOCATION											LSB												
	DATA[21:0] FIELD										ADDF [1 FIE	:0]												
R2	1 1 0 0 1 0 0 1 0 0 0 0 0 0 0 0 0 0 0 0										1	0												

#### 2.4.1 IF\_EN - IF Synthesizer Enable (R2[2])

The IF\_EN bit is used to switch the IF synthesizer between a powered up and powered down mode.

Control Bit	Register Location	Description	Fund	ction
			0	1
IF_EN	R2[2]	IF Synthesizer Enable	IF Synthesizer Powered Down	IF Synthesizer Active

#### 2.4.2 IF\_CUR[1:0] - IF Synthesizer Charge Pump Current Gain (R2[4:3])

The IF\_CUR control word is used to set the IF synthesizer's charge pump current gain. Four gain levels are available.

IF_CL	JR[1:0]	IF Synthesizer Charge Pump Current Gain (μΑ)
0	0	100
0	1	200
1	0	300
1	1	800

#### 2.4.3 IF\_FREQ[1:0] - IF Synthesizer Fixed Frequency Selection (R2[6:5])

The IF\_FREQ control word is used to set the default fixed IF frequency applicable to the specific CDMA system. For LMX2542, the default fixed IF frequency is 367.20 MHz.

IF_FRI	EQ[1:0]	Fixed IF Frequency (MHz)
0	0	170.76
0	1	367.20
1	440.76	

#### 2.4.4 OSC\_FREQ - Reference Oscillator Frequency Select (R2[7])

The OSC\_FREQ bit is used to select the appropriate reference oscillator frequency.

Control Bit	Register Location	Description	Fund	ction				
			0	1				
OSC_FREQ	R2[7]	Reference Oscillator	19.20 MHz 19.68 MHz					
		Select	Reference Oscillator	Reference Oscillator				
			Selected Selected					

#### 2.4.5 VCO\_CUR[1:0] - RF VCO Dynamic Current (R2[9:8])

The VCO\_CUR control word is used to set the dynamic current for the RF VCO. A maximum dynamic current is recommended, and is achieved when VCO\_CUR[1:0] word = 11.

VCO_C	CUR[1:0]	RF VCO Current Magnitude
0	0	Minimum
•	•	•
•	•	•
1	1	Maximum

#### 2.5 R3 REGISTER

The R3 register is used for internal testing of the device and is not intended for customer use. The register address bits are R3[2:0] = 011. Register R3 is active only when the SPI\_DEF bit in Register R0 is set to 0.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB									SHIF	T REC	SISTE	R BIT	LOCA	TION									LSB
	DATA[20:0] FIELD														ADDRESS [2:0] FIELD									
R3	0	0	0	0	0	0	0	0	0	0	0	1	0	1	0	0	1	0	0	1	0	0	1	1

#### 2.6 R4 REGISTER

The R4 register contains the IF\_B and IF\_A control words. The register address bits are R4[3:0] = 0111. Register R4 is active only when the SPI\_DEF bit in Register R0 is set to 0. Regsiter R4 should only be used to set the IF N counter if the default value is not desired. The detailed descriptions and programming information for each control word is discussed in the following sections.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB SHIFT REGISTER BIT LOCATION																LSB							
	DATA[19:0]																ADDF [3: FIE	RESS :0] :LD						
R4	0	0	0	0	0	0	0		IF. [3:	_A :0]						IF_B [8:0]					0	1	1	1

#### 2.6.1 IF\_B[8:0] - IF Synthesizer Programmable Binary Counter (B Counter) (R4[12:4])

The IF\_B control word is used to setup the IF synthesizer's B counter. The B counter is a 9-bit programmable binary counter used in the programmable feedback divider. The IF\_B control word can be programmed to values ranging from 1 to 511. Divide ratios less than 1 are prohibited.

Divide Ratio				II	F_B[8:	0]			
	8	7	6	5	4	3	2	1	0
1	0	0	0	0	0	0	0	0	1
2	0	0	0	0	0	0	0	1	0
•	•	•	•	•	•	•	•	•	•
511	1	1	1	1	1	1	1	1	1

#### 2.6.2 IF\_A[3:0] - IF Synthesizer Swallow Counter (A Counter) (R4[16:13])

The IF\_A control word is used to setup the IF synthesizer's A counter. The A counter is a 4-bit swallow counter used in the programmable feedback divider. The IF\_A control word can be programmed to values ranging from 0 to 15.

Divide Ratio		IF_A	A[3:0]	
	3	2	1	0
0	0	0	0	0
1	0	0	0	1
•	•	•	•	•
15	1	1	1	1

#### 2.7 R5 REGISTER

The R5 register contains the IF\_R control word. The register address bits are R5[4:0] = 01111. Register R5 is active only when the SPI\_DEF bit in Register R0 is set to 0. Regsiter R5 should only be used to set the IF R counter if the default value is not desired. The detailed description and programming information for this control word is discussed in the following section.

Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB	ISB SHIFT REGISTER BIT LOCATION																	LSB					
		DATA[18:0] FIELD																	DDRES [4:0] FIELD					
R5	0	0	0	0	0	0	0	0	0	0	IF_R [8:0]									0	1	1	1	1

#### 2.7.1 IF\_R[8:0] - IF Synthesizer Programmable Reference Divider (R5[13:5])

The IF\_R control word is used to setup the IF synthesizer's reference divider. The IF\_R control word can be programmed to values ranging from 2 to 511. Divide ratios less than 2 are prohibited.


Divide Ratio				IF	=_R[8:0	0]			
	8	7	6	5	4	3	2	1	0
2	0	0	0	0	0	0	0	1	0
3	0	0	0	0	0	0	0	1	1
•	•	•	•	•	•	•	•	•	•
511	1	1	1	1	1	1	1	1	1

#### 2.8 R6 REGISTER

The R6 register is used for internal testing of the device and is not intended for customer use. The register address bits are R6[5:0] = 0111111. Register R6 is active only when the SPI\_DEF bit in Register R0 is set to 0.

l																								
Reg	23	22	21	20	19	18	17	16	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	MSB									SHIF	T REC	SISTE	R BIT	LOCA	TION									LSB
	DATA[17:0] FIELD																		[5	RESS :0] LD				
R6	0	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	0	1	1	1	1	1

# Physical Dimensions inches (millimeters) unless otherwise noted

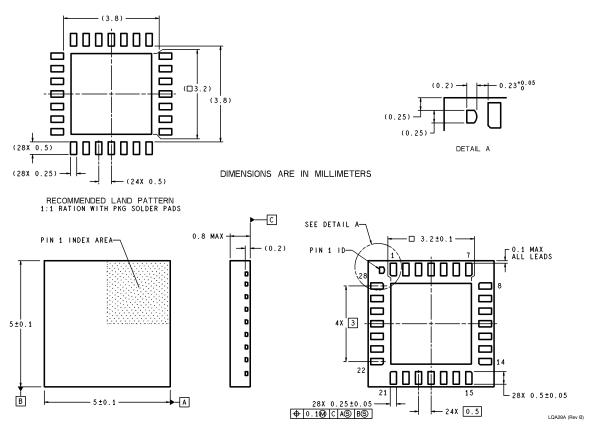

28-Pin Leadless Leadframe Package (LLP)
NS Package Number LQA28A

#### LIFE SUPPORT POLICY

NATIONAL'S PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS WITHOUT THE EXPRESS WRITTEN APPROVAL OF THE PRESIDENT AND GENERAL COUNSEL OF NATIONAL SEMICONDUCTOR CORPORATION. As used herein:

- Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury to the user.
- A critical component is any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

#### **BANNED SUBSTANCE COMPLIANCE**

National Semiconductor certifies that the products and packing materials meet the provisions of the Customer Products Stewardship Specification (CSP-9-111C2) and the Banned Substances and Materials of Interest Specification (CSP-9-111S2) and contain no "Banned Substances" as defined in CSP-9-111S2.



National Semiconductor Americas Customer Support Center

Support Center
Email: new.feedback@nsc.com
Tel: 1-800-272-9959

www.national.com

National Semiconductor Europe Customer Support Center Fax: +49 (0) 180-530 85 86

Email: europe.support@nsc.com
Deutsch Tel: +49 (0) 69 9508 6208
English Tel: +44 (0) 870 24 0 2171
Français Tel: +33 (0) 1 41 91 8790

National Semiconductor Asia Pacific Customer Support Center Email: ap.support@nsc.com National Semiconductor Japan Customer Support Center Fax: 81-3-5639-7507 Email: jpn.feedback@nsc.com Tel: 81-3-5639-7560

National does not assume any responsibility for use of any circuitry described, no circuit patent licenses are implied and National reserves the right at any time without notice to change said circuitry and specifications.