## Features

- 80C51 Core Architecture
- 256 Bytes of On-chip RAM
- 2048 Bytes of On-chip ERAM
- 64K Bytes of On-chip Flash Memory
  - Data Retention: 10 Years at 85°C
  - Read/Write Cycle: 100K
- 2K Bytes of On-chip Flash for Bootloader
- 2K Bytes of On-chip EEPROM Read/Write Cycle: 100K
- Integrated Power Monitor (POR: PFD) To Supervise Internal Power Supply
- 14-sources 4-level Interrupts
- Three 16-bit Timers/Counters
- Full Duplex UART Compatible 80C51
  - **High-speed Architecture**
  - In Standard Mode:
    - 40 MHz (Vcc 3V to 5.5V, both Internal and external code execution) 60 MHz (Vcc 4.5V to 5.5V and Internal Code execution only)
    - In X2 mode (6 Clocks/machine cycle)
       20 MHz (Vcc 3V to 5.5V, both Internal and external code execution)
       30 MHz (Vcc 4.5V to 5.5V and Internal Code execution only)
- Five Ports: 32 + 4 Digital I/O Lines
- Five-channel 16-bit PCA with
  - PWM (8-bit)
  - High-speed Output
  - Timer and Edge Capture
- Double Data Pointer
- 21-bit WatchDog Timer (7 Programmable Bits)
- A 10-bit Resolution Analog to Digital Converter (ADC) with 8 Multiplexed Inputs
- SPI Interface, (PLCC52, VPFP64 and CABGA 64 packages only)
- Full CAN Controller
  - Fully Compliant with CAN Rev 2.0A and 2.0B
  - Optimized Structure for Communication Management (Via SFR)
  - 15 Independent Message Objects
    - Each Message Object Programmable on Transmission or Reception
    - Individual Tag and Mask Filters up to 29-bit Identifier/Channel
    - 8-byte Cyclic Data Register (FIFO)/Message Object
    - 16-bit Status and Control Register/Message Object
    - 16-bit Time-Stamping Register/Message Object

- CAN Specification 2.0 Part A or 2.0 Part B Programmable for Each Message Object

- Access to Message Object Control and Data Registers Via SFR
- Programmable Reception Buffer Length Up To 15 Message Objects

- Priority Management of Reception of Hits on Several Message Objects at the Same Time (Basic CAN Feature)

- Priority Management for Transmission
- Message Object Overrun Interrupt
- Supports
  - Time Triggered Communication
  - Autobaud and Listening Mode
  - Programmable Automatic Reply Mode
- 1-Mbit/s Maximum Transfer Rate at 8 MHz<sup>(1)</sup> Crystal Frequency in X2 Mode
- Readable Error Counters
- Programmable Link to On-chip Timer for Time Stamping and Network Synchronization
- Independent Baud Rate Prescaler
- Data, Remote, Error and Overload Frame Handling
- 1. At BRP = 1 sampling point will be fixed.





Enhanced 8-bit MCU with CAN Controller and Flash Memory

# AT89C51CC03

Rev. 4182K-CAN-05/06



- On-chip Emulation Logic (Enhanced Hook System)
- Power Saving Modes
  - Idle Mode
  - Power-down Mode
- Power Supply: 3 volts to 5.5 volts
- Temperature Range: Industrial (-40° to +85°C), Automotive (-40°C to +125°C)
- Packages: VQFP44, PLCC44, VQFP64, PLCC52, CA-BGA64


**Description** The AT89C51CC03 is a member of the family of 8-bit microcontrollers dedicated to CAN network applications.

In X2 mode a maximum external clock rate of 20 MHz reaches a 300 ns cycle time.


Besides the full CAN controller AT89C51CC03 provides 64K Bytes of Flash memory including In-System Programming (ISP), 2K Bytes Boot Flash Memory, 2K Bytes EEPROM and 2048 byte ERAM.

Primary attention is paid to the reduction of the electro-magnetic emission of AT89C51CC03.

### **Block Diagram**

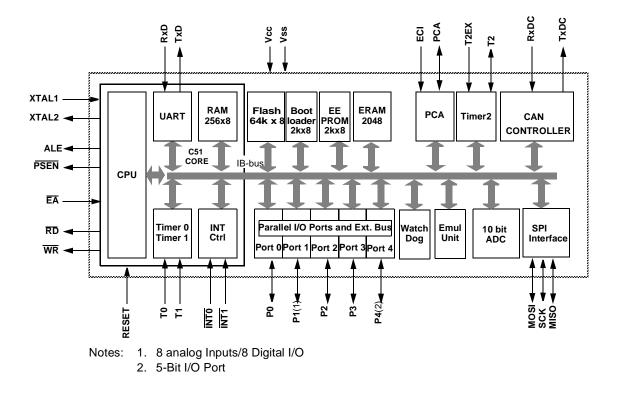


## **Pin Configuration**

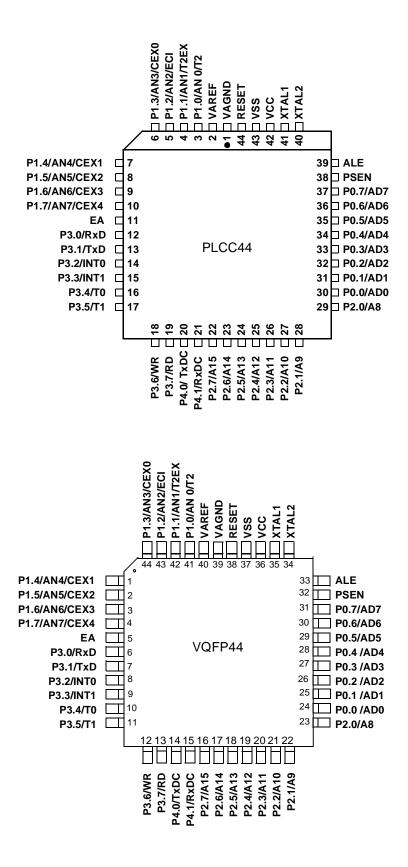





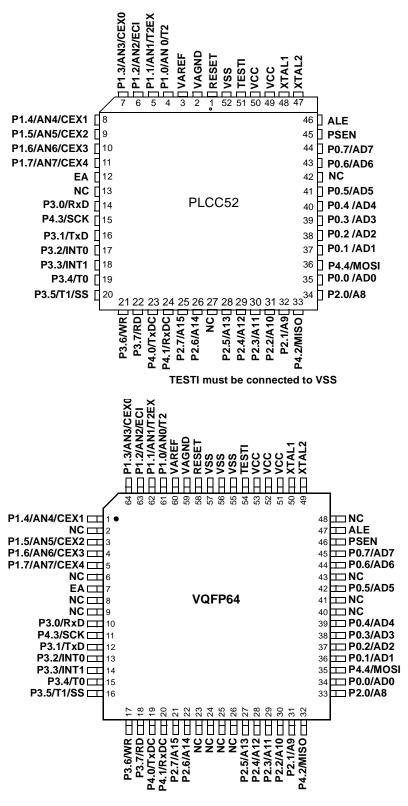


**TESTI** must be connected to VSS

AT89C51CC03

Downloaded from Elcodis.com electronic components distributor

### **CA-BGA64** Top View

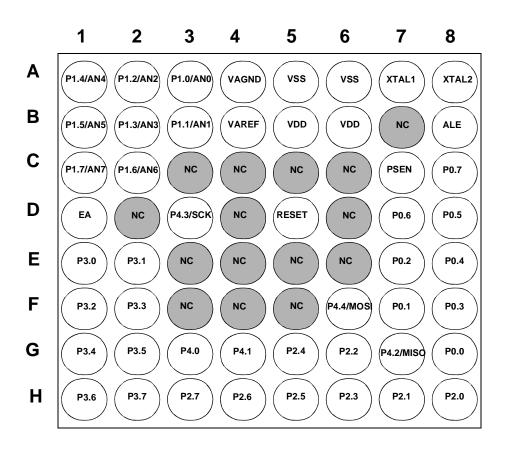



	ı	
Pin Name	Туре	Description
VSS	GND	Circuit ground
TESTI	I	Must be connected to VSS
VCC		Supply Voltage
VAREF		Reference Voltage for ADC
VAGND		Reference Ground for ADC
P0.0:7	I/O	<b>Port 0:</b> Is an 8-bit open drain bi-directional I/O port. Port 0 pins that have 1's written to them float, and in this state can be used as high-impedance inputs. Port 0 is also the multiplexed low-order address and data bus during accesses to external Program and Data Memory. In this application it uses strong internal pull-ups when emitting 1's. Port 0 also outputs the code Bytes during program validation. External pull-ups are required during program verification.
P1.0:7	1/0	Port 1: Is an 8-bit bi-directional I/O port with internal pull-ups. Port 1 pins can be used for digital input/output or as analog inputs for the Analog Digital Converter (ADC). Port 1 pins that have 1's written to them are pulled high by the internal pull-up transistors and can be used as inputs in this state. As inputs, Port 1 pins that are being pulled low externally will be the source of current (I <sub>L</sub> , see section "Electrical Characteristic") because of the internal pull-ups. Port 1 pins that are being pulled low externally will be the source of current (I <sub>L</sub> , see section "Electrical Characteristic") because of the internal pull-ups. Port 1 pins that are being pulled low externally will be the source of current (I <sub>L</sub> , see section "Electrical Characteristic") because of the internal pull-ups. Port 1 pins that are being pulled low externally will be the source of current (I <sub>L</sub> , see section "Electrical Characteristic") because of the internal pull-ups are disconnected). As a secondary digital function, port 1 contains the Timer 2 external trigger and clock input; the PCA external clock input and the PCA module I/O. P1.0/ANO/T2 Analog input channel 0, External clock input for Timer/counter2. P1.1/AN1/T2EX Analog input channel 1, Trigger input for Timer/counter2. P1.2/AN2/ECI Analog input channel 3, PCA external clock input. P1.3/AN3/CEX0 Analog input channel 3, PCA module 0 Entry of input/PWM output. P1.4/AN4/CEX1 Analog input channel 4, PCA module 1 Entry of input/PWM output. P1.5/AN5/CEX2 Analog input channel 5, PCA module 2 Entry of input/PWM output. P1.5/AN5/CEX2 Analog input channel 6, PCA module 3 Entry of input/PWM output. P1.7/AN7/CEX4 Analog input channel 7, PCA module 3 Entry of input/PWM output. P1.7/AN7/CEX4 Analog input channel 7, PCA module 4 Entry ot input/PWM output. P1.7/AN7/CEX4 Analog input channel 7, PCA module 4 Entry ot input/PWM output. P1.7/AN7/CEX4 Analog input channel 7, PCA module 4 Entry ot input/PWM output. P1.7/AN7/CEX4
P2.0:7	I/O	<b>Port 2:</b> Is an 8-bit bi-directional I/O port with internal pull-ups. Port 2 pins that have 1's written to them are pulled high by the internal pull-ups and can be used as inputs in this state. As inputs, Port 2 pins that are being pulled low externally will be a source of current (I <sub>IL</sub> , see section "Electrical Characteristic") because of the internal pull-ups. Port 2 emits the high-order address byte during accesses to the external Program Memory and during accesses to external Data Memory that uses 16-bit addresses (MOVX @DPTR). In this application, it uses strong internal pull-ups when emitting 1's. During accesses to external Data Memory that use 8 bit addresses (MOVX @Ri), Port 2 transmits the contents of the P2 special function register. It also receives high-order addresses and control signals during program validation.

AIMEL

# AT89C51CC03

6

Pin Name	Туре	Description
P3.0:7	I/O	<b>Port 3:</b> Is an 8-bit bi-directional I/O port with internal pull-ups. Port 3 pins that have 1's written to them are pulled high by the internal pull-up transistors and can be used as inputs in this state. As inputs, Port 3 pins that are being pulled low externally will be a source of current (I <sub>IL</sub> , see section "Electrical Characteristic") because of the internal pull-ups. The output latch corresponding to a secondary function must be programmed to one for that function to operate (except for TxD and WR). The secondary functions are assigned to the pins of port 3 as follows:
		P3.0/RxD: Receiver data input (asynchronous) or data input/output (synchronous) of the serial interface P3.1/TxD:
		Transmitter data output (asynchronous) or clock output (synchronous) of the serial interface P3.2/INT0: External interrupt 0 input/timer 0 gate control input P3.3/INT1:
		External interrupt 1 input/timer 1 gate control input P3.4/T0: Timer 0 counter input P3.5/T1/SS:
		Timer 1 counter input SPI Slave Select P3.6/WR: External Data Memory write strobe; latches the data byte from port 0 into the external data memory P3.7/RD:
		External Data Memory read strobe; Enables the external data memory. It can drive CMOS inputs without external pull-ups.
P4.0:4	I/O	<b>Port 4:</b> Is an 2-bit bi-directional I/O port with internal pull-ups. Port 4 pins that have 1's written to them are pulled high by the internal pull-ups and can be used as inputs in this state. As inputs, Port 4 pins that are being pulled low externally will be a source of current (IIL, on the datasheet) because of the internal pull-up transistor. The output latch corresponding to a secondary function RxDC must be programmed to one for that function to operate. The secondary functions are assigned to the two pins of port 4 as follows:
		P4.0/TxDC: Transmitter output of CAN controller P4.1/RxDC:
		Receiver input of CAN controller. P4.2/MISO: Master Input Slave Output of SPI controller
		P4.3/SCK: Serial Clock of SPI controller P4.4/MOSI:
		Master Ouput Slave Input of SPI controller
		It can drive CMOS inputs without external pull-ups.






Pin Name	Туре	Description
RESET	I/O	<b>Reset:</b> A high level on this pin during two machine cycles while the oscillator is running resets the device. An internal pull-down resistor to VSS permits power-on reset using only an external capacitor to VCC.
ALE	0	ALE: An Address Latch Enable output for latching the low byte of the address during accesses to the external memory. The ALE is activated every 1/6 oscillator periods (1/3 in X2 mode) except during an external data memory access. When instructions are executed from an internal Flash (EA = 1), ALE generation can be disabled by the software.
PSEN	0	<b>PSEN:</b> The Program Store Enable output is a control signal that enables the external program memory of the bus during external fetch operations. It is activated twice each machine cycle during fetches from the external program memory. However, when executing from of the external program memory two activations of PSEN are skipped during each access to the external Data memory. The PSEN is not activated for internal fetches.
EA	I	<b>EA</b> : When External Access is held at the high level, instructions are fetched from the internal Flash. When held at the low level, AT89C51CC03 fetches all instructions from the external program memory.
XTAL1	I	XTAL1: Input of the inverting oscillator amplifier and input of the internal clock generator circuits. To drive the device from an external clock source, XTAL1 should be driven, while XTAL2 is left unconnected. To operate above a frequency of 16 MHz, a duty cycle of 50% should be maintained.
XTAL2	0	XTAL2: Output from the inverting oscillator amplifier.


**I/O Configurations** Each Port SFR operates via type-D latches, as illustrated in Figure 1 for Ports 3 and 4. A CPU "write to latch" signal initiates transfer of internal bus data into the type-D latch. A CPU "read latch" signal transfers the latched Q output onto the internal bus. Similarly, a "read pin" signal transfers the logical level of the Port pin. Some Port data instructions activate the "read latch" signal while others activate the "read pin" signal. Latch instructions are referred to as Read-Modify-Write instructions. Each I/O line may be independently programmed as input or output.


# **Port 1, Port 3 and Port 4** Figure 1 shows the structure of Ports 1 and 3, which have internal pull-ups. An external source can pull the pin low. Each Port pin can be configured either for general-purpose I/O or for its alternate input output function.

To use a pin for general-purpose output, set or clear the corresponding bit in the Px register (x = 1,3 or 4). To use a pin for general-purpose input, set the bit in the Px register. This turns off the output FET drive.

To configure a pin for its alternate function, set the bit in the Px register. When the latch is set, the "alternate output function" signal controls the output level (see Figure 1). The operation of Ports 1, 3 and 4 is discussed further in the "quasi-Bidirectional Port Operation" section.



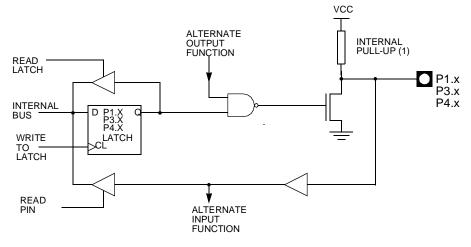




# Ports 0 and 2 are used for general-purpose I/O or as the external address/data bus. Port 0, shown in Figure 3, differs from the other Ports in not having internal pull-ups. Figure 3 shows the structure of Port 2. An external source can pull a Port 2 pin low.

To use a pin for general-purpose output, set or clear the corresponding bit in the Px register (x = 0 or 2). To use a pin for general-purpose input, set the bit in the Px register to turn off the output driver FET.



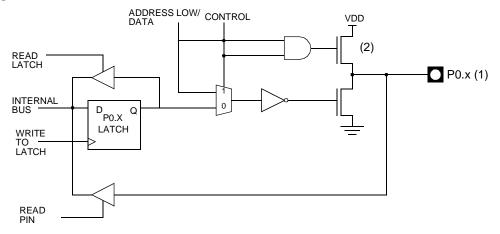


- Notes: 1. Port 0 is precluded from use as general-purpose I/O Ports when used as address/data bus drivers.
  - Port 0 internal strong pull-ups assist the logic-one output for memory bus cycles only. Except for these bus cycles, the pull-up FET is off, Port 0 outputs are open-drain.



Port 0 and Port 2



#### Figure 3. Port 2 Structure

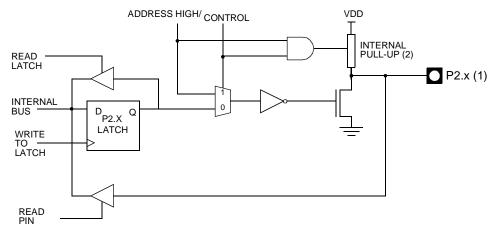

- Notes: 1. Port 2 is precluded from use as general-purpose I/O Ports when as address/data bus drivers.
  - 2. Port 2 internal strong pull-ups FET (P1 in FiGURE) assist the logic-one output for memory bus cycle.

When Port 0 and Port 2 are used for an external memory cycle, an internal control signal switches the output-driver input from the latch output to the internal address/data line.

# Read-Modify-Write Instructions

Some instructions read the latch data rather than the pin data. The latch based instructions read the data, modify the data and then rewrite the latch. These are called "Read-Modify-Write" instructions. Below is a complete list of these special instructions (see Table ). When the destination operand is a Port or a Port bit, these instructions read the latch rather than the pin:

Instruction	Description	Example
ANL	logical AND	ANL P1, A
ORL	logical OR	ORL P2, A
XRL	logical EX-OR	XRL P3, A
JBC	jump if bit = 1 and clear bit	JBC P1.1, LABEL
CPL	complement bit	CPL P3.0
INC	increment	INC P2
DEC	decrement	DEC P2
DJNZ	decrement and jump if not zero	DJNZ P3, LABEL
MOV Px.y, C	move carry bit to bit y of Port x	MOV P1.5, C
CLR Px.y	clear bit y of Port x	CLR P2.4
SET Px.y	set bit y of Port x	SET P3.3

It is not obvious the last three instructions in this list are Read-Modify-Write instructions. These instructions read the port (all 8 bits), modify the specifically addressed bit and



write the new byte back to the latch. These Read-Modify-Write instructions are directed to the latch rather than the pin in order to avoid possible misinterpretation of voltage (and therefore, logic) levels at the pin. For example, a Port bit used to drive the base of an external bipolar transistor can not rise above the transistor's base-emitter junction voltage (a value lower than VIL). With a logic one written to the bit, attempts by the CPU to read the Port at the pin are misinterpreted as logic zero. A read of the latch rather than the pins returns the correct logic-one value.


### Quasi-Bidirectional Port Operation

Port 1, Port 2, Port 3 and Port 4 have fixed internal pull-ups and are referred to as "quasi-bidirectional" Ports. When configured as an input, the pin impedance appears as logic one and sources current in response to an external logic zero condition. Port 0 is a "true bidirectional" pin. The pins float when configured as input. Resets write logic one to all Port latches. If logical zero is subsequently written to a Port latch, it can be returned to input conditions by a logical one written to the latch.

Note: Port latch values change near the end of Read-Modify-Write instruction cycles. Output buffers (and therefore the pin state) update early in the instruction after Read-Modify-Write instruction cycle.

Logical zero-to-one transitions in Port 1, Port 2, Port 3 and Port 4 use an additional pullup (p1) to aid this logic transition (see Figure 4.). This increases switch speed. This extra pull-up sources 100 times normal internal circuit current during 2 oscillator clock periods. The internal pull-ups are field-effect transistors rather than linear resistors. Pullups consist of three p-channel FET (pFET) devices. A pFET is on when the gate senses logical zero and off when the gate senses logical one. pFET #1 is turned on for two oscillator periods immediately after a zero-to-one transition in the Port latch. A logical one at the Port pin turns on pFET #3 (a weak pull-up) through the inverter. This inverter and pFET pair form a latch to drive logical one. pFET #2 is a very weak pull-up switched on whenever the associated nFET is switched off. This is traditional CMOS switch convention. Current strengths are 1/10 that of pFET #3.



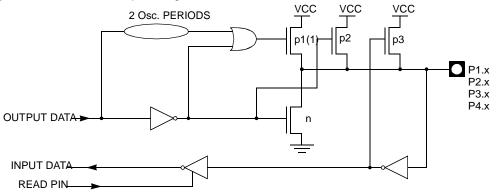

Note: Port 2 p1 assists the logic-one output for memory bus cycles.





## SFR Mapping

The Special Function Registers (SFRs) of the AT89C51CC03 fall into the following categories:

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
ACC	E0h	Accumulator	_	-	-	-	_	_	-	-
В	F0h	B Register	_	_	-	-	_	_	-	-
PSW	D0h	Program Status Word	CY	AC	F0	RS1	RS0	OV	F1	Р
SP	81h	Stack Pointer	_	_	-	-	_	_	-	-
DPL	82h	Data Pointer Low byte LSB of DPTR	-	-	_	_	-	-	_	-
DPH		Data Pointer High byte MSB of DPTR	_	_	_	_	_	_	_	-

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
P0	80h	Port 0	-	-	-	-	-	-	-	-
P1	90h	Port 1	-	-	-	-	-	-	-	-
P2	A0h	Port 2	-	-	-	-	-	-	-	-
P3	B0h	Port 3	-	-	-	-	-	-	-	-
P4	C0h	Port 4 (x5)	-	_	-	P4.4 / MOSI	P4.3 / SCK	P4.2 / MISO	P4.1 / RxDC	P4.0 / TxDC

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
ТН0	8Ch	Timer/Counter 0 High byte	-	_	_	_	_	_	-	_
TL0	8Ah	Timer/Counter 0 Low byte	-	_	_	_	_	_	-	_
TH1	8Dh	Timer/Counter 1 High byte	-	_	_	_	_	_	-	_
TL1	8Bh	Timer/Counter 1 Low byte	-	_	_	_	_	_	-	-
TH2	CDh	Timer/Counter 2 High byte	-	_	_	_	_	_	-	_
TL2	CCh	Timer/Counter 2 Low byte	_	_	_	_	_	_	_	_
TCON	88h	Timer/Counter 0 and 1 control	TF1	TR1	TF0	TR0	IE1	IT1	IE0	ITO
TMOD	89h	Timer/Counter 0 and 1 Modes	GATE1	C/T1#	M11	M01	GATE0	C/T0#	M10	M00

# 12 AT89C51CC03

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
T2CON	C8h	Timer/Counter 2 control	TF2	EXF2	RCLK	TCLK	EXEN2	TR2	C/T2#	CP/RL2#
T2MOD	C9h	Timer/Counter 2 Mode	_	-	-	-	_	-	T2OE	DCEN
RCAP2H	CBh	Timer/Counter 2 Reload/Capture High byte	_	_	_	_	_	_	_	_
RCAP2L	CAh	Timer/Counter 2 Reload/Capture Low byte	_	-	_	_	_	-	-	-
WDTRST	A6h	WatchDog Timer Reset	_	-	-	_	_	_	-	-
WDTPRG	A7h	WatchDog Timer Program	_	_	-	_	_	S2	S1	S0

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
SCON	98h	Serial Control	FE/SM0	SM1	SM2	REN	TB8	RB8	ТІ	RI
SBUF	99h	Serial Data Buffer	-	_	-	_	_	_	-	-
SADEN	B9h	Slave Address Mask	-	_	-	_	_	_	-	-
SADDR	A9h	Slave Address	-	_	-	_	_	-	-	-

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
CCON	D8h	PCA Timer/Counter Control	CF	CR	-	CCF4	CCF3	CCF2	CCF1	CCF0
CMOD	D9h	PCA Timer/Counter Mode	CIDL	WDTE	-	_	_	CPS1	CPS0	ECF
CL	E9h	PCA Timer/Counter Low byte	-	-	-	_	_	_	-	-
СН	F9h	PCA Timer/Counter High byte	-	-	-	_	_	_	-	-
CCAPM0	DAh	PCA Timer/Counter Mode 0		ECOM0	CAPP0	CAPN0	MAT0	TOG0	PWM0	ECCF0
CCAPM1	DBh	PCA Timer/Counter Mode 1		ECOM1	CAPP1	CAPN1	MAT1	TOG1	PWM1	ECCF1
CCAPM2	DCh	PCA Timer/Counter Mode 2	-	ECOM2	CAPP2	CAPN2	MAT2	TOG2	PWM2	ECCF2
CCAPM3	DDh	PCA Timer/Counter Mode 3		ECOM3	CAPP3	CAPN3	MAT3	TOG3	PWM3	ECCF3
CCAPM4	DEh	PCA Timer/Counter Mode 4		ECOM4	CAPP4	CAPN4	MAT4	TOG4	PWM4	ECCF4
CCAP0H	FAh	PCA Compare Capture Module 0 H	CCAP0H7	CCAP0H6	CCAP0H5	CCAP0H4	CCAP0H3	CCAP0H2	CCAP0H1	CCAP0H0
CCAP1H	FBh	PCA Compare Capture Module 1 H	CCAP1H7	CCAP1H6	CCAP1H5	CCAP1H4	CCAP1H3	CCAP1H2	CCAP1H1	CCAP1H0
CCAP2H	FCh	PCA Compare Capture Module 2 H	CCAP2H7	CCAP2H6	CCAP2H5	CCAP2H4	CCAP2H3	CCAP2H2	CCAP2H1	CCAP2H0
ССАРЗН	FDh	PCA Compare Capture Module 3 H	CCAP3H7	CCAP3H6	CCAP3H5	CCAP3H4	CCAP3H3	CCAP3H2	CCAP3H1	CCAP3H0
CCAP4H	FEh	PCA Compare Capture Module 4 H	CCAP4H7	CCAP4H6	CCAP4H5	CCAP4H4	CCAP4H3	CCAP4H2	CCAP4H1	CCAP4H0
CCAP0L	EAh	PCA Compare Capture Module 0 L	CCAP0L7	CCAP0L6	CCAP0L5	CCAP0L4	CCAP0L3	CCAP0L2	CCAP0L1	CCAP0L0
CCAP1L	EBh	PCA Compare Capture Module 1 L	CCAP1L7	CCAP1L6	CCAP1L5	CCAP1L4	CCAP1L3	CCAP1L2	CCAP1L1	CCAP1L0
CCAP2L	ECh	PCA Compare Capture Module 2 L	CCAP2L7	CCAP2L6	CCAP2L5	CCAP2L4	CCAP2L3	CCAP2L2	CCAP2L1	CCAP2L0
CCAP3L	EDh	PCA Compare Capture Module 3 L	CCAP3L7	CCAP3L6	CCAP3L5	CCAP3L4	CCAP3L3	CCAP3L2	CCAP3L1	CCAP3L0
CCAP4L	EEh	PCA Compare Capture Module 4 L	CCAP4L7	CCAP4L6	CCAP4L5	CCAP4L4	CCAP4L3	CCAP4L2	CCAP4L1	CCAP4L0





Mnemonic	Add	Name	7	6	5	4	3	2	1	0
IENO	A8h	Interrupt Enable Control 0	EA	EC	ET2	ES	ET1	EX1	ET0	EX0
IEN1	E8h	Interrupt Enable Control 1	_	_	_	_	ESPI	ETIM	EADC	ECAN
IPL0	B8h	Interrupt Priority Control Low 0	_	PPC	PT2	PS	PT1	PX1	PT0	PX0
IPH0	B7h	Interrupt Priority Control High 0	Ι	PPCH	PT2H	PSH	PT1H	PX1H	PT0H	PX0H
IPL1	F8h	Interrupt Priority Control Low 1	_	_	_	_	SPIL	POVRL	PADCL	PCANL
IPH1	F7h	Interrupt Priority Control High1	_	_	_	_	SPIH	POVRH	PADCH	PCANH

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
ADCON	F3h	ADC Control	-	PSIDLE	ADEN	ADEOC	ADSST	SCH2	SCH1	SCH0
ADCF	F6h	ADC Configuration	CH7	CH6	CH5	CH4	CH3	CH2	CH1	CH0
ADCLK	F2h	ADC Clock	-	-	_	PRS4	PRS3	PRS2	PRS1	PRS0
ADDH	F5h	ADC Data High byte	ADAT9	ADAT8	ADAT7	ADAT6	ADAT5	ADAT4	ADAT3	ADAT2
ADDL	F4h	ADC Data Low byte	_	_	_	-	_	_	ADAT1	ADAT0

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
CANGCON	ABh	CAN General Control	ABRQ	OVRQ	TTC	SYNCTTC	AUT– BAUD	TEST	ENA	GRES
CANGSTA	AAh	CAN General Status	_	OVFG	_	TBSY	RBSY	ENFG	BOFF	ERRP
CANGIT	9Bh	CAN General Interrupt	CANIT	_	OVRTIM	OVRBUF	SERG	CERG	FERG	AERG
CANBT1	B4h	CAN Bit Timing 1	-	BRP5	BRP4	BRP3	BRP2	BRP1	BRP0	-
CANBT2	B5h	CAN Bit Timing 2	-	SJW1	SJW0	-	PRS2	PRS1	PRS0	-
CANBT3	B6h	CAN Bit Timing 3	-	PHS22	PHS21	PHS20	PHS12	PHS11	PHS10	SMP
CANEN1	CEh	CAN Enable Channel byte 1	_	ENCH14	ENCH13	ENCH12	ENCH11	ENCH10	ENCH9	ENCH8
CANEN2	CFh	CAN Enable Channel byte 2	ENCH7	ENCH6	ENCH5	ENCH4	ENCH3	ENCH2	ENCH1	ENCH0
CANGIE	C1h	CAN General Interrupt Enable	_	-	ENRX	ENTX	ENERCH	ENBUF	ENERG	-
CANIE1	C2h	CAN Interrupt Enable Channel byte 1	_	IECH14	IECH13	IECH12	IECH11	IECH10	IECH9	IECH8

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
CANIE2	C3h	CAN Interrupt Enable Channel byte 2	IECH7	IECH6	IECH5	IECH4	IECH3	IECH2	IECH1	IECH0
CANSIT1	BAh	CAN Status Interrupt Channel byte1	-	SIT14	SIT13	SIT12	SIT11	SIT10	SIT9	SIT8
CANSIT2	BBh	CAN Status Interrupt Channel byte2	SIT7	SIT6	SIT5	SIT4	SIT3	SIT2	SIT1	SIT0
CANTCON	A1h	CAN Timer Control	TPRESC 7	TPRESC 6	TPRESC 5	TPRESC 4	TPRESC 3	TPRESC 2	TPRESC 1	TPRESC 0
CANTIMH	ADh	CAN Timer high	CANTIM 15	CANTIM 14	CANTIM 13	CANTIM 12	CANTIM 11	CANTIM 10	CANTIM 9	CANTIM 8
CANTIML	ACh	CAN Timer low	CANTIM 7	CANTIM 6	CANTIM 5	CANTIM 4	CANTIM 3	CANTIM 2	CANTIM 1	CANTIM 0
CANSTMP H	AFh	CAN Timer Stamp high	TIMSTMP 15	TIMSTMP 14	TIMSTMP 13	TIMSTMP 12	TIMSTMP 11	TIMSTMP 10	TIMSTMP 9	TIMSTMP 8
CANSTMP L	AEh	CAN Timer Stamp low	TIMSTMP7	TIMSTMP 6	TIMSTMP 5	TIMSTMP 4	TIMSTMP 3	TIMSTMP 2	TIMSTMP 1	TIMSTMP 0
CANTTCH	A5h	CAN Timer TTC high	TIMTTC 15	TIMTTC 14	TIMTTC 13	TIMTTC 12	TIMTTC 11	TIMTTC 10	TIMTTC 9	TIMTTC 8
CANTTCL	A4h	CAN Timer TTC low	TIMTTC 7	TIMTTC 6	TIMTTC 5	TIMTTC 4	TIMTTC 3	TIMTTC 2	TIMTTC 1	TIMTTC 0
CANTEC	9Ch	CAN Transmit Error Counter	TEC7	TEC6	TEC5	TEC4	TEC3	TEC2	TEC1	TEC0
CANREC	9Dh	CAN Receive Error Counter	REC7	REC6	REC5	REC4	REC3	REC2	REC1	REC0
CANPAGE	B1h	CAN Page	CHNB3	CHNB2	CHNB1	CHNB0	AINC	INDX2	INDX1	INDX0
CANSTCH	B2h	CAN Status Channel	DLCW	ТХОК	RXOK	BERR	SERR	CERR	FERR	AERR
CANCONC H	B3h	CAN Control Channel	CONCH1	CONCH0	RPLV	IDE	DLC3	DLC2	DLC1	DLC0
CANMSG	A3h	CAN Message Data	MSG7	MSG6	MSG5	MSG4	MSG3	MSG2	MSG1	MSG0
CANIDT1	BCh	CAN Identifier Tag byte 1(Part A)	IDT10	IDT9	IDT8	IDT7	IDT6	IDT5	IDT4	IDT3
CANDT	DOI	CAN Identifier Tag byte 1(PartB)	IDT28	IDT27	IDT26	IDT25	IDT24	IDT23	IDT22	IDT21
		CAN Identifier Tag byte 2 (PartA)	IDT2	IDT1	IDT0	_	_	_	_	_
CANIDT2	BDh	CAN Identifier Tag byte 2 (PartB)	IDT20	IDT19	IDT18	IDT17	IDT16	IDT15	IDT14	IDT13
CANIDT3	BEh	CAN Identifier Tag byte 3(PartA)	-	-	_	-	-	_	_	-
		CAN Identifier Tag byte 3(PartB)	IDT12	IDT11	IDT10	IDT9	IDT8	IDT7	IDT6	IDT5



4182K-CAN-05/06



Mnemonic	Add	Name	7	6	5	4	3	2	1	0
CANIDT4	BFh	CAN Identifier Tag byte 4(PartA)	_	_	_	_	_	RTRTAG	_	RB0TAF
		CAN Identifier Tag byte 4(PartB)	IDT4	IDT3	IDT2	IDT1	IDT0		RB1TAG	
CANIDM1	C4h	CAN Identifier Mask byte 1(PartA)	IDMSK10	IDMSK9	IDMSK8	IDMSK7	IDMSK6	IDMSK5	IDMSK4	IDMSK3
CANIDM1 C4h	0411	CAN Identifier Mask byte 1(PartB)	IDMSK28	IDMSK27	IDMSK26	IDMSK25	IDMSK24	IDMSK23	IDMSK22	IDMSK21
CANIDM2	C5h	CAN Identifier Mask byte 2(PartA) CAN Identifier Mask byte 2(PartB)	IDMSK2 IDMSK20	IDMSK1 IDMSK19	IDMSK0 IDMSK18	– IDMSK17	– IDMSK16	– IDMSK15	– IDMSK14	– IDMSK13
CANIDM3	C6h	CAN Identifier Mask byte 3(PartA) CAN Identifier Mask byte 3(PartB)	- IDMSK12	- IDMSK11	- IDMSK10	- IDMSK9	- IDMSK8	- IDMSK7	- IDMSK6	- IDMSK5
CANIDM4	C7h	CAN Identifier Mask byte 4(PartA) CAN Identifier Mask byte 4(PartB)	- IDMSK4	- IDMSK3	- IDMSK2	- IDMSK1	– IDMSK0	RTRMSK	-	IDEMSK

Mnemonic	Add	Name	7	6	5	4	3	2	1	0
SPCON	D4h	SPI Control	SPR2	SPEN	SSDIS	MSTR	CPOL	CPHA	SPR1	SPR0
SPSCR	D5h	SPI Status and Control	SPIF	-	OVR	MODF	SPTE	UARTM	SPTEIE	MOFIE
SPDAT	D6h	SPI Data	-	-	-	-	-	-	-	-
Mnemonic	Add	Name	7	6	5	4	3	2	1	0
PCON	87h	Power Control	SMOD1	SMOD0	-	POF	GF1	GF0	PD	IDL
AUXR	8Eh	Auxiliary Register 0	DPU	VPFDP	MO	XRS2	XRS1	XRS0	EXTRAM	A0
AUXR1	A2h	Auxiliary Register 1	-	-	ENBOOT	-	GF3	0	-	DPS
CKCON0	8Fh	Clock Control 0	CANX2	WDX2	PCAX2	SIX2	T2X2	T1X2	T0X2	X2
CKCON1	9Fh	Clock Control 1	-	-	-	-	-	-	-	SPIX2
FCON	D1h	Flash Control	FPL3	FPL2	FPL1	FPL0	FPS	FMOD1	FMOD0	FBUSY
EECON	D2h	EEPROM Contol	EEPL3	EEPL2	EEPL1	EEPL0	-	-	EEE	EEBUSY
FSTA	D3	Flash Status	-	-	-	-	-	-	SEQERR	FLOAD

#### Table 1. SFR Mapping

	0/8 <sup>(2)</sup>	1/9	2/A	3/B	4/C	5/D	6/E	7/F	_
F8h	IPL1 xxxx x000	CH 0000 0000	CCAP0H 0000 0000	CCAP1H 0000 0000	CCAP2H 0000 0000	CCAP3H 0000 0000	CCAP4H 0000 0000		FFh
F0h	B 0000 0000		ADCLK xxx0 0000	ADCON x000 0000	ADDL 0000 0000	ADDH 0000 0000	ADCF 0000 0000	IPH1 xxxx x000	F7h
E8h	IEN1 xxxx x000	CL 0000 0000	CCAP0L 0000 0000	CCAP1L 0000 0000	CCAP2L 0000 0000	CCAP3L 0000 0000	CCAP4L 0000 0000		EFh
E0h	ACC 0000 0000								E7h
D8h	CCON 0000 0000	CMOD 00xx x000	CCAPM0 x000 0000	CCAPM1 x000 0000	CCAPM2 x000 0000	CCAPM3 x000 0000	CCAPM4 x000 0000		DFh
D0h	PSW 0000 0000	FCON 0000 0000	EECON xxxx xx00	FSTA xxxx xx00	SPCON 0001 0100	SPSCR 0000 0000	SPDAT xxxx xxxx		D7h
C8h	T2CON 0000 0000	T2MOD xxxx xx00	RCAP2L 0000 0000	RCAP2H 0000 0000	TL2 0000 0000	TH2 0000 0000	CANEN1 x000 0000	CANEN2 0000 0000	CFh
C0h	P4 xxx1 1111	CANGIE xx00 000x	CANIE1 x000 0000	CANIE2 0000 0000	CANIDM1 xxxx xxxx	CANIDM2 xxxx xxxx	CANIDM3 xxxx xxxx	CANIDM4 xxxx xxxx	C7h
B8h	IPL0 x000 0000	SADEN 0000 0000	CANSIT1 0000 0000	CANSIT2 0000 0000	CANIDT1 xxxx xxxx	CANIDT2 xxxx xxxx	CANIDT3 xxxx xxxx	CANIDT4 xxxx xxxx	BFh
B0h	P3 1111 1111	CANPAGE 0000 0000	CANSTCH xxxx xxxx	CANCONCH xxxx xxxx	CANBT1 xxxx xxxx	CANBT2 xxxx xxxx	CANBT3 xxxx xxxx	IPH0 x000 0000	B7h
A8h	IEN0 0000 0000	SADDR 0000 0000	CANGSTA x0x0 0000	CANGCON 0000 0x00	CANTIML 0000 0000	CANTIMH 0000 0000	CANSTMPL 0000 0000	CANSTMPH 0000 0000	AFh
A0h	P2 1111 1111	CANTCON 0000 0000	AUXR1 xxxx 00x0	CANMSG xxxx xxxx	CANTTCL 0000 0000	CANTTCH 0000 0000	WDTRST 1111 1111	WDTPRG xxxx x000	A7h
98h	SCON 0000 0000	SBUF 0000 0000		CANGIT 0x00 0000	CANTEC 0000 0000	CANREC 0000 0000		CKCON1 xxxx xxx0	9Fh
90h	P1 1111 1111								97h
88h	TCON 0000 0000	TMOD 0000 0000	TL0 0000 0000	TL1 0000 0000	TH0 0000 0000	TH1 0000 0000	AUXR x001 0100	CKCON0 0000 0000	8Fh
80h	P0 1111 1111	SP 0000 0111	DPL 0000 0000	DPH 0000 0000				PCON 00x1 0000	87h
L	0/8 <sup>(2)</sup>	1/9	2/A	3/B	4/C	5/D	6/E	7/F	


Reserved


Note: 1. Do not read or write Reserved Registers

 These registers are bit-addressable. Sixteen addresses in the SFR space are both byte-addressable and bit-addressable. The bit-addressable SFR's are those whose address ends in 0 and 8. The bit addresses, in this area, are 0x80 through to 0xFF.



	B B B B B B B B B B B B B B B B B B B
Clock	The AT89C51CC03 core needs only 6 clock periods per machine cycle. This feature, called"X2", provides the following advantages:
	<ul> <li>Divides frequency crystals by 2 (cheaper crystals) while keeping the same CPU power.</li> </ul>
	<ul> <li>Saves power consumption while keeping the same CPU power (oscillator power saving).</li> </ul>
	<ul> <li>Saves power consumption by dividing dynamic operating frequency by 2 in operating and idle modes.</li> </ul>
	<ul> <li>Increases CPU power by 2 while keeping the same crystal frequency.</li> </ul>
	In order to keep the original C51 compatibility, a divider-by-2 is inserted between the XTAL1 signal and the main clock input of the core (phase generator). This divider may be disabled by the software.
	An extra feature is available to start after Reset in the X2 mode. This feature can be enabled by a bit X2B in the Hardware Security Byte. This bit is described in the section "In-System Programming".
Description	The X2 bit in the CKCON register (see Table 2) allows switching from 12 clock cycles per instruction to 6 clock cycles and vice versa. At reset, the standard speed is activated (STD mode).
	Setting this bit activates the X2 feature (X2 mode) for the CPU Clock only (see Figure 5.).
	The Timers 0, 1 and 2, Uart, PCA, WatchDog or CAN switch in X2 mode only if the cor- responding bit is cleared in the CKCON register.
	The clock for the whole circuit and peripheral is first divided by two before being used by the CPU core and peripherals. This allows any cyclic ratio to be accepted on the XTAL1 input. In X2 mode, as this divider is bypassed, the signals on XTAL1 must have a cyclic ratio between 40 to 60%. Figure 5. shows the clock generation block diagram. The X2 bit is validated on the XTAL1÷2 rising edge to avoid glitches when switching from the X2 to the STD mode. Figure 6 shows the mode switching waveforms.




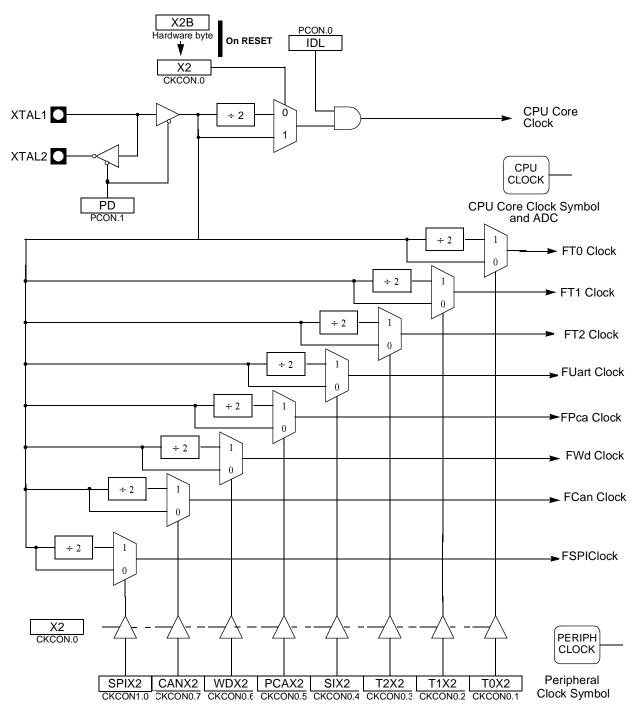





#### Figure 6. Mode Switching Waveforms

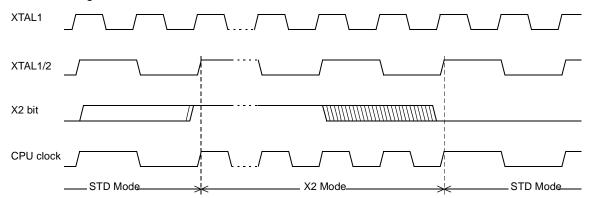

Note: In order to prevent any incorrect operation while operating in the X2 mode, users must be aware that all peripherals using the clock frequency as a time reference (UART, timers...) will have their time reference divided by two. For example a free running timer generating an interrupt every 20 ms will then generate an interrupt every 10 ms. A UART with a 4800 baud rate will have a 9600 baud rate.



### Registers

### Table 2. CKCON0 Register

CKCON0 (S:8Fh) Clock Control Register

7	6	5	4	3	2	1	0				
CANX2	WDX2	PCAX2	SIX2	T2X2	T1X2	T0X2	X2				
Bit Number	Bit Mnemonic	Description	escription								
7	CANX2		ct 6 clock per	iods per peripl ods per periph	•						
6	WDX2	Clear to sele	atchDog clock <sup>(1)</sup> ear to select 6 clock periods per peripheral clock cycle. et to select 12 clock periods per peripheral clock cycle.								
5	PCAX2	Clear to sele	ogrammable Counter Array clock <sup>(1)</sup> ear to select 6 clock periods per peripheral clock cycle. et to select 12 clock periods per peripheral clock cycle.								
4	SIX2	Clear to sele	Enhanced UART clock (MODE 0 and 2) <sup>(1)</sup> Clear to select 6 clock periods per peripheral clock cycle. Set to select 12 clock periods per peripheral clock cycle.								
3	T2X2	Clear to sele	<b>Timer2 clock</b> <sup>(1)</sup> Clear to select 6 clock periods per peripheral clock cycle. Set to select 12 clock periods per peripheral clock cycle.								
2	T1X2	<b>Timer1 clock</b> <sup>(1)</sup> Clear to select 6 clock periods per peripheral clock cycle. Set to select 12 clock periods per peripheral clock cycle.									
1	T0X2	Clear to sele	<b>Timer0 clock</b> <sup>(1)</sup> Clear to select 6 clock periods per peripheral clock cycle. Set to select 12 clock periods per peripheral clock cycle.								
0	X2	the periphera Set to select	<b>CPU clock</b> Clear to select 12 clock periods per machine cycle (STD mode) for CPU and al the peripherals. Set to select 6 clock periods per machine cycle (X2 mode) and to enable the individual peripherals "X2"bits.								
Note: 1.	This contro	l bit is valida	ted when th	e CPU clock	bit X2 is set	; when X2 is	low, this bit				

has no effect.

Reset Value = 0000 0000b





### Table 3. CKCON1 Register

#### CKCON1 (S:9Fh) Clock Control Register 1

Bit Number     Bit Mnemonic     Description       7-1     -     Reserved The value read from these bits is indeterminate. Do not set these bits.       SPI clock <sup>(1)</sup>	7	6	5	5 4 3 2 1 0									
Number         Mnemonic         Description           7-1         -         Reserved The value read from these bits is indeterminate. Do not set these bits.				SPIX2									
7-1 The value read from these bits is indeterminate. Do not set these bits.			Description										
SPI clock <sup>(1)</sup>	7-1	-											
0 SPIX2 Clear to select 6 clock periods per peripheral clock cycle. Set to select 12 clock periods per peripheral clock cycle.	0	SPIX2	Clear to select 6 clock periods per peripheral clock cycle.										

Note: 1. This control bit is validated when the CPU clock bit X2 is set; when X2 is low, this bit has no effect.

Reset Value = 0000 0000b

# 22 AT89C51CC03

## **Data Memory**


The AT89C51CC03 provides data memory access in two different spaces:

- 1. The internal space mapped in three separate segments:
- the lower 128 Bytes RAM segment.
- the upper 128 Bytes RAM segment.
- the expanded 2048 Bytes RAM segment (ERAM).
- 2. The external space.


A fourth internal segment is available but dedicated to Special Function Registers, SFRs, (addresses 80h to FFh) accessible by direct addressing mode.

Figure 8 shows the internal and external data memory spaces organization.

Figure 7. Internal Memory - RAM

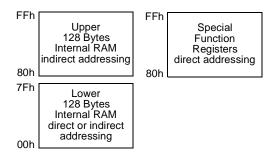



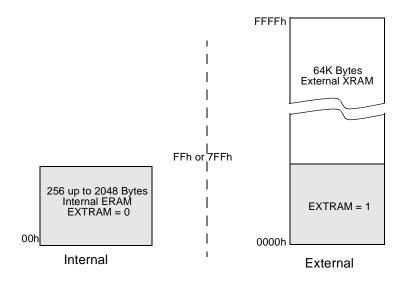





### **Internal Space**

#### Lower 128 Bytes RAM


The lower 128 Bytes of RAM (see Figure 8) are accessible from address 00h to 7Fh using direct or indirect addressing modes. The lowest 32 Bytes are grouped into 4 banks of 8 registers (R0 to R7). Two bits RS0 and RS1 in PSW register (see Figure 6) select which bank is in use according to Table 4. This allows more efficient use of code space, since register instructions are shorter than instructions that use direct addressing, and can be used for context switching in interrupt service routines.

#### Table 4. Register Bank Selection

RS1	RS0	Description
0	0	Register bank 0 from 00h to 07h
0 1		Register bank 0 from 08h to 0Fh
1	0	Register bank 0 from 10h to 17h
1	1	Register bank 0 from 18h to 1Fh

The next 16 Bytes above the register banks form a block of bit-addressable memory space. The C51 instruction set includes a wide selection of single-bit instructions, and the 128 bits in this area can be directly addressed by these instructions. The bit addresses in this area are 00h to 7Fh.

Figure 9. Lower 128 Bytes Internal RAM Organization

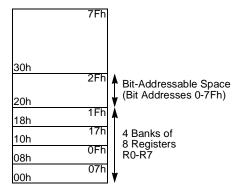

Upper 128 Bytes RAM The upper 128 Bytes of RAM are accessible from address 80h to FFh using only indirect addressing mode.

**Expanded RAM** The on-chip 2048 Bytes of expanded RAM (ERAM) are accessible from address 0000h to 07FFh using indirect addressing mode through MOVX instructions. In this address range, the bit EXTRAM in AUXR register is used to select the ERAM (default) or the XRAM. As shown in Figure 8 when EXTRAM = 0, the ERAM is selected and when EXTRAM = 1, the XRAM is selected.

The size of ERAM can be configured by XRS2-0 bit in AUXR register (default size is 2048 Bytes).

Note: Lower 128 Bytes RAM, Upper 128 Bytes RAM, and expanded RAM are made of volatile memory cells. This means that the RAM content is indeterminate after power-up and must then be initialized properly.

# <sup>24</sup> AT89C51CC03

### **External Space**

**Memory Interface** 

The external memory interface comprises the external bus (port 0 and port 2) as well as the bus control signals (RD#, WR#, and ALE).

Figure 10 shows the structure of the external address bus. P0 carries address A7:0 while P2 carries address A15:8. Data D7:0 is multiplexed with A7:0 on P0. Table 5 describes the external memory interface signals.

Figure 10. External Data Memory Interface Structure

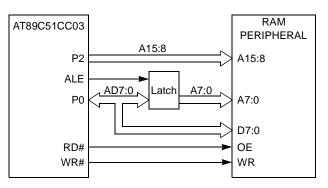


Table 5.	External	Data	Memory	Interface	Signals
----------	----------	------	--------	-----------	---------

Signal Name	Туре	Description	Alternative Function
A15:8	0	Address Lines Upper address lines for the external bus.	P2.7:0
AD7:0	I/O	Address/Data Lines Multiplexed lower address lines and data for the external memory.	P0.7:0
ALE	0	Address Latch Enable ALE signals indicates that valid address information are available on lines AD7:0.	-
RD#	0	<b>Read</b> Read signal output to external data memory.	P3.7
WR#	0	Write Write signal output to external memory.	P3.6

#### **External Bus Cycles**

This section describes the bus cycles the AT89C51CC03 executes to read (see Figure 11), and write data (see Figure 12) in the external data memory.

External memory cycle takes 6 CPU clock periods. This is equivalent to 12 oscillator clock period in standard mode or 6 oscillator clock periods in X2 mode. For further information on X2 mode.


Slow peripherals can be accessed by stretching the read and write cycles. This is done using the M0 bit in AUXR register. Setting this bit changes the width of the RD# and WR# signals from 3 to 15 CPU clock periods.

For simplicity, the accompanying figures depict the bus cycle waveforms in idealized form and do not provide precise timing information. For bus cycle timing parameters refer to the Section "AC Characteristics" of the AT89C51CC03 datasheet.






Figure 11. External Data Read Waveforms

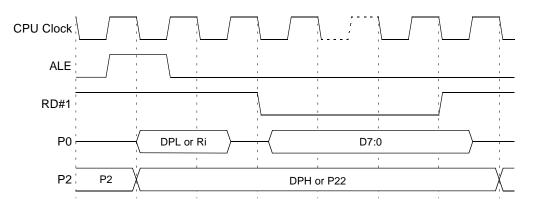

Notes: 1. RD# signal may be stretched using M0 bit in AUXR register.2. When executing MOVX @Ri instruction, P2 outputs SFR content.



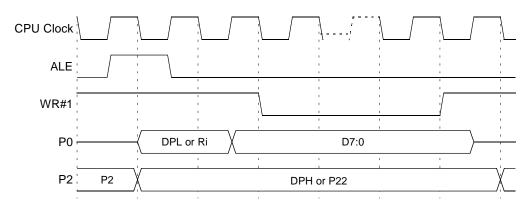


Notes: 1. WR# signal may be stretched using M0 bit in AUXR register.2. When executing MOVX @Ri instruction, P2 outputs SFR content.

### **Dual Data Pointer**

#### Description

The AT89C51CC03 implements a second data pointer for speeding up code execution and reducing code size in case of intensive usage of external memory accesses. DPTR 0 and DPTR 1 are seen by the CPU as DPTR and are accessed using the SFR addresses 83h and 84h that are the DPH and DPL addresses. The DPS bit in AUXR1 register (see Figure 8) is used to select whether DPTR is the data pointer 0 or the data pointer 1 (see Figure 13).

Figure 13. Dual Data Pointer Implementation

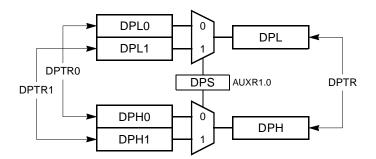

#### Application

Software can take advantage of the additional data pointers to both increase speed and reduce code size, for example, block operations (copy, compare...) are well served by using one data pointer as a "source" pointer and the other one as a "destination" pointer. Hereafter is an example of block move implementation using the two pointers and coded in assembler. The latest C compiler takes also advantage of this feature by providing enhanced algorithm libraries.

The INC instruction is a short (2 Bytes) and fast (6 machine cycle) way to manipulate the DPS bit in the AUXR1 register. However, note that the INC instruction does not directly force the DPS bit to a particular state, but simply toggles it. In simple routines, such as the block move example, only the fact that DPS is toggled in the proper sequence matters, not its actual value. In other words, the block move routine works the same whether DPS is '0' or '1' on entry.

- ; ASCII block move using dual data pointers
- ; Modifies DPTR0, DPTR1, A and PSW
- ; Ends when encountering NULL character
- ; Note: DPS exits opposite to the entry state unless an extra INC AUXR1 is added

#### AUXR1EQU0A2h

move:movDPTR,#SOURCE ; address of SOURCE incAUXR1 ; switch data pointers movDPTR,#DEST ; address of DEST mv\_loop:incAUXR1; switch data pointers movxA,@DPTR; get a byte from SOURCE incDPTR; increment SOURCE address incAUXR1; switch data pointers movx@DPTR,A; write the byte to DEST incDPTR; increment DEST address jnzmv\_loop; check for NULL terminator end\_move:





### Registers

### Table 6. PSW Register

PSW (S:8Eh) Program Status Word Register

7	6	5									
CY	AC	F0	F0 RS1 RS0 OV F1 P								
Bit Number	Bit Mnemonic	Description	escription								
7	CY	Carry Flag Carry out fro	arry Flag arry out from bit 1 of ALU operands.								
6	AC	-	uxiliary Carry Flag arry out from bit 1 of addition operands.								
5	F0	User Defina	Jser Definable Flag 0.								
4-3	RS1:0	-	Register Bank Select Bits Refer to Table 4 for bits description.								
2	OV		Overflow Flag Overflow set by arithmetic operations.								
1	F1	User Defina	User Definable Flag 1								
0	Р		Parity Bit Set when ACC contains an odd number of 1's. Cleared when ACC contains an even number of 1's.								

Reset Value = 0000 0000b

### Table 7. AUXR Register

AUXR (S:8Eh) Auxiliary Register

7	6	5	4	3	2	1	0	
-	-	MO	XRS2	XRS1	XRS0	EXTRAM	A0	
Bit Number	Bit Mnemonic	Description						
7-6	-	<b>Reserved</b> The value read from these bits are indeterminate. Do not set this bit.						
5	MO	Stretch MOVX control:         the RD/ and the WR/ pulse length is increased according to the value of M0.         M0       Pulse length in clock period         0       6         1       30						

Bit Numb	Bit er Mnemonic	Description
4-2	XRS1-0	ERAM size:Accessible size of the ERAMXRS 2:0ERAM size000256 Bytes001512 Bytes010768 Bytes0111024 Bytes1001792 Bytes1012048 Bytes (default configuration after reset)110Reserved111Reserved
1	EXTRAM	Internal/External RAM (00h - FFh) access using MOVX @ Ri/@ DPTR 0 - Internal ERAM access using MOVX @ Ri/@ DPTR. 1 - External data memory access.
0	A0	<b>Disable/Enable ALE)</b> 0 - ALE is emitted at a constant rate of 1/6 the oscillator frequency (or 1/3 if X2 mode is used) 1 - ALE is active only during a MOVX or MOVC instruction.

Reset Value = X001 0100b Not bit addressable

#### Table 8. AUXR1 Register

AUXR1 (S:A2h) Auxiliary Control Register 1

7	6	5	4	3	2	1	0		
-	-	ENBOOT	-	GF3	0	-	DPS		
Bit Number	Bit Mnemonic	Description							
7-6	-	Reserved The value read from these bits is indeterminate. Do not set these bits.							
5	ENBOOT	Enable Boot Flash Set this bit for map the boot Flash between F800h -FFFFh Clear this bit for disable boot Flash.							
4	-	Reserved The value read from this bit is indeterminate. Do not set this bit.							
3	GF3	General-purpose Flag 3							
2	0	Always Zero This bit is stuck to logic 0 to allow INC AUXR1 instruction without affecting GF3 flag.							
1	-	Reserved for Data Pointer Extension.							
0	DPS	Data Pointer Select Bit Set to select second dual data pointer: DPTR1. Clear to select first dual data pointer: DPTR0.							

Reset Value = XXXX 00X0b



4182K-CAN-05/06




# **Power Monitor** The POR/PFD function monitors the internal power-supply of the CPU core memories and the peripherals, and if needed, suspends their activity when the internal power supply falls below a safety threshold. This is achieved by applying an internal reset to them.

By generating the Reset the Power Monitor insures a correct start up when AT89C51CC03 is powered up.

# **Description** In order to startup and maintain the microcontroller in correct operating mode, V<sub>CC</sub> has to be stabilized in the V<sub>CC</sub> operating range and the oscillator has to be stabilized with a nominal amplitude compatible with logic level VIH/VIL.

These parameters are controlled during the three phases: power-up, normal operation and power going down. See Figure 14.

#### Figure 14. Power Monitor Block Diagram

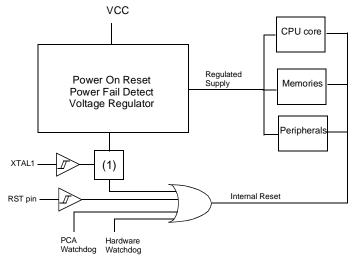


Note: 1. Once XTAL1 high and low levels reach above and below VIH/VIL a 1024 clock period delay will extend the reset coming from the Power Fail Detect. If the power falls below the Power Fail Detect threshold level, the reset will be applied immediately.

The Voltage regulator generates a regulated internal supply for the CPU core the memories and the peripherals. Spikes on the external Vcc are smoothed by the voltage regulator.

The Power fail detect monitor the supply generated by the voltage regulator and generate a reset if this supply falls below a safety threshold as illustrated in the Figure 15.

ļ

#### Figure 15. Power Fail Detect

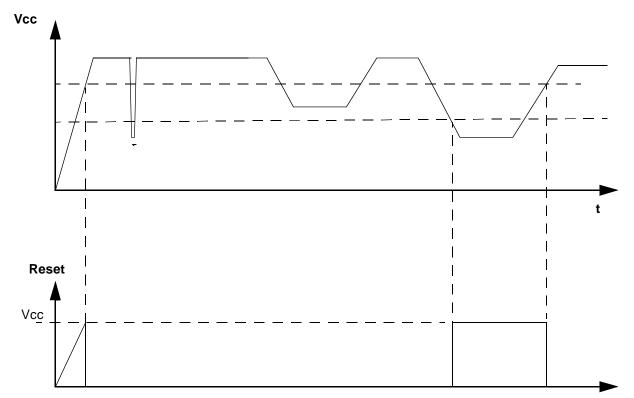

When the power is applied, the Power Monitor immediately asserts a reset. Once the internal supply after the voltage regulator reach a safety level, the power monitor then looks at the XTAL clock input. The internal reset will remain asserted until the Xtal1 levels are above and below VIH and VIL. Further more. An internal counter will count 1024 clock periods before the reset is de-asserted.

If the internal power supply falls below a safety level, a reset is immediately asserted.






### Reset

Introduction

The reset sources are : Power Management, Hardware Watchdog, PCA Watchdog and Reset input.


Figure 16. Reset Schematic

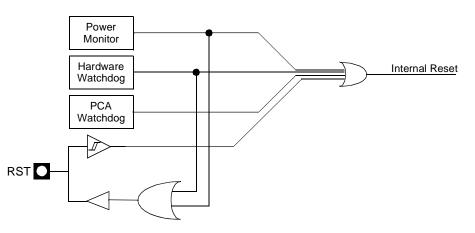

### **Reset Input**

The Reset input can be used to force a reset pulse longer than the internal reset controlled by the Power Monitor. RST input has a pull-down resistor allowing power-on reset by simply connecting an external capacitor to  $V_{CC}$  as shown in Figure 17. Resistor value and input characteristics are discussed in the Section "DC Characteristics" of the AT89C51CC03 datasheet. The status of the Port pins during reset is detailed in Table 9.

Figure 17. Reset Circuitry and Power-On Reset

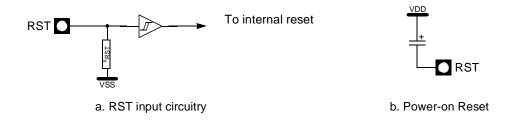




### **Reset Output**

As detailed in Section "Watchdog Timer", page 82, the WDT generates a 96-clock period pulse on the RST pin. In order to properly propagate this pulse to the rest of the application in case of external capacitor or power-supply supervisor circuit, a 1 k $\Omega$  resistor must be added as shown Figure 18.

### Figure 18. Recommended Reset Output Schematic

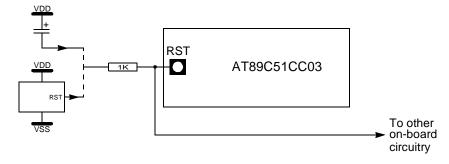






## **Power Management**

Introduction	Two power reduction modes are implemented in the AT89C51CC03. The Idle mode and the Power-Down mode. These modes are detailed in the following sections. In addition to these power reduction modes, the clocks of the core and peripherals can be dynamically divided by 2 using the X2 mode detailed in Section "Clock", page 18.					
Idle Mode	Idle mode is a power reduction mode that reduces the power consumption. In this mode, program execution halts. Idle mode freezes the clock to the CPU at known states while the peripherals continue to be clocked. The CPU status before entering Idle mode is preserved, i.e., the program counter and program status word register retain their data for the duration of Idle mode. The contents of the SFRs and RAM are also retained. The status of the Port pins during Idle mode is detailed in Table 9.					
Entering Idle Mode	To enter Idle mode, set the IDL bit in PCON register (see Table 10). The AT89C51CC03 enters Idle mode upon execution of the instruction that sets IDL bit. The instruction that sets IDL bit is the last instruction executed.					
	Note: If IDL bit and PD bit are set simultaneously, the AT89C51CC03 enters Power-Down mode. Then it does not go in Idle mode when exiting Power-Down mode.					
Exiting Idle Mode	There are two ways to exit Idle mode:					
	. Generate an enabled interrupt.					
	<ul> <li>Hardware clears IDL bit in PCON register which restores the clock to the CPU. Execution resumes with the interrupt service routine. Upon completion of the interrupt service routine, program execution resumes with the instruction immediately following the instruction that activated Idle mode. The general purpose flags (GF1 and GF0 in PCON register) may be used to indicate whether an interrupt occurred during normal operation or during Idle mode. When Idle mode is exited by an interrupt, the interrupt service routine may examine GF1 and GF0.</li> </ul>					
	2. Generate a reset.					
	<ul> <li>A logic high on the RST pin clears IDL bit in PCON register directly and asynchronously. This restores the clock to the CPU. Program execution momentarily resumes with the instruction immediately following the instruction that activated the Idle mode and may continue for a number of clock cycles before the internal reset algorithm takes control. Reset initializes the AT89C51CC03 and vectors the CPU to address C:0000h.</li> </ul>					
	Note: During the time that execution resumes, the internal RAM cannot be accessed; however, it is possible for the Port pins to be accessed. To avoid unexpected outputs at the Port pins, the instruction immediately following the instruction that activated Idle mode should not write to a Port pin or to the external RAM.					
Power-Down Mode	The Power-Down mode places the AT89C51CC03 in a very low power state. Power- Down mode stops the oscillator, freezes all clock at known states. The CPU status prior o entering Power-Down mode is preserved, i.e., the program counter, program status vord register retain their data for the duration of Power-Down mode. In addition, the SFR and RAM contents are preserved. The status of the Port pins during Power-Down mode s detailed in Table 9.					
	Note: VCC may be reduced to as low as V <sub>RET</sub> during Power-Down mode to further reduce power dissipation. Take care, however, that VDD is not reduced until Power-Down mode is invoked.					

34 AT89C51CC03

Entering Power-Down Mode	To enter Power-Down mode, set PD bit in PCON register. The AT89C51CC03 enters the Power-Down mode upon execution of the instruction that sets PD bit. The instruction that sets PD bit is the last instruction executed.				
Exiting Power-Down Mode	Note:	If VCC was reduced during the Power-Down mode, do not exit Power-Down mode until VCC is restored to the normal operating level.			
	There are two ways to exit the Power-Down mode:				
	1. Ge	enerate an enabled external interrupt.			
	-	The AT89C51CC03 provides capability to exit from Power-Down using INT0#, INT1#. Hardware clears PD bit in PCON register which starts the oscillator and restores the clocks to the CPU and peripherals. Using INTx# input, execution resumes when the input is released (see Figure 19). Execution resumes with the interrupt service routine. Upon completion of the interrupt service routine, program execution resumes with the instruction immediately following the instruction that activated Power-Down mode.			
	Note:	The external interrupt used to exit Power-Down mode must be configured as level sensi- tive (INT0# and INT1#) and must be assigned the highest priority. In addition, the duration of the interrupt must be long enough to allow the oscillator to stabilize. The exe- cution will only resume when the interrupt is deasserted.			
	Note:	Exit from power-down by external interrupt does not affect the SFRs nor the internal RAM content.			

#### Figure 19. Power-Down Exit Waveform Using INT1:0#



- 2. Generate a reset.
  - A logic high on the RST pin clears PD bit in PCON register directly and asynchronously. This starts the oscillator and restores the clock to the CPU and peripherals. Program execution momentarily resumes with the instruction immediately following the instruction that activated Power-Down mode and may continue for a number of clock cycles before the internal reset algorithm takes control. Reset initializes the AT89C51CC03 and vectors the CPU to address 0000h.
- Note: During the time that execution resumes, the internal RAM cannot be accessed; however, it is possible for the Port pins to be accessed. To avoid unexpected outputs at the Port pins, the instruction immediately following the instruction that activated the Power-Down mode should not write to a Port pin or to the external RAM.
- Note: Exit from power-down by reset redefines all the SFRs, but does not affect the internal RAM content.



4182K-CAN-05/06



Mode	Port 0	Port 1	Port 2	Port 3	Port 4	ALE	PSEN#
Reset	Floating	High	High	High	High	High	High
Idle (internal code)	Data	Data	Data	Data	Data	High	High
Idle (external code)	Floating	Data	Data	Data	Data	High	High
Power- Down(inter nal code)	Data	Data	Data	Data	Data	Low	Low
Power- Down (external code)	Floating	Data	Data	Data	Data	Low	Low

 Table 9. Pin Conditions in Special Operating Modes

## Registers

# Table 10.PCON RegisterPCON (S87:h) Power configuration Register

7	6	5	4	3	2	1	0	
-	-	-	-	GF1	GF0	PD	IDL	
Bit Number	Bit Mnemonic	Description	Description					
7-4	-	<b>Reserved</b> The value re	Reserved The value read from these bits is indeterminate. Do not set these bits.					
3	GF1	One use is to	General Purpose flag 1 One use is to indicate whether an interrupt occurred during normal operation or during Idle mode.					
2	GF0	One use is to	General Purpose flag 0 One use is to indicate whether an interrupt occurred during normal operation or during Idle mode.					
1	PD	Cleared by h Set to activa	<b>Power-Down Mode bit</b> Cleared by hardware when an interrupt or reset occurs. Set to activate the Power-Down mode. If IDL and PD are both set, PD takes precedence.					
0	IDL	Idle Mode bit Cleared by hardware when an interrupt or reset occurs. Set to activate the Idle mode. If IDL and PD are both set, PD takes precedence.						

Reset Value= XXXX 0000b



EEPROM Data Memory	The 2-Kbyte on-chip EEPROM memory block is located at addresses 0000h to 07FFh of the XRAM/ERAM memory space and is selected by setting control bits in the EECON register. A read in the EEPROM memory is done with a MOVX instruction.
	A physical write in the EEPROM memory is done in two steps: write data in the column latches and transfer of all data latches into an EEPROM memory row (programming).
	The number of data written on the page may vary from 1 up to 128 Bytes (the page size). When programming, only the data written in the column latch is programmed and a ninth bit is used to obtain this feature. This provides the capability to program the whole memory by Bytes, by page or by a number of Bytes in a page. Indeed, each ninth bit is set when the writing the corresponding byte in a row and all these ninth bits are reset after the writing of the complete EEPROM row.
Write Data in the Column Latches	Data is written by byte to the column latches as for an external RAM memory. Out of the 11 address bits of the data pointer, the 4 MSBs are used for page selection (row) and 7 are used for byte selection. Between two EEPROM programming sessions, all the addresses in the column latches must stay on the same page, meaning that the 4 MSB must no be changed.
	The following procedure is used to write to the column latches:
	Save and disable interrupt.
	Set bit EEE of EECON register
	Load DPTR with the address to write
	Store A register with the data to be written
	Execute a MOVX @DPTR, A
	<ul> <li>If needed loop the three last instructions until the end of a 128 Bytes page</li> </ul>
	Restore interrupt.
	Note: The last page address used when loading the column latch is the one used to select the page programming address.
Programming	The EEPROM programming consists of the following actions:
	<ul> <li>writing one or more Bytes of one page in the column latches. Normally, all Bytes must belong to the same page; if not, the first page address will be latched and the others discarded.</li> </ul>
	<ul> <li>launching programming by writing the control sequence (50h followed by A0h) to the EECON register.</li> </ul>
	<ul> <li>EEBUSY flag in EECON is then set by hardware to indicate that programming is in progress and that the EEPROM segment is not available for reading.</li> </ul>
	• The end of programming is indicated by a hardware clear of the EEBUSY flag.
	Note: The sequence 5xh and Axh must be executed without instructions between then other- wise the programming is aborted.
Read Data	The following procedure is used to read the data stored in the EEPROM memory:
NYUM BUIU	<ul> <li>Save and disable interrupt</li> </ul>
	Set bit EEE of EECON register
	Load DPTR with the address to read
	Execute a MOVX A, @DPTR
	Restore interrupt

AT89C51CC03 38

# AT89C51CC03

Examples	;*F***********************************					
·	;* DPTR contain address to read.					
	;* Acc contain the reading value					
	;* NOTE: before execute this function, be sure the EEPROM is not BUSY					
	.*************************************					
	api_rd_eeprom_byte:					
	MOV EECON, #02h; map EEPROM in XRAM space					
	MOVX A, @DPTR					
	MOV EECON, #00h; unmap EEPROM					
	ret					
	;*F***********************************					
	;* NAME: api_ld_eeprom_cl					
	;* DPTR contain address to load					
	;* Acc contain value to load					
	;* NOTE: in this example we load only 1 byte, but it is possible upto					
	;* 128 Bytes.					
	;* before execute this function, be sure the EEPROM is not BUSY					
	·*************************************					
	api_ld_eeprom_cl:					
	MOV EECON, #02h ; map EEPROM in XRAM space					
	MOVEECON, #00h; unmap EEPROM ret					
	let					
	;*F***********************************					
	;* NAME: api_wr_eeprom					
	;* NOTE: before execute this function, be sure the EEPROM is not BUSY					
	.*************************************					
	api_wr_eeprom:					
	MOV EECON, #050h					
	MOV EECON, #0A0h					
	ret					





## Registers

### Table 11. EECON Register

EECON (S:0D2h) EEPROM Control Register

7	6	5	4	3	2	1	0		
EEPL3	EEPL2	EEPL1	EEPL0	-	-	EEE	EEBUSY		
Bit Number	Bit Mnemonic	Descriptio	Description						
7-4	EEPL3-0	-	Programming Launch command bits Write 5Xh followed by AXh to EEPL to launch the programming.						
3	-	<b>Reserved</b> The value i	Reserved The value read from this bit is indeterminate. Do not set this bit.						
2	-	<b>Reserved</b> The value i	Reserved The value read from this bit is indeterminate. Do not set this bit.						
1	EEE	Set to map latches)	Enable EEPROM Space bit Set to map the EEPROM space during MOVX instructions (Write in the column latches) Clear to map the XRAM space during MOVX.						
0	EEBUSY	Programming Busy flag Set by hardware when programming is in progress. Cleared by hardware when programming is done. Can not be set or cleared by software.							


Reset Value = XXXX XX00b Not bit addressable


40 AT89C51CC03

# Program/Code Memory

The AT89C51CC03 implement 64K Bytes of on-chip program/code memory. Figure 20 shows the partitioning of internal and external program/code memory spaces depending on the product.

The Flash memory increases EPROM and ROM functionality by in-circuit electrical erasure and programming. Thanks to the internal charge pump, the high voltage needed for programming or erasing Flash cells is generated on-chip using the standard VDD voltage. Thus, the Flash Memory can be programmed using only one voltage and allows In-System Programming commonly known as ISP. Hardware programming mode is also available using specific programming tool.



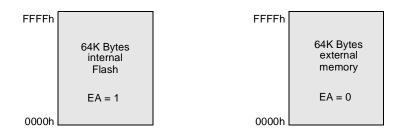






## **External Code Memory Access**

**Memory Interface** 

The external memory interface comprises the external bus (port 0 and port 2) as well as the bus control signals (PSEN#, and ALE).

Figure 21 shows the structure of the external address bus. P0 carries address A7:0 while P2 carries address A15:8. Data D7:0 is multiplexed with A7:0 on P0. Table 21 describes the external memory interface signals.

Figure 21. External Code Memory Interface Structure

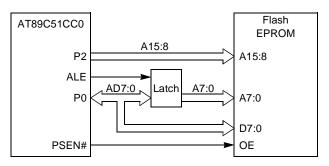

#### Table 12. External Code Memory Interface Signals

Signal Name	Туре	Description	Alternate Function
A15:8	0	Address Lines Upper address lines for the external bus.	P2.7:0
AD7:0	I/O	Address/Data Lines Multiplexed lower address lines and data for the external memory.	P0.7:0
ALE	0	Address Latch Enable ALE signals indicates that valid address information are available on lines AD7:0.	-
PSEN#	0	<b>Program Store Enable Output</b> This signal is active low during external code fetch or external code read (MOVC instruction).	-

### **External Bus Cycles**


This section describes the bus cycles the AT89C51CC03 executes to fetch code (see Figure 22) in the external program/code memory.

External memory cycle takes 6 CPU clock periods. This is equivalent to 12 oscillator clock period in standard mode or 6 oscillator clock periods in X2 mode. For further information on X2 mode see section "Clock ".

For simplicity, the accompanying figure depicts the bus cycle waveforms in idealized form and do not provide precise timing information.

For bus cycling parameters refer to the 'AC-DC parameters' section.

#### Figure 22. External Code Fetch Waveforms

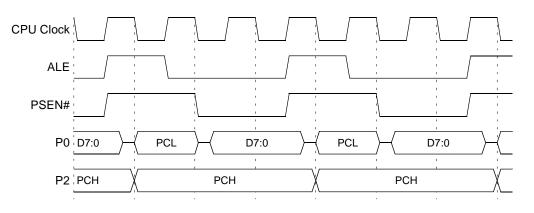

### Flash Memory Architecture

AT89C51CC03 features two on-chip Flash memories:


- Flash memory FM0: containing 64K Bytes of program memory (user space) organized into 128 byte pages,
- Flash memory FM1: 2K Bytes for boot loader and Application Programming Interfaces (API).

The FM0 can be program by both parallel programming and Serial In-System Programming (ISP) whereas FM1 supports only parallel programming by programmers. The ISP mode is detailed in the "In-System Programming" section.

All Read/Write access operations on Flash Memory by user application are managed by a set of API described in the "In-System Programming" section.


The bit ENBOOT in AUXR1 register is used to map FM1 from F800h to FFFFh. Figure 23 and Figure 24 show the Flash memory configuration with ENBOOT=1 and ENBOOT=0.


### Figure 23. Flash Memory Architecture with ENBOOT=1 (boot mode)

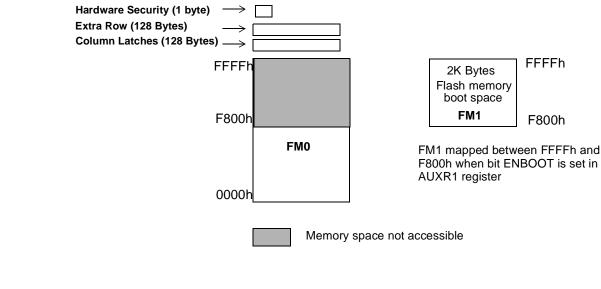







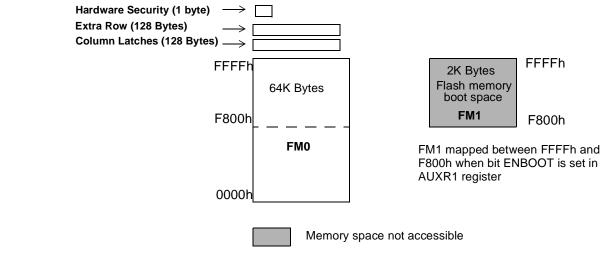



#### FM0 Memory Architecture

The Flash memory is made up of 4 blocks (see Figure 23):

- The memory array (user space) 64K Bytes
- The Extra Row
- The Hardware security bits
- The column latch registers

User Space This space is composed of a 64K Bytes Flash memory organized in 512 pages of 128 Bytes. It contains the user's application code.

*Extra Row (XRow)* This row is a part of FM0 and has a size of 128 Bytes. The extra row may contain information for boot loader usage.

Hardware security Byte (HSB) The Hardware security Byte space is a part of FM0 and has a size of 1 byte. The 4 MSB can be read/written by software (from FM0 and , the 4 LSB can only be read by software and written by hardware in parallel mode.

H Hardware Security Byte (HSB)

7	6	5	4	3	2	1	0		
X2	BLJB	-	-	-	LB2	LB1	LB0		
Bit Number	Bit Mnemonic	Description	Description						
7	X2	U U	<b>2 Mode</b> Programmed (='0') to force X2 mode (6 clocks per instruction) after reset Inprogrammed to force X1 mode, Standard Mode, afetr reset (Default)						
6	BLJB	When unprog -ENBOOT=0 -Start address When prograr -ENBOOT=1	Boot Loader Jump Bit When unprogrammed (='1'), at the next reset : -ENBOOT=0 (see code space memory configuration) -Start address is 0000h (PC=0000h) When programmed (='0')at the nex reset: -ENBOOT=1 (see code space memory configuration) -Start address is F800h (PC=F800h)						
5	-	Reserved	Reserved						
4	-	Reserved	Reserved						
3	-	Reserved							
2-0	LB2-0	General Memory Lock Bits (only programmable by programmer tools) Section "Flash Protection from Parallel Programming", page 54							

#### Column Latches

The column latches, also part of FM0, have a size of full page (128 Bytes). The column latches are the entrance buffers of the three previous memory locations (user array, XROW and Hardware security byte). The column latches are write only and can be accessed only from FM1 (boot mode) and from external memory

#### Cross Flash Memory Access Description

The FM0 memory can be program only from FM1. Programming FM0 from FM0 or from external memory is impossible.

The FM1 memory can be program only by parallel programming.

The Table show all software Flash access allowed.





#### Cross Flash Memory Access

		Action	FM0 (user Flash)	FM1 (boot Flash)
		Read	ok	-
E	FM0	Load column latch	ok	-
g from	(user Flash)	Write	-	-
executing		Read	ok	ok
		Load column latch	ok	-
Code		Write	ok	-
		Read	(a)	-
	External memory	Load column latch	-	-
	EA = 0	Write	-	-

(a) Depend upon general lock bit configuration.

## Overview of FM0 Operations

Flash Registers (SFR)

The CPU interfaces to the flash memory through the FCON register, AUXR1 register and FSTA register.

These registers are used to map the column latches, HSB, extra row and EEDATA in the working data or code space.

FCON Register

Table 13. FCON Register

FCON Register (S:D1h) Flash Control Register

7	6	5	4	3	2	1	0	
FPL3	FPL2	FPL1	FPL0	FPS	FMOD1	FMOD0	FBUSY	
Bit Number	Bit Mnemonic	Description	Description					
7-4	FPL3:0	Write 5Xh fo	Programming Launch Command Bits Write 5Xh followed by AXh to launch the programming according to FMOD1:0. (see Table 16.)					
3	FPS	When this bi The MOVX @ When this bi	Flash Map Program Space When this bit is set: The MOVX @DPTR, A instruction writes in the columns latches space When this bit is cleared: The MOVX @DPTR, A instruction writes in the regular XDATA memory space					
2-1	FMOD1:0		Flash Mode See Table 16.					
0	FBUSY	Flash Busy Set by hardware when programming is in progress. Clear by hardware when programming is done. Can not be changed by software.						

Reset Value= 0000 0000b





#### FSTA Register

#### Table 14. FSTA Register

FSTA Register (S:D3h) Flash Status Register

7	6	5	4	3	2	1	0	
						SEQERR	FLOAD	
Bit Number	Bit Mnemonic	Description	Description					
7-2		unusesd	unusesd					
1	SEQERR	Flash activation sequence error Set by hardware when the flash activation sequence(MOV FCON 5X and MOV FCON AX )is not correct (See Error Repport Section) Clear by software or clear by hardware if the last activation sequence was correct (previous error are canceled)						
0	FLOAD	Flash Colums latch loaded Set by hardware when the first data is loaded in the column latches. Clear by hardware when the activation sequence suceed (flash write sucess, or reset column latch success)						

Reset Value= 0000 0000b

**Mapping of the Memory Space** By default, the user space is accessed by MOVC A, @DPTR instruction for read only. The column latches space is made accessible by setting the FPS bit in FCON register. Writing is possible from 0000h to FFFFh, address bits 6 to 0 are used to select an address within a page while bits 15 to 7 are used to select the programming address of the page.

Setting FPS bit takes precedence on the EXTRAM bit in AUXR register.

The other memory spaces (user, extra row, hardware security) are made accessible in the code segment by programming bits FMOD0 and FMOD1 in FCON register in accordance with Table 15. A MOVC instruction is then used for reading these spaces.

FMOD1	FMOD0	FM0 Adressable space
0	0	User (0000h-FFFFh)
0	1	Extra Row(FF80h-FFFFh)
1	0	Hardware Security Byte (0000h)
1	1	Column latches reset (note1)

Table 15. FM0 Blocks Select Bits

Notes: 1. The column latches reset is a new option introduced in the AT89C51CC03, and is not available in T89C51CC01/2

Launching Programming FPL3:0 bits in FCON register are used to secure the launch of programming. A specific sequence must be written in these bits to unlock the write protection and to launch the programming. This sequence is 5xh followed by Axh. Table 16 summarizes the memory spaces to program according to FMOD1:0 bits.

# 48 AT89C51CC03

	Table 16.	6. Programming Spaces					
			Write to	FCON			
		FPL3:0	FPS	FMOD1	FMOD0	Operation	
		5	Х	0	0	No action	
	User	А	х	0	0	Write the column latches in user space	
		5	Х	0	1	No action	
	Extra Row	A	х	0	1	Write the column latches in extra row space	
	Hardware	5	х	1	0	No action	
	Security Byte	А	Х	1	0	Write the fuse bits space	
	Reset	5	х	1	1	No action	
	Columns Latches	A	х	1	1	Reset the column latches	
	2. 3.	otherwise the The sequen configuration	e programmi ice 5xh and າ. at may occu	ng is not exe Axh must Ir during pro	ecuted (see be execute ogramming ti	without instructions between them Flash Status Register) d with the same FMOD0 FMOD1 me must be disabled to avoid any	
Status of the Flash Memory	The bit FBUSY in FCON register is used to indicate the status of programming.						
	FBUSY is set when programming is in progress.						
	The flash programming process is launched the second machine cycle following the sequence 5xh and Axh in FCON. Thus the FBUSY flag should be read by sofware not during the insctruction after the 5xh, Axh sequence but the the second instruction after the 5xh, Axh sequence in FCON (See next example). FBUSY is cleared when the programming is completed.						
	-*	****	*****	*****	****	***	
	;* NAME	: launch_prog					
	;;************************************						
Selecting FM1	The bit ENI	BOOT in Al	JXR1 regist	er is used t	to map FM <sup>2</sup>	I from F800h to FFFFh.	
Loading the Column Latches	Any number of data from 1-byte to 128 Bytes can be loaded in the column latches. This provides the capability to program the whole memory by byte, by page or by any number of Bytes in a page. Data written in the column latches do not have to be in consecutive						

 Table 16.
 Programming Spaces





order. The page address of the last address loaded in the column latches will be used for the whole page.

When programming is launched, an automatic erase of the locations loaded in the column latches is first performed, then programming is effectively done. Thus no page or block erase is needed and only the loaded data are programmed in the corresponding page


- Notes: 1. : If no bytes are written in the column latches the SEQERR bit in the FSTA register will be set.
  - 2. When a flash write sequence is in progress (FBUSY is set) a write sequence to the column latches will be ignored and the content of the column latches at the time of the launch write sequence will be preserved.
  - 3. MOVX @DPTR, A instruction must be used to load the column latches. Never use MOVX @Ri, A instructions.
  - 4. When a programming sequence is launched, Flash bytes corresponding to activated bytes in the column latches are first erased then the bytes in the column latches are copied into the Flash bytes. Flash bytes corresponding to bytes in the column latches not activated (not loaded during the load column latches sequence) will not be erased and written.


The following procedure is used to load the column latches and is summarized in Figure 25:

- Save and Disable interrupt and map the column latch space by setting FPS bit.
- Load the DPTR with the address to load.
- Load Accumulator register with the data to load.
- Execute the MOVX @DPTR, A instruction.
- If needed loop the three last instructions until the page is completely loaded.
- unmap the column latch.
- **Restore Interrupt**

Downloaded from Elcodis.com electronic components distributor

# AT89C51CC03



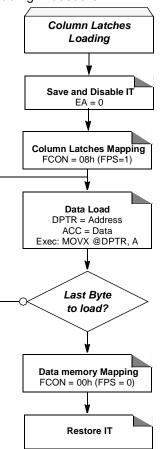

The last page address used when loading the column latch is the one used to select the Note: page programming address.

#### **Programming the Flash Spaces**

User

The following procedure is used to program the User space and is summarized in Figure 26:

- Load up to one page of data in the column latches from address 0000h to FFFFh.
- Save and Disable the interrupts.
- . Launch the programming by writing the data sequence 50h followed by A0h in FCON register (only from FM1).
  - The end of the programming indicated by the FBUSY flag cleared.
- Restore the interrupts.

Extra Row


The following procedure is used to program the Extra Row space and is summarized in Figure 26:

- Load data in the column latches from address FF80h to FFFFh.
- Save and Disable the interrupts.
- Launch the programming by writing the data sequence 52h followed by A2h in FCON register (only from FM1). The end of the programming indicated by the FBUSY flag cleared.
- Restore the interrupts.





Figure 26. Flash and Extra Row Programming Procedure

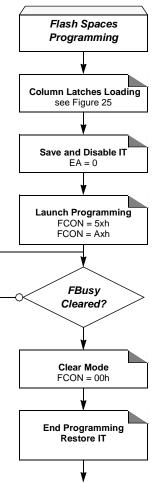


Hardware Security Byte

The following procedure is used to program the Hardware Security Byte space and is summarized in Figure 27:

- Set FPS and map Hardware byte (FCON = 0x0C)
- Save and disable the interrupts.
- Load DPTR at address 0000h.
- Load Accumulator register with the data to load.
- Execute the MOVX @DPTR, A instruction.
- Launch the programming by writing the data sequence 54h followed by A4h in FCON register (only from FM1).
   The end of the programming indicated by the FBusy flag cleared.
- Restore the interrupts.

# 52 AT89C51CC03



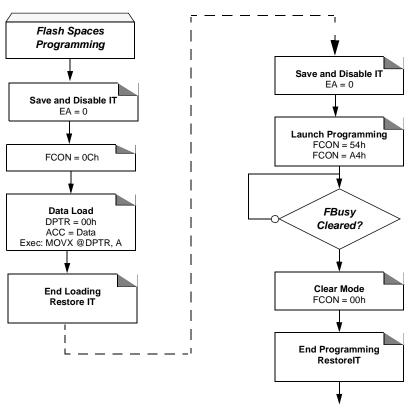

### Reset the Column Latches

An automatic reset of the column latches is performed after a successful Flash write sequence. User can also reset the column latches manually, for instance to reload the column latches before writing the Flash. The following procedure is summarized below.

- Save and disable the interrupts.
- Launch the reset by writing the data sequence 56h followed by A6h in FCON register (only from FM1).
- Restore the interrupts.

#### **Error Reports**

Flash Programming Sequence Errors When a wrong sequence is detected, the SEQERR bit in FSTA register is set. Possible wrong sequence are :

- MOV FCON, 5xh instruction not immediately followed by a MOV FCON, Ax instruction.
- A write Flash sequence is launched while no data were loaded in the column latches

The SEQERR bit can be cleared

By software

•

By hardware when a correct programming sequence is completed

When multiple pages are written into the Flash, the user should check FSTA for errors after each write page sequences, not only at the end of the multiple write pages.




4182K-CAN-05/06



Power Down Request	Before entering in Power Down (Set bit PD in PCON register) the user should check that no write sequence is in progress (check BUSY=0), then check that the column latches are reset (FLOAD=0 in FSTA register. Launch a reset column latches to clear FLOAD if necessary.
Reading the Flash Spaces	
User	<ul> <li>The following procedure is used to read the User space:</li> <li>Read one byte in Accumulator by executing MOVC A,@A+DPTR with A+DPTR=read@.</li> <li>Note: FCON is supposed to be reset when not needed.</li> </ul>
Extra Row	<ul> <li>The following procedure is used to read the Extra Row space and is summarized in Figure 28:</li> <li>Map the Extra Row space by writing 02h in FCON register.</li> <li>Read one byte in Accumulator by executing MOVC A,@A+DPTR with A = 0 and DPTR = FF80h to FFFFh.</li> <li>Clear FCON to unmap the Extra Row.</li> </ul>
Hardware Security Byte	<ul> <li>The following procedure is used to read the Hardware Security space and is summarized in Figure 28:</li> <li>Map the Hardware Security space by writing 04h in FCON register.</li> <li>Read the byte in Accumulator by executing MOVC A @A UPPTR with A = 0 and</li> </ul>

 Read the byte in Accumulator by executing MOVC A,@A+DPTR with A = 0 and DPTR = 0000h.

Figure 28. Clear FCON to unmap the Hardware Security Byte.Reading Procedure

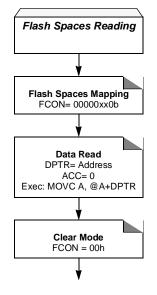

#### Flash Protection from Parallel Programming

The three lock bits in Hardware Security Byte (see "In-System Programming" section) are programmed according to Table 17 provide different level of protection for the onchip code and data located in FM0 and FM1.

The only way to write this bits are the parallel mode. They are set by default to level 4

Table 17.	Program Lock Bit
-----------	------------------

Pro	Program Lock Bits			
Security level	LB0	LB1	LB2	Protection Description
1	U	U	U	No program lock features enabled.
2	Ρ	U	U	MOVC instruction executed from external program memory are disabled from fetching code bytes from internal memory, EA is sampled and latched on reset, and further parallel programming of the Flash is disabled. ISP and software programming with API are still allowed.
				Writing EEprom Data from external parallel programmer is disabled but still allowed from internal code execution.
3	U	Ρ	U	Same as 2, also verify through parallel programming interface is disabled. Writing And Reading EEPROM Data from external parallel programmer is disabled but still allowed from internal code execution.
4	U	U	Р	Same as 3, also external execution is disabled

Program Lock bits

U: unprogrammed

P: programmed

WARNING: Security level 2 and 3 should only be programmed after Flash and Core verification.





## **Operation Cross Memory Access**

Space addressable in read and write are:

- RAM
- ERAM (Expanded RAM access by movx)
- XRAM (eXternal RAM)
- EEPROM DATA
- FM0 ( user flash )
- Hardware byte
- XROW
- Boot Flash
- Flash Column latch

The table below provide the different kind of memory which can be accessed from different code location.

#### Table 18. Cross Memory Access

	Action	RAM	XRAM ERAM	Boot FLASH	FM0	E <sup>2</sup> Data	Hardware Byte	XROW
boot FLASH	Read			OK	OK	OK	ОК	-
DOULFLASH	Write			-	OK <sup>(1)</sup>	OK <sup>(1)</sup>	OK <sup>(1)</sup>	OK <sup>(1)</sup>
FM0	Read			ОК	ОК	ОК	ОК	-
FINO	Write			-	OK (idle)	OK <sup>(1)</sup>	ОК -	ОК
External memory	Read			-	-	ОК	-	-
EA = 0 or Code Roll Over	Write			-	-	OK <sup>(1)</sup>	-	-

Note: 1. RWW: Read While Write

# **Sharing Instructions**

Action	RAM	XRAM ERAM	EEPROM DATA	Boot FLASH	FM0	Hardware Byte	XROW
Read	MOV	MOVX	MOVX	MOVC	MOVC	MOVC	MOVC
Write	MOV	MOVX	MOVX	-	by cl	by cl	by cl

Note: by cl : using Column Latch

#### Table 20. Read MOVX A, @DPTR

EEE bit in EECON Register	FPS in FCON Register	ENBOOT	EA	XRAM ERAM	EEPROM DATA	Flash Column Latch
0	0	Х	Х	ОК		
0	1	Х	Х	ОК		
1	0	Х	Х		ОК	
1	1	Х	Х	ОК		

### Table 21. Write MOVX @DPTR,A

EEE bit in EECON Register	FPS bit in FCON Register	ENBOOT	EA	XRAM ERAM	EEPROM Data	Flash Column Latch
0	0	х	Х	ОК		
0	1	х	1			ОК
0	I	~	0	ОК		
1	0	х	Х		ОК	
1	1	х	1			ОК
I	I	~	0	ОК		





#### Table 22. Read MOVC A, @DPTR

	FC	ON Regis	ter						Hardware	External				
Code Execution	FMOD1	FMOD0	FPS	ENBOOT	DPTR	FM1	FM0	XROW	Byte	Code				
				0	0000h to FFFFh		ОК							
	0	0	Х	4	0000h to F7FF		ОК							
				1	F800h to FFFFh		Do not u	se this configu	uration					
From FM0	0	1	х	х	0000 to 007Fh See <sup>(1)</sup>			ОК						
	1	0	Х	х	х				ОК					
				0	000h to FFFFh		ОК							
	1	1	Х	1	0000h to F7FF		ОК							
				I	F800h to FFFFh		Do not u	se this configuration						
		0 0	0					1	0000h to F7FF		ОК			
				I	F800h to FFFFh	OK								
	0			0	х			NA						
				1	х		ОК							
				0	Х			NA						
From FM1 (ENBOOT =1	0	1	х	1	0000h to 007h			OK						
	Ŭ	I	Х	0	See (2)			NA						
	1	0	х	1	х				ОК					
		Ŭ		0	~			NA						
	1	1	х	1	000h to FFFFh		ОК							
				0			-	NA						
External code : EA=0 or Code Roll Over	х	0	х	x	Х					ок				

1. For DPTR higher than 007Fh only lowest 7 bits are decoded, thus the behavior is the same as for addresses from 0000h to 007Fh

2. For DPTR higher than 007Fh only lowest 7 bits are decoded, thus the behavior is the same as for addresses from 0000h to 007Fh

# AT89C51CC03

In-System Programming (ISP)	<ul> <li>With the implementation of the User Space (FM0) and the Boot Space (FM1) in Flash technology the AT89C51CC03 allows the system engineer the development of applications with a very high level of flexibility. This flexibility is based on the possibility to alter the customer program at any stages of a product's life:</li> <li>Before assembly the 1st personalization of the product by programming in the FM0 and if needed also a customized Boot loader in the FM1. Atmel provide also a standard Boot loader by default UART or CAN.</li> <li>After assembling on the PCB in its final embedded position by serial mode via the CAN bus or UART.</li> </ul>
	This In-System Programming (ISP) allows code modification over the total lifetime of the product.
	Besides the default Boot loader Atmel provide to the customer also all the needed Appli- cation-Programming-Interfaces (API) which are needed for the ISP. The API are located also in the Boot memory.
	This allow the customer to have a full use of the 64-Kbyte user memory.
Flash Programming and Erasure	<ul> <li>There are three methods of programming the Flash memory:</li> <li>The Atmel bootloader located in FM1 is activated by the application. Low level API routines (located in FM1)will be used to program FM0. The interface used for serial downloading to FM0 is the UART or the CAN. API can be called also by the user's bootloader located in FM0 at [SBV]00h.</li> <li>A further method exists in activating the Atmel boot loader by hardware activation.</li> <li>The FM0 can be programmed also by the parallel mode using a programmer.</li> <li>Figure 29. Flash Memory Mapping</li> </ul>
	FFFFh Gustom Boot Loader [SBV]00h G4K Bytes Flash memory FM1 FR0h ► FKFFh CK Bytes IAP bootloader FM1 FM1 FKT FFFFh FFFF FFF

0000h

FM0

### **Boot Process**

Software Boot Process Example Many algorithms can be used for the software boot process. Before describing them, The description of the different flags and Bytes is given below:




4182K-CAN-05/06



	Boot Loader Jump Bit (BLJB): - This bit indicates if on RESET the user wants to jump to this application at address @ 0000h on FM0 or execute the boot loader at address @F800h on FM1. - BLJB = 0 on parts delivered with bootloader programmed. - To read or modify this bit, the APIs are used.
	Boot Vector Address (SBV): - This byte contains the MSB of the user boot loader address in FM0. - The default value of SBV is FCh (no user boot loader in FM0). - To read or modify this byte, the APIs are used.
	Extra Byte (EB) and Boot Status Byte (BSB): - These Bytes are reserved for customer use. - To read or modify these Bytes, the APIs are used.
Hardware Boot Process	At the falling edge of RESET, the bit ENBOOT in AUXR1 register is initialized with the value of Boot Loader Jump Bit (BLJB).
	Further at the falling edge of RESET if the following conditions (called Hardware condi- tion) are detected:
	PSEN low,     SA bish
	<ul><li>EA high,</li><li>ALE high (or not connected).</li></ul>
	<ul> <li>After Hardware Condition the FCON register is initialized with the value 00h and the PC is initialized with F800h (FM1).</li> </ul>
	The Hardware condition makes the bootloader to be executed, whatever BLJB value is.
	If no hardware condition is detected, the FCON register is initialized with the value F0h.
	Check of the BLJB value.
	• If bit BLJB = 1:
	User application in FM0 will be started at @0000h (standard reset).
	<ul> <li>If bit BLJB = 0: Boot loader will be started at @F800h in FM1.</li> </ul>
	<ol> <li>Note: 1. As PSEN is an output port in normal operating mode (running user applications or bootloader applications) after reset it is recommended to release PSEN after the falling edge of Reset is signaled.</li> <li>The hardware conditions are sampled at reset signal Falling Edge, thus they can be released at any time when reset input is low.</li> </ol>
	<ol> <li>To ensure correct microcontroller startup, the PSEN pin should not be tied to ground during power-on.</li> </ol>

# 60 AT89C51CC03

Figure 30. Hardware Boot Process Algorithm

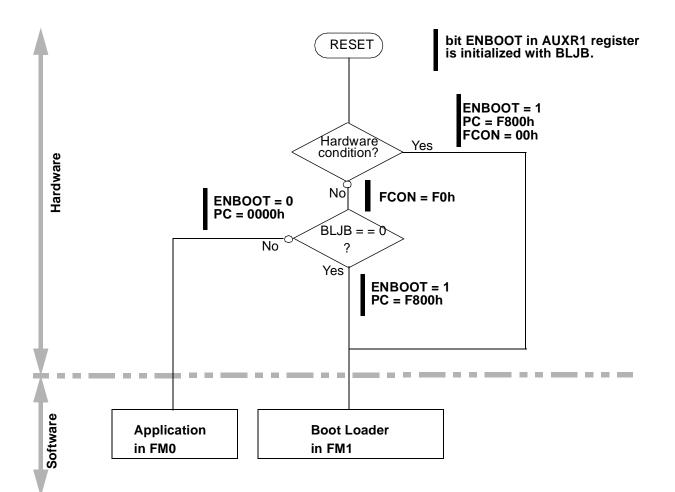

## Application Programming Interface

Several Application Program Interface (API) calls are available for use by an application program to permit selective erasing and programming of Flash pages. All calls are made by functions.

All these APIs are describe in an documentation: "In-System Programing: Flash Library for AT89C51CC03" available on the Atmel web site.

## **XROW Bytes**

Table 23. XROW Mapping

Description	Default Value	Address
Copy of the Manufacturer Code	58h	30h
Copy of the Device ID#1: Family code	D7h	31h
Copy of the Device ID#2: Memories size and type	FFh	60h
Copy of the Device ID#3: Name and Revision	FEh	61h





## Hardware Security Byte

 Table 24.
 Hardware Security Byte

7	6	5	4	3	2	1	0		
X2B	BLJB	-	-	-	LB2	LB1	LB0		
Bit Number	Bit Mnemonic	Description	Description						
7	X2B		X2 Bit Set this bit to start in standard mode Clear this bit to start in X2 mode.						
6	BLJB	- 1: To start t	Boot Loader JumpBit - 1: To start the user's application on next RESET (@0000h) located in FM0, - 0: To start the boot loader(@F800h) located in FM1.						
5-3	-	Reserved The value rea	Reserved The value read from these bits are indeterminate.						
2-0	LB2:0	Lock Bits							

After erasing the chip in parallel mode, the default value is : FFh

The erasing in ISP mode (from bootloader) does not modify this byte.

Notes: 1. Only the 4 MSB bits can be accessed by software.

2. The 4 LSB bits can only be accessed by parallel mode.

Downloaded from Elcodis.com electronic components distributor


# Serial I/O Port

The AT89C51CC03 I/O serial port is compatible with the I/O serial port in the 80C52. It provides both synchronous and asynchronous communication modes. It operates as a Universal Asynchronous Receiver and Transmitter (UART) in three full-duplex modes (Modes 1, 2 and 3). Asynchronous transmission and reception can occur simultaneously and at different baud rates

Serial I/O port includes the following enhancements:


- Framing error detection
- Automatic address recognition

### Figure 31. Serial I/O Port Block Diagram

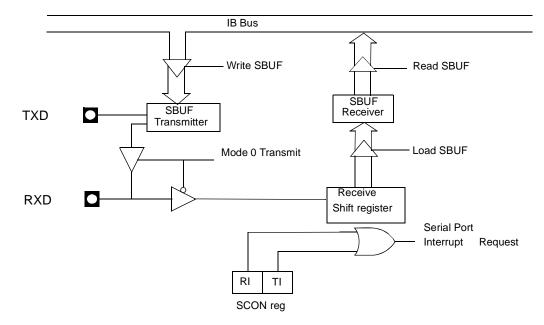

**Framing Error Detection** Framing bit error detection is provided for the three asynchronous modes. To enable the framing bit error detection feature, set SMOD0 bit in PCON register.

#### Figure 32. Framing Error Block Diagram

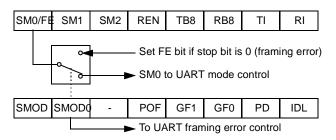

When this feature is enabled, the receiver checks each incoming data frame for a valid stop bit. An invalid stop bit may result from noise on the serial lines or from simultaneous transmission by two CPUs. If a valid stop bit is not found, the Framing Error bit (FE) in SCON register bit is set.


The software may examine the FE bit after each reception to check for data errors. Once set, only software or a reset clears the FE bit. Subsequently received frames with






valid stop bits cannot clear the FE bit. When the FE feature is enabled, RI rises on the stop bit instead of the last data bit (See Figure 33. and Figure 34.).



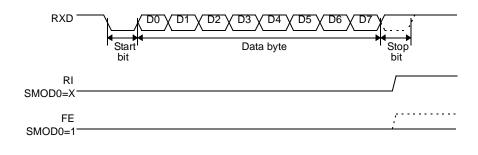

#### Figure 34. UART Timing in Modes 2 and 3

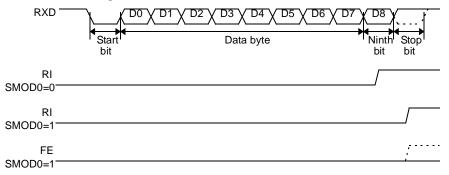

### Automatic Address Recognition

The automatic address recognition feature is enabled when the multiprocessor communication feature is enabled (SM2 bit in SCON register is set).

Implemented in the hardware, automatic address recognition enhances the multiprocessor communication feature by allowing the serial port to examine the address of each incoming command frame. Only when the serial port recognizes its own address will the receiver set the RI bit in the SCON register to generate an interrupt. This ensures that the CPU is not interrupted by command frames addressed to other devices.

If necessary, you can enable the automatic address recognition feature in mode 1. In this configuration, the stop bit takes the place of the ninth data bit. Bit RI is set only when the received command frame address matches the device's address and is terminated by a valid stop bit.

To support automatic address recognition, a device is identified by a given address and a broadcast address.

Note: The multiprocessor communication and automatic address recognition features cannot be enabled in mode 0 (i.e. setting SM2 bit in SCON register in mode 0 has no effect).

# 64 AT89C51CC03

### **Given Address**

Each device has an individual address that is specified in the SADDR register; the SADEN register is a mask byte that contains don't-care bits (defined by zeros) to form the device's given address. The don't-care bits provide the flexibility to address one or more slaves at a time. The following example illustrates how a given address is formed. To address a device by its individual address, the SADEN mask byte must be 1111 1111b.

For example:

SADDR0101 0110b SADEN1111 1100b Given0101 01XXb

Here is an example of how to use given addresses to address different slaves:

Slave A:SADDR1111 0001b SADEN1111 1010b Given1111 0X0Xb

Slave B:SADDR1111 0011b SADEN1111 1001b Given1111 0XX1b

Slave C:SADDR1111 0011b <u>SADEN1111 1101b</u> Given1111 00X1b

The SADEN byte is selected so that each slave may be addressed separately. For slave A, bit 0 (the LSB) is a don't-care bit; for slaves B and C, bit 0 is a 1. To communicate with slave A only, the master must send an address where bit 0 is clear (e.g. 1111 0000b).

For slave A, bit 1 is a 0; for slaves B and C, bit 1 is a don't care bit. To communicate with slaves A and B, but not slave C, the master must send an address with bits 0 and 1 both set (e.g. 1111 0011b).

To communicate with slaves A, B and C, the master must send an address with bit 0 set, bit 1 clear, and bit 2 clear (e.g. 1111 0001b).

**Broadcast Address** A broadcast address is formed from the logical OR of the SADDR and SADEN registers with zeros defined as don't-care bits, e.g.:

SADDR0101 0110b SADEN1111 1100b SADDR OR SADEN1111 111Xb

The use of don't-care bits provides flexibility in defining the broadcast address, however in most applications, a broadcast address is FFh. The following is an example of using broadcast addresses:

Slave A:SADDR1111 0001b <u>SADEN1111 1010b</u> Given1111 1X11b,

Slave B:SADDR1111 0011b SADEN1111 1001b Given1111 1X11B,

Slave C:SADDR=1111 0010b SADEN1111 1101b Given1111 1111b





For slaves A and B, bit 2 is a don't care bit; for slave C, bit 2 is set. To communicate with all of the slaves, the master must send an address FFh. To communicate with slaves A and B, but not slave C, the master can send and address FBh.

Registers

Table 25. SCON Register

SCON (S:98h) Serial Control Register

7	6	5	4	3	2	1	0	
FE/SM0	SM1	SM2	REN	TB8	RB8	ТІ	RI	
Bit Number	Bit Mnemonic	Description						
7	FE	Clear to rese	Framing Error bit (SMOD0=1) Clear to reset the error state, not cleared by a valid stop bit. Set by hardware when an invalid stop bit is detected.					
	SM0		Serial port Mode bit 0 (SMOD0=0) Refer to SM1 for serial port mode selection.					
6	SM1	Serial port M           SM0         SM1           0         0           0         1           1         0           1         1	Mode	RT Variable RT F <sub>XTAL</sub> /6	2 (or F <sub>XTAL</sub> /6 i e 4 or F <sub>XTAL</sub> /32	n mode X2)		
5	SM2	Serial port Mode 2 bit/Multiprocessor Communication Enable bit Clear to disable multiprocessor communication feature. Set to enable multiprocessor communication feature in mode 2 and 3.						
4	REN	Reception Enable bit Clear to disable serial reception. Set to enable serial reception.						
3	TB8	<b>Transmitter Bit 8/Ninth bit to transmit in modes 2 and 3</b> Clear to transmit a logic 0 in the 9th bit. Set to transmit a logic 1 in the 9th bit.						
2	RB8	<b>Receiver Bit 8/Ninth bit received in modes 2 and 3</b> Cleared by hardware if 9th bit received is a logic 0. Set by hardware if 9th bit received is a logic 1.						
1	ті	Set by hardw	nowledge inte	d of the 8th bit	time in mode	0 or at the beg	inning of the	
0	RI	Set by hardw	nowledge inte	d of the 8th bi	time in mode	0, see Figure	33. and	

Reset Value = 0000 0000b Bit addressable



# AT89C51CC03

#### Table 26. SADEN Register

#### SADEN (S:B9h) Slave Address Mask Register

7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-
Bit Number	Bit Mnemonic	Description					
7-0		Mask Data f	or Slave Indiv	vidual Addres	SS		

Reset Value = 0000 0000b Not bit addressable

Table 27. SADDR Register

SADDR (S:A9h) Slave Address Register

7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-
Bit Number	Bit Mnemonic	Description					
7-0		Slave Indivi	dual Address	5			

Reset Value = 0000 0000b Not bit addressable

#### Table 28. SBUF Register

SBUF (S:99h) Serial Data Buffer

7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-
Bit Number	Bit Mnemonic	Description					
7-0		Data sent/re	ceived by Se	erial I/O Port			

Reset Value = 0000 0000b Not bit addressable





### Table 29. PCON Register

### PCON (S:87h) Power Control Register

7	6	5	4	3	2	1	0
SMOD1	SMOD0	_	POF	GF1	GF0	PD	IDL
Bit Number	Bit Mnemonic	Description					
7	SMOD1		erial port Mode bit 1 et to select double baud rate in mode 1, 2 or 3.				
6	SMOD0			SCON register	<u>.</u>		
5	-	Reserved The value re	ad from this b	it is indetermi	nate. Do not se	et this bit.	
4	POF		gnize next re	set type. C rises from 0	to its nomina	l voltage. Can	also be set
3	GF1	Cleared by u	<b>General-purpose Flag</b> Cleared by user for general-purpose usage. Set by user for general-purpose usage.				
2	GF0	General-purpose Flag Cleared by user for general-purpose usage. Set by user for general-purpose usage.					
1	PD	Power-Down mode bit Cleared by hardware when reset occurs. Set to enter power-down mode.					
0	IDL	Idle mode b Clear by har Set to enter	dware when ii	nterrupt or res	et occurs.		

Reset Value = 00X1 0000b Not bit addressable

68 AT89C51CC03

Timers/Counters	The AT89C51CC03 implements two general-purpose, 16-bit Timers/Counters. Such are identified as Timer 0 and Timer 1, and can be independently configured to operate in a variety of modes as a Timer or an event Counter. When operating as a Timer, the Timer/Counter runs for a programmed length of time, then issues an interrupt request. When operating as a Counter, the Timer/Counter counts negative transitions on an external pin. After a preset number of counts, the Counter issues an interrupt request. The various operating modes of each Timer/Counter are described in the following sections.
Timer/Counter Operations	A basic operation is Timer registers THx and TLx ( $x = 0, 1$ ) connected in cascade to form a 16-bit Timer. Setting the run control bit (TRx) in TCON register (see Figure 30) turns the Timer on by allowing the selected input to increment TLx. When TLx overflows it increments THx; when THx overflows it sets the Timer overflow flag (TFx) in TCON register. Setting the TRx does not clear the THx and TLx Timer registers. Timer registers can be accessed to obtain the current count or to enter preset values. They can be read at any time but TRx bit must be cleared to preset their values, otherwise the behavior of the Timer/Counter is unpredictable.
	The C/Tx# control bit selects Timer operation or Counter operation by selecting the divided-down peripheral clock or external pin Tx as the source for the counted signal. TRx bit must be cleared when changing the mode of operation, otherwise the behavior of the Timer/Counter is unpredictable.
	For Timer operation (C/Tx# = 0), the Timer register counts the divided-down peripheral clock. The Timer register is incremented once every peripheral cycle (6 peripheral clock periods). The Timer clock rate is $F_{PER}/6$ , i.e. $F_{OSC}/12$ in standard mode or $F_{OSC}/6$ in X2 mode.
	For Counter operation (C/Tx# = 1), the Timer register counts the negative transitions on the Tx external input pin. The external input is sampled every peripheral cycles. When the sample is high in one cycle and low in the next one, the Counter is incremented. Since it takes 2 cycles (12 peripheral clock periods) to recognize a negative transition, the maximum count rate is $F_{PER}/12$ , i.e. $F_{OSC}/24$ in standard mode or $F_{OSC}/12$ in X2 mode. There are no restrictions on the duty cycle of the external input signal, but to ensure that a given level is sampled at least once before it changes, it should be held for at least one full peripheral cycle.
Timer 0	Timer 0 functions as either a Timer or event Counter in four modes of operation. Figure 35 to Figure 38 show the logical configuration of each mode.
	Timer 0 is controlled by the four lower bits of TMOD register (see Figure 31) and bits 0, 1, 4 and 5 of TCON register (see Figure 30). TMOD register selects the method of Timer gating (GATE0), Timer or Counter operation (T/C0#) and mode of operation (M10 and M00). TCON register provides Timer 0 control functions: overflow flag (TF0), run control bit (TR0), interrupt flag (IE0) and interrupt type control bit (IT0).
	For normal Timer operation (GATE0 = 0), setting TR0 allows TL0 to be incremented by the selected input. Setting GATE0 and TR0 allows external pin INT0# to control Timer operation.
	Timer 0 overflow (count rolls over from all 1s to all 0s) sets TF0 flag generating an inter- rupt request.
	It is important to stop Timer/Counter before changing mode.






#### Mode 0 (13-bit Timer)

Mode 0 configures Timer 0 as an 13-bit Timer which is set up as an 8-bit Timer (TH0 register) with a modulo 32 prescaler implemented with the lower five bits of TL0 register (see Figure 35). The upper three bits of TL0 register are indeterminate and should be ignored. Prescaler overflow increments TH0 register.


**Figure 35.** Timer/Counter x (x = 0 or 1) in Mode 0

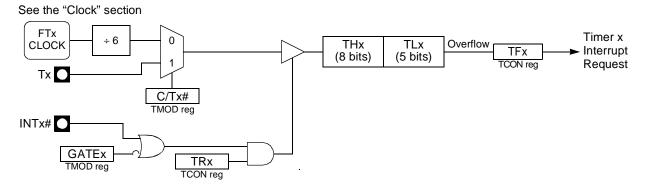

#### Mode 1 (16-bit Timer)

Mode 1 configures Timer 0 as a 16-bit Timer with TH0 and TL0 registers connected in cascade (see Figure 36). The selected input increments TL0 register.

Figure 36. Timer/Counter x (x = 0 or 1) in Mode 1 See the "Clock" section

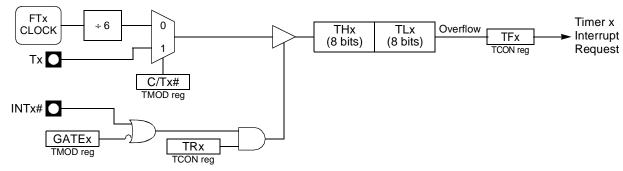


# AT89C51CC03

#### Mode 2 (8-bit Timer with Auto-Reload)

Mode 2 configures Timer 0 as an 8-bit Timer (TL0 register) that automatically reloads from TH0 register (see Figure 37). TL0 overflow sets TF0 flag in TCON register and reloads TL0 with the contents of TH0, which is preset by software. When the interrupt request is serviced, hardware clears TF0. The reload leaves TH0 unchanged. The next reload value may be changed at any time by writing it to TH0 register.


**Figure 37.** Timer/Counter x (x = 0 or 1) in Mode 2

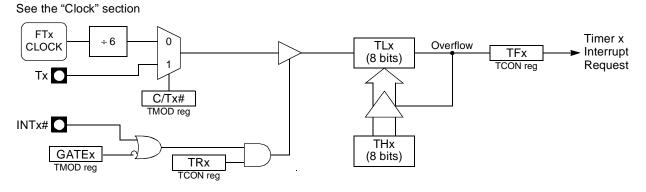

Mode 3 (Two 8-bit Timers)

Mode 3 configures Timer 0 such that registers TL0 and TH0 operate as separate 8-bit Timers (see Figure 38). This mode is provided for applications requiring an additional 8-bit Timer or Counter. TL0 uses the Timer 0 control bits C/T0# and GATE0 in TMOD register, and TR0 and TF0 in TCON register in the normal manner. TH0 is locked into a Timer function (counting  $F_{PER}$  /6) and takes over use of the Timer 1 interrupt (TF1) and run control (TR1) bits. Thus, operation of Timer 1 is restricted when Timer 0 is in mode 3.

Figure 38. Timer/Counter 0 in Mode 3: Two 8-bit Counters

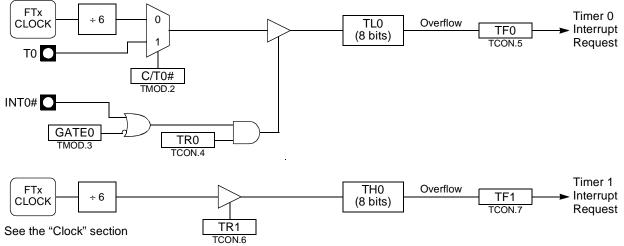




Timer 1	<ul> <li>Timer 1 is identical to Timer 0 excepted for Mode 3 which is a hold-count mode. The following comments help to understand the differences:</li> <li>Timer 1 functions as either a Timer or event Counter in three modes of operation. Figure 35 to Figure 37 show the logical configuration for modes 0, 1, and 2. Timer 1's mode 3 is a hold-count mode.</li> </ul>
	<ul> <li>Timer 1 is controlled by the four high-order bits of TMOD register (see Figure 31) and bits 2, 3, 6 and 7 of TCON register (see Figure 30). TMOD register selects the method of Timer gating (GATE1), Timer or Counter operation (C/T1#) and mode of operation (M11 and M01). TCON register provides Timer 1 control functions: overflow flag (TF1), run control bit (TR1), interrupt flag (IE1) and interrupt type control bit (IT1).</li> </ul>
	• Timer 1 can serve as the Baud Rate Generator for the Serial Port. Mode 2 is best suited for this purpose.
	• For normal Timer operation (GATE1 = 0), setting TR1 allows TL1 to be incremented by the selected input. Setting GATE1 and TR1 allows external pin INT1# to control Timer operation.
	<ul> <li>Timer 1 overflow (count rolls over from all 1s to all 0s) sets the TF1 flag generating an interrupt request.</li> </ul>
	• When Timer 0 is in mode 3, it uses Timer 1's overflow flag (TF1) and run control bit (TR1). For this situation, use Timer 1 only for applications that do not require an interrupt (such as a Baud Rate Generator for the Serial Port) and switch Timer 1 in and out of mode 3 to turn it off and on.
	It is important to stop Timer/Counter before changing mode.
Mode 0 (13-bit Timer)	Mode 0 configures Timer 1 as a 13-bit Timer, which is set up as an 8-bit Timer (TH1 reg- ister) with a modulo-32 prescaler implemented with the lower 5 bits of the TL1 register (see Figure 35). The upper 3 bits of TL1 register are ignored. Prescaler overflow incre- ments TH1 register.
Mode 1 (16-bit Timer)	Mode 1 configures Timer 1 as a 16-bit Timer with TH1 and TL1 registers connected in cascade (see Figure 36). The selected input increments TL1 register.
Mode 2 (8-bit Timer with Auto- Reload)	Mode 2 configures Timer 1 as an 8-bit Timer (TL1 register) with automatic reload from TH1 register on overflow (see Figure 37). TL1 overflow sets TF1 flag in TCON register and reloads TL1 with the contents of TH1, which is preset by software. The reload leaves TH1 unchanged.
Mode 3 (Halt)	Placing Timer 1 in mode 3 causes it to halt and hold its count. This can be used to halt Timer 1 when TR1 run control bit is not available i.e. when Timer 0 is in mode 3.

AIMEL

#### Interrupt

Each Timer handles one interrupt source that is the timer overflow flag TF0 or TF1. This flag is set every time an overflow occurs. Flags are cleared when vectoring to the Timer interrupt routine. Interrupts are enabled by setting ETx bit in IEN0 register. This assumes interrupts are globally enabled by setting EA bit in IEN0 register.

Figure 39. Timer Interrupt System

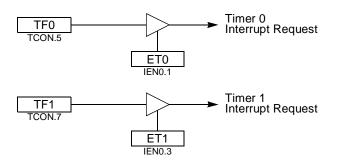

Registers

Table 30.TCON RegisterTCON (S:88h)Timer/Counter Control Register

7	6	5	4	3	2	1	0				
TF1	TR1	TF0	TR0	IE1	IT1	IE0	IT0				
Bit Number	Bit Mnemonic	Description	escription								
7	TF1	Cleared by h	imer 1 Overflow Flag cleared by hardware when processor vectors to interrupt routine. et by hardware on Timer/Counter overflow, when Timer 1 register overflows.								
6	TR1	Clear to turn	<b>Timer 1 Run Control Bit</b> Clear to turn off Timer/Counter 1. Set to turn on Timer/Counter 1.								
5	TF0	Timer 0 Overflow Flag Cleared by hardware when processor vectors to interrupt routine. Set by hardware on Timer/Counter overflow, when Timer 0 register overflows.									
4	TR0		off Timer/Countries								
3	IE1		ardware when	n interrupt is p ernal interrupt		0 00	(see IT1).				
2	IT1	Clear to sele		Bit ctive (level trig active (edge tri	• /		· · ·				
1	IEO	Cleared by h	Interrupt 0 Edge Flag Cleared by hardware when interrupt is processed if edge-triggered (see IT0). Set by hardware when external interrupt is detected on INT0# pin.								
0	ITO	Clear to sele		Bit ctive (level trig active (edge tri							

Reset Value = 0000 0000b



4182K-CAN-05/06



### Table 31. TMOD Register

#### TMOD (S:89h) Timer/Counter Mode Control Register

7	6	5	4	3	2	1	0			
GATE1	C/T1#	M11	M01	GATE0	C/T0#	M10	M00			
Bit Number	Bit Mnemonic	Description	escription							
7	GATE1	Clear to enal	timer 1 Gating Control Bit Clear to enable Timer 1 whenever TR1 bit is set. Set to enable Timer 1 only while INT1# pin is high and TR1 bit is set.							
6	C/T1#	Clear for Tim	imer 1 Counter/Timer Select Bit lear for Timer operation: Timer 1 counts the divided-down system clock. et for Counter operation: Timer 1 counts negative transitions on external pin T1.							
5	M11		mer 1 Mode Select Bits							
4	M01	<u>M11 M01</u> 0 0 0 1 1 0 1 1	<ul> <li>0 1 Mode 1: 16-bit Timer/Counter.</li> <li>1 0 Mode 2: 8-bit auto-reload Timer/Counter (TL1)<sup>(1)</sup></li> </ul>							
3	GATE0	Clear to enal		Bit henever TR0 b ter 0 only while		high and TRO	) bit is set.			
2	C/T0#	Clear for Tim	•	<b>elect Bit</b> Timer 0 count Timer 0 count						
1	M10	Timer 0 Mod           M10         M00           0         0           0         1	0 0 Mode 0: 8-bit Timer/Counter (TH0) with 5-bit prescaler (TL0).							
0	M00	1 0 1 1	1 0 Mode 2: 8-bit auto-reload Timer/Counter (TL0) <sup>(2)</sup>							

1. Reloaded from TH1 at overflow.

2. Reloaded from TH0 at overflow.

Reset Value = 0000 0000b

74 AT89C51CC03

#### Table 32. TH0 Register

TH0 (S:8Ch) Timer 0 High Byte Register

7	6	5	4	3	2	1	0			
-	-	-	-	-	-	-	-			
Bit Number	Bit Mnemonic	Description	Description							
7:0		High Byte o	f Timer 0.							

Reset Value = 0000 0000b

#### Table 33. TL0 Register

TL0 (S:8Ah) Timer 0 Low Byte Register

7	6	5	4	3	2	1	0		
_	-	-	-	-	-	-	-		
Bit Number	Bit Mnemonic	Description	Description						
7:0		Low Byte of Timer 0.							

Reset Value = 0000 0000b

#### Table 34. TH1 Register

TH1 (S:8Dh) Timer 1 High Byte Register

7	6	5	4	3	2	1	0			
-	-	-	-	-	-	-	-			
Bit Number	Bit Mnemonic	Description	Description							
7:0		High Byte o	f Timer 1.							

Reset Value = 0000 0000b





Table 35. TL1 Register

TL1 (S:8Bh) Timer 1 Low Byte Register

7	6	5	4	3	2	1	0		
-	-	-	-	-	-	-	-		
Bit Number	Bit Mnemonic	Description							
7:0		Low Byte of	Low Byte of Timer 1.						

Reset Value = 0000 0000b




<b>T</b>					
Timer 2	The AT89C51CC03 timer 2 is compatible with timer 2 in the 80C52.				
	It is a 16-bit timer/counter: the count is maintained by two eight-bit timer registers, TH2 and TL2 that are cascade- connected. It is controlled by T2CON register (See Table ) and T2MOD register (See Table 38). Timer 2 operation is similar to Timer 0 and Timer 1. $C/T2$ selects $F_{T2 clock}/6$ (timer operation) or external pin T2 (counter operation) as timer clock. Setting TR2 allows TL2 to be incremented by the selected input.				
	Timer 2 includes the following enhancements:				
	Auto-reload mode (up or down counter)				
	Programmable clock-output				
Auto-Reload Mode	The auto-reload mode configures timer 2 as a 16-bit timer or event counter with auto- matic reload. This feature is controlled by the DCEN bit in T2MOD register (See Table 38). Setting the DCEN bit enables timer 2 to count up or down as shown in Figure 40. In this mode the T2EX pin controls the counting direction.				
	When T2EX is high, timer 2 counts up. Timer overflow occurs at FFFFh which sets the TF2 flag and generates an interrupt request. The overflow also causes the 16-bit value in RCAP2H and RCAP2L registers to be loaded into the timer registers TH2 and TL2.				
	When T2EX is low, timer 2 counts down. Timer underflow occurs when the count in the				

When T2EX is low, timer 2 counts down. Timer underflow occurs when the count in the timer registers TH2 and TL2 equals the value stored in RCAP2H and RCAP2L registers. The underflow sets TF2 flag and reloads FFFFh into the timer registers.

The EXF2 bit toggles when timer 2 overflow or underflow, depending on the direction of the count. EXF2 does not generate an interrupt. This bit can be used to provide 17-bit resolution.

Figure 40. Auto-Reload Mode Up/Down Counter

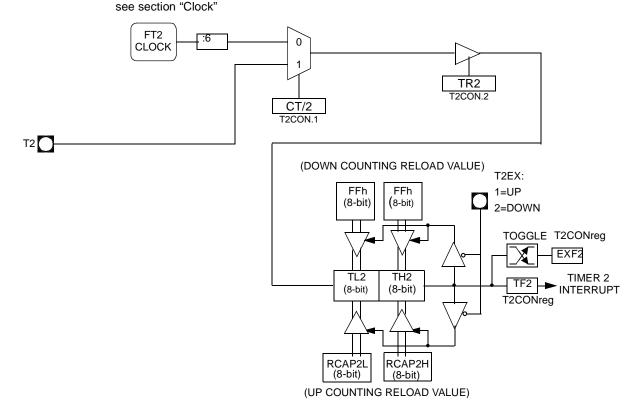





## Programmable Clock-Output

In clock-out mode, timer 2 operates as a 50%-duty-cycle, programmable clock generator (See Figure 41). The input clock increments TL2 at frequency  $F_{OSC}/2$ . The timer repeatedly counts to overflow from a loaded value. At overflow, the contents of RCAP2H and RCAP2L registers are loaded into TH2 and TL2. In this mode, timer 2 overflows do not generate interrupts. The formula gives the clock-out frequency depending on the system oscillator frequency and the value in the RCAP2H and RCAP2L registers:

 $Clock - OutFrequency = \frac{FT2clock}{4 \times (65536 - RCAP2H/RCAP2L)}$ 


For a 16 MHz system clock in x1 mode, timer 2 has a programmable frequency range of 61 Hz ( $F_{OSC}/2^{16}$ ) to 4 MHz ( $F_{OSC}/4$ ). The generated clock signal is brought out to T2 pin (P1.0).

Timer 2 is programmed for the clock-out mode as follows:

- Set T2OE bit in T2MOD register.
- Clear C/T2 bit in T2CON register.
- Determine the 16-bit reload value from the formula and enter it in RCAP2H/RCAP2L registers.
- Enter a 16-bit initial value in timer registers TH2/TL2. It can be the same as the reload value or different depending on the application.
- To start the timer, set TR2 run control bit in T2CON register.

It is possible to use timer 2 as a baud rate generator and a clock generator simultaneously. For this configuration, the baud rates and clock frequencies are not independent since both functions use the values in the RCAP2H and RCAP2L registers.



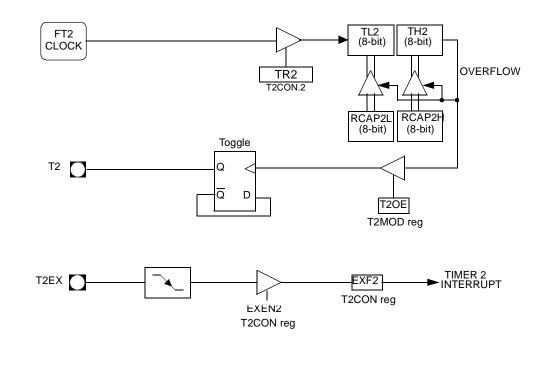

## 78 AT89C51CC03

## Registers

#### Table 36. T2CON Register

T2CON (S:C8h) Timer 2 Control Register

7	6	5	4	3	2	1	0				
TF2	EXF2	RCLK	TCLK	EXEN2	TR2	C/T2#	CP/RL2#				
Bit Number	Bit Mnemonic	Description									
7	TF2	TF2 is not se Must be clea	imer 2 Overflow Flag F2 is not set if RCLK=1 or TCLK = 1. ust be cleared by software. et by hardware on timer 2 overflow.								
6	EXF2	Set when a c EXEN2=1. Set to cause is enabled.	Set to cause the CPU to vector to timer 2 interrupt routine when timer 2 interrupt								
5	RCLK	Clear to use	Receive Clock bit Clear to use timer 1 overflow as receive clock for serial port in mode 1 or 3. Set to use timer 2 overflow as receive clock for serial port in mode 1 or 3.								
4	TCLK		timer 1 overfl	ow as transmi v as transmit c		•					
3	EXEN2	Clear to igno Set to cause	a capture or	<b>bit</b> T2EX pin for ti reload when a used to clock ti	negative tran	sition on T2E	X pin is				
2	TR2	Timer 2 Run Clear to turn Set to turn or	off timer 2.								
1	C/T2#	Clear for time		<b>bit</b> input from inte (input from T2		stem: F <sub>OSC</sub> ).					
0	CP/RL2#	If RCLK=1 of timer 2 overf Clear to auto EXEN2=1.	low. -reload on tin	<b>bit</b> P/RL2# is ignor ner 2 overflow: transitions or	s or negative	transitions on					

Reset Value = 0000 0000b Bit addressable





#### Table 37. T2MOD Register

T2MOD (S:C9h) Timer 2 Mode Control Register

7	6	5	4	3	2	1	0				
-	-	-	-	-	-	T2OE	DCEN				
Bit Number	Bit Mnemonic	Description	escription								
7	-	Reserved The value rea	eserved he value read from this bit is indeterminate. Do not set this bit.								
6	-	Reserved The value rea	eserved he value read from this bit is indeterminate. Do not set this bit.								
5	-	<b>Reserved</b> The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.								
4	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.					
3	-	<b>Reserved</b> The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.					
2	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.					
1	T2OE	Clear to prog	Timer 2 Output Enable bit Clear to program P1.0/T2 as clock input or I/O port. Set to program P1.0/T2 as clock output.								
0	DCEN	Clear to disa		t up/down cou o/down counte							

Reset Value = XXXX XX00b Not bit addressable

#### Table 38. TH2 Register

TH2 (S:CDh) Timer 2 High Byte Register

7	6	5	4	3	2	1	0			
-	-	-	-	-	-	-	-			
Bit Number	Bit Mnemonic	Description	Description							
7-0		High Byte of Timer 2.								

Reset Value = 0000 0000b Not bit addressable

Downloaded from Elcodis.com electronic components distributor

#### Table 39. TL2 Register

TL2 (S:CCh) Timer 2 Low Byte Register

7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-
Bit Number	Bit Mnemonic	Description					
7-0		Low Byte of	Timer 2.				

Reset Value = 0000 0000b Not bit addressable

Table 40. RCAP2H Register

RCAP2H (S:CBh) Timer 2 Reload/Capture High Byte Register

7	6	5	4	3	2	1	0			
-	-	-	-	-	-	-	-			
Bit Number	Bit Mnemonic	Description	Description							
7-0		High Byte of Timer 2 Reload/Capture.								

Reset Value = 0000 0000b Not bit addressable

#### Table 41. RCAP2L Register

RCAP2L (S:CAн) TIMER 2 Reload/Capture Low Byte Register

7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-
Bit Number	Bit Mnemonic	Description					
7-0		Low Byte of	Timer 2 Reloa	d/Capture.			

Reset Value = 0000 0000b Not bit addressable





## Watchdog Timer


AT89C51CC03 contains a powerful programmable hardware Watchdog Timer (WDT) that automatically resets the chip if it software fails to reset the WDT before the selected time interval has elapsed. It permits large Time-Out ranking from 16ms to 2s @Fosc = 12MHz in X1 mode.

This WDT consists of a 14-bit counter plus a 7-bit programmable counter, a Watchdog Timer reset register (WDTRST) and a Watchdog Timer programming (WDTPRG) register. When exiting reset, the WDT is -by default- disable.

To enable the WDT, the user has to write the sequence 1EH and E1H into WDTRST register no instruction in between. When the Watchdog Timer is enabled, it will increment every machine cycle while the oscillator is running and there is no way to disable the WDT except through reset (either hardware reset or WDT overflow reset). When WDT overflows, it will generate an output RESET pulse at the RST pin. The RESET pulse duration is  $96xT_{OSC}$ , where  $T_{OSC}=1/F_{OSC}$ . To make the best use of the WDT, it should be serviced in those sections of code that will periodically be executed within the time required to prevent a WDT reset

Note: When the Watchdog is enable it is impossible to change its period.

Figure 42. Watchdog Timer

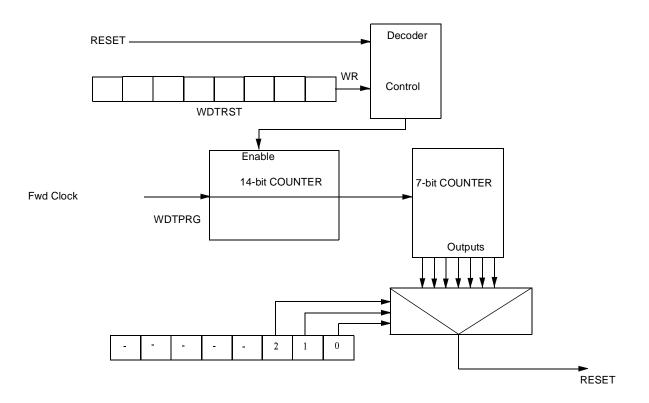

## Watchdog Programming

The three lower bits (S0, S1, S2) located into WDTPRG register permit to program the WDT duration.

Table 42. Machine Cycle Cou	Int
-----------------------------	-----

S2	S1	S0	Machine Cycle Count
0	0	0	2 <sup>14</sup>
0	0	1	2 <sup>15</sup>
0	1	0	2 <sup>16</sup>
0	1	1	2 <sup>17</sup>
1	0	0	2 <sup>18</sup>
1	0	1	2 <sup>19</sup>
1	1	0	2 <sup>20</sup>
1	1	1	2 <sup>21</sup>

To compute WD Time-Out, the following formula is applied:

$$FTime - Out = \frac{F_{osc}}{6 \times 2^{WDX2 \wedge X2} (2^{14} \times 2^{Svalue})}$$

Note: Svalue represents the decimal value of (S2 S1 S0)

The following table outlines the time-out value for  $\text{Fosc}_{\text{XTAL}}$  = 12 MHz in X1 mode

S2	S1	S0	Fosc = 12 MHz	Fosc = 16 MHz	Fosc = 20 MHz
0	0	0	16.38 ms	12.28 ms	9.82 ms
0	0	1	32.77 ms	24.57 ms	19.66 ms
0	1	0	65.54 ms	49.14 ms	39.32 ms
0	1	1	131.07 ms	98.28 ms	78.64 ms
1	0	0	262.14 ms	196.56 ms	157.28 ms
1	0	1	524.29 ms	393.12 ms	314.56 ms
1	1	0	1.05 s	786.24 ms	629.12 ms
1	1	1	2.10 s	1.57 s	1.25 s

Table 43. Time-Out Computation





### Watchdog Timer During Power-down Mode and Idle

In Power-down mode the oscillator stops, which means the WDT also stops. While in Power-down mode, the user does not need to service the WDT. There are 2 methods of exiting Power-down mode: by a hardware reset or via a level activated external interrupt which is enabled prior to entering Power-down mode. When Power-down is exited with hardware reset, the Watchdog is disabled. Exiting Power-down with an interrupt is significantly different. The interrupt shall be held low long enough for the oscillator to stabilize. When the interrupt is brought high, the interrupt is serviced. To prevent the WDT from resetting the device while the interrupt pin is held low, the WDT is not started until the interrupt is pulled high. It is suggested that the WDT be reset during the interrupt service for the interrupt used to exit Power-down.

To ensure that the WDT does not overflow within a few states of exiting powerdown, it is best to reset the WDT just before entering powerdown.

In the Idle mode, the oscillator continues to run. To prevent the WDT from resetting AT89C51CC03 while in Idle mode, the user should always set up a timer that will periodically exit Idle, service the WDT, and re-enter Idle mode.

Register

Table 44. WDTPRG Register

WDTPRG (S:A7h) Watchdog Timer Duration Programming Register

7	6	5	4	3	2	1	0		
-	-	-	-	-	S2	S1	S0		
Bit Number	Bit Mnemonic	Description	Description						
7	-	<b>Reserved</b> The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.						
6	-	<b>Reserved</b> The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.						
5	-	Reserved The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.						
4	-	Reserved The value read from this bit is indeterminate. Do not set this bit.							
3	-	Reserved The value read from this bit is indeterminate. Do not set this bit.							
2	S2	Watchdog Timer Duration selection bit 2 Work in conjunction with bit 1 and bit 0.							
1	S1	-	Watchdog Timer Duration selection bit 1 Work in conjunction with bit 2 and bit 0.						
0	SO		Watchdog Timer Duration selection bit 0 Work in conjunction with bit 1 and bit 2.						

Reset Value = XXXX X000b

## 84 AT89C51CC03

#### Table 45. WDTRST Register

WDTRST (S:A6h Write only) Watchdog Timer Enable Register

7	6	5	4	3	2	1	0
-	-	-	-	-	-	-	-
Bit Number	Bit Mnemonic	Description					
7	-	Watchdog C	ontrol Value				

Reset Value = 1111 1111b

Note: The WDRST register is used to reset/enable the WDT by writing 1EH then E1H in sequence without instruction between these two sequences.




4182K-CAN-05/06



CAN Controller	The CAN Controller provides all the features required to implement the serial communi- cation protocol CAN as defined by BOSCH GmbH. The CAN specification as referred to by ISO/11898 (2.0A and 2.0B) for high speed and ISO/11519-2 for low speed. The CAN Controller is able to handle all types of frames (Data, Remote, Error and Overload) and achieves a bitrate of 1-Mbit/sec at 8 MHz <sup>1</sup> Crystal frequency in X2 mode. Note: 1. At BRP = 1 sampling point will be fixed.
CAN Protocol	The CAN protocol is an international standard defined in the ISO 11898 for high speed and ISO 11519-2 for low speed.
Principles	CAN is based on a broadcast communication mechanism. This broadcast communica- tion is achieved by using a message oriented transmission protocol. These messages are identified by using a message identifier. Such a message identifier has to be unique within the whole network and it defines not only the content but also the priority of the message.
	The priority at which a message is transmitted compared to another less urgent mes- sage is specified by the identifier of each message. The priorities are laid down during system design in the form of corresponding binary values and cannot be changed dynamically. The identifier with the lowest binary number has the highest priority.
	Bus access conflicts are resolved by bit-wise arbitration on the identifiers involved by each node observing the bus level bit for bit. This happens in accordance with the "wired and" mechanism, by which the dominant state overwrites the recessive state. The competition for bus allocation is lost by all nodes with recessive transmission and dominant observation. All the "losers" automatically become receivers of the message with the highest priority and do not re-attempt transmission until the bus is available again.
Message Formats	The CAN protocol supports two message frame formats, the only essential difference being in the length of the identifier. The CAN standard frame, also known as CAN 2.0 A, supports a length of 11 bits for the identifier, and the CAN extended frame, also known

#### Can Standard Frame

#### Figure 43. CAN Standard Frames

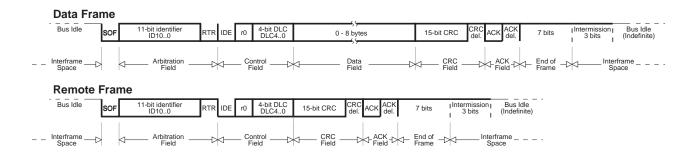

as CAN 2.0 B, supports a length of 29 bits for the identifier.


A message in the CAN standard frame format begins with the "Start Of Frame (SOF)", this is followed by the "Arbitration field" which consist of the identifier and the "Remote Transmission Request (RTR)" bit used to distinguish between the data frame and the data request frame called remote frame. The following "Control field" contains the "IDentifier Extension (IDE)" bit and the "Data Length Code (DLC)" used to indicate the

86 AT89C51CC03

number of following data bytes in the "Data field". In a remote frame, the DLC contains the number of requested data bytes. The "Data field" that follows can hold up to 8 data bytes. The frame integrity is guaranteed by the following "Cyclic Redundant Check (CRC)" sum. The "ACKnowledge (ACK) field" compromises the ACK slot and the ACK delimiter. The bit in the ACK slot is sent as a recessive bit and is overwritten as a dominant bit by the receivers which have at this time received the data correctly. Correct messages are acknowledged by the receivers regardless of the result of the acceptance test. The end of the message is indicated by "End Of Frame (EOF)". The "Intermission Frame Space (IFS)" is the minimum number of bits separating consecutive messages. If there is no following bus access by any node, the bus remains idle.

#### CAN Extended Frame




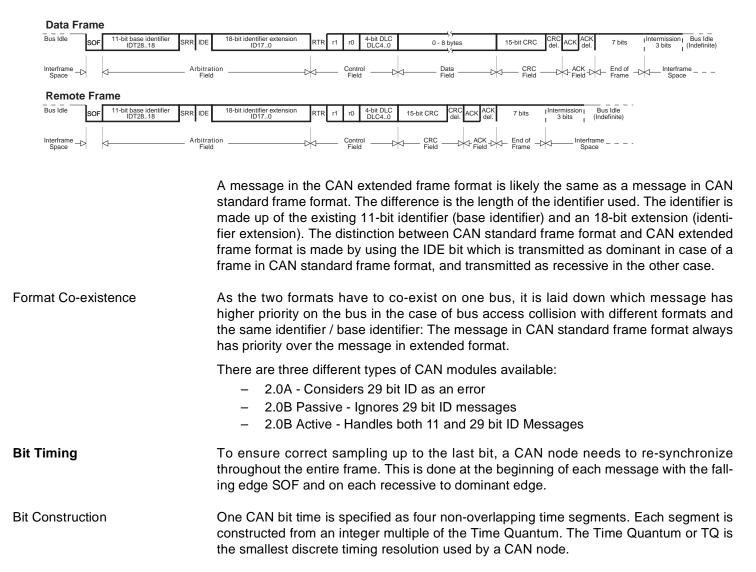







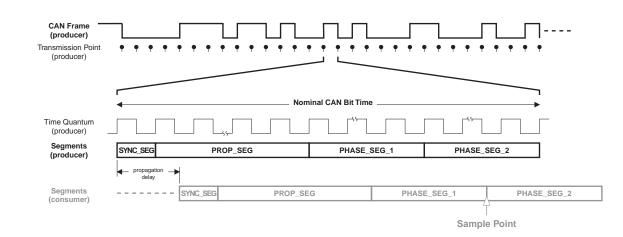


Synchronization Segment	The first segment is used to synchronize the various bus nodes.
	On transmission, at the start of this segment, the current bit level is output. If there is a bit state change between the previous bit and the current bit, then the bus state change is expected to occur within this segment by the receiving nodes.
Propagation Time Segment	This segment is used to compensate for signal delays across the network.
	This is necessary to compensate for signal propagation delays on the bus line and through the transceivers of the bus nodes.
Phase Segment 1	Phase Segment 1 is used to compensate for edge phase errors.
	This segment may be lengthened during resynchronization.
Sample Point	The sample point is the point of time at which the bus level is read and interpreted as the value of the respective bit. Its location is at the end of Phase Segment 1 (between the two Phase Segments).
Phase Segment 2	This segment is also used to compensate for edge phase errors.
	This segment may be shortened during resynchronization, but the length has to be at least as long as the information processing time and may not be more than the length of Phase Segment 1.
Information Processing Time	It is the time required for the logic to determine the bit level of a sampled bit.
	The Information processing Time begins at the sample point, is measured in TQ and is fixed at 2 TQ for the Atmel CAN. Since Phase Segment 2 also begins at the sample point and is the last segment in the bit time, Phase Segment 2 minimum shall not be less than the Information processing Time.
Bit Lengthening	As a result of resynchronization, Phase Segment 1 may be lengthened or Phase Segment 2 may be shortened to compensate for oscillator tolerances. If, for example, the transmitter oscillator is slower than the receiver oscillator, the next falling edge used for resynchronization may be delayed. So Phase Segment 1 is lengthened in order to adjust the sample point and the end of the bit time.

## 88 AT89C51CC03

## AT89C51CC03

Bit Shortening	If, on the other hand, the transmitter oscillator is faster than the receiver one, the next falling edge used for resynchronization may be too early. So Phase Segment 2 in bit N is shortened in order to adjust the sample point for bit N+1 and the end of the bit time
Synchronization Jump Width	The limit to the amount of lengthening or shortening of the Phase Segments is set by the Resynchronization Jump Width.
	This segment may not be longer than Phase Segment 2.
Programming the Sample Point	Programming of the sample point allows "tuning" of the characteristics to suit the bus.
	Early sampling allows more Time Quanta in the Phase Segment 2 so the Synchroniza- tion Jump Width can be programmed to its maximum. This maximum capacity to
	shorten or lengthen the bit time decreases the sensitivity to node oscillator tolerances, so that lower cost oscillators such as ceramic resonators may be used.

#### Arbitration

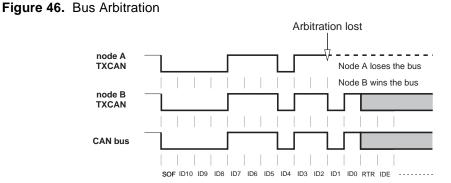

The CAN protocol handles bus accesses according to the concept called "Carrier Sense Multiple Access with Arbitration on Message Priority".

During transmission, arbitration on the CAN bus can be lost to a competing device with a higher priority CAN Identifier. This arbitration concept avoids collisions of messages whose transmission was started by more than one node simultaneously and makes sure the most important message is sent first without time loss.

The bus access conflict is resolved during the arbitration field mostly over the identifier value. If a data frame and a remote frame with the same identifier are initiated at the same time, the data frame prevails over the remote frame (c.f. RTR bit).

The CAN protocol signals any errors immediately as they occur. Three error detection mechanisms are implemented at the message level and two at the bit level:

Error at Message Level

Errors

 Cyclic Redundancy Check (CRC) The CRC safeguards the information in the frame by adding redundant check bits at the transmission end. At the receiver these bits are re-computed and tested against the received bits. If they do not agree there has been a CRC error.

• Frame Check This mechanism verifies the structure of the transmitted frame by checking the bit



4182K-CAN-05/06



fields against the fixed format and the frame size. Errors detected by frame checks are designated "format errors".

ACK Errors

As already mentioned frames received are acknowledged by all receivers through positive acknowledgement. If no acknowledgement is received by the transmitter of the message an ACK error is indicated.

- Error at Bit Level Monitoring The ability of the transmitter to detect errors is based on the monitoring of bus signals. Each node which transmits also observes the bus level and thus detects differences between the bit sent and the bit received. This permits reliable detection of global errors and errors local to the transmitter.
  - Bit Stuffing The coding of the individual bits is tested at bit level. The bit representation used by CAN is "Non Return to Zero (NRZ)" coding, which guarantees maximum efficiency in bit coding. The synchronization edges are generated by means of bit stuffing.
- Error Signalling If one or more errors are discovered by at least one node using the above mechanisms, the current transmission is aborted by sending an "error flag". This prevents other nodes accepting the message and thus ensures the consistency of data throughout the network. After transmission of an erroneous message that has been aborted, the sender automatically re-attempts transmission.

CAN Controller	The CAN Cont
Description	Several operat
-	

roller accesses are made through SFR. tions are possible by SFR:

- arithmetic and logic operations, transfers and program control (SFR is accessible by • direct addressing).
- 15 independent message objects are implemented, a pagination system manages their accesses.

Any message object can be programmed in a reception buffer block (even non-consecutive buffers). For the reception of defined messages one or several receiver message objects can be masked without participating in the buffer feature. An IT is generated when the buffer is full. The frames following the buffer-full interrupt will not be taken into account until at least one of the buffer message objects is re-enabled in reception. Higher priority of a message object for reception or transmission is given to the lower message object number.


The programmable 16-bit Timer (CANTIMER) is used to stamp each received and sent message in the CANSTMP register. This timer starts counting as soon as the CAN controller is enabled by the ENA bit in the CANGCON register.

The Time Trigger Communication (TTC) protocol is supported by the AT89C51CC03.

Downloaded from Elcodis.com electronic components distributor

## AT89C51CC03



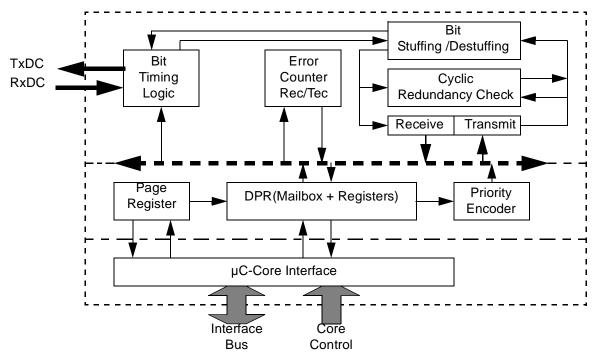

CAN Controller Mailbox and Registers Organization


The pagination allows management of the 321 registers including 300(15x20) Bytes of mailbox via 34 SFR's.

All actions on the message object window SFRs apply to the corresponding message object registers pointed by the message object number find in the Page message object register (CANPAGE) as illustrate in Figure 48.





Figure 48. CAN Controller Memory Organization

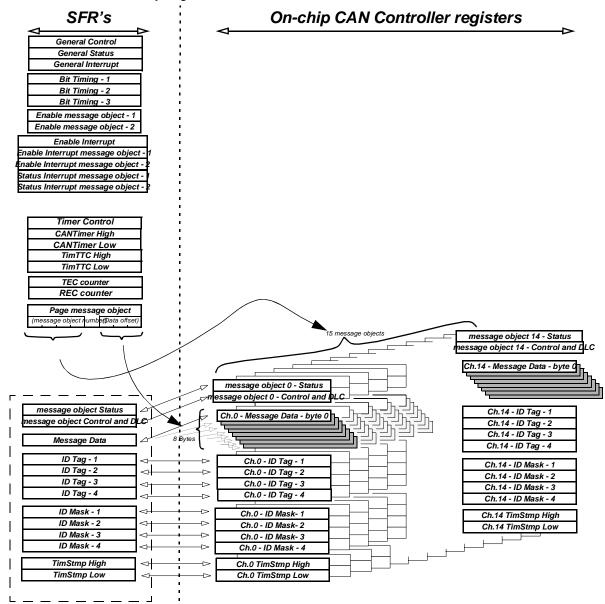

message object Window SFRs

92 AT89C51CC03

#### Working on Message Objects

The Page message object register (CANPAGE) is used to select one of the 15 message objects. Then, message object Control (CANCONCH) and message object Status (CANSTCH) are available for this selected message object number in the corresponding SFRs. A single register (CANMSG) is used for the message. The mailbox pointer is managed by the Page message object register with an auto-incrementation at the end of each access. The range of this counter is 8.

Note that the maibox is a pure RAM, dedicated to one message object, without overlap. In most cases, it is not necessary to transfer the received message into the standard memory. The message to be transmitted can be built directly in the maibox. Most calculations or tests can be executed in the mailbox area which provide quicker access.

# CAN ControllerIn order to enable the CAN Controller correctly the following registers have to be<br/>initialized:Managementinitialized:

- General Control (CANGCON),
- Bit Timing (CANBT 1, 2 and 3),
- And for each page of 15 message objects
  - message object Control (CANCONCH),
  - message object Status (CANSTCH).

During operation, the CAN Enable message object registers 1 and 2 (CANEN 1 and 2) gives a fast overview of the message objects availability.

The CAN messages can be handled by interrupt or polling modes.

A message object can be configured as follows:

- Transmit message object,
- Receive message object,
- Receive buffer message object.
- Disable

This configuration is made in the CONCH1:2 field of the CANCONCH register (see Table 46).

When a message object is configured, the corresponding ENCH bit of CANEN 1 and 2 register is set.

Table 46.	Configuration	for CONCH1:2
-----------	---------------	--------------

CONCH 1	CONCH 2	Type of Message Object
0	0	Disable
0	1	Transmitter
1	0	Receiver
1	1	Receiver buffer

When a Transmitter or Receiver action of a message object is completed, the corresponding ENCH bit of the CANEN 1 and 2 register is cleared. In order to re-enable the message object, it is necessary to re-write the configuration in CANCONCH register.

Non-consecutive message objects can be used for all three types of message objects (Transmitter, Receiver and Receiver buffer),




#### **Buffer Mode**

Any message object can be used to define one buffer, including non-consecutive message objects, and with no limitation in number of message objects used up to 15.

Each message object of the buffer must be initialized CONCH2 = 1 and CONCH1 = 1;

Figure 49.	Buffer	mode
------------	--------	------

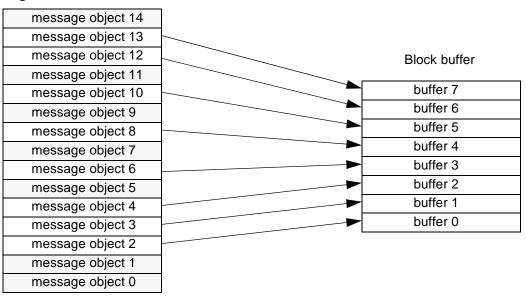

The same acceptance filter must be defined for each message objects of the buffer. When there is no mask on the identifier or the IDE, all messages are accepted.

A received frame will always be stored in the lowest free message object.

When the flag Rxok is set on one of the buffer message objects, this message object can then be read by the application. This flag must then be cleared by the software and the message object re-enabled in buffer reception in order to free the message object.

The OVRBUF flag in the CANGIT register is set when the buffer is full. This flag can generate an interrupt.

The frames following the buffer-full interrupt will not stored and no status will be overwritten in the CANSTCH registers involved in the buffer until at least one of the buffer message objects is re-enabled in reception.

This flag must be cleared by the software in order to acknowledge the interrupt.

Downloaded from Elcodis.com electronic components distributor


## AT89C51CC03

### **IT CAN Management**

The different interrupts are:

- Transmission interrupt,
- Reception interrupt,
- Interrupt on error (bit error, stuff error, crc error, form error, acknowledge error),
- Interrupt when Buffer receive is full,
- Interrupt on overrun of CAN Timer.

#### Figure 50. CAN Controller Interrupt Structure

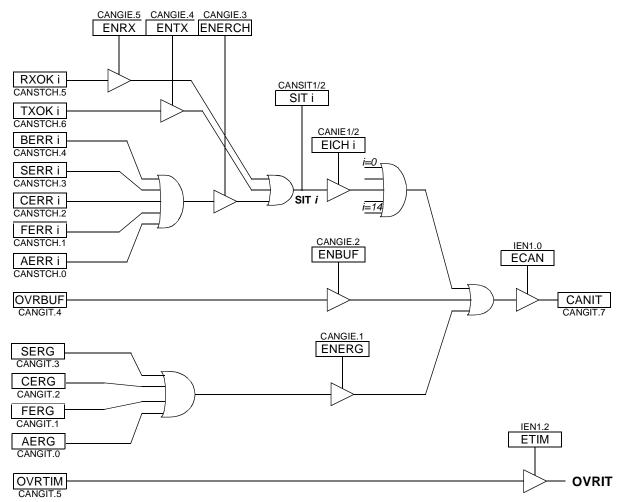

To enable a transmission interrupt:

- Enable General CAN IT in the interrupt system register,
- Enable interrupt by message object, EICHi,
- Enable transmission interrupt, ENTX.

To enable a reception interrupt:

- Enable General CAN IT in the interrupt system register,
- Enable interrupt by message object, EICHi,
- Enable reception interrupt, ENRX.

To enable an interrupt on message object error:





- Enable General CAN IT in the interrupt system register, .
- Enable interrupt by message object, EICHi,
- Enable interrupt on error, ENERCH.

To enable an interrupt on general error:

- Enable General CAN IT in the interrupt system register,
- Enable interrupt on error, ENERG.

To enable an interrupt on Buffer-full condition:

- Enable General CAN IT in the interrupt system register, •
- Enable interrupt on Buffer full, ENBUF.

To enable an interrupt when Timer overruns:

Enable Overrun IT in the interrupt system register.

When an interrupt occurs, the corresponding message object bit is set in the SIT register.

To acknowledge an interrupt, the corresponding CANSTCH bits (RXOK, TXOK....) or CANGIT bits (OVRTIM, OVRBUF,...), must be cleared by the software application.

When the CAN node is in transmission and detects a Form Error in its frame, a bit Error will also be raised. Consequently, two consecutive interrupts can occur, both due to the same error.

When a message object error occurs and is set in CANSTCH register, no general error are set in CANGIE register.

Downloaded from Elcodis.com electronic components distributor

## AT89C51CC03

### **Bit Timing and Baud Rate**


FSM's (Finite State Machine) of the CAN channel need to be synchronous to the time quantum. So, the input clock for bit timing is the clock used into CAN channel FSM's.

Field and segment abbreviations:

- BRP: Baud Rate Prescaler.
- TQ: Time Quantum (output of Baud Rate Prescaler).
- SYNS: SYNchronization Segment is 1 TQ long.
- PRS: PRopagation time Segment is programmable to be 1, 2, ..., 8 TQ long.
- PHS1: PHase Segment 1 is programmable to be 1, 2, ..., 8 TQ long.
- PHS2: PHase Segment 2 is programmable to be superior or equal to the INFORMATION PROCESSING TIME and inferior or equal to TPSH1.
- INFORMATION PROCESSING TIME is 2 TQ.
- SJW: (Re) Synchronization Jump Width is programmable to be minimum of PHS1 and 4.

The total number of TQ in a bit time has to be programmed at least from 8 to 25.

#### Figure 51. Sample And Transmission Point



The baud rate selection is made by Tbit calculation:

Tbit = Tsyns + Tprs + Tphs1 + Tphs2


- 1. Tsyns = Tscl = (BRP[5..0]+ 1)/Fcan = 1TQ.
- 2. Tprs = (1 to 8) \* Tscl = (PRS[2..0]+ 1) \* Tscl
- 3. Tphs1 = (1 to 8) \* Tscl = (PHS1[2..0]+ 1) \* Tscl
- 4. Tphs2 = (1 to 8) \* Tscl = (PHS2[2..0]+ 1) \* Tscl **Tphs2 = Max of (Tphs1 and 2TQ)**
- 5. Tsjw = (1 to 4) \* Tscl = (SJW[1..0]+ 1) \* Tscl

The total number of Tscl (Time Quanta) in a bit time must be comprised between **8 to 25.** 





#### Figure 52. General Structure of a Bit Period

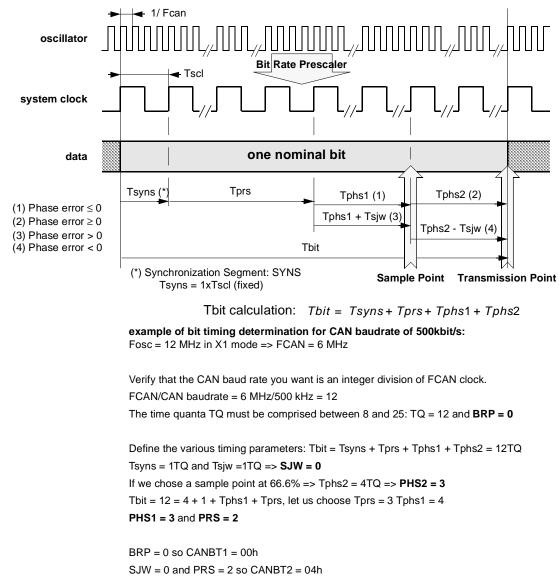

PHS2 = 3 and PHS1 = 3 so CANBT3 = 36h

AT89C51CC03 98

Downloaded from Elcodis.com electronic components distributor

### **Fault Confinement**

With respect to fault confinement, a unit may be in one of the three following status:

- error active
- error passive
- bus off

An error active unit takes part in bus communication and can send an active error frame when the CAN macro detects an error.


An error passive unit cannot send an active error frame. It takes part in bus communication, but when an error is detected, a passive error frame is sent. Also, after a transmission, an error passive unit will wait before initiating further transmission.

A bus off unit is not allowed to have any influence on the bus.

For fault confinement, two error counters (TEC and REC) are implemented.

See CAN Specification for details on Fault confinement.

#### Figure 53. Line Error Mode

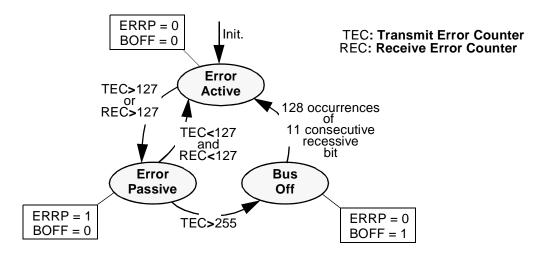





### **Acceptance Filter**

Upon a reception hit (i.e., a good comparison between the ID+RTR+RB+IDE received and an ID+RTR+RB+IDE specified while taking the comparison mask into account) the ID+RTR+RB+IDE received are written over the ID TAG Registers.


ID => IDT0-29

RTR => RTRTAG

 $RB \Rightarrow RB0-1TAG$ 

IDE => IDE in CANCONCH register



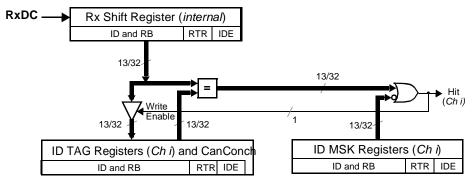

example: To accept only ID = 318h in part A. ID MSK = 111 1111 1111 b ID TAG = 011 0001 1000 b

CAN SFRs




## AT89C51CC03

### **Data and Remote Frame**

Description of the different steps for:

Data Frame

•

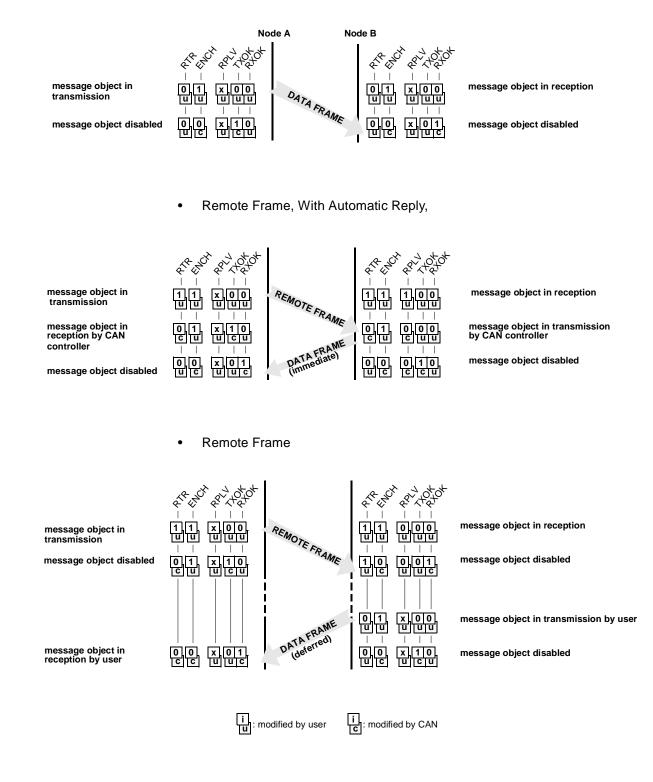





## Time Trigger Communication (TTC) and Message Stamping

The AT89C51CC03 has a programmable 16-bit Timer (CANTIMH and CANTIML) for message stamp and TTC.

This CAN Timer starts after the CAN controller is enabled by the ENA bit in the CANG-CON register.


Two modes in the timer are implemented:

- Time Trigger Communication:
  - Capture of this timer value in the CANTTCH and CANTTCL registers on Start Of Frame (SOF) or End Of Frame (EOF), depending on the SYNCTTC bit in the CANGCON register, when the network is configured in TTC by the TTC bit in the CANGCON register.
- Note: In this mode, CAN only sends the frame once, even if an error occurs.
- Message Stamping
  - Capture of this timer value in the CANSTMPH and CANSTMPL registers of the message object which received or sent the frame.
  - All messages can be stamps.
  - The stamping of a received frame occurs when the RxOk flag is set.
  - The stamping of a sent frame occurs when the TxOk flag is set.

The CAN Timer works in a roll-over from FFFFh to 0000h which serves as a time base.

When the timer roll-over from FFFFh to 0000h, an interrupt is generated if the ETIM bit in the interrupt enable register IEN1 is set.



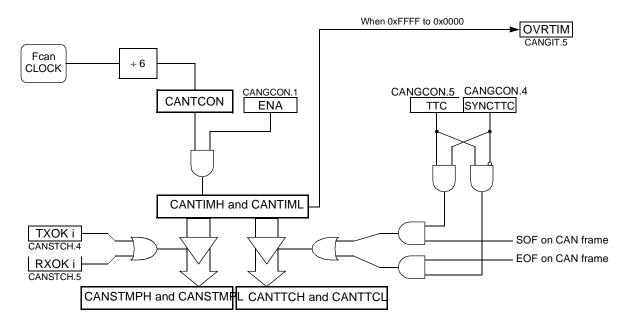

## AT89C51CC03

# CAN Autobaud and Listening Mode


To activate the Autobaud feature, the AUTOBAUD bit in the CANGCON register must be set. In this mode, the CAN controller is only listening to the line without acknowledging the received messages. It cannot send any message. The error flags are updated. The bit timing can be adjusted until no error occurs (good configuration find).

In this mode, the error counters are frozen.

To go back to the standard mode, the AUTOBAUD bit must be cleared.

#### Figure 56. Autobaud Mode

1.

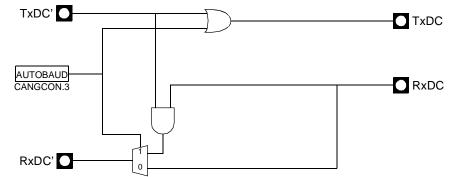

### **Routines Examples**

Init of CAN macro
// Reset the CAN macro
CANGCON = 01h;
// Disable CAN interrupts
ECAN = 0;
ETIM = 0;
// Init the Mailbox
for num_page =0; num_page <15; num_page++
{
CANPAGE = num_channel << 4;
CANCONCH = 00h
CANSTCH = 00h;
CANIDT1 = 00h;
CANIDT2 = 00h;
CANIDT3 = 00h;
CANIDT4 = 00h;
CANIDM1 = 00h;
CANIDM2 = 00h;
CANIDM3 = 00h;
CANIDM4 = 00h;
for num_data =0; num_data <8; num_data++)
{
CANMSG = 00h;
}
}
// Configure the bit timing
CANBT1 = xxh
CANBT2 = xxh
CANBT3 = xxh



4182K-CAN-05/06



// Enable the CAN macro
CANGCON = 02h

2. Configure message object 3 in reception to receive only standard (11-bit identifier) message 100h

// Select the message object 3 CANPAGE = 30h // Enable the interrupt on this message object CANIE2 = 08h// Clear the status and control register CANSTCH = 00h CANCONCH = 00h // Init the acceptance filter to accept only message 100h in standard mode CANIDT1 = 20hCANIDT2 = 00hCANIDT3 = 00h CANIDT4 = 00hCANIDM1 = FFh CANIDM2 = FFhCANIDM3 = FFh CANIDM4 = FFh// Enable channel in reception CANCONCH = 88h // enable reception

Note: To enable the CAN interrupt in reception: EA = 1 ECAN = 1 CANGIE = 20h

3. Send a message on the message object 12

// Select the message object 12 CANPAGE = C0h // Enable the interrupt on this message object CANIE1 = 01h// Clear the Status register CANSTCH = 00h;// load the identifier to send (ex: 555h) CANIDT1 = AAh;CANIDT2 = A0h;// load data to send CANMSG = 00hCANMSG = 01hCANMSG = 02h CANMSG = 03h CANMSG = 04h CANMSG = 05h CANMSG = 06h CANMSG = 07h // configure the control register CANCONCH = 18h

## 104 AT89C51CC03

#### 4. Interrupt routine

// Save the current CANPAGE

// Find the first message object which generate an interrupt in CANSIT1 and CANSIT2

// Select the corresponding message object

// Analyse the CANSTCH register to identify which kind of interrupt is generated

// Manage the interrupt

// Clear the status register CANSTCH = 00h;

// if it is not a channel interrupt but a general interrupt// Manage the general interrupt and clear CANGIT register

// restore the old CANPAGE





## CAN SFR's

Table 47. CAN SFR's With Reset Values

	<b>0/8</b> <sup>(1)</sup>	1/9	2/A	3/B	4/C	5/D	6/E	7/F	
F8h	IPL1 xxxx x000	CH 0000 0000	CCAP0H 0000 0000	CCAP1H 0000 0000	CCAP2H 0000 0000	CCAP3H 0000 0000	CCAP4H 0000 0000		FFh
F0h	B 0000 0000		ADCLK xx00 x000	ADCON 0000 0000	ADDL xxxx xx00	ADDH 0000 0000	ADCF 0000 0000	IPH1 xxxx x000	F7h
E8h	IEN1 xxxx x000	CL 0000 0000	CCAP0L 0000 0000	CCAP1L 0000 0000	CCAP2L 0000 0000	CCAP3L 0000 0000	CCAP4L 0000 0000		EFh
E0h	ACC 0000 0000								E7h
D8h	CCON 00xx xx00	CMOD 00xx x000	CCAPM0 x000 0000	CCAPM1 x000 0000	CCAPM2 x000 0000	CCAPM3 x000 0000	CCAPM4 x000 0000		DFh
D0h	PSW 0000 0000	FCON 0000 0000	EECON xxxx xx00	FSTA xxxx xx00	SPCON 0001 0100	SPSCR 0000 0000	SPDAT xxxx xxxx		D7h
C8h	T2CON 0000 0000	T2MOD xxxx xx00	RCAP2L 0000 0000	RCAP2H 0000 0000	TL2 0000 0000	TH2 0000 0000	CANEN1 xx00 0000	CANEN2 0000 0000	CFh
C0h	P4 xxxx xx11	CANGIE 0000 0000	CANIE1 xx00 0000	CANIE2 0000 0000	CANIDM1 xxxx xxxx	CANIDM2 xxxx xxxx	CANIDM3 xxxx xxxx	CANIDM4 xxxx xxxx	C7h
B8h	IPL0 x000 0000	SADEN 0000 0000	CANSIT1 0x00 0000	CANSIT2 0000 0000	CANIDT1 xxxx xxxx	CANIDT2 xxxx xxxx	CANIDT3 xxxx xxxx	CANIDT4 xxxx xxxx	BFh
B0h	P3 1111 1111	CANPAGE 0000 0000	CANSTCH xxxx xxxx	CANCONCH xxxx xxxx	CANBT1 xxxx xxxx	CANBT2 xxxx xxxx	CANBT3 xxxx xxxx	IPH0 x000 0000	B7h
A8h	IEN0 0000 0000	SADDR 0000 0000	CANGSTA 0000 0000	CANGCON 0000 x000	CANTIML 0000 0000	CANTIMH 0000 0000	CANSTMPL 0000 0000	CANSTMPH 0000 0000	AFh
A0h	P2 1111 1111	CANTCON 0000 0000	AUXR1 xxxx 00x0	CANMSG xxxx xxxx	CANTTCL 0000 0000	CANTTCH 0000 0000	WDTRST 1111 1111	WDTPRG xxxx x000	A7h
98h	SCON 0000 0000	SBUF 0000 0000		CANGIT 0x00 0000	CANTEC 0000 0000	CANREC 0000 0000		CKCON1 xxxx xxx0	9Fh
90h	P1 1111 1111								97h
88h	TCON 0000 0000	TMOD 0000 0000	TL0 0000 0000	TL1 0000 0000	TH0 0000 0000	TH1 0000 0000	AUXR X001 0100	CKCON 0000 0000	8Fh
80h	P0 1111 1111	SP 0000 0111	DPL 0000 0000	DPH 0000 0000				PCON 0000 0000	87h
	<b>0/8</b> <sup>(1)</sup>	1/9	2/A	3/B	4/C	5/D	6/E	7/F	

## Registers

### Table 48. CANGCON Register

CANGCON (S:ABh) CAN General Control Register

7	6	5	4	3	2	1	0		
ABRQ	OVRQ	TTC	SYNCTTC	AUTOBAUD	TEST	ENA	GRES		
Bit Number	Bit Mnemonic	Descripti	Description						
7	ABRQ	Not an au and DLC i communic	Abort Request Not an auto-resetable bit. A reset of the ENCH bit (message object control and DLC register) is done for each message object. The pending transmission communications are immediately aborted but the on-going communication will be terminated normally, setting the appropriate status flags, TXOK or RXOK.						
6	OVRQ	Auto-rese Set to ser	<b>Overload frame request (initiator)</b> Auto-resetable bit. Set to send an overload frame after the next received message. Cleared by the hardware at the beginning of transmission of the overload frame.						
5	ттс	set to sele	Network in Timer Trigger Communication set to select node in TTC. clear to disable TTC features.						
4	SYNCTTC	When this Frame. When this	Synchronization of TTC When this bit is set the TTC timer is caught on the last bit of the End Of Frame. When this bit is clear the TTC timer is caught on the Start Of Frame. This bit is only used in the TTC mode.						
3	AUTOBAUD	Set to acti	AUTOBAUD Set to activate listening mode. Clear to disable listening mode						
2	TEST	Test mode use.	Test mode. The test mode is intended for factory testing and not for customer use.						
1	ENA/STB	When this When this the CAN of message In the star receiver is During the	Enable/Standby CAN Controller When this bit is set, it enables the CAN controller and its input clock. When this bit is clear, the on-going communication is terminated normally an the CAN controller state of the machine is frozen (the ENCH bit of each message object does not change). In the standby mode, the transmitter constantly provides a recessive level; th receiver is not activated and the input clock is stopped in the CAN controller During the disable mode, the registers and the mailbox remain accessible. Note that two clock periods are needed to start the CAN controller state of th machine.						
0	GRES	Auto-rese	General Reset (software reset) Auto-resetable bit. This reset command is 'ORed' with the hardware reset in order to reset the controller. After a reset, the controller is disabled.						

Reset Value = 0000 0x00b





### Table 49. CANGSTA Register

CANGSTA (S:AAh Read Only) CAN General Status Register

7	6	5	4	3	2	1	0		
-	OVFG	-	TBSY	RBSY	ENFG	BOFF	ERRP		
Bit Number	Bit Mnemonic	Descriptio	Description						
7	-	Reserved The value	Reserved The values read from this bit is indeterminate. Do not set this bit.						
6	OVFG	This status is sent.	<b>Dverload Frame Flag</b> This status bit is set by the hardware as long as the produced overload frame s sent. This flag does not generate an interrupt						
5	-	Reserved The value	Reserved The values read from this bit is indeterminate. Do not set this bit.						
4	TBSY	This status generates bit is also	Transmitter Busy This status bit is set by the hardware as long as the CAN transmitter generates a frame (remote, data, overload or error frame) or an ack field. This bit is also active during an InterFrame Spacing if a frame must be sent. This flag does not generate an interrupt.						
3	RBSY	This status monitors a	Receiver Busy This status bit is set by the hardware as long as the CAN receiver acquires or monitors a frame. This flag does not generate an interrupt.						
2	ENFG	Because a bit gives the	Enable On-chip CAN Controller Flag Because an enable/disable command is not effective immediately, this status bit gives the true state of a chosen mode. This flag does not generate an interrupt.						
1	BOFF		Bus Off Mode see Figure 53						
0	ERRP		Error Passive Mode see Figure 53						

Reset Value = x0x0 0000b

AT89C51CC03 108

Downloaded from Elcodis.com electronic components distributor

### Table 50. CANGIT Register

#### CANGIT (S:9Bh) CAN General Interrupt

7	6	5	4	3	2	1	0			
CANIT	-	OVRTIM	OVRBUF	SERG	CERG	FERG	AERG			
Bit Number	Bit Mnemonic	Descripti	on							
7	CANIT	This statu interrupt c	eneral Interrupt Flag <sup>(1)</sup> his status bit is the image of all the CAN controller interrupts sent to the terrupt controller. can be used in the case of the polling method.							
6	-	Reserved The value	I s read from th	is bit is indete	rminate. Do n	ot set this bit.				
5	OVRTIM	This statu If the bit E	verrun CAN Timer his status bit is set when the CAN timer switches 0xFFFF to 0x0000. the bit ETIM in the IE1 register is set, an interrupt is generated. lear this bit in order to reset the interrupt.							
4	OVRBUF	0 - no inte 1 - IT turn This bit is Bit resetal	Overrun BUFFER - no interrupt. - IT turned on his bit is set when the buffer is full. Bit resetable by user. ee Figure 50.							
3	SERG	Detection	or General of more than t can generate a			•	y.			
2	CERG	The receiv from the s If this che set.	or General ver performs a start of frame u cking does no can generate a	p to the data t match with th	field. ne destuffed C	CRC field, a C	Ū.			
1	FERG	The form following I CRC delir acknowled end_of_fra	Form Error General The form error results from one or more violations of the fixed form in the following bit fields: CRC delimiter acknowledgment delimiter end_of_frame This flag can generate an interrupt. resetable by user.							
0	AERG	No detect	edgment Erro ion of the dom can generate a	inant bit in the	0					

Note: 1. This field is Read Only.





### Table 51. CANTEC Register

CANTEC (S:9Ch Read Only) CAN Transmit Error Counter

7	6	5	4	3	2	1	0
TEC7	TEC6	TEC5	TEC4	TEC3	TEC2	TEC1	TEC0
Bit Number	Bit Mnemonic	Descripti	on				
7-0	TEC7:0	Transmit see Figur	Error Counte e 53	er			

Reset Value = 00h

#### Table 52. CANREC Register

CANREC (S:9Dh Read Only) CAN Reception Error Counter

7	6	5	4	3	2	1	0		
REC7	REC6	REC5	REC4	REC3	REC2	REC1	REC0		
Bit Number	Bit Mnemonic	Descriptio	Description						
7-0	REC7:0	Reception see Figur	n Error Coun e 53	ter					

Reset Value = 00h



Downloaded from Elcodis.com electronic components distributor

### Table 53. CANGIE Register

CANGIE (S:C1h) CAN General Interrupt Enable

7	6	5	4	3	2	1	0				
-	-	ENRX	ENTX	ENERCH	ENBUF	ENERG	-				
Bit Number	Bit Mnemonic	c Descripti	on								
7-6	-	<b>Reserved</b> The value	Reserved The values read from these bits are indeterminate. Do not set these bits.								
5	ENRX	Enable R 0 - Disable 1 - Enable	-	upt							
4	ENTX	0 - Disable	<b>Enable Transmit Interrupt</b> 0 - Disable 1 - Enable								
3	ENERCH	Enable M 0 - Disable 1 - Enable	e	ct Error Interr	rupt						
2	ENBUF	Enable B 0 - Disable 1 - Enable	-								
1	ENERG	Enable G 0 - Disable 1 - Enable	-	Interrupt							
0	-	Reserved The value		s bit is indeter	minate. Do no	t set this bit.					

Note: See Figure 50

Reset Value = xx00 000xb





#### Table 54. CANEN1 Register

CANEN1 (S:CEh Read Only) CAN Enable Message Object Registers 1

7	6	5	4	3	2	1	0				
-	ENCH14	ENCH13	ENCH12	ENCH11	ENCH10	ENCH9	ENCH8				
Bit Number	Bit Mnemonio	c Descriptio	on								
7	-	<b>Reserved</b> The value	Reserved The values read from this bit is indeterminate. Do not set this bit.								
6-0	ENCH14:8	These bits It is set to Once TXC correspon MOb in dis 0 - messa reception. 1 - messa	one when the OK or RXOK is ding ENMOB sabled mode, ge object disa ge object ena resetable by r	ct availability of the MOb is enab as set to one (T is reset. ENM applying abor ubled: MOb av bled: MOb in u re-writing the (	led. XOK for autor OB is also set tion or standby ailable for a ne use.	to zero config y mode. ew transmissio	guring the				

Reset Value = x000 0000b **Table 55.** CANEN2 Register

CANEN2 (S:CFh Read Only) CAN Enable Message Object Registers 2

7	6	5	4	3	2	1	0				
ENCH7	ENCH6	ENCH5	ENCH4	ENCH3	ENCH2	ENCH1	ENCH0				
Bit Number	Bit Mnemonic	Descriptio	Description								
7-0	ENCH7:0	These bits It is set to Once TXC correspon MOb in dis 0 - messa reception. 1 - messa	one when the OK or RXOK is ding ENMOB sabled mode, ge object disa ge object ena resetable by r	availability of the MOb is enable MOb is enables set to one (The set to one (T	led. XOK for autor OB is also se tion or standb ailable for a n	t to zero config y mode. ew transmissi	guring the on or				

Reset Value = 0000 0000b

Downloaded from Elcodis.com electronic components distributor

#### Table 56. CANSIT1 Register

CANSIT1 (S:BAh Read Only) CAN Status Interrupt Message Object Registers 1

7	6	5	4	3	2	1	0				
-	SIT14	SIT13	SIT13 SIT12 SIT11 SIT10 SIT9 S								
Bit Number	Bit Mnemonie	Description	Description								
7	-	Reserved The value	teserved The values read from this bit is indeterminate. Do not set this bit.								
6-0	SIT14:8	0 - no inte 1 - IT turn	rrupt. ed on. Reset v 0b 0000 1001	•	ect condition is c essage objects		r.				

Reset Value = x000 0000b

#### Table 57. CANSIT2 Register

CANSIT2 (S:BBh Read Only)

CAN Status Interrupt Message Object Registers 2

7	6	5	4	3	2	1	0
SIT7	SIT6	SIT5	SIT4	SIT3	SIT2	SIT1	SIT0
Bit Number	Bit Mnemonie	c Description	on				
7-0	SIT7:0	0 - no inte 1 - IT turne	rrupt. ed on. Reset v b 0000 1001	•	ect condition is c ssage objects		ir.





#### Table 58. CANIE1 Register

CANIE1 (S:C2h) CAN Enable Interrupt Message Object Registers 1

7	6	5	4	3	2	1	0				
-	IECH14	IECH13	ECH13 IECH12 IECH11 IECH10 IECH9 IECH8								
Bit Number	Bit Mnemoni	c Description	Description								
7	-	<b>Reserved</b> The value	Reserved The values read from this bit is indeterminate. Do not set this bit.								
6-0	IECH14:8	0 - disable 1 - enable IECH14:8	Enable interrupt by Message Object 0 - disable IT. 1 - enable IT. IECH14:8 = 0b 0000 1100 -> Enable IT's of message objects 11 and 10. see Figure 50.								

Reset Value =  $x000\ 0000b$ 

#### Table 59. CANIE2 Register

CANIE2 (S:C3h) CAN Enable Interrupt Message Object Registers 2

7	6	5	4	3	2	1	0
IECH 7	IECH 6	IECH 5	IECH 4	IECH 3	IECH 2	IECH 1	IECH 0
Bit Number	Bit Mnemonic	Descripti	on				
7-0	IECH7:0	0 - disable 1 - enable	e IT. IT.	essage Objec 0 -> Enable IT		e objects 3 an	d 2.

Reset Value = 0000 0000b

#### Table 60. CANBT1 Register

CANBT1 (S:B4h) CAN Bit Timing Registers 1

7	6	5	4	3	2	1	0				
-	BRP 5	BRP 4	BRP 3	BRP 2	BRP 1	BRP 0	-				
Bit Number	Bit Mnemon	ic Descriptio	Description								
7	-	<b>Reserved</b> The value	eserved ne value read from this bit is indeterminate. Do not set this bit.								
6-1	BRP5:0	The period	Baud rate prescaler The period of the CAN controller system clock Tscl is programmable and determines the individual bit timing.								
			$Tscl = \frac{BRP[50] + 1}{Fcan}$								
0	-	Reserved The value		s bit is indeter	minate. Do no	t set this bit.					

Note: The CAN controller bit timing registers must be accessed only if the CAN controller is disabled with the ENA bit of the CANGCON register set to 0. See Figure 52.

No default value after reset.





#### Table 61. CANBT2 Register

#### CANBT2 (S:B5h) CAN Bit Timing Registers 2

7	6	5	4	3	2	1	0			
-	SJW 1	SJW 0	-	PRS 2	PRS 1	PRS 0	-			
Bit Number	Bit Mnemoni	c Descripti	on							
7	-	<b>Reserved</b> The value	eserved ne value read from this bit is indeterminate. Do not set this bit.							
6-5	SJW1:0	To compe controllers the curren The synch	Re-synchronization Jump Width o compensate for phase shifts between clock oscillators of different bus ontrollers, the controller must re-synchronize on any relevant signal edge of ne current transmission. The synchronization jump width defines the maximum number of clock cycles. I bit period may be shortened or lengthened by a re-synchronization. Tsjw = Tscl x (SJW [10] +1)							
4	-	<b>Reserved</b> The value		s bit is indeter	minate. Do no	ot set this bit.				
3-1	PRS2:0	This part of within the	Programming Time Segment This part of the bit time is used to compensate for the physical delay times within the network. It is twice the sum of the signal propagation time on the bus line, the input comparator delay and the output driver delay. Tprs = Tscl x (PRS[20] + 1)							
0	-		read from thi	s bit is indeter						

Note: The CAN controller bit timing registers must be accessed only if the CAN controller is disabled with the ENA bit of the CANGCON register set to 0. See Figure 52.

No default value after reset.

#### Table 62. CANBT3 Register

#### CANBT3 (S:B6h) CAN Bit Timing Registers 3

7	6	5	4	3	2	1	0				
-	PHS2 2	PHS2 1	PHS2 0	PHS1 2	PHS1 1	PHS10	SMP				
Bit Number	Bit Mnemonio	c Descriptio	Description								
7	-	<b>Reserved</b> The value	Reserved The value read from this bit is indeterminate. Do not set this bit.								
6-4	PHS2 2:0	This phase be shorter Phase seg	Phase Segment 2 This phase is used to compensate for phase edge errors. This segment can e shortened by the re-synchronization jump width. Tphs2 = Tscl x (PHS2[20] + 1) Phase segment 2 is the maximum of Phase segment 1 and the Information Processing Time (= 2TQ).								
3-1	PHS1 2:0	This phase	Phase Segment 1 This phase is used to compensate for phase edge errors. This segment can be lengthened by the re-synchronization jump width. Tphs1 = Tscl x (PHS1[20] + 1)								
0	SMP	0 - once, a 1 - three ti over a dis	Sample Type 0 - once, at the sample point. 1 - three times, the threefold sampling of the bus is the sample point and twice over a distance of a 1/2 period of the Tscl. The result corresponds to the majority decision of the three values.								

Note: The CAN controller bit timing registers must be accessed only if the CAN controller is disabled with the ENA bit of the CANGCON register set to 0. See Figure 52.

No default value after reset.





#### Table 63. CANPAGE Register

CANPAGE (S:B1h) CAN Message Object Page Register

7	6	5	4	3	2	1	0				
CHNB 3	CHNB 2	CHNB 1	CHNB 1 CHNB 0 AINC INDX2 INDX1 INDX								
Bit Number	Bit Mnemonio	Description	Description								
7-4	CHNB3:0		Selection of Message Object Number The available numbers are: 0 to 14 (see Figure 48).								
3	AINC	0 - auto-in	Auto Increment of the Index (active low) 0 - auto-increment of the index (default value). 1 - non-auto-increment of the index.								
2-0	INDX2:0	<b>Index</b> Byte locat	Index Byte location of the data field for the defined message object (see Figure 48).								

Reset Value = 0000 0000b

#### Table 64. CANCONCH Register

#### CANCONCH (S:B3h)

CAN Message Object Control and DLC Register

7	6	5	4	3	2	1	0				
CONCH 1	CONCH 0	RPLV	RPLV IDE DLC 3 DLC 2 DLC 1 DLC 0								
Bit Number	Bit Mnemonic	Descripti	Description								
		Configuration of Message Object <u>CONCH1</u> <u>CONCH0</u> 0 0: disable									

7-6	CONCH1:0	CONCH1 CONCH0         0       0: disable         0       1: Launch transmission         1       0: Enable Reception         1       1: Enable Reception Buffer         Note: The user must re-write the configuration to enable the corresponding bit in the CANEN1:2 registers.
5	RPLV	<b>Reply Valid</b> Used in the automatic reply mode after receiving a remote frame 0 - reply not ready. 1 - reply ready and valid.
4	IDE	Identifier Extension 0 - CAN standard rev 2.0 A (ident = 11 bits). 1 - CAN standard rev 2.0 B (ident = 29 bits).
3-0	DLC3:0	Data Length Code Number of Bytes in the data field of the message. The range of DLC is from 0 up to 8. This value is updated when a frame is received (data or remote frame). If the expected DLC differs from the incoming DLC, a warning appears in the CANSTCH register.

No default value after reset

### Table 65. CANSTCH Register

#### CANSTCH (S:B2h) CAN Message Object Status Register

7	6	5	4	3	2	1	0				
DLCW	ТХОК	RXOK	BERR	SERR	CERR	FERR	AERR				
Bit Number	Bit Mnemonic	Descripti	Description								
7	DLCW	The incom	Data Length Code Warning The incoming message does not have the DLC expected. Whatever the frame ype, the DLC field of the CANCONCH register is updated by the received DLC.								
6	тхок	The comn When the are enable supplied fi	Fransmit OK The communication enabled by transmission is completed. When the controller is ready to send a frame, if two or more message objects are enabled as producers, the lower index message object (0 to 13) is supplied first. This flag can generate an interrupt.								
5	RXOK	The comm In the cas message	Receive OK the communication enabled by reception is completed. In the case of two or more message object reception hits, the lower index nessage object (0 to 13) is updated first. This flag can generate an interrupt.								
4	BERR	The bit va Exception the monito and the ad error fram	<b>Bit Error (Only in Transmission)</b> The bit value monitored is different from the bit value sent. Exceptions: the monitored recessive bit sent as a dominant bit during the arbitration field and the acknowledge slot detecting a dominant bit during the sending of an error frame. This flag can generate an interrupt.								
3	SERR			five consecuti an interrupt.	ve bits with th	e same polari	ty.				
2	CERR	The receiv from the s If this che set.	<b>CRC Error</b> The receiver performs a CRC check on each destuffed received message from the start of frame up to the data field. If this checking does not match with the destuffed CRC field, a CRC error is								
1	FERR	The form following to CRC delin acknowled end_of_fra	Form Error The form error results from one or more violations of the fixed form in the following bit fields: CRC delimiter acknowledgment delimiter end_of_frame This flag can generate an interrupt.								
0	AERR	No detect	edgment Erro ion of the dom can generate a	ninant bit in the	e acknowledg	e slot.					

Note: See Figure 50.

No default value after reset.





#### Table 66. CANIDT1 Register for V2.0 part A

CANIDT1 for V2.0 part A (S:BCh) CAN Identifier Tag Registers 1

7	6	5	4	3	2	1	0			
IDT 10	IDT 9	IDT 8	IDT 8 IDT 7 IDT 6 IDT 5 IDT 4 IDT 3							
Bit Number	Bit Mnemonic	Descripti	on							
7-0	IDT10:3	IDentifier See Figur	<b>tag value</b> e 54.							

No default value after reset.

#### Table 67. CANIDT2 Register for V2.0 part A

CANIDT2 for V2.0 part A (S:BDh) CAN Identifier Tag Registers 2

7	6	5	4	3	2	1	0
IDT 2	IDT 1	IDT 0	-	-	-	-	-
Bit Number	Bit Mnemonic	Descriptio	on				
7-5	IDT2:0	IDentifier See Figure	tag value				

The values read from these bits are indeterminate. Do not set these bits.

No default value after reset.

4-0

Table 68. CANIDT3 Register for V2.0 part A

Reserved

CANIDT3 for V2.0 part A (S:BEh) CAN Identifier Tag Registers 3

7	6	5	4	3	2	1	0				
-	-	-	· · · · · · ·								
Bit Number	Bit Mnemonio	Descripti	Description								
7-0	-		Reserved The values read from these bits are indeterminate. Do not set these bits.								

No default value after reset.

Downloaded from Elcodis.com electronic components distributor

#### Table 69. CANIDT4 Register for V2.0 part A

CANIDT4 for V2.0 part A (S:BFh) CAN Identifier Tag Registers 4

7	6	5	4	3	2	1	0				
-	-	-	-	-	RTRTAG	-	RB0TAG				
Bit Number	Bit Mnemoni	c Descripti	Description								
7-3	-		Reserved The values read from these bits are indeterminate. Do not set these bits.								
2	RTRTAG	Remote T	Remote Transmission Request Tag Value.								
1	-		Reserved The values read from this bit are indeterminate. Do not set these bit.								
0	RB0TAG	Reserved	Reserved Bit 0 Tag Value.								

No default value after reset.

#### Table 70. CANIDT4 Register for V2.0 part A

CANIDT1 for V2.0 part B (S:BCh) CAN Identifier Tag Registers 1

7	6	5	4	3	2	1	0		
IDT 28	IDT 27	IDT 26	IDT 25	IDT 24	IDT 23	IDT 22	IDT 21		
Bit Number	Bit Mnemonic	Descripti	Description						
7-0	IDT28:21	IDentifier See Figur	Tag Value						

No default value after reset.

#### Table 71. CANIDT2 Register for V2.0 part B

CANIDT2 for V2.0 part B (S:BDh) CAN Identifier Tag Registers 2

7	6	5	4	3	2	1	0			
IDT 20	IDT 19	IDT 18	IDT 17	IDT 16	IDT 15	IDT 14	IDT 13			
Bit Number	Bit Mnemonic	Descripti	Description							
7-0	IDT20:13	IDentifier See Figur	<b>Tag Value</b> e 54.							

No default value after reset.





#### Table 72. CANIDT3 Register for V2.0 part B

CANIDT3 for V2.0 part B (S:BEh) CAN Identifier Tag Registers 3

7	6	5	4	3	2	1	0
IDT 12	IDT 11	IDT 10	IDT 9	IDT 8	IDT 7	IDT 6	IDT 5
Bit Number	Bit Mnemonic	Descripti	on				
7-0	IDT12:5	IDentifier See Figur	<b>Tag Value</b> e 54.				

No default value after reset.

#### Table 73. CANIDT4 Register for V2.0 part B

CANIDT4 for V2.0 part B (S:BFh) CAN Identifier Tag Registers 4

7	6	5	4	3	2	1	0			
IDT 4	IDT 3	IDT 2	IDT 2 IDT 1 IDT 0 RTRTAG RB1TAG RB0TAG							
Bit Number	Bit Mnemonie	Descripti	Description							
7-3	IDT4:0		IDentifier Tag Value See Figure 54.							
2	RTRTAG	Remote T	ransmission	Request Tag	Value					
1	RB1TAG	Reserved	Reserved bit 1 Tag Value							
0	RB0TAG	Reserved	Reserved bit 0 Tag Value							

No default value after reset.

#### Table 74. CANIDM1 Register for V2.0 part A

CANIDM1 for V2.0 part A (S:C4h) CAN Identifier Mask Registers 1

7	6	5	4	3	2	1	0
IDMSK 10	IDMSK 9	IDMSK 8	IDMSK 7	IDMSK 6	IDMSK 5	IDMSK 4	IDMSK 3
Bit Number	Bit Mnemonie	c Descripti	on				
7-0	IDTMSK10:3	0 - compa	mask value rison true forc aparison enable e 54.				

No default value after reset.

#### Table 75. CANIDM2 Register for V2.0 part A

CANIDM2 for V2.0 part A (S:C5h) CAN Identifier Mask Registers 2

7	6	5	4	3	2	1	0			
IDMSK 2	IDMSK 1	IDMSK 0	-	-	-	-	-			
Bit Number	Bit Mnemoni	c Descripti	on							
7-5	IDTMSK2:0	0 - compa 1 - bit com	Dentifier Mask Value ) - comparison true forced. I - bit comparison enabled. See Figure 54.							
4-0	-	Reserved The value		iese bits are ii	ndeterminate.	Do not set the	ese bits.			

No default value after reset.

#### Table 76. CANIDM3 Register for V2.0 part A

CANIDM3 for V2.0 part A (S:C6h) CAN Identifier Mask Registers 3

7	6	5	4	3	2	1	0			
-	-	-	-	-	-	-	-			
Bit Number	Bit Mnemonio	c Descripti	Description							
7-0	-	<b>Reserved</b> The value	<b>Reserved</b> The values read from these bits are indeterminate.							

No default value after reset.





#### Table 77. CANIDM4 Register for V2.0 part A

CANIDM4 for V2.0 part A (S:C7h) CAN Identifier Mask Registers 4

7	6	5	4	3	2	1	0				
-	-	-	-	-	RTRMSK	-	IDEMSK				
Bit Number	Bit Mnemoni	c Descripti	Description								
7-3	-	<b>Reserved</b> The value	Reserved The values read from these bits are indeterminate. Do not set these bits.								
2	RTRMSK	0 - compa	Remote Transmission Request Mask Value ) - comparison true forced. 1 - bit comparison enabled.								
1	-		Reserved The value read from this bit is indeterminate. Do not set this bit.								
0	IDEMSK	0 - compa	Extension M rison true force aparison enab	ed.							

Note: The ID Mask is only used for reception.

No default value after reset.

#### Table 78. CANIDM1 Register for V2.0 part B

CANIDM1 for V2.0 part B (S:C4h) CAN Identifier Mask Registers 1

7	6	5	4	3	2	1	0
IDMSK 28	IDMSK 27	IDMSK 26	IDMSK 25	IDMSK 24	IDMSK 23	IDMSK 22	IDMSK 21
Bit Number	Bit Mnemon	ic Descripti	on				
7-0	IDMSK28:2	0 - compa	Mask Value rison true forc parison enab e 54.				

Note: The ID Mask is only used for reception.

No default value after reset.

124 AT89C51CC03

Downloaded from Elcodis.com electronic components distributor

#### Table 79. CANIDM2 Register for V2.0 part B

CANIDM2 for V2.0 part B (S:C5h) CAN Identifier Mask Registers 2

7	6	5	4	3	2	1	0
IDMSK 20	IDMSK 19	IDMSK 18	IDMSK 17	IDMSK 16	IDMSK 15	IDMSK 14	IDMSK 13
Bit Number	Bit Mnemon	ic Descripti	on				
7-0	IDMSK20:1	3 0 - compa	Mask Value rison true forc aparison enab e 54.				

Note: The ID Mask is only used for reception.

No default value after reset.

#### Table 80. CANIDM3 Register for V2.0 part B

CANIDM3 for V2.0 part B (S:C6h) CAN Identifier Mask Registers 3

7	6	5	4	3	2	1	0
IDMSK 12	IDMSK 11	IDMSK 10	IDMSK 9	IDMSK 8	IDMSK 7	IDMSK 6	IDMSK 5
Bit Number	Bit Mnemon	ic Descriptio	on				
7-0	IDMSK12:5	0 - compa	Mask Value rison true forc aparison enable 54.				

Note: The ID Mask is only used for reception.

No default value after reset.





#### Table 81. CANIDM4 Register for V2.0 part B

CANIDM4 for V2.0 part B (S:C7h) CAN Identifier Mask Registers 4

7	6	5	4	3	2	1	0			
IDMSK 4	IDMSK 3	IDMSK 2	IDMSK 1	IDMSK 0	RTRMSK	-	IDEMSK			
Bit Number	Bit Mnemon	ic Descriptio	Description							
7-3	IDMSK4:0	0 - compa 1 - bit com	Dentifier Mask Value - comparison true forced. - bit comparison enabled. ee Figure 54.							
2	RTRMSK	0 - compa	ransmission rison true forc aparison enab		sk Value					
1	-		Reserved The value read from this bit is indeterminate. Do not set this bit.							
0	IDEMSK	0 - compa	Extension M rison true forc aparison enab	ed.						

Note: The ID Mask is only used for reception.

No default value after reset.

#### Table 82. CANMSG Register

CANMSG (S:A3h) CAN Message Data Register

7	6	5	4	3	2	1	0
MSG 7	MSG 6	MSG 5	MSG 4	MSG 3	MSG 2	MSG 1	MSG 0
Bit Number	Bit Mnemonic	Descriptio	on				
7-0	MSG7:0	object reg After writir specified r index. If a reading cy	ter contains the ister. Ing in the page message loca uto-increment rcle, the mailb	message obj tion (in the ma ation is used,	a byte pointed ect register, th ailbox) of the p at the end of t auto-incremen , 7, 0,)	is byte is equ re-defined ide he data regis	al to the entifier + ter writing or

No default value after reset.

# AT89C51CC03

#### Table 83. CANTCON Register

#### CANTCON (S:A1h) CAN Timer ClockControl

7	6	5	4	3	2	1	0
<b>TPRESC 7</b>	TPRESC 6	<b>TPRESC 5</b>	<b>TPRESC 4</b>	<b>TPRESC 3</b>	<b>TPRESC 2</b>	<b>TPRESC 1</b>	TPRESC 0
Bit Number	Bit Mnemon	ic Descripti	on				
7-0	TPRESC7:(	This regis	to 255.		in timer upper	counter	

Reset Value = 00h

#### Table 84. CANTIMH Register

CANTIMH (S:ADh) CAN Timer High

7	6	5	4	3	2	1	0
CANGTIM 15	CANGTIM 14	CANGTIM 13	CANGTIM 12	CANGTIM 11	CANGTIM 10	CANGTIM 9	CANGTIM 8
Bit Number	Bit Mnemonic	Description	on				
7-0	CANGTIM15: 8	High byte See Figur	e <b>of Message</b> e 55.	Timer			

Reset Value = 0000 0000b

#### Table 85. CANTIML Register

CANTIML (S:ACh) CAN Timer Low

7	6	5	4	3	2	1	0
CANGTIM 7	CANGTIM 6	CANGTIM 5	CANGTIM 4	CANGTIM 3	CANGTIM 2	CANGTIM 1	CANGTIM 0
Bit Number	Bit Mnemonic	Descripti	on				
7-0	CANGTIM7:0	Low byte See Figur	of Message <sup>-</sup> e 55.	Timer			





#### Table 86. CANSTMPH Register

CANSTMPH (S:AFh Read Only) CAN Stamp Timer High

7	6	5	4	3	2	1	0		
TIMSTMP 15	TIMSTMP 14	TIMSTMP 13	TIMSTMP 12	TIMSTMP 11	TIMSTMP 10	TIMSTMP 9	TIMSTMP 8		
Bit Number	Bit Mnemoni	c Descriptio	Description						
7-0	TIMSTMP15 8	: High byte See Figure	e of Time Star e 55.	np					

No default value after reset

#### Table 87. CANSTMPL Register

CANSTMPL (S:AEh Read Only) CAN Stamp Timer Low

7	6	5	4	3	2	1	0
TIMSTMP 7	TIMSTMP 6	TIMSTMP 5	TIMSTMP 4	TIMSTMP 3	TIMSTMP 2	TIMSTMP 1	TIMSTMP 0
Bit Number	Bit Mnemoni	c Descriptio	on				
7-0	TIMSTMP7:	D Low byte See Figure	of Time Stan e 55.	np			

No default value after reset

#### Table 88. CANTTCH Register

CANTTCH (S:A5h Read Only) CAN TTC Timer High

7	6	5	5 4 3 2 1 0						
TIMTTC 15	TIMTTC 14	TIMTTC 13	TIMTTC 12	TIMTTC 11	TIMTTC 10	TIMTTC 9	TIMTTC 8		
Bit Number	Bit Mnemoni	c Descripti	Description						
7-0	TIMTTC15:8	B High byte See Figur	e of TTC Time e 55.	r					

# AT89C51CC03

Table 89. CANTTCL Register

CANTTCL (S:A4h Read Only) CAN TTC Timer Low

7	6	5	4	3	2	1	0	
TIMTTC 7	TIMTTC 6	TIMTTC 5	TIMTTC 4	TIMTTC 3	TIMTTC 2	TIMTTC 1	TIMTTC 0	
Bit Number	Bit Mnemoni	c Descripti	Description					
7-0	TIMTTC7:0	Low byte See Figur	of TTC Time e 55.	r				



# Serial Port Interface (SPI)


The Serial Peripheral Interface Module (SPI) allows full-duplex, synchronous, serial communication between the MCU and peripheral devices, including other MCUs.

# Features

- Features of the SPI Module include the following:
- Full-duplex, three-wire synchronous transfers
- Master or Slave operation
- Six programmable Master clock rates in master mode
- Serial clock with programmable polarity and phase
- Master Mode fault error flag with MCU interrupt capability

**Signal Description** Figure 57 shows a typical SPI bus configuration using one Master controller and many Slave peripherals. The bus is made of three wires connecting all the devices.

Figure 57. SPI Master/Slaves Interconnection

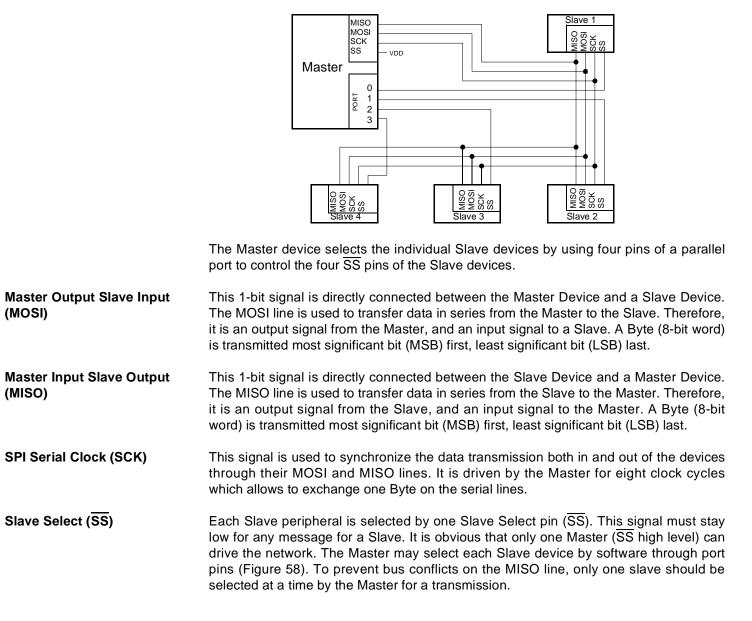

In a Master configuration, the  $\overline{SS}$  line can be used in conjunction with the MODF flag in the SPI Status register (SPSCR) to prevent multiple masters from driving MOSI and SCK (see Error conditions).

A high level on the  $\overline{SS}$  pin puts the MISO line of a Slave SPI in a high-impedance state.

The SS pin could be used as a general-purpose if the following conditions are met:

- The device is configured as a Master and the SSDIS control bit in SPCON is set. This kind of configuration can be found when only one Master is driving the network and there is no way that the SS pin could be pulled low. Therefore, the MODF flag in the SPSCR will never be set<sup>(1)</sup>.
- The Device is configured as a Slave with CPHA and SSDIS control bits set<sup>(2)</sup>. This kind of configuration can happen when the system includes one Master and one Slave only. Therefore, the device should always be selected and there is no reason that the Master uses the SS pin to select the communicating Slave device.
- Note: 1. Clearing SSDIS control bit does not clear MODF.
  - 2. Special care should be taken not to set SSDIS control bit when CPHA ='0' because in this mode, the  $\overline{SS}$  is used to start the transmission.

In Master mode, the baud rate can be selected from a baud rate generator which is controlled by three bits in the SPCON register: SPR2, SPR1 and SPR0. The Master clock is selected from one of seven clock rates resulting from the division of the internal clock by 4, 8, 16, 32, 64 or 128.

Table 90 gives the different clock rates selected by SPR2:SPR1:SPR0.

In Slave mode, the maximum baud rate allowed on the SCK input is limited to F<sub>svs</sub>/4

SPR2	SPR1	SPR0	Clock Rate	Baud Rate Divisor (BD)
0	0	0	Don't Use	No BRG
0	0	1	F <sub>CLK PERIPH</sub> /4	4
0	1	0	F <sub>CLK PERIPH</sub> /8	8
0	1	1	F <sub>CLK PERIPH</sub> /16	16
1	0	0	F <sub>CLK PERIPH</sub> /32	32
1	0	1	F <sub>CLK PERIPH</sub> /64	64
1	1	0	F <sub>CLK PERIPH</sub> /128	128
1	1	1	Don't Use	No BRG

#### Table 90. SPI Master Baud Rate Selection




**Baud Rate** 



Functional Description Figure 58 shows a detailed structure of the SPI Module.

Figure 58. SPI Module Block Diagram

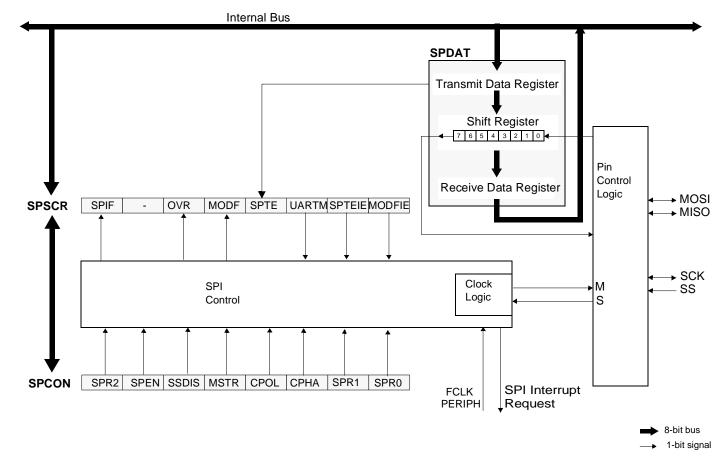

#### **Operating Modes**

The Serial Peripheral Interface can be configured in one of the two modes: Master mode or Slave mode. The configuration and initialization of the SPI Module is made through two registers:


- The Serial Peripheral Control register (SPCON)
- The Serial Peripheral Status and Control Register (SPSCR)


Once the SPI is configured, the data exchange is made using:

The Serial Peripheral DATa register (SPDAT)

During an SPI transmission, data is simultaneously transmitted (shifted out serially) and received (shifted in serially). A serial clock line (SCK) synchronizes shifting and sampling on the two serial data lines (MOSI and MISO). A Slave Select line (SS) allows individual selection of a Slave SPI device; Slave devices that are not selected do not interfere with SPI bus activities.

When the Master device transmits data to the Slave device via the MOSI line, the Slave device responds by sending data to the Master device via the MISO line. This implies full-duplex transmission with both data out and data in synchronized with the same clock (Figure 59).



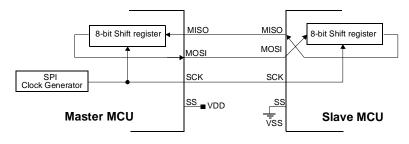


Master Mode	The SPI operates in Master mode when the Master bit, MSTR <sup>(1)</sup> , in the SPCON register is set. Only one Master SPI device can initiate transmissions. Software begins the trans- mission from a Master SPI Module by writing to the Serial Peripheral Data Register (SPDAT). If the shift register is empty, the Byte is immediately transferred to the shift register. The Byte begins shifting out on MOSI pin under the control of the serial clock, SCK. Simultaneously, another Byte shifts in from the Slave on the Master's MISO pin. The transmission ends when the Serial Peripheral transfer data flag, SPIF, in SPSCR becomes set. At the same time that SPIF becomes set, the received Byte from the Slave is transferred to the receive data register in SPDAT. Software clears SPIF by reading the Serial Peripheral Status register (SPSCR) with the SPIF bit set, and then reading the SPDAT.
Slave Mode	The SPI operates in Slave mode when the Master bit, MSTR $^{(2)}$ , in the SPCON register is cleared. Before a data transmission occurs, the Slave Select pin, $\overline{SS}$ , of the Slave device must be set to'0'. $\overline{SS}$ must remain low until the transmission is complete.
	In a Slave SPI Module, data enters the shift register under the control of the SCK from the Master SPI Module. After a Byte enters the shift register, it is immediately transferred to the receive data register in SPDAT, and the SPIF bit is set. To prevent an overflow condition, Slave software must then read the SPDAT before another Byte enters the shift register <sup>(3)</sup> . A Slave SPI must complete the write to the SPDAT (shift register) at least one bus cycle before the Master SPI starts a transmission. If the write to the data register is late, the SPI transmits the data already in the shift register from the previous transmission.
Transmission Formats	Software can select any of four combinations of serial clock (SCK) phase and polarity using two bits in the SPCON: the Clock Polarity (CPOL <sup>(4)</sup> ) and the Clock Phase (CPHA <sup>4</sup> ). CPOL defines the default SCK line level in idle state. It has no significant effect on the transmission format. CPHA defines the edges on which the input data are sampled and the edges on which the output data are shifted (Figure 60 and Figure 61). The clock phase and polarity should be identical for the Master SPI device and the communicating Slave device.
	<ol> <li>The SPI Module should be configured as a Master before it is enabled (SPEN set). Also, the Master SPI should be configured before the Slave SPI.</li> </ol>
	<ol> <li>The SPI Module should be configured as a Slave before it is enabled (SPEN set).</li> <li>The maximum frequency of the SCK for an SPI configured as a Slave is the bus clock speed.</li> </ol>
	4. Before writing to the CPOL and CPHA bits, the SPI should be disabled (SPEN ='0').









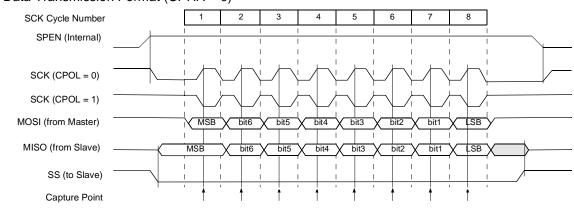

#### Figure 61. Data Transmission Format (CPHA = 1)

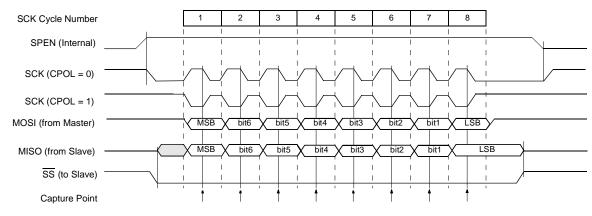

### Figure 62. CPHA/SS Timing



As shown in Figure 60, the first SCK edge is the MSB capture strobe. Therefore, the Slave must begin driving its data before the first SCK edge, and a falling edge on the  $\overline{SS}$  pin is used to start the transmission. The  $\overline{SS}$  pin must be toggled high and then low between each Byte transmitted (Figure 62).

Figure 61 shows an SPI transmission in which CPHA is '1'. In this case, the Master begins driving its MOSI pin on the first SCK edge. Therefore, the Slave uses the first SCK edge as a start transmission signal. The SS pin can remain low between transmissions (Figure 62). This format may be preferred in systems having only one Master and only one Slave driving the MISO data line.


*Queuing transmission* For an SPI configured in master or slave mode, a queued data byte must be transmitted/received immediately after the previous transmission has completed.

When a transmission is in progress a new data can be queued and sent as soon as transmission has been completed. So it is possible to transmit bytes without latency, useful in some applications.

The SPTE bit in SPSCR is set as long as the transmission buffer is free. It means that the user application can write SPDAT with the data to be transmitted until the SPTE becomes cleared.

Figure 63 shows a queuing transmission in master mode. Once the Byte 1 is ready, it is immediately sent on the bus. Meanwhile an other byte is prepared (and the SPTE is cleared), it will be sent at the end of the current transmission. The next data must be ready before the end of the current transmission.



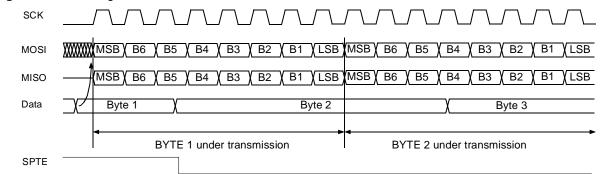

In slave mode it is almost the same except it is the external master that start the transmission.

Also, in slave mode, if no new data is ready, the last value received will be the next data byte transmitted.





#### **Error Conditions**

The following flags in the SPSCR register indicate the SPI error conditions:

Mode Fault Error (MODF)


Mode Fault error in Master mode SPI indicates that the level on the Slave Select ( $\overline{SS}$ ) pin is inconsistent with the actual mode of the device.


• Mode fault detection in Master mode:


MODF is set to warn that there may be a multi-master conflict for system control. In this case, the SPI system is affected in the following ways:

- An SPI receiver/error CPU interrupt request is generated
- The SPEN bit in SPCON is cleared. This disables the SPI
- The MSTR bit in SPCON is cleared

Clearing the MODF bit is accomplished by a read of SPSCR register with MODF bit set, followed by a write to the SPCON register. SPEN Control bit may be restored to its original set state after the MODF bit has been cleared.



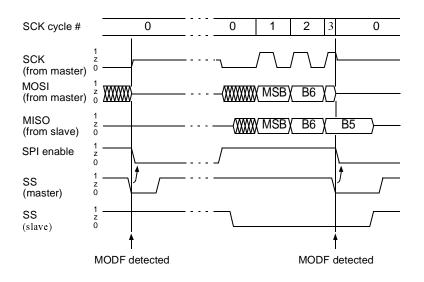



Mode fault detection in Slave mode

In slave mode, the MODF error is detected when SS goes high during a transmission. A transmission begins when SS goes low and ends once the incoming SCK goes back to its idle level following the shift of the eighteen data bit.

A MODF error occurs if a slave is selected (SS is low) and later unselected (SS is high) even if no SCK is sent to that slave.

At any time, a '1' on the SS pin of a slave SPI puts the MISO pin in a high impedance state and internal state counter is cleared. Also, the slave SPI ignores all incoming SCK clocks, even if it was already in the middle of a transmission. A new transmission will be performed as soon as SS pin returns low.

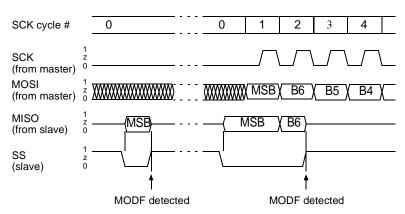


Figure 65. Mode Fault Conditions in Slave Mode

Note: when SS is discarded (SS disabled) it is not possible to detect a MODF error in slave mode because the SPI is internally selected. Also the SS pin becomes a general purpose I/O.

*OverRun Condition* This error mean that the speed is not adapted for the running application:

An OverRun condition occurs when a byte has been received whereas the previous one has not been read by the application yet.

The last byte (which generate the overrun error) does not overwrite the unread data so that it can still be read. Therefore, an overrun error always indicates the loss of data.

Interrupts

Three SPI status flags can generate a CPU interrupt requests:

#### Table 91. SPI Interrupts

Flag	Request
SPIF (SPI data transfer)	SPI Transmitter Interrupt Request
MODF (Mode Fault)	SPI mode-fault Interrupt Request
SPTE (Transmit register empty)	SPI transmit register empty Interrupt Request

Serial Peripheral data transfer flag, SPIF: This bit is set by hardware when a transfer has been completed. SPIF bit generates transmitter CPU interrupt request only when SPTEIE is disabled.

Mode Fault flag, MODF: This bit is set to indicate that the level on the  $\overline{SS}$  is inconsistent with the mode of the SPI (in both master and slave modes).


Serial Peripheral Transmit Register empty flag, SPTE: This bit is set when the transmit buffer is empty (other data can be loaded is SPDAT). SPTE bit generates transmitter CPU interrupt request only when SPTEIE is enabled.

Note: While using SPTE interruption for "burst mode" transfers (SPTEIE='1'), the user software application should take care to clear SPTEIE, during the last but one data reception (to be able to generate an interrupt on SPIF flag at the end of the last data reception).





#### Figure 66. SPI Interrupt Requests Generation

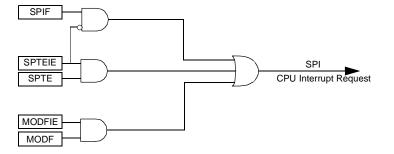

#### Registers

Serial Peripheral Control Register (SPCON)

- Three registers in the SPI module provide control, status and data storage functions. These registers are describe in the following paragraphs.
- The Serial Peripheral Control Register does the following:
- Selects one of the Master clock rates
- Configure the SPI Module as Master or Slave
- Selects serial clock polarity and phase
- Enables the SPI Module
- Frees the SS pin for a general-purpose

Table 92 describes this register and explains the use of each bit

#### Table 92. SPCON Register

SPCON - Serial Peripheral Control Register (0D4H)

7	6	5	4 3 2 1 0						
SPR2	SPEN	SSDIS	MSTR CPOL CPHA SPR1 SPF						
Bit Number	Bit Mne	emonic [	Description						
7	SF	PR2 E	Serial Peripheral Rate 2 Bit with SPR1 and SPR0 define the clock rate (See bits SPR1 and SPR0 for detail).						
6	SF	PEN C	Serial Peripheral Enable Cleared to disable the SPI interface (internal reset of the SPI). Set to enable the SPI interface.						
5	ss	DIS g	SS Disable         Cleared to enable SS in both Master and Slave modes.         Set to disable SS in both Master and Slave modes. In Slave mode, this bit has no effect if CPHA ='0'. When SSDIS is set, no MODF interrupt request is generated.						
4	MS	STR C	Serial Periphe Cleared to con Set to configure	figure the SPI					

Bit Number	Bit Mnemonic	Descri	iption				
3	CPOL	Cleare	Clock Polarity Cleared to have the SCK set to '0' in idle state. Set to have the SCK set to '1' in idle state.				
2	СРНА	Clock Phase Cleared to have the data sampled when the SCK leaves the idle state (see CPOL). Set to have the data sampled when the SCK returns to idle state (see CPOL).					
1	SPR1	<b>SPR2</b> 0 0 0	<u>SPR1</u> 0 0 1	<b>SPR0</b> 0 1 0	Serial Peripheral Rate Invalid F <sub>CLK PERIPH</sub> /4 F <sub>CLK PERIPH</sub> /8		
0	SPR0	0 1 1 1 1	1 0 0 1 1	1 0 1 0 1	F <sub>CLK PERIPH</sub> /16 F <sub>CLK PERIPH</sub> /32 F <sub>CLK PERIPH</sub> /64 F <sub>CLK PERIPH</sub> /128 Invalid		

Reset Value = 0001 0100b

Not bit addressable

Serial Peripheral Status Register The Serial Peripheral Status Register contains flags to signal the following conditions:

and Control (SPSCR)

- Data transfer complete
- Write collision
- Inconsistent logic level on SS pin (mode fault error)

#### Table 93. SPSCR Register

SPSCR - Serial Peripheral Status and Control register (0D5H)

7	6	5	5 4 3 2 1 0							
SPIF	-	OVR	MODF	SPTE	UARTM	SPTEIE	MODFIE			
Bit Number	Bit Mnemonic	Description	Description							
7	SPIF	Cleared by ha approved by Set by hardw	Serial Peripheral Data Transfer Flag Cleared by hardware to indicate data transfer is in progress or has been approved by a clearing sequence. Set by hardware to indicate that the data transfer has been completed. This bit is cleared when reading or writing SPDATA after reading SPSCR.							
6	-	<b>Reserved</b> The value rea	<b>Reserved</b> The value read from this bit is indeterminate. Do not set this bit.							
5	OVR	Overrun Error Flag - Set by hardware when a byte is received whereas SPIF is set (the previous received data is not overwritten). - Cleared by hardware when reading SPSCR								





Bit Number	Bit Mnemonic	Description
4	MODF	Mode Fault         - Set by hardware to indicate that the SS pin is in inappropriate logic level (in both master and slave modes).         - Cleared by hardware when reading SPSCR         When MODF error occurred:         - In slave mode: SPI interface ignores all transmitted data while SS remains high.         A new transmission is perform as soon as SS returns low.         - In master mode: SPI interface is disabled (SPEN=0, see description for SPEN bit in SPCON register).
3	SPTE	Serial Peripheral Transmit register Empty - Set by hardware when transmit register is empty (if needed, SPDAT can be loaded with another data) Cleared by hardware when transmit register is full (no more data should be loaded in SPDAT).
2	UARTM	Serial Peripheral UART mode Set and cleared by software: - Clear: Normal mode, data are transmitted MSB first (default) - Set: UART mode, data are transmitted LSB first.
1	SPTEIE	Interrupt Enable for SPTE Set and cleared by software: - Set to enable SPTE interrupt generation (when SPTE goes high, an interrupt is generated). - Clear to disable SPTE interrupt generation Caution: When SPTEIE is set no interrupt generation occurred when SPIF flag goes high. To enable SPIF interrupt again, SPTEIE should be cleared.
0	MODFIE	Interrupt Enable for MODF Set and cleared by software: - Set to enable MODF interrupt generation - Clear to disable MODF interrupt generation

Reset Value = 00X0 XXXXb

Not Bit addressable

Serial Peripheral DATa Register The Serial Peripheral Data Register (Table 94) is a read/write buffer for the receive data (SPDAT) register. A write to SPDAT places data directly into the shift register. No transmit buffer is available in this model.

> A Read of the SPDAT returns the value located in the receive buffer and not the content of the shift register.

#### Table 94. SPDAT Register

SPDAT - Serial Peripheral Data Register (0C5H)

7	6	5	4	3	2	1	0
R7	R6	R5	R4	R3	R2	R1	R0

Reset Value = Indeterminate

R7:R0: Receive data bits

AT89C51CC03 140

Downloaded from Elcodis.com electronic components distributor

SPCON, SPSTA and SPDAT registers may be read and written at any time while there is no on-going exchange. However, special care should be taken when writing to them while a transmission is on-going:

- Do not change SPR2, SPR1 and SPR0
- Do not change CPHA and CPOL
- Do not change MSTR
- Clearing SPEN would immediately disable the peripheral
- Writing to the SPDAT will cause an overflow.





# Programmable Counter Array (PCA)

The PCA provides more timing capabilities with less CPU intervention than the standard timer/counters. Its advantages include reduced software overhead and improved accuracy. The PCA consists of a dedicated timer/counter which serves as the time base for an array of five compare/capture modules. Its clock input can be programmed to count any of the following signals:

- PCA clock frequency/6 (see "clock" section)
- PCA clock frequency/2
- Timer 0 overflow
- External input on ECI (P1.2)

Each compare/capture modules can be programmed in any one of the following modes:

- rising and/or falling edge capture,
- software timer,
- high-speed output,
- pulse width modulator.

Module 4 can also be programmed as a WatchDog timer. see the "PCA WatchDog Timer" section.

When the compare/capture modules are programmed in capture mode, software timer, or high speed output mode, an interrupt can be generated when the module executes its function. All five modules plus the PCA timer overflow share one interrupt vector.

The PCA timer/counter and compare/capture modules share Port 1 for external I/Os. These pins are listed below. If the port is not used for the PCA, it can still be used for standard I/O.


PCA Component	External I/O Pin		
16-bit Counter	P1.2/ECI		
16-bit Module 0	P1.3/CEX0		
16-bit Module 1	P1.4/CEX1		
16-bit Module 2	P1.5/CEX2		
16-bit Module 3	P1.6/CEX3		
16-bit Module 4	P1.7/CEX4		

### **PCA** Timer

The PCA timer is a common time base for all five modules (see Figure 67). The timer count source is determined from the CPS1 and CPS0 bits in the CMOD SFR (see Table 8) and can be programmed to run at:

- 1/6 the PCA clock frequency.
- 1/2 the PCA clock frequency.
- the Timer 0 overflow.
- the input on the ECI pin (P1.2).

#### Figure 67. PCA Timer/Counter

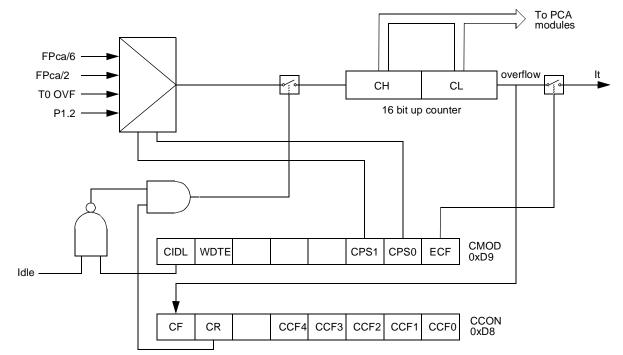

The CMOD register includes three additional bits associated with the PCA.

- The CIDL bit which allows the PCA to stop during idle mode.
- The WDTE bit which enables or disables the WatchDog function on module 4.
- The ECF bit which when set causes an interrupt and the PCA overflow flag CF in CCON register to be set when the PCA timer overflows.

The CCON register contains the run control bit for the PCA and the flags for the PCA timer and each module.

- The CR bit must be set to run the PCA. The PCA is shut off by clearing this bit.
- The CF bit is set when the PCA counter overflows and an interrupt will be generated if the ECF bit in CMOD register is set. The CF bit can only be cleared by software.
- The CCF0:4 bits are the flags for the modules (CCF0 for module0...) and are set by hardware when either a match or a capture occurs. These flags also can be cleared by software.

### PCA Modules

Each one of the five compare/capture modules has six possible functions. It can perform:

- 16-bit Capture, positive-edge triggered
- 16-bit Capture, negative-edge triggered
- 16-bit Capture, both positive and negative-edge triggered
- 16-bit Software Timer
- 16-bit High Speed Output
- 8-bit Pulse Width Modulator.

In addition module 4 can be used as a WatchDog Timer.






Each module in the PCA has a special function register associated with it (CCAPM0 for module 0 ...). The CCAPM0:4 registers contain the bits that control the mode that each module will operate in.

- The ECCF bit enables the CCF flag in the CCON register to generate an interrupt when a match or compare occurs in the associated module.
- The PWM bit enables the pulse width modulation mode.
- The TOG bit when set causes the CEX output associated with the module to toggle when there is a match between the PCA counter and the module's capture/compare register.
- The match bit MAT when set will cause the CCFn bit in the CCON register to be set when there is a match between the PCA counter and the module's capture/compare register.
- The two bits CAPN and CAPP in CCAPMn register determine the edge that a capture input will be active on. The CAPN bit enables the negative edge, and the CAPP bit enables the positive edge. If both bits are set both edges will be enabled.
- The bit ECOM in CCAPM register when set enables the comparator function.

## **PCA Interrupt**

Figure 68. PCA Interrupt System

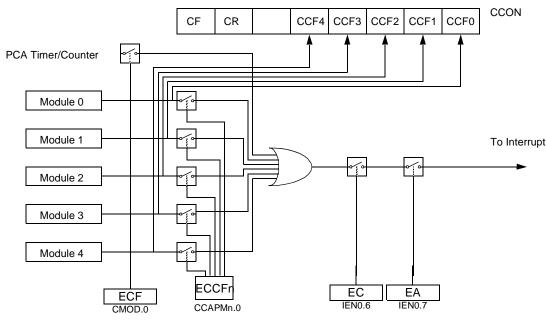

### **PCA Capture Mode**


To use one of the PCA modules in capture mode either one or both of the CCAPM bits CAPN and CAPP for that module must be set. The external CEX input for the module (on port 1) is sampled for a transition. When a valid transition occurs the PCA hardware loads the value of the PCA counter registers (CH and CL) into the module's capture registers (CCAPnL and CCAPnH). If the CCFn bit for the module in the CCON SFR and the ECCFn bit in the CCAPMn SFR are set then an interrupt will be generated.

# 144 AT89C51CC03

I

# AT89C51CC03


Figure 69. PCA Capture Mode

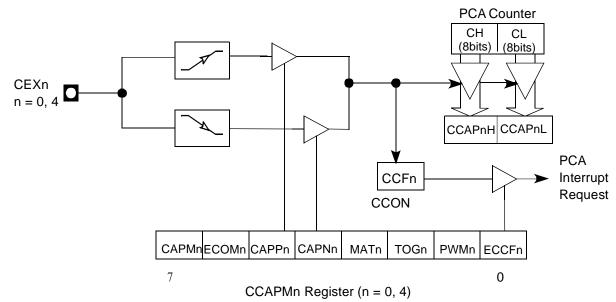

## 16-bit Software Timer Mode

The PCA modules can be used as software timers by setting both the ECOM and MAT bits in the modules CCAPMn register. The PCA timer will be compared to the module's capture registers and when a match occurs an interrupt will occur if the CCFn (CCON SFR) and the ECCFn (CCAPMn SFR) bits for the module are both set.


Figure 70. PCA 16-bit Software Timer and High Speed Output Mode

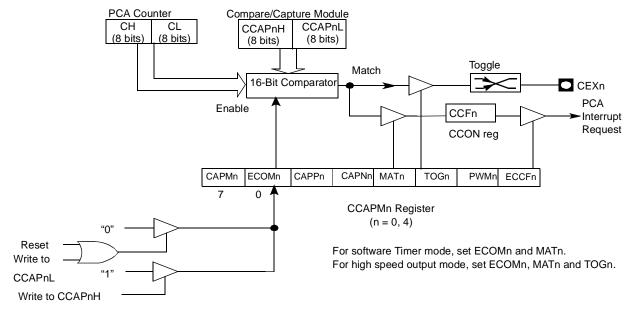




## High Speed Output Mode

In this mode the CEX output (on port 1) associated with the PCA module will toggle each time a match occurs between the PCA counter and the module's capture registers. To activate this mode the TOG, MAT, and ECOM bits in the module's CCAPMn SFR must be set.




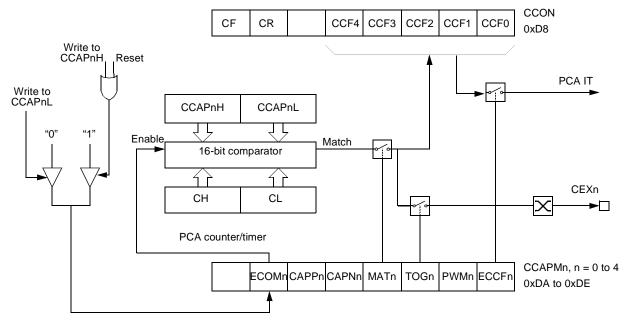

## Pulse Width Modulator Mode

All the PCA modules can be used as PWM outputs. The output frequency depends on the source for the PCA timer. All the modules will have the same output frequency because they all share the PCA timer. The duty cycle of each module is independently variable using the module's capture register CCAPLn. When the value of the PCA CL SFR is less than the value in the module's CCAPLn SFR the output will be low, when it is equal to or greater than it, the output will be high. When CL overflows from FF to 00, CCAPLn is reloaded with the value in CCAPHn. the allows the PWM to be updated without glitches. The PWM and ECOM bits in the module's CCAPMn register must be set to enable the PWM mode.

### Figure 72. PCA PWM Mode

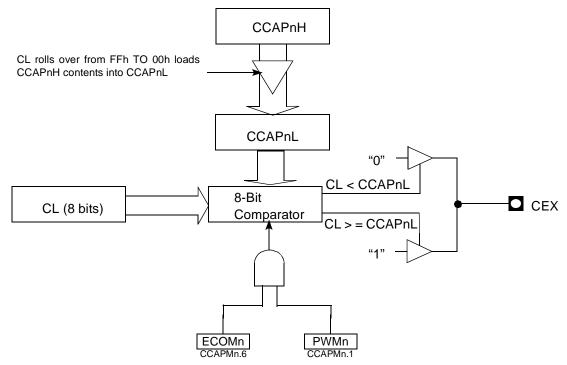

## PCA WatchDog Timer

An on-board WatchDog timer is available with the PCA to improve system reliability without increasing chip count. WatchDog timers are useful for systems that are sensitive to noise, power glitches, or electrostatic discharge. Module 4 is the only PCA module that can be programmed as a WatchDog. However, this module can still be used for other modes if the WatchDog is not needed. The user pre-loads a 16-bit value in the compare registers. Just like the other compare modes, this 16-bit value is compared to the PCA timer value. If a match is allowed to occur, an internal reset will be generated. This will not cause the RST pin to be driven high.

To hold off the reset, the user has three options:

- periodically change the compare value so it will never match the PCA timer,
- periodically change the PCA timer value so it will never match the compare values, or
- disable the WatchDog by clearing the WDTE bit before a match occurs and then reenable it.

The first two options are more reliable because the WatchDog timer is never disabled as in the third option. If the program counter ever goes astray, a match will eventually occur and cause an internal reset. If other PCA modules are being used the second option not recommended either. Remember, the PCA timer is the time base for all modules; changing the time base for other modules would not be a good idea. Thus, in most applications the first solution is the best option.





## **PCA Registers**

### Table 95. CMOD Register

CMOD (S:D9h) PCA Counter Mode Register

7	6	5	4	3	2	1	0			
CIDL	WDTE	-	-	-	CPS1	CPS0	ECF			
Bit Number	Bit Mnemonic	Description	Description							
7	CIDL	Clear to let the	PCA Counter Idle Control bit Clear to let the PCA run during Idle mode. Set to stop the PCA when Idle mode is invoked.							
6	WDTE	Clear to disa	<b>WatchDog Timer Enable</b> Clear to disable WatchDog Timer function on PCA Module 4, Set to enable it.							
5	-	<b>Reserved</b> The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.							
4	-	<b>Reserved</b> The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.				
3	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.				
2	CPS1		0     1     Internal Clock, FPca/2       1     0     Timer 0 overflow							
1	CPS0	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.				
0	ECF	Clear to disa	Enable PCA Counter Overflow Interrupt bit Clear to disable CF bit in CCON register to generate an interrupt. Set to enable CF bit in CCON register to generate an interrupt.							

Reset Value = 00XX X000b

148 AT89C51CC03

## Table 96. CCON Register

CCON (S:D8h) PCA Counter Control Register

7	6	5	4	3	2	1	0			
CF	CR	-	CCF4	CCF3	CCF2	CCF1	CCF0			
Bit Number	Bit Mnemonic	Description	Description							
7	CF	Set by hardw interrupt requ	PCA Timer/Counter Overflow flag Set by hardware when the PCA Timer/Counter rolls over. This generates a PCA nterrupt request if the ECF bit in CMOD register is set. Must be cleared by software.							
6	CR	Clear to turn	PCA Timer/Counter Run Control bit Clear to turn the PCA Timer/Counter off. Set to turn the PCA Timer/Counter on.							
5	-	<b>Reserved</b> The value re	Reserved The value read from this bit is indeterminate. Do not set this bit.							
4	CCF4	<b>PCA Module 4 Compare/Capture flag</b> Set by hardware when a match or capture occurs. This generates a PCA interrupt request if the ECCF 4 bit in CCAPM 4 register is set. Must be cleared by software.								
3	CCF3	Set by hardw interrupt requ	are when a n	<b>Capture flag</b> natch or captu CF 3 bit in CC ire.		0	PCA			
2	CCF2	Set by hardw interrupt requ	PCA Module 2 Compare/Capture flag Set by hardware when a match or capture occurs. This generates a PCA interrupt request if the ECCF 2 bit in CCAPM 2 register is set. Must be cleared by software.							
1	CCF1	Set by hardw interrupt requ	PCA Module 1 Compare/Capture flag Set by hardware when a match or capture occurs. This generates a PCA interrupt request if the ECCF 1 bit in CCAPM 1 register is set. Must be cleared by software.							
0	CCF0	Set by hardw interrupt requ	PCA Module 0 Compare/Capture flag Set by hardware when a match or capture occurs. This generates a PCA nterrupt request if the ECCF 0 bit in CCAPM 0 register is set. Must be cleared by software.							

Reset Value = 00X0 0000b





 Table 97.
 CCAPnH Registers

CCAP0H (S:FAh)
CCAP1H (S:FBh)
CCAP2H (S:FCh)
CCAP3H (S:FDh)
CCAP4H (S:FEh)
PCA High Byte Compare/Capture Module n Register (n=04)

7	6	5	4	3	2	1	0
CCAPnH 7	CCAPnH 6	CCAPnH 5	CCAPnH 4	CCAPnH 3	CCAPnH 2	CCAPnH 1	CCAPnH 0
Bit Number	Bit Mnemonic	Description					
7:0	CCAPnH 7:0	High byte of	EWC-PCA co	mparison or c	apture values		

Reset Value = 0000 0000b

### Table 98. CCAPnL Registers

CCAP0L (S:EAh) CCAP1L (S:EBh) CCAP2L (S:ECh) CCAP3L (S:EDh) CCAP4L (S:EEh) PCA Low Byte Compare/Capture Module n Register (n=0..4)

7	6	5	4	3	2	1	0	
CCAPnL 7	CCAPnL 6	CCAPnL 5	CCAPnL 4	CCAPnL 3	CCAPnL 2	CCAPnL 1	CCAPnL 0	
Bit Number	Bit Mnemonic	Description						
7:0	CCAPnL 7:0	Low byte of I	Low byte of EWC-PCA comparison or capture values					

Reset Value = 0000 0000b

### Table 99. CCAPMn Registers

CCAPM0 (S:DAh) CCAPM1 (S:DBh) CCAPM2 (S:DCh) CCAPM3 (S:DDh) CCAPM4 (S:DEh) PCA Compare/Capture Module n Mode registers (n=0..4)

7	6	5	4	3	2	1	0				
-	ECOMn	CAPPn	CAPNn	MATn	TOGn	PWMn	ECCFn				
Bit Number	Bit Mnemonic	Description	Description								
7	-	Reserved The Value re	Reserved The Value read from this bit is indeterminate. Do not set this bit.								
6	ECOMn	Clear to disa Set to enable The Compare	Enable Compare Mode Module x bit Clear to disable the Compare function. Set to enable the Compare function. The Compare function is used to implement the software Timer, the high-speed butput, the Pulse Width Modulator (PWM) and the WatchDog Timer (WDT).								
5	CAPPn	Clear to disa	<b>Capture Mode (Positive) Module x bit</b> Clear to disable the Capture function triggered by a positive edge on CEXx pin. Set to enable the Capture function triggered by a positive edge on CEXx pin								
4	CAPNn	Clear to disa	ble the Captu	) Module x bit re function trig function trigge	gered by a ne						
3	MATn		natch of the F	PCA Counter w r, flagging an i		are/Capture re	egister sets				
2	TOGn	The toggle m Set when a r	<b>Toggle Module x bit</b> The toggle mode is configured by setting ECOMx, MATx and TOGx bits. Set when a match of the PCA Counter with the Compare/Capture register toggles the CEXx pin.								
1	PWMn	Set to config	Pulse Width Modulation Module x Mode bit Set to configure the module x as an 8-bit Pulse Width Modulator with output waveform on CEXx pin.								
0	ECCFn	Clear to disa		<b>it</b> in CCON regis CCON registe							

Reset Value = X000 0000b





## Table 100. CH Register

CH (S:F9h) PCA Counter Register High Value

7	6	5	4	3	2	1	0
СН 7	CH 6	CH 5	CH 4	CH 3	CH 2	CH 1	CH 0
5.4							
Bit Number	Bit Mnemonic	Description					

Reset Value = 0000 00000b

### Table 101. CL Register

CL (S:E9h) PCA counter Register Low Value

7	6	5	4	3	2	1	0		
CL 7	CL 6	CL 5	CL 4	CL 3	CL 2	CL 1	CL 0		
Bit Number	Bit	Description	Description						
Number	winemonic	Description							

Reset Value = 0000 00000b

# AT89C51CC03

Analog-to-Digital Converter (ADC)	This section describes the on-chip 10 bit analog-to-digital converter of the AT89C51CC03. Eight ADC channels are available for sampling of the external sources AN0 to AN7. An analog multiplexer allows the single ADC converter to select one from the 8 ADC channels as ADC input voltage (ADCIN). ADCIN is converted by the 10-bit cascaded potentiometric ADC.
	Two kinds of conversion are available: - Standard conversion (8 bits). - Precision conversion (10 bits) (Up to 85°C only).
	For the precision conversion, set bit PSIDLE in ADCON register and start conversion. The device is in a pseudo-idle mode, the CPU does not run but the peripherals are always running. This mode allows digital noise to be as low as possible, to ensure high precision conversion.
	For this mode it is necessary to work with end of conversion interrupt, which is the only way to wake the device up.
	If another interrupt occurs during the precision conversion, it will be treated only after this conversion is ended.
Features	<ul> <li>8 channels with multiplexed inputs</li> <li>10-bit cascaded potentiometric ADC</li> <li>Conversion time 16 micro-seconds (typ.)</li> <li>Zero Error (offset) ± 2 LSB max</li> <li>Positive External Reference Voltage Range (VREF) 2.4 to 3.0Volt (typ.)</li> <li>ADCIN Range 0 to 3Volt</li> <li>Integral non-linearity typical 1 LSB, max. 2 LSB</li> <li>Differential non-linearity typical 0.5 LSB, max. 1 LSB</li> <li>Conversion Complete Flag or Conversion Complete Interrupt</li> <li>Selectable ADC Clock</li> </ul>
ADC Port1 I/O Functions	Port 1 pins are general I/O that are shared with the ADC channels. The channel select bit in ADCF register define which ADC channel/port1 pin will be used as ADCIN. The remaining ADC channels/port1 pins can be used as general-purpose I/O or as the alternate function that is available.

A conversion launched on a channel which are not selected on ADCF register will not have any effect.





### Figure 73. ADC Description


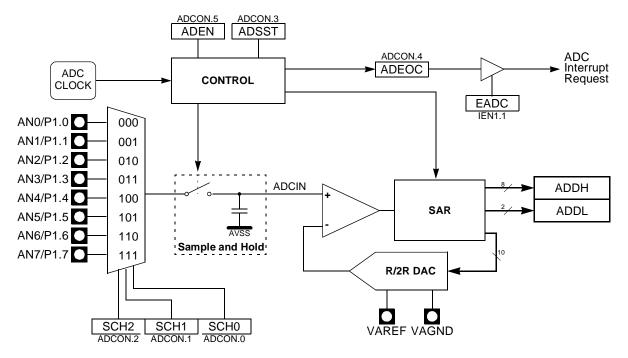


Figure 74 shows the timing diagram of a complete conversion. For simplicity, the figure depicts the waveforms in idealized form and do not provide precise timing information. For ADC characteristics and timing parameters refer to the Section "AC Characteristics" of the AT89C51CC03 datasheet.

### Figure 74. Timing Diagram

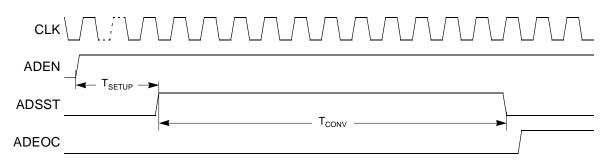

Note: Tsetup min = 4 us

Tconv=11 clock ADC = 1sample and hold + 10 bit conversion The user must ensure that 4 us minimum time between setting ADEN and the start of the first conversion.

## 154 **AT89C51CC03**

## ADC Converter Operation

A start of single A/D conversion is triggered by setting bit ADSST (ADCON.3).

After completion of the A/D conversion, the ADSST bit is cleared by hardware.

The end-of-conversion flag ADEOC (ADCON.4) is set when the value of conversion is available in ADDH and ADDL, it must be cleared by software. If the bit EADC (IEN1.1) is set, an interrupt occur when flag ADEOC is set (see Figure 76). Clear this flag for rearming the interrupt.

The bits SCH0 to SCH2 in ADCON register are used for the analog input channel selection.

SCH2	SCH1	SCH0	Selected Analog input
0	0	0	ANO
0	0	1	AN1
0	1	0	AN2
0	1	1	AN3
1	0	0	AN4
1	0	1	AN5
1	1	0	AN6
1	1	1	AN7

Table 102.	Selected Analog input
------------	-----------------------

Voltage ConversionWhen the ADCIN is equals to VAREF the ADC converts the signal to 3FFh (full scale). If<br/>the input voltage equals VAGND, the ADC converts it to 000h. Input voltage between<br/>VAREF and VAGND are a straight-line linear conversion. All other voltages will result in<br/>3FFh if greater than VAREF and 000h if less than VAGND.

Note that ADCIN should not exceed VAREF absolute maximum range! (See section "AC-DC")

**Clock Selection** The ADC clock is the same as CPU.

The maximum clock frequency is defined in the DC parameters for A/D converter. A prescaler is featured (ADCCLH) to generate the ADC clock from the oscillator frequency.


if PRS = 0 then  $F_{ADC} = F_{periph} / 64$ 

if PRS > 0 then  $F_{ADC} = F_{periph} / 2 \times PRS$ 





### Figure 75. A/D Converter Clock

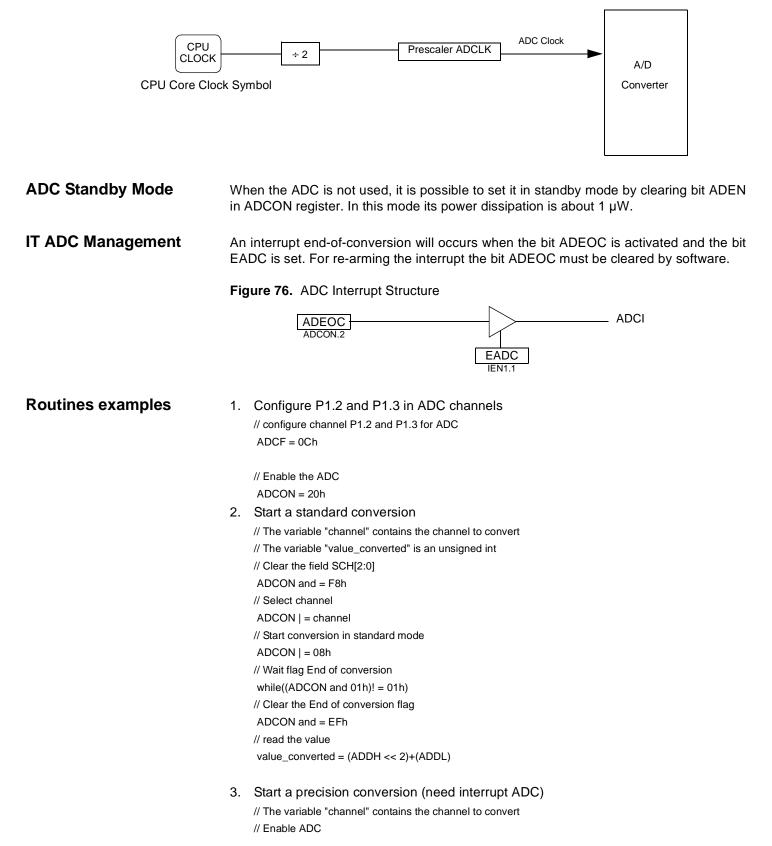

156 AT89C51CC03

# AT89C51CC03

EADC = 1 // clear the field SCH[2:0] ADCON and = F8h // Select the channel ADCON | = channel // Start conversion in precision mode ADCON | = 48h

Note: to enable the ADC interrupt: EA = 1





## Registers

### Table 103. ADCF Register

ADCF (S:F6h) ADC Configuration

7	6	5	4	3	2	1	0
CH 7	CH 6	CH 5	CH 4	CH 3	CH 2	CH 1	CH 0
Bit Number	Bit Mnemonic	Description					
7-0	CH 0:7	Channel Co Set to use P Clear to use	•				

Reset Value =0000 0000b

### Table 104. ADCON Register

ADCON (S:F3h) ADC Control Register

7	6	5	4	3	2	1	0		
-	PSIDLE	ADEN	ADEOC	ADSST	SCH2	SCH1	SCH0		
Bit Number	Bit Mnemonic	Description							
7	-								
6	PSIDLE	Set to put in	eudo Idle Mode (Best Precision) to put in idle mode during conversion ar to convert without idle mode.						
5	ADEN	Set to enable	Enable/Standby Mode Set to enable ADC Clear for Standby mode (power dissipation 1 uW).						
4	ADEOC	interrupt.		C result is rea re.	dy to be read.	This flag can	generate an		
3	ADSST	Set to start a	Start and Status Set to start an A/D conversion. Cleared by hardware after completion of the conversion						
2-0	SCH2:0	Selection of see Table 10	<b>Channel to</b>	Convert					

Reset Value =X000 0000b

## AT89C51CC03

Table 105. ADCLK Register

ADCLK (S:F2h) ADC Clock Prescaler

7	6	5	4	3	2	1	0		
-	-	-	PRS 4	PRS 3	PRS 2	PRS 1	PRS 0		
Bit Number	Bit Mnemonic	Description	Description						
7-5	-	<b>Reserved</b> The value re	ad from these	e bits are indet	erminate. Do	not set these	bits.		
4-0	PRS4:0	Clock Presc See Note <sup>(1)</sup>	aler						

Reset Value = XXX0 0000b

Note:

1. In X1 mode: For PRS > 0  $F_{ADC} = \frac{FXTAL}{4xPRS}$ For PRS = 0  $F_{ADC} = \frac{FXTAL}{128}$ In X2 mode: For PRS > 0  $F_{ADC} = \frac{FXTAL}{2xPRS}$ For PRS = 0  $F_{ADC} = \frac{FXTAL}{64}$ 

Table 106. ADDH Register

ADDH (S:F5h Read Only) ADC Data High Byte Register

7	6	5	4	3	2	1	0
ADAT 9	ADAT 8	ADAT 7	ADAT 6	ADAT 5	ADAT 4	ADAT 3	ADAT 2
Bit Number	Bit Mnemonic	Description					
7-0	ADAT9:2	ADC result bits 9-2					

Reset Value = 00h

Table 107. ADDL Register

ADDL (S:F4h Read Only) ADC Data Low Byte Register

7	6	5	4	3	2	1	0
-	-	-	-	-	-	ADAT 1	ADAT 0





Bit Number	Bit Mnemonic	Description
7-2	-	<b>Reserved</b> The value read from these bits are indeterminate. Do not set these bits.
1-0	ADAT1:0	ADC result bits 1-0

Reset Value = 00h



## **Interrupt System**

## Introduction

The CAN Controller has a total of 10 interrupt vectors: two external interrupts ( $\overline{INT0}$  and  $\overline{INT1}$ ), three timer interrupts (timers 0, 1 and 2), a serial port interrupt, a PCA, a CAN interrupt, a timer overrun interrupt and an ADC. These interrupts are shown below.

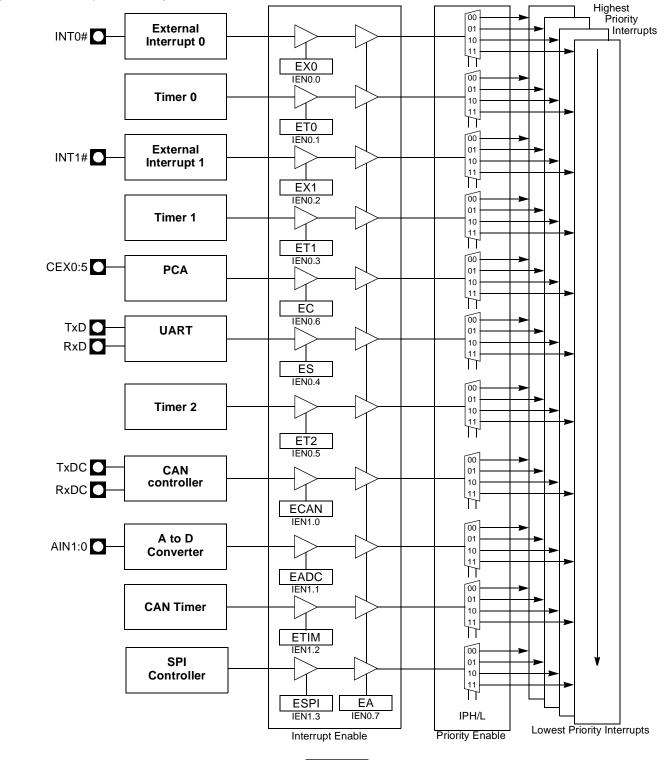


Figure 77. Interrupt Control System





Each of the interrupt sources can be individually enabled or disabled by setting or clearing a bit in the Interrupt Enable register. This register also contains a global disable bit which must be cleared to disable all the interrupts at the same time.

Each interrupt source can also be individually programmed to one of four priority levels by setting or clearing a bit in the Interrupt Priority registers. The Table below shows the bit values and priority levels associated with each combination.

IPH.x	IPL.x	Interrupt Level Priority
0	0	0 (Lowest)
0	1	1
1	0	2
1	1	3 (Highest)

Table 108. Priority Level Bit Values

A low-priority interrupt can be interrupted by a high priority interrupt but not by another low-priority interrupt. A high-priority interrupt cannot be interrupted by any other interrupt source.

If two interrupt requests of different priority levels are received simultaneously, the request of the higher priority level is serviced. If interrupt requests of the same priority level are received simultaneously, an internal polling sequence determines which request is serviced. Thus within each priority level there is a second priority structure determined by the polling sequence, see Table 109.

Interrupt Name	Interrupt Address Vector	Priority Number
external interrupt (INT0)	0003h	1
Timer0 (TF0)	000Bh	2
external interrupt (INT1)	0013h	3
Timer1 (TF1)	001Bh	4
PCA (CF or CCFn)	0033h	5
UART (RI or TI)	0023h	6
Timer2 (TF2)	002Bh	7
CAN (Txok, Rxok, Err or OvrBuf)	003Bh	8
ADC (ADCI)	0043h	9
CAN Timer Overflow (OVRTIM)	004Bh	10
SPI interrupt	0053h	11

 Table 109.
 Interrupt priority Within level

Downloaded from Elcodis.com electronic components distributor

## Registers

### Table 110. IEN0 Register

IEN0 (S:A8h) Interrupt Enable Register

7	6	5	4	3	2	1	0			
EA	EC	ET2	ET2 ES ET1 EX1 ET0 EX0							
Bit Number	Bit Mnemonic	Description								
7	EA	Clear to disa Set to enable If EA=1, eacl	hable All Interrupt bit ear to disable all interrupts. It to enable all interrupts. EA=1, each interrupt source is individually enabled or disabled by setting or earing its interrupt enable bit.							
6	EC		ot Enable ole the PCA i the PCA inte							
5	ET2	Clear to disa	<b>Fimer 2 Overflow Interrupt Enable bit</b> Clear to disable Timer 2 overflow interrupt. Set to enable Timer 2 overflow interrupt.							
4	ES		<b>Enable bit</b> ole serial port serial port in	•						
3	ET1	Clear to disa	ole timer 1 ov	pt Enable bit rerflow interrup flow interrupt.	ot.					
2	EX1	External Internation Clear to disa Set to enable	ole external ir	nterrupt 1.						
1	ET0	Clear to disa	Timer 0 Overflow Interrupt Enable bit Clear to disable timer 0 overflow interrupt. Set to enable timer 0 overflow interrupt.							
0	EX0	External Internation Clear to disa Set to enable	ole external in	nterrupt 0.						

Reset Value = 0000 0000b bit addressable





## Table 111. IEN1 Register

### IEN1 (S:E8h) Interrupt Enable Register

7	6	5	4	3	2	1	0	
-	-	-	-	ESPI	ETIM	EADC	ECAN	
Bit Number	Bit Mnemonic	Description						
7	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.		
6	-	<b>Reserved</b> The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.		
5	-	<b>Reserved</b> The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.					
4	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.		
3	ESPI		t Enable bit ble the SPI in e the SPI inter					
2	ETIM	Clear to disa		Enable bit overrun interru errun interrupt				
1	EADC	Clear to disa	ADC Interrupt Enable bit Clear to disable the ADC interrupt. Set to enable the ADC interrupt.					
0	ECAN	Clear to disa	CAN Interrupt Enable bit Clear to disable the CAN interrupt. Set to enable the CAN interrupt.					

Reset Value = xxxx 0000b bit addressable

AT89C51CC03 164

Downloaded from Elcodis.com electronic components distributor

## Table 112. IPL0 Register

IPL0 (S:B8h) Interrupt Enable Register

7	6	5	4	3	2	1	0		
-	PPC	PT2	PS	PT1	PX1	PT0	PX0		
Bit Number	Bit Mnemonic	Description	escription						
7	-	<b>Reserved</b> The value rea	ad from this b	it is indetermir	nate. Do not s	et this bit.			
6	PPC		<b>pt Priority bi</b> CH for priority						
5	PT2		Timer 2 Overflow Interrupt Priority bit Refer to PT2H for priority level.						
4	PS	Serial Port F Refer to PSH	Priority bit I for priority le	vel.					
3	PT1		rflow Interru H for priority I	<b>pt Priority bit</b> evel.					
2	PX1		errupt 1 Prio H for priority	•					
1	PT0		Timer 0 Overflow Interrupt Priority bit Refer to PT0H for priority level.						
0	PX0		External Interrupt 0 Priority bit Refer to PX0H for priority level.						

Reset Value = X000 0000b bit addressable





## Table 113. IPL1 Register

IPL1 (S:F8h) Interrupt Priority Low Register 1

7	6	5	4	3	2	1	0		
-	-	-	-	SPIL	POVRL	PADCL	PCANL		
Bit Number	Bit Mnemonic	Description	escription						
7	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.			
6	-	<b>Reserved</b> The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.			
5	-	<b>Reserved</b> The value rea	Reserved The value read from this bit is indeterminate. Do not set this bit.						
4	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.			
3	SPIL		t Priority Lev H for priority le	<b>vel Less Sign</b> evel.	ificant Bit				
2	POVRL		<b>un Interrupt</b> CH for priority	Priority Level level.	l Less Signifi	cant Bit			
1	PADCL		ADC Interrupt Priority Level Less Significant Bit Refer to PSPIH for priority level.						
0	PCANL		CAN Interrupt Priority Level Less Significant Bit Refer to PKBH for priority level.						

Reset Value = XXXX 0000b bit addressable

166 AT89C51CC03

## Table 114. IPL0 Register

IPH0 (B7h) Interrupt High Priority Register

7	6	5	4	3	2	1	0
-	PPCH	PT2H	PSH	PT1H	PX1H	РТОН	PX0H
Bit Number	Bit Mnemonic	Description					
7	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.	
6	РРСН	PCA Interru           PPCH         PPC           0         0           1         0           1         1			nificant bit		
5	PT2H	Timer 2 Ove           PT2H         PT2           0         0           1         0           1         1	rflow Interru <u>Priority I</u> Lowest Highest	pt High Prior <u>_evel</u>	ity bit		
4	PSH	Serial Port H           PSH         PS           0         0           1         0           1         1	<b>ligh Priority</b> <u>Priority I</u> Lowest Highest				
3	PT1H	Timer 1 Ove           PT1H         PT1           0         0           1         0           1         1	r <b>flow Interru</b> <u>Priority I</u> Lowest Highest		ity bit		
2	PX1H	External Internation           PX1H         PX1           0         0           0         1           1         0	errupt 1 High Priority I Lowest Highest				
1	РТОН	Timer 0 Ove           PT0H         PT0           0         0           1         0           1         1	<b>rflow Interru</b> <u>Priority I</u> Lowest Highest	pt High Prior <u>_evel</u>	ity bit		
0	PX0H	External Internation           PX0H         PX0           0         0           0         1           1         0           1         1	<b>errupt 0 high</b> <u>Priority I</u> Lowest Highest	<u>_evel</u>			

Reset Value = X000 0000b



4182K-CAN-05/06



## Table 115. IPH1 Register

IPH1 (S:F7h) Interrupt High Priority Register 1

7	6	5	4	3	2	1	0
-	-	-	-	SPIH	POVRH	PADCH	PCANH
Bit Number	Bit Mnemonic	Description					
7	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.	
6	-	<b>Reserved</b> The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.	
5	-	<b>Reserved</b> The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.	
4	-	Reserved The value rea	ad from this b	it is indetermi	nate. Do not s	et this bit.	
3	SPIH	SPI Interrup           SPIH         SPIL           0         0           0         1           1         0           1         1		vel Most Sign	ificant bit		
2	POVRH		un Interrupt I VRL Priority Id Lowest Highest		Most Signifi	cant bit	
1	PADCH		<b>pt Priority Le</b> <u>CL Priority le</u> Lowest Highest	evel Most Sig <u>vel</u>	nificant bit		
0	PCANH		<b>pt Priority Le</b> <u>ANL Priority I</u> Lowest Highest	evel Most Sig evel	nificant bit		

Reset Value = XXXX 0000b

168 AT89C51CC03

Downloaded from  $\underline{\text{Elcodis.com}}$  electronic components distributor

## **Electrical Characteristics**

## **Absolute Maximum Ratings**

Ambiant Temperature Under Bias:	Note:
I = industrial40°C to $85^{\circ}$ C A = automotive40°C to +125°C	
Voltage on $V_{CC}$ from $V_{SS}$ 0.5V to + 6V	
Voltage on Any Pin from $V_{SS}$ -0.5V to $V_{CC}$ + 0.2V	
Power Dissipation1 W	

Stresses at or above those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions may affect device reliability.

The power dissipation is based on the maximum allowable die temperature and the thermal resistance of the package.

## **ICCOP Test Conditions**

Power Consumption Management	Since the introduction of the first C51 device, every manufacturer made operating $I_{CC}$ measurements under Reset, which made sense for the designs where the CPU was running under reset. In our new devices, the CPU is no longer active during reset, so the power consumption is very low but not representative of what will happen in the customer system. Thus, while keeping measurements under Reset, we present a new way to measure the operating $I_{CC}$ .
	Using an internal test ROM, the following code is executed.
	Label: SJMP Label (80FE)
	Ports 1 and 4 are disconnected, RST = Vcc, XTAL2 is not connected and XTAL1 is driven by the clock.

This is much more representative of the real operating Icc.

## **DC Parameters for Standard Voltage**

Industrial  $T_A = -40^{\circ}C$  to  $+85^{\circ}C$ ;  $V_{SS} = 0V$ ; Automotive  $T_A = -40^{\circ}C$  to  $+125^{\circ}C$ ;  $V_{SS} = 0V$ 

Automotive  $T_A = -40^{\circ}$ C to  $+125^{\circ}$ C,  $v_{SS} = 0.0$ 

 $V_{CC}$  =3.0V to 5.5V and F = 0 to 40 MHz (both internal and external code execution)

 $V_{CC}$  =4.5V to 5.5V and F = 0 to 60 MHz (internal code execution only)

Table 116. DC Parameters in Standard Voltage

Symbol	Parameter	Min	Тур <sup>(5)</sup>	Max	Unit	Test Conditions
V <sub>IL</sub>	Input Low Voltage	-0.5		0.2Vcc - 0.1	V	
V <sub>IH</sub>	Input High Voltage except XTAL1, RST	0.2 V <sub>CC</sub> + 0.9		V <sub>CC</sub> + 0.5	V	
V <sub>IH1</sub>	Input High Voltage, XTAL1, RST	0.7 V <sub>CC</sub>		V <sub>CC</sub> + 0.5	V	
V <sub>OL</sub>	Output Low Voltage, ports 1, 2, 3 and 4 <sup>(6)</sup>			0.3 0.45 1.0	V	$\begin{split} I_{OL} &= 100 \ \mu A^{(4)} \\ I_{OL} &= 1.6 \ m A^{(4)} \\ I_{OL} &= 3.5 \ m A^{(4)} \end{split}$
V <sub>OL1</sub>	Output Low Voltage, port 0, ALE, PSEN (6)			0.3 0.45 1.0	V	$\begin{split} I_{OL} &= 200 \ \mu A^{(4)} \\ I_{OL} &= 3.2 \ m A^{(4)} \\ I_{OL} &= 7.0 \ m A^{(4)} \end{split}$





Table 116.	DC Parameters in Standard	Voltage	(Continued)
------------	---------------------------	---------	-------------

Symbol	Parameter	Min	Typ <sup>(5)</sup>	Max	Unit	Test Conditions
V <sub>OH</sub>	Output High Voltage, ports 1, 2, 3, and 4	V <sub>CC</sub> - 0.3 V <sub>CC</sub> - 0.7 V <sub>CC</sub> - 1.5			V V V	$I_{OH} = -10 \ \mu A$ $I_{OH} = -30 \ \mu A$ $I_{OH} = -60 \ \mu A$ $V_{CC} = 3V \ to \ 5.5V$
V <sub>OH1</sub>	Output High Voltage, port 0, ALE, PSEN	V <sub>CC</sub> - 0.3 V <sub>CC</sub> - 0.7 V <sub>CC</sub> - 1.5			V V V	$I_{OH} = -200 \ \mu A$ $I_{OH} = -3.2 \ m A$ $I_{OH} = -7.0 \ m A$ $V_{CC} = 5V \pm 10\%$
R <sub>RST</sub>	RST Pulldown Resistor	20	100	200	kΩ	
I <sub>IL</sub>	Logical 0 Input Current ports 1, 2, 3 and 4			-50	μΑ	Vin = 0.45V
ILI	Input Leakage Current			±10	μΑ	0.45V < Vin < V <sub>CC</sub>
I <sub>TL</sub>	Logical 1 to 0 Transition Current, ports 1, 2, 3 and 4			-650	μA	Vin = 2.0V
C <sub>IO</sub>	Capacitance of I/O Buffer			10	pF	Fc = 1 MHz TA = 25°C
	Power-down Current Industrial		75	150	μΑ	$3V < V_{CC} < 5.5V^{(3)}$
I <sub>PD</sub>	Power-down Current Automotive		100	350	μΑ	$3V < V_{CC} < 5.5V^{(3)}$
I <sub>CC</sub>	Power Supply Current	000.	uency (MHz) + 8 quency (MHz) + 8		mA	$Vcc = 5.5V^{(1)(2)}$
COWRITE	Power Supply Current on flash or EEdata write			0.8 x Frequency (MHz) + 15	mA	V <sub>CC</sub> = 5.5V

V<sub>SS</sub> + 0.5V,  $V_{IH} = V_{CC} - 0.5V$ ; XTAL2 N.C.;  $\overline{EA} = RST = Port 0 = V_{CC}$ .  $I_{CC}$  would be slightly higher if a crystal oscillator used (see Figure 78.).

- 2. Idle I<sub>CC</sub> is measured with all output pins disconnected; XTAL1 driven with T<sub>CLCH</sub>, T<sub>CHCL</sub> = 5 ns,  $V_{IL} = V_{SS} + 0.5V$ ,  $V_{IH} = V_{CC} 1000$ 0.5V; XTAL2 N.C; Port 0 = V<sub>CC</sub>; EA = RST = V<sub>SS</sub> (see Figure 79.).
- Power-down I<sub>CC</sub> is measured with all output pins disconnected; EA = V<sub>CC</sub>, PORT 0 = V<sub>CC</sub>; XTAL2 NC.; RST = V<sub>SS</sub> (see Figure 80.). In addition, the WDT must be inactive and the POF flag must be set.
- 4. Capacitance loading on Ports 0 and 2 may cause spurious noise pulses to be superimposed on the Vol s of ALE and Ports 1 and 3. The noise is due to external bus capacitance discharging into the Port 0 and Port 2 pins when these pins make 1 to 0 transitions during bus operation. In the worst cases (capacitive loading 100pF), the noise pulse on the ALE line may exceed 0.45V with maxi V<sub>OI</sub> peak 0.6V. A Schmitt Trigger use is not necessary.
- 5. Typicals are based on a limited number of samples and are not guaranteed. The values listed are at room temperature.
- Under steady state (non-transient) conditions, I<sub>OL</sub> must be externally limited as follows:
- Maximum I<sub>OL</sub> per port pin: 10 mA Maximum IoL per 8-bit port: Port 0: 26 mA
  - Ports 1, 2, 3 and 4: 15 mA
  - Maximum total I<sub>OL</sub> for all output pins: 71 mA

If I<sub>OL</sub> exceeds the test condition, V<sub>OL</sub> may exceed the related specification. Pins are not guaranteed to sink current greater than the listed test conditions.


#### AT89C51CC03 170

### Power Fail Detect at Ambiant Temperatures

VPFDP <sup>(1)</sup>	VPFDM <sup>(2)</sup>	Hysterisis
2.5V typ	2.35V typ	100mV min.


Note: 1. Threshold Voltage for PFD Release

2. Threshold Voltage for PFD Activation

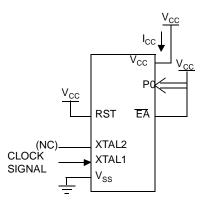



All other pins are disconnected.



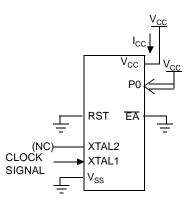

All other pins are disconnected.



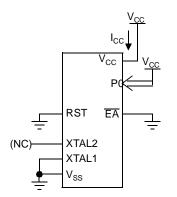


All other pins are disconnected.



4182K-CAN-05/06



### Figure 81. Clock Signal Waveform for I<sub>CC</sub> Tests in Active and Idle Modes



## DC Parameters for A/D Converter

Table 117. DC Parameters for AD Converter in Precision Conversion

Symbol	Parameter	Min	Typ <sup>(1),(2)</sup>	Max	Unit	Test Conditions
AVin	Analog input voltage	Vss- 0.2		Vref + 0.2	V	
Rref	Resistance between Vref and Vss	12	16	24	kΩ	
Vref <sup>(3)</sup>	Reference voltage	2.40		3.00	V	
Cai	Analog input Capacitance		60		pF	During sampling
Rai	Analog input Resistor			400	Ω	During sampling
INL	Integral non linearity		1	2	lsb	
	integral non intearity			3	150	Automotive
DNL	Differential non linearity		0.5	1	lsb	
OE	Offset error	-2		2	lsb	

Note: 1. Typicals are based on a limited number of samples and are not guaranteed.

2. For temperatures higher than 85°C, use standard conversion (8-bit only) and PRS > 2.

3.  $V_{REF} \leq V_{CC}$  + 0.2V for temperatures higher than 85.

## **AC Parameters**

Symbols

Explanation of the AC

Each timing symbol has 5 characters. The first character is always a "T" (stands for time). The other characters, depending on their positions, stand for the name of a signal or the logical status of that signal. The following is a list of all the characters and what they stand for.

Example:  $T_{AVLL}$  = Time for Address Valid to ALE Low.  $T_{LLPL}$  = Time for ALE Low to PSEN Low.

 $T_A = -40^{\circ}C$  to  $+85^{\circ}C$ ;  $V_{SS} = 0V$ ;  $V_{CC} = 3V$  to 5.5V; F = 0 to 40 MHz.

(Load Capacitance for port 0, ALE and PSEN = 60 pF; Load Capacitance for all other outputs = 60 pF.)

Table 118, Table 121 and Table 124 give the description of each AC symbols.

Table 119, Table 123 and Table 125 give for each range the AC parameter.

Table 120, Table 123 and Table 126 give the frequency derating formula of the AC parameter for each speed range description. To calculate each AC symbols: Take the x value and use this value in the formula.

Example: T<sub>LLIV</sub> and 20 MHz, Standard clock. x = 30 nsT = 50 ns  $T_{CCIV} = 4T - x = 170 \text{ ns}$ 

AT89C51CC03 172

### External Program Memory Characteristics

### Table 118. Symbol Description

Symbol	Parameter
Т	Oscillator clock period
T <sub>LHLL</sub>	ALE pulse width
T <sub>AVLL</sub>	Address Valid to ALE
T <sub>LLAX</sub>	Address Hold After ALE
T <sub>LLIV</sub>	ALE to Valid Instruction In
$T_{LLPL}$	ALE to PSEN
T <sub>PLPH</sub>	PSEN Pulse Width
T <sub>PLIV</sub>	PSEN to Valid Instruction In
T <sub>PXIX</sub>	Input Instruction Hold After PSEN
T <sub>PXIZ</sub>	Input Instruction Float After PSEN
T <sub>AVIV</sub>	Address to Valid Instruction In
T <sub>PLAZ</sub>	PSEN Low to Address Float

## Table 119. AC Parameters for a Fix Clock (F = 40 MHz)

Symbol	Min	Мах	Units
Т	25		ns
T <sub>LHLL</sub>	40		ns
T <sub>AVLL</sub>	10		ns
T <sub>LLAX</sub>	10		ns
T <sub>LLIV</sub>		70	ns
T <sub>LLPL</sub>	15		ns
T <sub>PLPH</sub>	55		ns
T <sub>PLIV</sub>		35	ns
T <sub>PXIX</sub>	0		ns
T <sub>PXIZ</sub>		18	ns
T <sub>AVIV</sub>		85	ns
T <sub>PLAZ</sub>		10	ns






Symbol	Туре	Standard Clock	X2 Clock	X parameter	Units
T <sub>LHLL</sub>	Min	2 T - x	T - x	10	ns
T <sub>AVLL</sub>	Min	T - x	0.5 T - x	15	ns
T <sub>LLAX</sub>	Min	T - x	0.5 T - x	15	ns
T <sub>LLIV</sub>	Max	4 T - x	2 T - x	30	ns
T <sub>LLPL</sub>	Min	T - x	0.5 T - x	10	ns
T <sub>PLPH</sub>	Min	3 T - x	1.5 T - x	20	ns
T <sub>PLIV</sub>	Max	3 T - x	1.5 T - x	40	ns
T <sub>PXIX</sub>	Min	х	х	0	ns
T <sub>PXIZ</sub>	Max	T - x	0.5 T - x	7	ns
T <sub>AVIV</sub>	Max	5 T - x	2.5 T - x	40	ns
T <sub>PLAZ</sub>	Max	х	х	10	ns

#### Table 120. AC Parameters for a Variable Clock

### **External Program Memory Read Cycle**

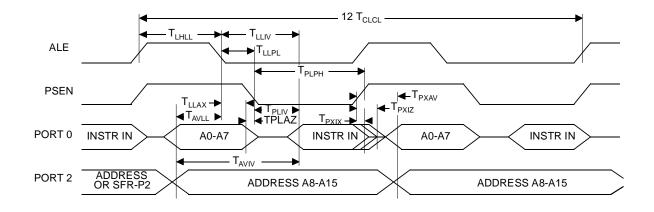

Downloaded from Elcodis.com electronic components distributor

## AT89C51CC03

### External Data Memory Characteristics

### Table 121. Symbol Description

Symbol	Parameter
T <sub>RLRH</sub>	RD Pulse Width
T <sub>WLWH</sub>	WR Pulse Width
T <sub>RLDV</sub>	RD to Valid Data In
T <sub>RHDX</sub>	Data Hold After RD
T <sub>RHDZ</sub>	Data Float After RD
T <sub>LLDV</sub>	ALE to Valid Data In
T <sub>AVDV</sub>	Address to Valid Data In
T <sub>LLWL</sub>	ALE to WR or RD
T <sub>AVWL</sub>	Address to WR or RD
T <sub>QVWX</sub>	Data Valid to WR Transition
T <sub>QVWH</sub>	Data set-up to WR High
T <sub>WHQX</sub>	Data Hold After WR
T <sub>RLAZ</sub>	RD Low to Address Float
T <sub>WHLH</sub>	RD or WR High to ALE high

## Table 122. AC Parameters for a Fix Clock (F=40MHz)

Symbol	Min	Мах	Units
T <sub>RLRH</sub>	130		ns
T <sub>WLWH</sub>	130		ns
T <sub>RLDV</sub>		100	ns
T <sub>RHDX</sub>	0		ns
T <sub>RHDZ</sub>		30	ns
T <sub>LLDV</sub>		160	ns
T <sub>AVDV</sub>		165	ns
T <sub>LLWL</sub>	50	100	ns
T <sub>AVWL</sub>	75		ns
T <sub>QVWX</sub>	10		ns
T <sub>QVWH</sub>	160		ns
T <sub>WHQX</sub>	15		ns
T <sub>RLAZ</sub>		0	ns
T <sub>WHLH</sub>	10	40	ns






Symbol	Туре	Standard Clock	X2 Clock	X parameter	Units
T <sub>RLRH</sub>	Min	6 T - x	3 T - x	20	ns
T <sub>WLWH</sub>	Min	6 T - x	3 T - x	20	ns
T <sub>RLDV</sub>	Max	5 T - x	2.5 T - x	25	ns
T <sub>RHDX</sub>	Min	х	x	0	ns
T <sub>RHDZ</sub>	Max	2 T - x	T - x	20	ns
T <sub>LLDV</sub>	Max	8 T - x	4T -x	40	ns
T <sub>AVDV</sub>	Max	9 T - x	4.5 T - x	60	ns
T <sub>LLWL</sub>	Min	3 T - x	1.5 T - x	25	ns
T <sub>LLWL</sub>	Max	3 T + x	1.5 T + x	25	ns
T <sub>AVWL</sub>	Min	4 T - x	2 T - x	25	ns
T <sub>QVWX</sub>	Min	T - x	0.5 T - x	15	ns
T <sub>QVWH</sub>	Min	7 T - x	3.5 T - x	25	ns
T <sub>WHQX</sub>	Min	T - x	0.5 T - x	10	ns
T <sub>RLAZ</sub>	Max	х	x	0	ns
T <sub>WHLH</sub>	Min	T - x	0.5 T - x	15	ns
T <sub>WHLH</sub>	Max	T + x	0.5 T + x	15	ns


 Table 123.
 AC Parameters for a Variable Clock

Downloaded from Elcodis.com electronic components distributor

### **External Data Memory Write Cycle**

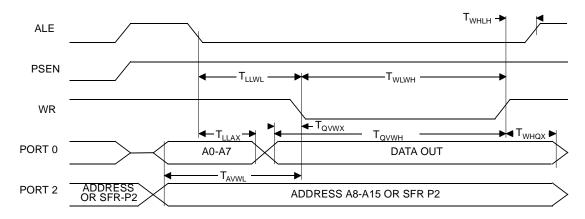

### **External Data Memory Read Cycle**

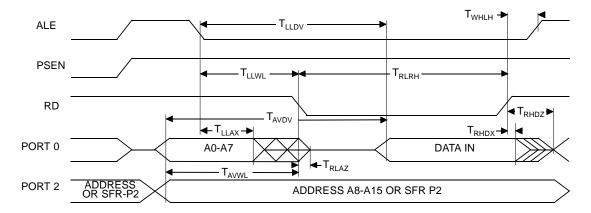

### Serial Port Timing – Shift Register Mode

Table 124. Symbol Description (F = 40 MHz)

Symbol	Parameter
T <sub>XLXL</sub>	Serial port clock cycle time
T <sub>QVHX</sub>	Output data set-up to clock rising edge
T <sub>XHQX</sub>	Output data hold after clock rising edge
T <sub>XHDX</sub>	Input data hold after clock rising edge
T <sub>XHDV</sub>	Clock rising edge to input data valid






### Table 125. AC Parameters for a Fix Clock (F = 40 MHz)

Symbol	Min	Мах	Units
T <sub>XLXL</sub>	300		ns
T <sub>QVHX</sub>	200		ns
T <sub>XHQX</sub>	30		ns
T <sub>XHDX</sub>	0		ns
T <sub>XHDV</sub>		117	ns

#### Table 126. AC Parameters for a Variable Clock

Symbol	Туре	Standard Clock	X2 Clock	X parameter for -M range	Units
T <sub>XLXL</sub>	Min	12 T	6 T		ns
T <sub>QVHX</sub>	Min	10 T - x	5 T - x	50	ns
T <sub>XHQX</sub>	Min	2 T - x	Т - х	20	ns
T <sub>XHDX</sub>	Min	х	х	0	ns
T <sub>XHDV</sub>	Max	10 T - x	5 T- x	133	ns

# Shift Register Timing Waveforms

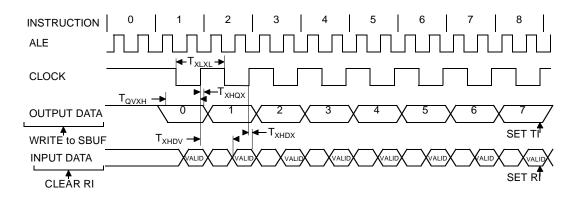

### External Clock Drive Characteristics (XTAL1)

### Table 127. AC Parameters

Symbol	Parameter	Min	Мах	Units
T <sub>CLCL</sub>	Oscillator Period	25		ns
T <sub>CHCX</sub>	High Time	5		ns
T <sub>CLCX</sub>	Low Time	5		ns
T <sub>CLCH</sub>	Rise Time		5	ns
T <sub>CHCL</sub>	Fall Time		5	ns
T <sub>CHCX</sub> /T <sub>CLCX</sub>	Cyclic ratio in X2 mode	40	60	%


## 178 **AT89C51CC03**

# AT89C51CC03


### **External Clock Drive** Waveforms

**AC Testing Input/Output** 

Waveforms

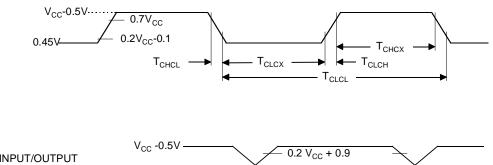


INPUT/OUTPUT



0.45V -

0.2 V<sub>CC</sub> - 0.1


**Float Waveforms** 



For timing purposes as port pin is no longer floating when a 100 mV change from load voltage occurs and begins to float when a 100 mV change from the loaded  $V_{OH}/V_{OL}$  level occurs.  $I_{OL}/I_{OH} \ge \pm 20$  mA.





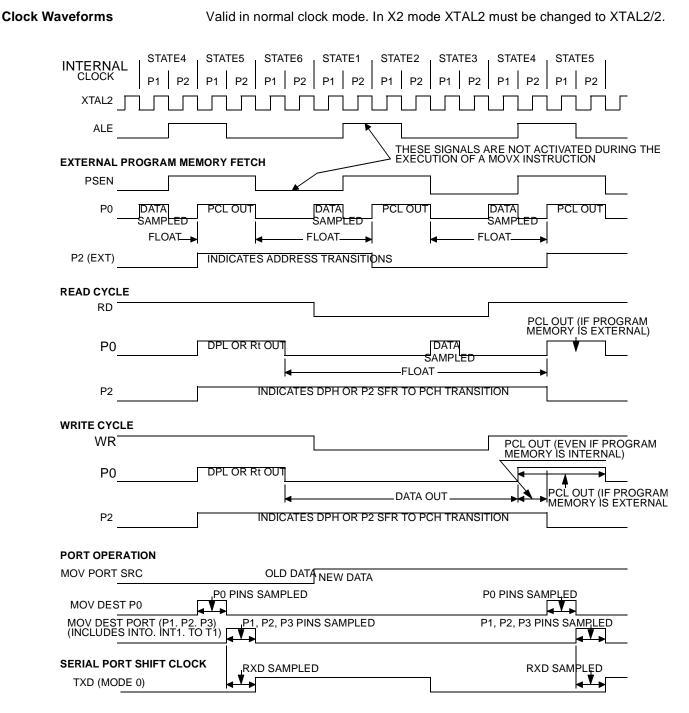

This diagram indicates when signals are clocked internally. The time it takes the signals to propagate to the pins, however, ranges from 25 to 125 ns. This propagation delay is dependent on variables such as temperature and pin loading. Propagation also varies from output to output and component. Typically though ( $T_A=25^{\circ}C$  fully loaded) RD and WR propagation delays are approximately 50ns. The other signals are typically 85 ns. Propagation delays are incorporated in the AC specifications.

Downloaded from Elcodis.com electronic components distributor

### Flash/EEPROM Memory

### Table 128. Timing Symbol Definitions

Signals				
S (Hardware condition)	PSEN#,EA			
R	RST			
В	FBUSY flag			

Conditions				
L	Low			
V	Valid			
х	No Longer Valid			

### Table 129. Memory AC Timing

VDD = 3V to 5.5V, TA = -40 to  $+85^{\circ}C$ 

Symbol	Parameter	Min	Тур	Max	Unit
T <sub>SVRL</sub>	Input PSEN# Valid to RST Edge	50			ns
T <sub>RLSX</sub>	Input PSEN# Hold after RST Edge	50			ns
T <sub>BHBL</sub>	Flash/EEPROM Internal Busy (Programming) Time		10		ms
N <sub>FCY</sub>	Number of Flash/EEPROM Erase/Write Cycles	100 000			cycles
T <sub>FDR</sub>	Flash/EEPROM Data Retention Time	10			years

### Figure 82. Flash Memory – ISP Waveforms




Figure 83. Flash Memory – Internal Busy Waveforms



#### A/D Converter

#### Table 130. AC Parameters for A/D Conversion

Symbol	Parameter	Min	Тур	Max	Unit
T <sub>SETUP</sub>		4			μs
ADC Clock Frequency			700		KHz





# 182 AT89C51CC03

# Timings

Test conditions: capacitive load on all pins= 60 pF.

Symbol	Parameter	Min	Max	Unit
	Slave Mode	9		
T <sub>CHCH</sub>	Clock Period	6 <sup>(1)</sup>		T <sub>PER</sub>
T <sub>CHCX</sub>	Clock High Time	3(1)		T <sub>PER</sub>
T <sub>CLCX</sub>	Clock Low Time	3(1)		T <sub>PER</sub>
T <sub>SLCH</sub> , T <sub>SLCL</sub>	SS Low to Clock edge	4T <sub>PER</sub> -20ns <sup>(1)</sup>		ns
T <sub>IVCL</sub> , T <sub>IVCH</sub>	Input Data Valid to Clock Edge	50		ns
T <sub>CLIX</sub> , T <sub>CHIX</sub>	Input Data Hold after Clock Edge	50		ns
T <sub>CLOV,</sub> T <sub>CHOV</sub>	Output Data Valid after Clock Edge		50	ns
T <sub>CLOX</sub> , T <sub>CHOX</sub>	Output Data Hold Time after Clock Edge	0		ns
T <sub>CLSH</sub> , T <sub>CHSH</sub>	SS High after Clock Edge	4T <sub>PER</sub> +20ns <sup>(1)</sup>		ns
T <sub>SLOV</sub>	SS Low to Output Data Valid		4T <sub>PER</sub> +20ns <sup>(1)</sup>	ns
T <sub>SHOX</sub>	Output Data Hold after SS High		2T <sub>PER</sub> +100ns <sup>(1)</sup>	ns
T <sub>SHSL</sub>	$\overline{SS}$ High to $\overline{SS}$ Low	2T <sub>PER</sub> +120ns <sup>(1)</sup>		
T <sub>OLOH</sub>	Output Rise time		100	ns
T <sub>OHOL</sub>	Output Fall Time		100	ns
	Master Mod	le	1	
Т <sub>снсн</sub>	Clock Period	4 <sup>(1)</sup>		T <sub>PER</sub>
T <sub>CHCX</sub>	Clock High Time	2T <sub>PER</sub> -20ns <sup>(1)</sup>		T <sub>PER</sub>
T <sub>CLCX</sub>	Clock Low Time	2T <sub>PER</sub> -20ns <sup>(1)</sup>		T <sub>PER</sub>
T <sub>IVCL</sub> , T <sub>IVCH</sub>	Input Data Valid to Clock Edge	50		ns
T <sub>CLIX</sub> , T <sub>CHIX</sub>	Input Data Hold after Clock Edge	0		ns
T <sub>CLOV,</sub> T <sub>CHOV</sub>	Output Data Valid after Clock Edge		20	ns
T <sub>CLOX</sub> , T <sub>CHOX</sub>	Output Data Hold Time after Clock Edge	0		ns
T <sub>CLCH</sub>	Output Data Rise time		100	ns
T <sub>CHCL</sub>	Output Data Fall Time		100	ns

# Table 1. SPI Interface Master AC Timing $V_{DD}$ = 2.7 to 3.3 V, $T_A$ = -40 to +85°C


Value of this parameter depends on prescacler ratio defined in bits 0,1 and 7 of SCON Register. In the above table, the ratio used is 4. As it can be set also to 8, 16, 32, 64 or 128, the factor of T<sub>PER</sub> must be changed according to the new ratio.E.g. 2TPER-20ns(1) will be changed to 4TPER-20ns(1) if the prescaler ratio equals 8.





#### Waveforms

Figure 84. SPI Slave Waveforms (SSCPHA= 0)

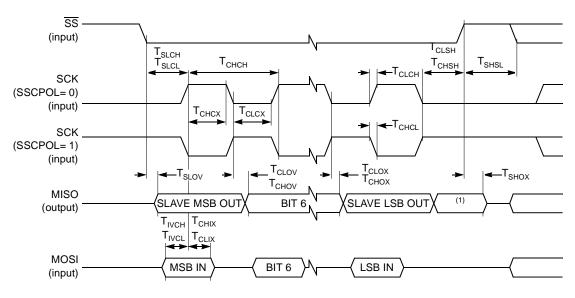

Note: 1. Not Defined but generally the MSB of the character which has just been received.



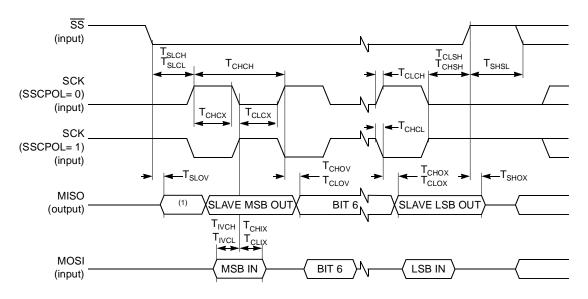



Figure 85. SPI Slave Waveforms (SSCPHA= 1)


Note: 1. Not Defined but generally the LSB of the character which has just been received.

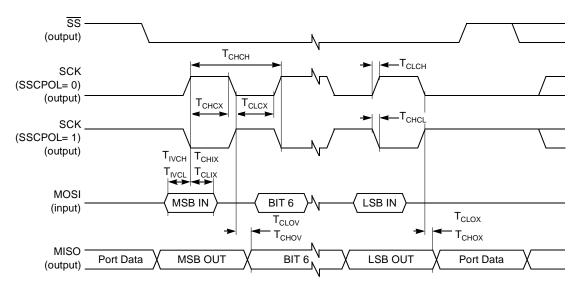



Note: 1. SS handled by software using general purpose port pin.



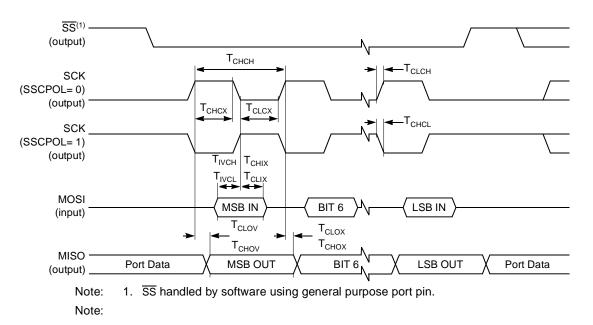





# **Ordering Information**


## Table 131. Possible Order Entries

Part Number	Boot Loader	Temperature Range	Quality Grade <sup>(1)</sup>	Package	Packing	Product Marking
AT89C51CC03U-7CTIM	UART	-40 to +85°C	Industrial	CA-BGA64	Tray	89C51CC03UA-IM
AT89C51CC03U-RLTIM	UART	-40 to +85°C	Industrial	VQFP44	Tray	89C51CC03UA-IM
AT89C51CC03U-SLSIM	UART	-40 to +85°C	Industrial	PLCC44	Stick	89C51CC03UA-IM
AT89C51CC03C-7CTIM	CAN	-40 to +85°C	Industrial	CA-BGA64	Tray	89C51CC03CA-IM
AT89C51CC03C-RLTIM	CAN	-40 to +85°C	Industrial	VQFP44	Tray	89C51CC03CA-IM
AT89C51CC03C-SLSIM	CAN	-40 to +85°C	Industrial	PLCC44	Stick	89C51CC03CA-IM
AT89C51CC03U-RDTIM	UART	-40 to +85°C	Industrial	VQFP64	Tray	89C51CC03UA-IM
AT89C51CC03U-S3SIM	UART	-40 to +85°C	Industrial	PLCC52	Stick	89C51CC03UA-IM
AT89C51CC03C-RDTIM	CAN	-40 to +85°C	Industrial	VQFP64	Tray	89C51CC03CA-IM
AT89C51CC03C-S3SIM	CAN	-40 to +85°C	Industrial	PLCC52	Stick	89C51CC03CA-IM
· · · · ·					•	
AT89C51CC03UA-7CTUM	UART	-40 to +85°C	Industrial & Green	CA-BGA64	Tray	89C51CC03UA-UM
AT89C51CC03UA-RLTUM	UART	-40 to +85°C	Industrial & Green	VQFP44	Tray	89C51CC03UA-UM
AT89C51CC03UA-SLSUM	UART	-40 to +85°C	Industrial & Green	PLCC44	Stick	89C51CC03UA-UM
AT89C51CC03CA-7CTUM	CAN	-40 to +85°C	Industrial & Green	CA-BGA64	Tray	89C51CC03CA-UM
AT89C51CC03CA-RLTUM	CAN	-40 to +85°C	Industrial & Green	VQFP44	Tray	89C51CC03CA-UM
AT89C51CC03CA-SLSUM	CAN	-40 to +85°C	Industrial & Green	PLCC44	Stick	89C51CC03CA-UM
AT89C51CC03UA-RDTUM	UART	-40 to +85°C	Industrial & Green	VQFP64	Tray	89C51CC03UA-UM
AT89C51CC03UA-S3SUM	UART	-40 to +85°C	Industrial & Green	PLCC52	Stick	89C51CC03UA-UM
AT89C51CC03CA-S3SUM	CAN	-40 to +85°C	Industrial & Green	PLCC52	Stick	89C51CC03CA-UM
AT89C51CC03CA-RDTUM	CAN	-40 to +85°C	Industrial & Green	VQFP64	Tray	89C51CC03CA-UM
AT89C51CC03UA-RLTZM	UART	-40 to +125°C	Automotive & Green	VQFP44	Tray	89C51CC03UA-ZM
AT89C51CC03CA-RLTZM	CAN	-40 to +125°C	Automotive & Green	VQFP44	Tray	89C51CC03CA-ZM
AT89C51CC03UA-RDTZM	UART	-40 to +125°C	Automotive & Green	VQFP64	Tray	89C51CC03UA-ZM
AT89C51CC03CA-RDTZM	CAN	-40 to +125°C	Automotive & Green	VQFP64	Tray	89C51CC03CA-ZM

Note: 1. Automotive grade indicates production flow according to ISO-TS-16949 and automotive product qualification as per AEC-Q100.

# **Package Drawing**


# CA-BGA

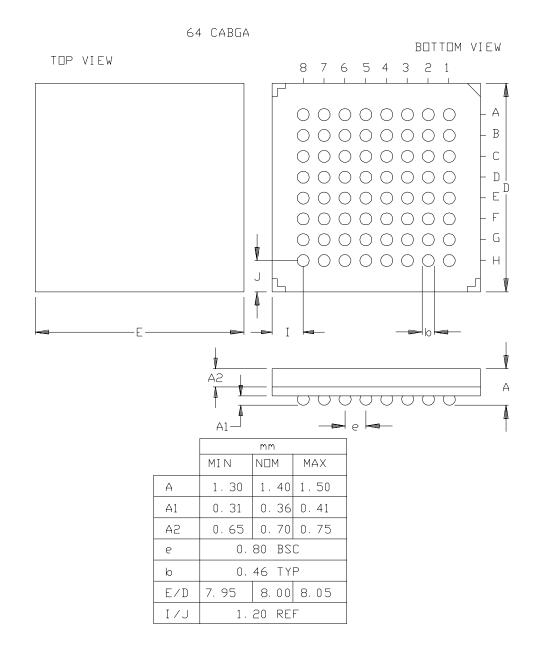






# VQFP44

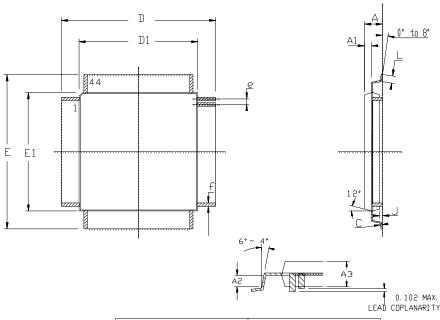

	М	М	IN	СН
	Min	Μαχ	Min	Max
А	-	1.60	-	. 063
A1	Ο.	64 REF	. 0	25 REF
A2	Ο.	64 REF	. 0	25 REF
A3	1.35	1.45	. 053	.057
D	11.90	12.10	. 468	. 476
D1	9, 90	10.10	. 390	. 398
E	11.90	12.10	. 468	. 476
E1	9. 90	10.10	. 390	. 398
J	0.05	-	. 002	-
L	0.45	0.75	. 018	. 030
e	0.80 BSC		. 03	15 BSC
f	0.3	5 BSC	. 01	4 BSC

188 AT89C51CC03

PLCC44

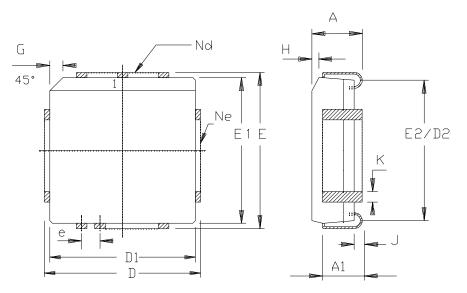


	1	MM ·	ΙN	СН
A	4. 20	4. 57	. 165	. 180
A1	2, 29	3.04	. 090	. 120
D	17.40	17.65	. 685	. 695
D1	16.44	16.66	. 647	. 656
D5	14.99	16.00	. 590	. 630
E	17.40	17.65	. 685	. 695
E1	16.44	16.66	. 647	. 656
E5	14.99	16.00	. 590	. 630
e	1.27	BSC	. 050	BSC
G	1.07	1.22	. 042	. 048
н	1.07	1.42	. 042	. 056
J	0.51	-	. 020	-
К	0.33	0.53	. 013	. 021
Nd	1	. 1	1	1
Ne	1	. 1	1	1
P	KG STD	00		






# VQFP64

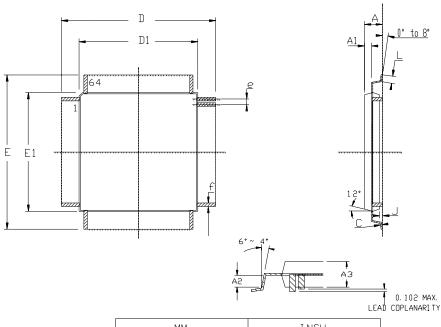

	М	М	IN	СН
	Min	Ma×	Min	Max
А	_	1.60	_	. 063
A1	Ο.	64 REF	. 0	25 REF
A2	Ο.	64 REF	. 0	25 REF
A3	1.35	1.45	. 053	. 057
D	11.75	12.25	. 463	. 483
D1	9.90	10.10	. 390	. 398
E	11.75	12.25	. 463	. 483
E1	9, 90	10.10	. 390	. 398
J	0.05	-	. 002	-
L	0.45	0.75	. 018	. 030
e	0.5	0 BSC	. 01	97 BSC
f	0.2	5 BSC	. 01	0 BSC

190 AT89C51CC03

PLCC52

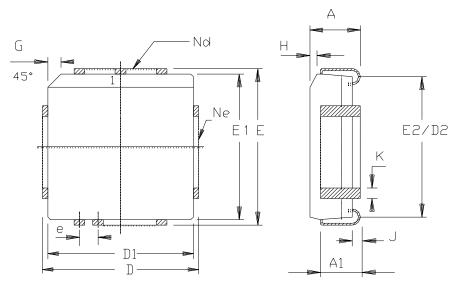

	м	М	t Ni	rц
		1		
A	4. 20	4, 57	. 165	. 180
A1	2, 29	3. 30	. 090	. 130
D	19.94	20.19	. 785	. 795
D1	19.05	19.25	. 750	. 758
D2	17.53	18.54	. 690	. 730
E	19.94	20.19	. 785	. 795
E1	19.05	19.25	. 750	. 758
E5	17.53	18.54	. 690	. 730
e	1.27	BSC	. 050	BSC
G	1.07	1.22	.042	.048
н	1.07	1.42	.042	. 056
J	0.51	-	. 020	-
К	0.33	0.53	. 013	. 021
Nd	13		1	3
Ne	1	13		3
P	KG STD	00		





# Datasheet Change Log

Changes from 4182B -09/03 to 4182C 12/03

1. Added Icc Idle, IPD, and Rrst value in "DC Parameters for A/D Converter" on page 172.

- Changes from 4182C 12/03 to 4182D 01/04
- 1. Updated SFR Table.
  - SFR : SPSTR changed to SPSCR
  - CANSTMH changed to CANSTMPH p15
  - CANSTML changed to CANSTMPL p15
  - CANCONC changed to CANCONCH p15
- 2. AC/DC p.160 IccOP and ICCIdle formulas changed
- 3. Changed maximum frequency to 60MHz in internal code execution.
- Changes from 4182D 1. Added Automotive temperature range. 01/04 to 4182E 05/04
- **Changes from 4182E -** 1. Various minor corrections throughout the document.
- Changes from 4182F -

05/04 to 4182F 10/04

- 10/04 to 4182G 03/05 Changes from 4182G
- 03/05 to 4182H 04/05
- Changes from 4182H 04/05 to 4182I 06/05
- Changes from 41821 06/05 to 4182J 03/06
- Changes from 4182J 03/06 to 4182K 04/06

- 1. Change to Watchdog formula, Section "Watchdog Programming", page 83.
- 1. Refined automotive temperature values.
- 1. Added Green product ordering information.
- 2. Clarification in Waveform diagram, page 20.
- 1. Additional part numbers added to ordering information.
- 1. Minor corrections throughout the document to incorrect values.

Downloaded from Elcodis.com electronic components distributor

# **Table of Contents**

Features1	!
Description2	)
Block Diagram2	)
Pin Configuration	}
CA-BGA64 Top View5	,
I/O Configurations 8	5
Port 1, Port 3 and Port 4 8	;
Port 0 and Port 2 9	)
Read-Modify-Write Instructions 10	
Quasi-Bidirectional Port Operation 11	
SFR Mapping 12	)
Clock	;
Description	5
Registers	
Data Memory	;
Internal Space	,
External Space 25	,
Dual Data Pointer 27	,
Registers	5
Power Monitor	)
Description	)
Reset	)
Introduction	•
Reset Input 32	•
Reset Output	
Power Management	ļ
Introduction	,
Idle Mode	
Power-Down Mode 34	
Registers	•
EEPROM Data Memory	}
Write Data in the Column Latches	5
Programming	;
Read Data	5





Examples	. 39
Registers	. 40
Program/Code Memory	41
External Code Memory Access	. 42
Flash Memory Architecture	. 43
Overview of FM0 Operations	. 47
Operation Cross Memory Access	56
Sharing Instructions	57
In-System Programming (ISP)	59
Flash Programming and Erasure	
Boot Process	
Application Programming Interface	
XROW Bytes	
Hardware Security Byte	
Serial I/O Port	
Framing Error Detection	
Automatic Address Recognition	
Given Address	
Broadcast Address	
Registers	. 66
Timers/Counters	69
Timer/Counter Operations	
Timer 0	
Timer 1	
Interrupt	
Registers	
Timer 2	77
Auto-Reload Mode	. 77
Programmable Clock-Output	. 78
Registers	. 79
Watahdag Timar	02
Watchdog Timer	
Watchdog Programming	
Watchdog Timer During Power-down Mode and Idle	. 04
CAN Controller	86
CAN Protocol	
CAN Controller Description	
CAN Controller Mailbox and Registers Organization	

ii

CAN Controller Management	. 93
IT CAN Management	. 95
Bit Timing and Baud Rate	97
Fault Confinement	. 99
Acceptance Filter	100
Data and Remote Frame	
Time Trigger Communication (TTC) and Message Stamping	102
CAN Autobaud and Listening Mode	
Routines Examples	
CAN SFR's	
Registers	
Serial Port Interface (SPI)	130
Features	
Signal Description	
Functional Description	
Programmable Counter Array (PCA)	142
PCA Timer	
PCA Innel	
PCA Interrupt	
PCA Capture Mode 16-bit Software Timer Mode	
High Speed Output Mode	
Pulse Width Modulator Mode	
PCA WatchDog Timer	
PCA Registers	148
Analog-to-Digital Converter (ADC)	
Features	
ADC Port1 I/O Functions	
ADC Converter Operation	
Voltage Conversion	
Clock Selection	155
ADC Standby Mode	156
IT ADC Management	156
Routines examples	156
Registers	158
Interrupt System	161
Introduction	161
Registers	163
Electrical Characteristics	169
Absolute Maximum Ratings	169
ICCOP Test Conditions	169



R

DC Parameters for Standard Voltage165	9
DC Parameters for A/D Converter 172	2
AC Parameters172	2
Timings	3
Ordering Information	6
Package Drawing 182	7
CA-BGA	7
VQFP44	8
PLCC44	9
VQFP64	0
PLCC52	1
Datasheet Change Log 192	2
Changes from 4182B - 09/03 to 4182C 12/03 192	2
Changes from 4182C - 12/03 to 4182D 01/04 192	
Changes from 4182D - 01/04 to 4182E 05/04 192	2
Changes from 4182E -05/04 to 4182F 10/04 192	2
Changes from 4182F - 10/04 to 4182G 03/05 192	2
Changes from 4182G 03/05 to 4182H 04/05 192	2
Changes from 4182H 04/05 to 4182I 06/05 192	2
Changes from 4182J 03/06 to 4182K 04/06 192	2
Table of Contents	i



## **Atmel Corporation**

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 487-2600

## **Regional Headquarters**

#### Europe

Atmel Sarl Route des Arsenaux 41 Case Postale 80 CH-1705 Fribourg Switzerland Tel: (41) 26-426-5555 Fax: (41) 26-426-5500

### Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimshatsui East Kowloon Hong Kong Tel: (852) 2721-9778 Fax: (852) 2722-1369

#### Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan Tel: (81) 3-3523-3551 Fax: (81) 3-3523-7581

## **Atmel Operations**

Memory

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

### Microcontrollers

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

La Chantrerie BP 70602 44306 Nantes Cedex 3, France Tel: (33) 2-40-18-18-18 Fax: (33) 2-40-18-19-60

#### ASIC/ASSP/Smart Cards

Zone Industrielle 13106 Rousset Cedex, France Tel: (33) 4-42-53-60-00 Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland Tel: (44) 1355-803-000 Fax: (44) 1355-242-743

#### **RF**/Automotive

Theresienstrasse 2 Postfach 3535 74025 Heilbronn, Germany Tel: (49) 71-31-67-0 Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

# Biometrics/Imaging/Hi-Rel MPU/

High Speed Converters/RF Datacom Avenue de Rochepleine BP 123 38521 Saint-Egreve Cedex, France Tel: (33) 4-76-58-30-00 Fax: (33) 4-76-58-34-80

*Literature Requests* www.atmel.com/literature

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectualproperty right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN ATMEL'S TERMS AND CONDI-TIONS OF SALE LOCATED ON ATMEL'S WEB SITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORYWAR-RANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICU-LARPURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDEN-TAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMA-TION) ARISING OUTOF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAM-AGES. Atmel makes norepresentationsor warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specificationsand product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

© Atmel Corporation 2006. All rights reserved. Atmel<sup>®</sup>, logo and combinations thereof, are registered trademarks, and Everywhere You Are<sup>®</sup> are the trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

