
IDEC Sockets

SR Series: Panel Mount

SR Series: Panel Mount Sockets

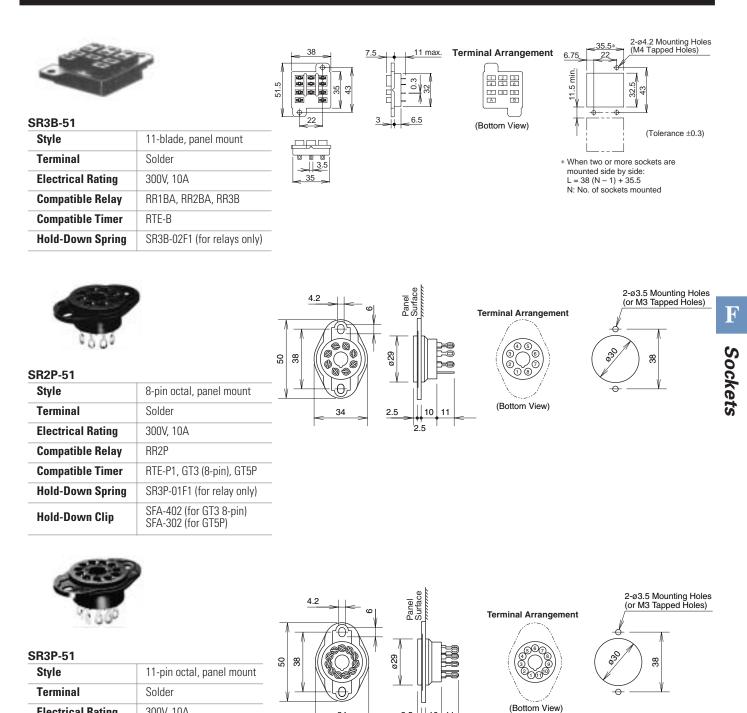

1. For socket mounting accessories, see page F-29. 2. For hold-down clip/spring selections, see page F-4.

RTE-P2)

300V. 10A

RR3PA, *RR2KP

(*latching relay)

GT3 (11-pin), RTE-P2 SR3P-01F1 for RR3PA

SR3P-51F3 for RR2KP SFA-402 (for GT3 11-pin,

All dimensions are in mm.

Electrical Rating

Compatible Relay

Compatible Timer

Hold-Down Spring

Hold-Down Clip

Downloaded from Elcodis.com electronic components distributor

10 11

2.5

2.5

34


Sockets **IDEC**


SH Series: Panel Mount Sockets



SH1B-51

Style	5-blade, panel mount	
Terminal	Solder	
Electrical Rating	300V, 10A	
Compatible Relay	RH1B	
Hold-Down Spring	SY4S-51F1	
Hold-Down Clip	SFA-301 (top notch), SFA-302 (side notch)	

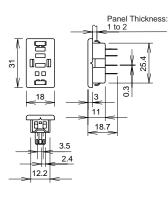


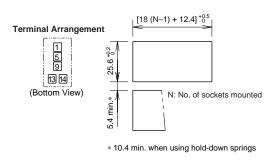






8-blade, panel mount		
Solder		
300V, 10A		
RH2B		
SY4S-51F1 SY4S-02F1 for RH2B-4C		
SFA-301 (top notch), SFA-302 (side notch)		

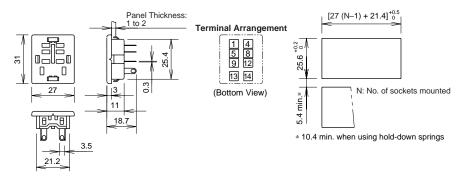

All dimensions are in mm.




2. For hold-down clip/spring selections, see page F-4.

SH Series: Panel Mount Sockets, continued




SH3B-51	
Style	11-blade, panel mount
Terminal	Solder
Electrical Rating	300V, 10A
Compatible Relay	RH3B, *RH2LB (*latching relay)
Hold-Down Spring	SY4S-51F1 SY4S-02F1 for RH3B-4C
Hold-Down Clip	SFA-301 (top notch), SFA-302 (side notch)

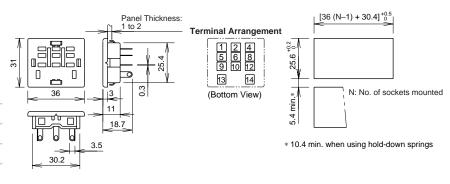



SH4B-51

14-blade, panel mount	
Solder	
300V, 10A	
RH4B	
SY4S-51F1, SY4S-02F1	
SFA-301, SFA-302	

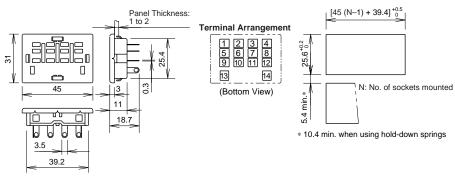

All dimensions are in mm.

F Sockets

2. For hold-down clip/spring selections, see page F-4.


Downloaded from Elcodis.com electronic components distributor

SY Series: Panel Mount Sockets



SY2S-51

Style	8-blade, panel mount		
Terminal	Solder		
Electrical Rating	300V, 7A		
Compatible Relay	RY2S, RY22S		
Hold-Down Spring	SY4S-51F1		
Hold-Down Clip	SFA-301 (top notch), SFA-302 (side notch)		

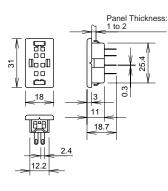


[18(N-1)+12.4]^{+0.5} **Terminal Arrangement** 0.0 0 25.6 N: No. of sockets mounted (Bottom View) 5.4 min.* * 10.4 min. when husing hold-down springs





SY4S-51		
Style	14-blade, panel mount	
Terminal	Solder	
Electrical Rating	300V, 7A	
Compatible Relay	RY4S, RY42S, RM2S, RY2KS, RU4S, RU2S, RU42S	
Compatible Timer	GT5Y	
Hold-Down Spring	SY4S-51F1 for all relays except; SY4S-02F3 for RY2KS relay	
Hold-Down Clip	SFA-301 (top notch), SFA-302 (side notch)	

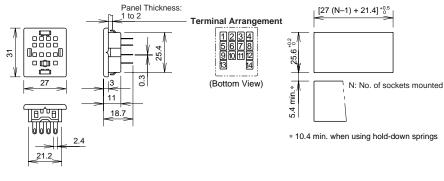

14 58 912

13 14

All dimensions are in mm.



1. For socket mounting accessories, see page F-29.

2. For hold-down clip/spring selections, see page F-4.



SA-203 SA-204 SA-203 M4 screw 18mn washer hold-down spring 5mm



Description	Appearance	Use with	Part No.	Remarks	
Aluminum DIN Rail (1 meter length)	0	All DIN rail sockets	BNDN1000	IDEC offers a low-profile DIN rail (BNDN1000). The BNDN1000 is designed to accommodate snap- mount sockets. Made of durable extruded aluminum, the BNDN-1000 measures 0.413 in height and 1.37 (35mm) in width (DIN standard). Standard length is 39" (1,000mm).	
DIN Rail End Stop		DIN rail	BNL5	9.1 mm wide.	ł
Surface Mount	In La	SY2S, SY4S, SR3B, SH1B,	SA-203	For use on ends of socket groupings when surface mounting.	20
End Connector	AQ 444	SH2B, SH3B, SH4B	SA-204	For use between adjoining sockets when surface mounting.	Sockets
Surface Mount Connector		SY2S, SY4S, SR3B, SH1B, SH2B, SH3B, SH4B	SA-405	For use between adjoining sockets when surface mounting.	IS
DIN Rail Spacer		All DIN rail sockets	SA-406		
Steel Mounting Plates		SY4S-51, SH2B-51	SA-402	11.42" length with 10 holes.	
(for panel mount sockets)		SY4S-51, SH2B-51	SA-403	23.33" length with 21 holes.	
	h l	RH2B, RM2S, RY4S, RY42S, RU4S, RU42S	RH-01		
Relay Holders		RY2S, RH1B	RH-03	 For diagram, see next page. 	
Replacement Hold- Down Spring Anchor		Horseshoe clip for all DIN rail sockets except SR*P-05(C)	Y778-011	For use with hold-down springs (bale wire types). or DIN rail mount sockets. 2 pieces included with each socket.	
Hold-Down Spring for SR*P-05(C)	A	Chair clip for SR*P-05(C)	Y703-102	For SR2P-05, SR2P-05C, SR3P-05, SR3P-05C	

Accessories

www.idec.com

Downloaded from **Elcodis.com** electronic components distributor

Instructions

Mounting Snap-Mount Sockets



Figure 1



Figure 2

Sockets

Mounting Relay Holders

RH-01 or


Figure 1

Snap-mount sockets are designed to mount on the BNDN-1000 mounting rail. The built-in mounting clip eliminates mounting hard-ware and reduces mounting time by 80%.

To mount see Figure 1. Place the end of the socket (end opposite of mounting clip against the outer edge of the rail). Press the socket down firmly until the clip snaps onto the mounting rail. To remove see Figure 2. Pull out the mounting clip with a screwdriver, and lift the socket.

For spacing between adjoining sockets, use the SA-406 DIN rail spacer. Spacers are 0.195" wide. Spacing can be adjusted according to the number of spacers added. Spacers snap on and off easily like snap-mount sockets.

To prevent side-to-side movement, use a BNL-5 end clip at **each** end of every socket row.

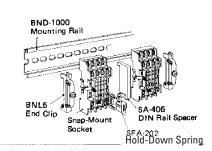

Mount directly onto panel boards in two alternate positions: A and B (see Figure 1). To mount the relay into the holder, hook the bottom edge of the relay case (coil terminal side) onto the relay holder (see Figure 2).

Push down until the relay snaps into place.



Figure 2

Take the two anchor clips (horseshoe / U-shaped piece) that come with the socket and insert into the slits on both sides of the socket. Make sure the raised notches on the anchor clip face into the socket.

Plug relay into socket

Insert the open ends of the hold-down spring into either the first or second hole of the anchor clip. The relay-spring combination will determine which hole should be used.


Slide spring over relay.

Dimensions

Surface Mount Sockets (SH2B-02)

IDEC surface mount sockets (SH2B-02) are also designed to mount individually or collectively on a flat surface without the use of a DIN rail. Use the mounting screw between adjoining sockets and at the outer ends of the row of sockets.

Dimension Table

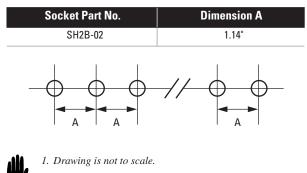


Snap-Mount Sockets

Snap-mount sockets are designed to mount individually or collectively without using a rail. Use a SA-405 connector or SA-204 connector between adjoining sockets (see Figures 1 and 2). Use the SA-203 end connector at the outer ends of each socket row when using the SA-204 connector (see Figure 2).

Dimension Table


Socket Part No.	Dim. B	Dim. C	Dim. D
SY2S-05, SY2S-05C	0.669"	0.826"	0.866"
SY4S-05, SY4S-05C	1.024"	1.181"	1.220"
SR3B-05	1.496"	1.693"	1.732"
SH1B-05, SH1B-05C	0.630"	0.787"	0.827"
SH2B-05, SH2B-05C	1.024"	1.181"	1.220"
SH3B-05, SH3B-05C	1.417"	1.575"	1.614"
SH4B-05, SH4B-05C	1.811"	1.969"	2.008"

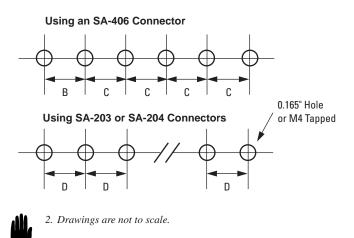

Downloaded from Elcodis.com electronic components distributor

Dimensions, continued


Collective Panel Mounting

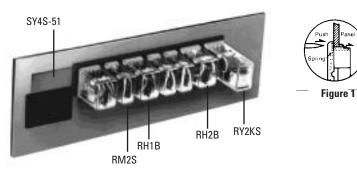

SH and SY series panel mount sockets are designed to mount collectively in panel cut-outs. Insert socket with mounting springs facing the top and bottom edge of the panel cut-out. Push the socket until the mounting spring clips onto the panel. (See Figure 1.)

Dimension Table Width Part No. Relay 1.063" RY4S, RY42, RY2KS, RM2S SY4S-51 SH4B-51 1.772" RH4B SH3B-51 1.418" RH3B, RH2LB SH2B-51 1.063" RH2B SH1B-51 0.709" RH1B SY2S-51 0.709" RY2S, RY22S

How to Calculate Cutout Length (L)

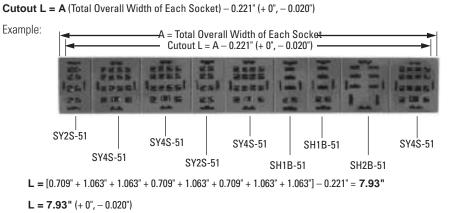

Mounting Plate

