

# Comlinear® CLC1200

# **Instrumentation Amplifier**

#### **FEATURES**

- ±2.3V to ±18V supply voltage range
- Gain range of 1 to 10,000
- Gain set with one external resistor
- ±125µV maximum input offset voltage
- 0.1µV/°C input offset drift
- 700kHz bandwidth at G = 1
- 1.2V/µs slew rate
- 90dB minimum CMRR at G = 10
- 2.2mA maximum supply current
- 6.611V/ VHZ IIIPUL VOILAGE HOISE
- 70nV/√Hz output voltage noise
- 0.2µV<sub>pp</sub> noise (0.1Hz to 10Hz)
- DIP-8 or Pb-free SOIC-8

#### **APPLICATIONS**

- Bridge amplifier
- Scales
- Thermocouple amplifier
- ECG and medical instrumentation
- MRI (Magnetic Resonance Imaging)
- Patient Monitors
- Transducer interface
- Data acquisition systems
- Strain gauge amplifier
- Industrial process controls


## **General Description**

The CLC1200 is a low power, general purpose instrumentation amplifier with a gain range of 1 to 10,000. The CLC1200 is offered in 8-lead SOIC or DIP packages and requires only one external gain setting resistor making it smaller and easier to implement than discrete, 3-amp designs.


While consuming only 2.2mA of supply current, the CLC1200 offers a low 6.6nV/Hz input voltage noise and 0.2µV<sub>pp</sub> noise from 0.1Hz to 10Hz.

The CLC1200 offers a low input offset voltage of  $\pm 125\mu V$  that only varies  $0.1\mu V/^{\circ}C$  over it's operating temperature range of -40°C to +85°C. The CLC1200 also features 50ppm maximum nonlinearity. These features make it well suited for use in data acquisition systems.

## Functional Block Diagram

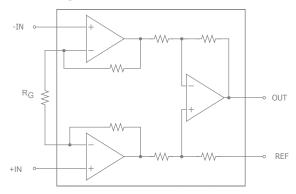

## Competitive Comparison Plots (continued on page 9)

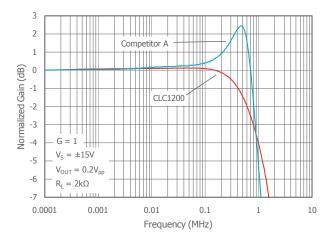


## **Ordering Information**

Part Number	Package	Pb-Free	RoHS Compliant	Operating Temperature Range	Packaging Method
CLC1200ISO8	SOIC-8	Yes	Yes	-40°C to +85°C	Rail
CLC1200ISO8X	SOIC-8	Yes	Yes	-40°C to +85°C	Reel
CLC1200IDP8	DIP-8	Yes	Yes	-40°C to +85°C	Rail

Moisture sensitivity level for all parts is MSL-1.

# Pin Configuration

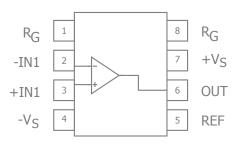

# Pin Assignments

Pin No.	Pin Name	Description
1, 8	R <sub>G</sub>	R <sub>G</sub> sets gain
2	-IN	Negative input
3	+IN	Positive input
4	-V <sub>S</sub>	Negative supply
5	REF	Output is referred to the REF pin potential
6	OUT	Output
7	+V <sub>S</sub>	Positive supply

### **Electrical Characteristics**

 $T_A = 25$ °C,  $V_S = \pm 15$ V,  $R_L = 2k\Omega$  to GND; unless otherwise noted.

G = 1 + (49.4k $\Omega$  /  $R_G$ ); Total RTI Error =  $V_{OSI}$  + ( $V_{OSO}$  / G)

Symbol	Parameter	Conditions	Min	Тур	Max	Units
Gain	<u>'</u>	<u> </u>				
	Gain Range		1		10,000	
		$G = 1, V_{OUT} = \pm 10V$	-0.1		0.1	%
		$G = 10, V_{OUT} = \pm 10V$	-0.375		0.375	%
	Gain Error	$G = 100, V_{OUT} = \pm 10V$	-0.375		0.375	%
		$G = 1,000, V_{OUT} = \pm 10V$	-0.8		0.8	%
	No. Proceeding	$G = 1 - 100$ , $V_{OUT} = -10V$ to $10V$ , $R_L = 10k\Omega$		10	50	ppm
	Nonlinearity	G = 1 - 100, $V_{OUT}$ = -10V to 10V, $R_L$ = $2k\Omega$		10	95	ppm
	Caire va Tarana arah ma	G = 1		<10		ppm/°C
	Gain vs. Temperature	G > 1		<-50		ppm/°C
	Reference Gain Error <sup>(2)</sup>	$V_S = \pm 16.5$	-0.03		0.03	%
Voltage Offs	set					
V <sub>OSI</sub>	Input Offset Voltage	$V_S = \pm 4.5 \text{ to } \pm 16.5$	-125		125	μV
	Average Temperature Coefficient	$V_S = \pm 4.5 \text{ to } \pm 16.5$		0.1		μV/°C
$V_{OSO}$	Output Offset Voltage	$V_S = \pm 4.5 \text{ to } \pm 16.5, G = 1$	-1500	200	1500	μV
	Average Temperature Coefficient	$V_S = \pm 4.5 \text{ to } \pm 16.5$		2.5		μV/°C
		$G = 1$ , $V_S = \pm 2.3$ to $\pm 18V$	80	100		dB
DCD	Official Defended to the Tenders County	$G = 10$ , $V_S = \pm 2.3$ to $\pm 18V$	95	120		dB
PSR	Offset Referred to the Input vs. Supply	$G = 100$ , $V_S = \pm 2.3$ to $\pm 18V$	110	140		dB
		$G = 1,000, V_S = \pm 2.3 \text{ to } \pm 18V$	110	140		dB
Input Currer	nt					
$I_{B}$	Input Bias Current	$V_S = \pm 16.5$	-2	0.5	2	nA
	Average Temperature Coefficient	$V_S = \pm 16.5$		3		pA/°C
$I_{OS}$	Input Offset Current	$V_S = \pm 16.5$	-1		1	nA
Input						
	Innut Impedance	Differential		10, 2		GΩ, pF
	Input Impedance	Common-Mode		10, 2		GΩ, pF
	To such Valta as Danas (3)	$V_S = \pm 4.5, G = 1$	-V <sub>S</sub> +1.9		+V <sub>S</sub> -1.2	V
	Input Voltage Range <sup>(3)</sup>	$V_S = \pm 16.5, G = 1$	-V <sub>S</sub> +1.9		+V <sub>S</sub> -1.4	V
		$G = 1, V_S = \pm 16.5V$	70	90		dB
CMRR	Common Mode Rejection Ratio	$G = 10, V_S = \pm 16.5V$	90	110		dB
CMRR	Common Mode Rejection Ratio	$G = 100, V_S = \pm 16.5V$	108	130		dB
		$G = 1,000, V_S = \pm 16.5V$	108	130		dB
Output						
V	Output Swing	$V_S = \pm 2.3 V \text{ to } \pm 4.5 V$	-V <sub>S</sub> +1.1		+V <sub>S</sub> -1.2	V
V <sub>OUT</sub>	Output Swing	$V_S = \pm 18, G = 1$	-V <sub>S</sub> +1.4		+V <sub>S</sub> -1.2	V
$I_{SC}$	Short Circuit Current			±20		mA
Dynamic Pe	rformance					
		G = 1		700		kHz
D\//	Cmall Cignal Pandwidth	G = 10		400		kHz
BW <sub>-3dB</sub>	Small Signal Bandwidth	G = 100		100		kHz
		G = 1,000		12		kHz
SR	Slew Rate	$G = 10, V_S = \pm 15V$	0.6	1.2		V/µs

Symbol	Parameter	Conditions	Min	Тур	Max	Units
		G = 1 to 100, 5V step		13		μs
$t_S$	Settling Time to 0.01%	G = 1,000, 5V step		110		μs
e <sub>ni</sub>	Input Voltage Noise	$1$ kHz, $G = 1,000$ , $V_S = \pm 15$ V		6.6	13	nV/√Hz
e <sub>no</sub>	Output Voltage Noise	$1kHz, G = 1, V_S = \pm 15V$		70	100	nV/√Hz
		G = 1		5		μV <sub>pp</sub>
RTI	RTI, 0.1Hz to 10Hz	$G = 10, V_S = \pm 15V$			0.8	μV <sub>pp</sub>
		$G = 100, V_S = \pm 15V$		0.2	0.4	μV <sub>pp</sub>
		f = 1kHz		100		fA/√Hz
	Current Noise	0.1Hz to 10Hz		10		pA <sub>pp</sub>
Reference I	nput					
R <sub>IN</sub>	Input Impedance			20		kΩ
I <sub>IN</sub>	Input Current	V <sub>S</sub> = ±16.5V		50	60	μΑ
	Voltage Range	V <sub>S</sub> = ±15V	-V <sub>S</sub> +1.6		+V <sub>S</sub> -1.6	V
	Gain to Output			1 ± 0.0001		
Power Supp	ly		·			
V <sub>S</sub>	Operating Range		±2.3		±18	V
$I_S$	Supply Current	V <sub>S</sub> = ±16.5V		1.3	2.2	mA

#### Notes:

- 1. 100% tested at 25°C
- 2. Nominal reference voltage gain is 1.0
- 3. Input voltage range = CMV + (G  $V_{DIFF}$ )/2

## **Absolute Maximum Ratings**

The safety of the device is not guaranteed when it is operated above the "Absolute Maximum Ratings". The device should not be operated at these "absolute" limits. Adhere to the "Recommended Operating Conditions" for proper device function. The information contained in the Electrical Characteristics tables and Typical Performance plots reflect the operating conditions noted on the tables and plots.

Parameter	Min	Max	Unit
Supply Voltage	0	±18	V
Input Voltage Range	-V <sub>S</sub>	+V <sub>S</sub>	V
Differential Input Voltage, G = 1 to 10		25	V
Differential Input Voltage, G > 10		$\leq 0.05 (R_G + 800) + 1$	V
Load Resistance	0.001		kΩ

## **Reliability Information**

Parameter	Min	Тур	Max	Unit
Junction Temperature			150	°C
Storage Temperature Range	-65		150	°C
Lead Temperature (Soldering, 10s)			260	°C
Package Thermal Resistance				
8-Lead SOIC		100		°C/W
8-Lead DIP		TBD		°C/W

Package thermal resistance ( $\theta_{1A}$ ), JDEC standard, multi-layer test boards, still air.

### **ESD Protection**


Product	SOIC-8	DIP-8
Human Body Model (HBM)	1.5kV	TBD
Charged Device Model (CDM)	2kV	TBD

## **Recommended Operating Conditions**


Parameter	Min	Тур	Max	Unit
Operating Temperature Range	-40		+85	°C
Supply Voltage Range	±2.3		±18	V

 $T_A=25^{\circ}\text{C},\,V_S=\pm15\text{V},\,R_L=2k\Omega$  to GND; unless otherwise noted.


## Input Offset Distribution (typical)

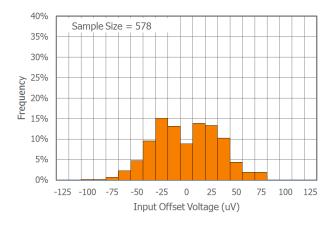

## Input Bias Current Distribution (typical)

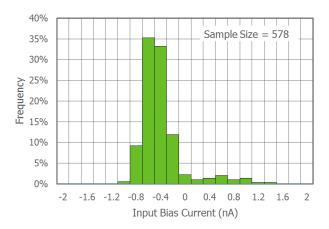


## Input Offset Distribution (typical)

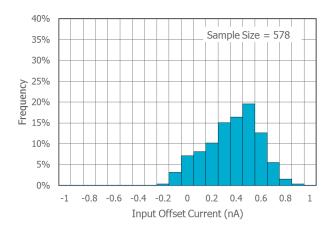


 $T_A=25$  °C,  $V_S=\pm15$ V,  $R_L=2k\Omega$  to GND; unless otherwise noted.


## Gain vs. Frequency

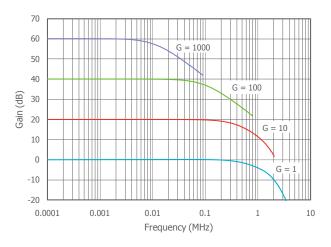


## Input Voltage Range vs. V<sub>s</sub>

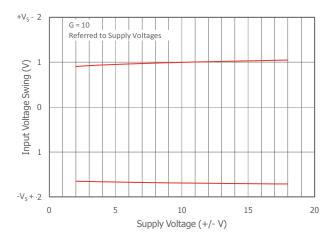


### Large Signal Pulse Response (G = 1)

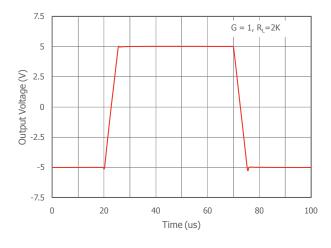


## Output Voltage Swing vs. V<sub>s</sub>

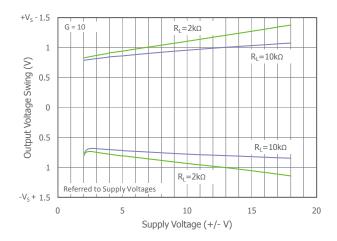

## Output Voltage Swing vs. R<sub>L</sub>

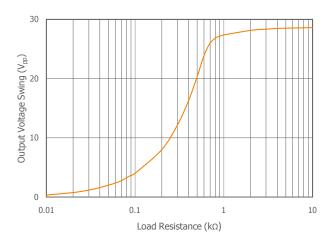


### Large Signal Settling Time (G = 1)

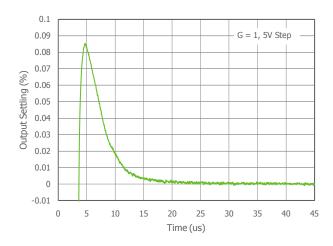


 $T_A = 25$ °C,  $V_S = \pm 15$ V,  $R_L = 2k\Omega$  to GND; unless otherwise noted.


Large Signal Pulse Response (G = 10)

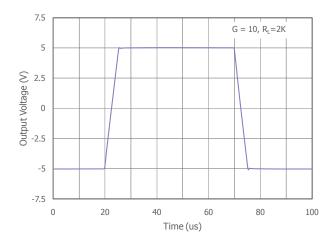


Large Signal Pulse Response (G = 100)

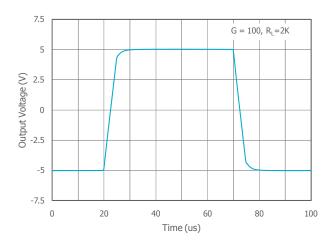


Large Signal Pulse Response (G = 1000)

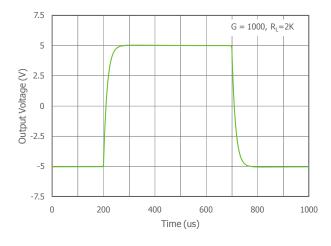


Large Signal Settling Time (G = 10)

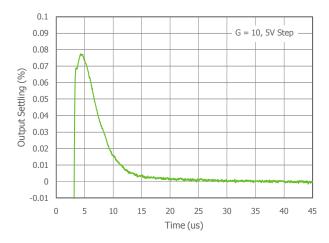

Large Signal Settling Time (G = 100)

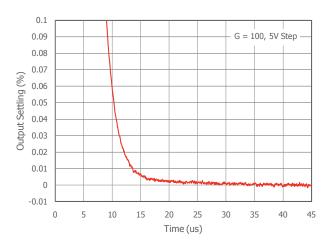


Large Signal Settling Time (G = 1000)

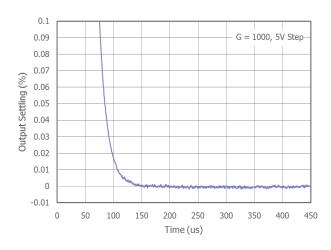


 $T_A = 25$ °C,  $V_S = \pm 15$ V,  $R_L = 2k\Omega$  to GND; unless otherwise noted.


## Small Signal Pulse Response (G = 1)

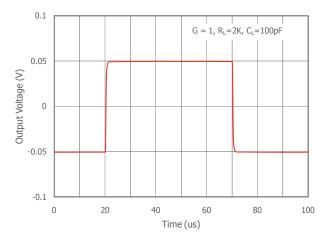


## Small Signal Pulse Response (G = 100)

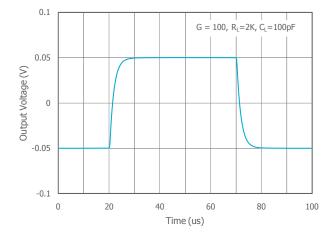

## Small Signal Pulse Response (G = 10)

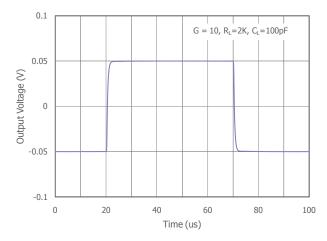


Small Signal Pulse Response (G = 1000)

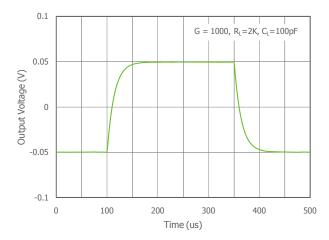


## Typical Competitive Comparison Plots

 $T_A = 25$ °C,  $V_S = \pm 15$ V,  $R_L = 2k\Omega$ , CADEKA evaluation board; unless otherwise noted.


### Frequency Response (G = 1)

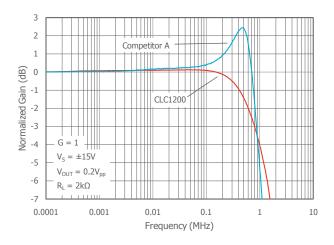


## Frequency Response (G = 100)

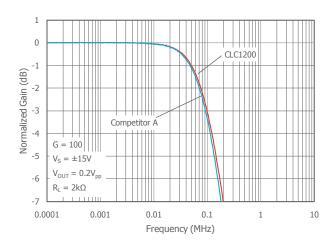


### Large Signal Settling Time (G = 1)

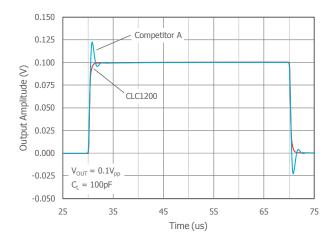


### Frequency Response (G = 10)

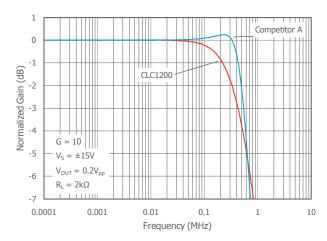

Frequency Response (G = 1,000)

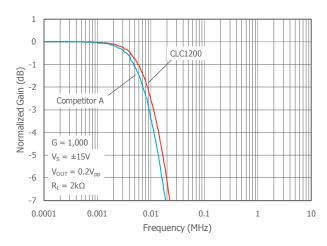

Large Signal Settling Time (G = 10)

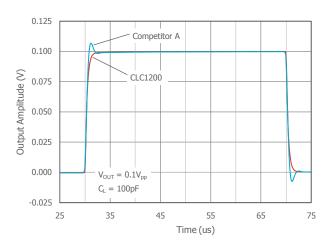

### **Application Information**

### **Basic Operation**

The CLC1200 is a monolithic instrumentation amplifier based on the classic three op amp solution, refer to the Functional Block Diagram on page 1. The CLC1200 produces a single-ended output reffered to the REF pin potential.

The internal resistors are trimmed which allows the gain to be accurately adjusted with one external resistor  $R_G$ .

$$G = \frac{49.4k}{R_G} + 1; R_G = \frac{49.4k}{G-1}$$

 $R_G$  also determines the transconductance of the preamp stage. As  $R_G$  is reduced for larger gains, the transconductance increases to that of the input transistors. Producing the following advantages:

- Open-loop gain increases as the gain is increased, reducing gain releated errors
- Gain-bandwidth increases as the gain is increased, optimizing frequency response
- Reduced input voltage noise which is determined by the collector current and base resistance of the input devices

### **Gain Selection**

The impeadance between pins 1 and 8,  $R_G$ , sets the gain of the CLC1200. Table 1 shows the required standard table values of  $R_G$  for various calculated gains. For G = 1,  $R_G = \infty$ .

1% R <sub>G</sub> (Ω)	Caclulated Gain	0.1% R <sub>G</sub> (Ω)	Calculated Gain
49.9k	1.990	49.3k	2.002
12.4k	4.984	12.4k	4.984
5.49k	9.998	5.49k	9.998
2.61k	19.93	2.61k	19.93
1.00k	50.40	1.01k	49.91
499	100.0	499	100.0
249	199.4	249	199.4
100	495.0	98.8	501.0
49.9	991.0	49.3	1,003.0

Follow these guidelines for improved performance:

- To maintain gain accuracy, use 0.1% to 1% resistors
- To minimize gain error, avoid high parasitic resistance in series with R<sub>G</sub>
- To minimize gain drift, use low TC resistors (<10ppm/°C)

#### Common Mode Rejection

The CLC1200 offers high CMRR. To acheive optimal CMRR performance:

- Connect the reference terminal (pin 5) to a low impedance source
- Minimize capacitive and resistive differences between the inputs

In many applications, shielded cables are used to minimize noise. Properly drive the shield for best CMRR performance over frequency. Figures 1 and 2 show active data guards that are configured to improve AC common-mode rejections. the capacitances of input cable shields are "bootstrapped" to minimize the capacitance mismatch between the inputs.

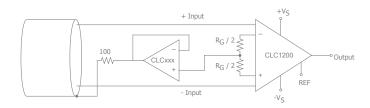


Figure 1: Common-mode Shield Driver

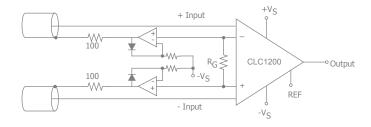


Figure 2: Differential Shield Driver

### **Pressure Measurement Applications**

The CLC1200 is especially suitable for higher resistance pressure sensors powered at lower voltages where small size and low power become more significant.

Figure 3 shows a  $3k\Omega$  pressure transducer bridge powered from 5V. In such a circuit, the bridge consumes only 1.7mA. Adding the CLC1200 and a buffered voltage divider allows the signal to be conditioned for only 3.8mA of total supply current.

Small size and low cost make the CLC1200 especially attractive for voltage output pressure transducers. Since it delivers low noise and drift, it will also serve applications such as diagnostic noninvasive blood pressure measurement.

#### **Medical ECG**

The CLC1200 is perfect for ECG monitors because of its low current noise. A typical application is shown in Figure 4. The CLC1200's low power, low supply voltage requirements, and space-saving 8-lead SOIC package offerings make it an excellent choice for battery-powered data recorders.

Furthermore, the low bias currents and low current noise, coupled with the low voltage noise of the CLC1200, improve the dynamic range for better performance.

The value of capacitor C1 is chosen to maintain stability of the right leg drive loop. Proper safeguards, such as isolation, must be added to this circuit to protect the patient from possible harm.

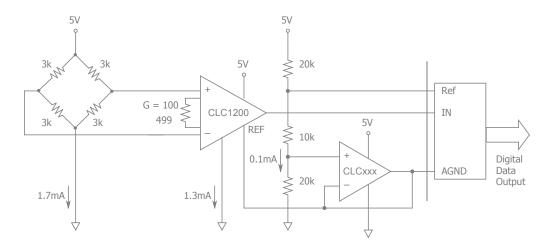


Figure 3: Pressure Monitoring Circuits Operating on a Single 5V Supply

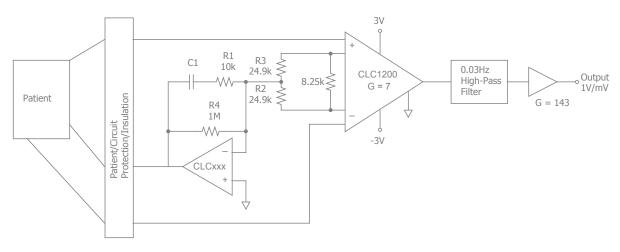


Figure 4: Typical Circuit for ECG Monitor Applications

### Grounding

The output voltage of the CLC1200 is developed with respect to the potential on the reference terminal (pin 8). Simply tie the REF pin to the appropriate "local ground" to resolve many grounding problems.

To isolate low level analog signals from a noisy digital environment, many data-aquisistion components have separate analog and digital ground pins. Use separate ground lines (analog and digital) to minimize current flow from sensitive areas to system ground. These ground returns must be tied together at some point, usually best at the ADC.

#### **Layout Considerations**

General layout and supply bypassing play major roles in high frequency performance. CADEKA has evaluation boards to use as a guide for high frequency layout and as an aid in device testing and characterization. Follow the steps below as a basis for high frequency layout:

- Include 6.8µF and 0.1µF ceramic capacitors for power supply decoupling
- Place the 6.8µF capacitor within 0.75 inches of the power pin
- Place the 0.1µF capacitor within 0.1 inches of the power pin
- Remove the ground plane under and around the part, especially near the input and output pins to reduce parasitic capacitance
- Minimize all trace lengths to reduce series inductances

Refer to the evaluation board layouts below for more information.

#### **Evaluation Board Information**

The following evaluation boards are available to aid in the testing and layout of these devices:

Evaluation Board	Products		
CEB024	CLC1200 in SOIC-8		

#### **Evaluation Board Schematics**

Evaluation board schematics and layouts are shown in Figures 5-7. These evaluation boards are built for dual-supply operation. Follow these steps to use the board in a single-supply application:

- 1. Short -Vs to ground.
- 2. Use C3 and C4, if the -V<sub>S</sub> pin of the amplifier is not directly connected to the ground plane.

Figure 5. CEB00x Schematic

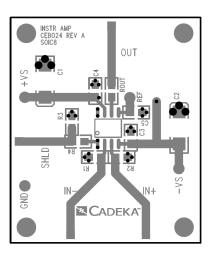


Figure 6. CEB024 Top View


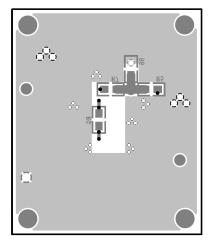



Figure 7. CEB024 Bottom View


### **Mechanical Dimensions**

### SOIC-8 Package



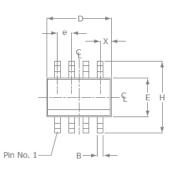

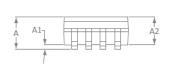

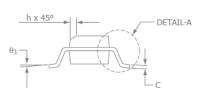

SOIC-8						
SYMBOL	MIN	MAX				
A1	0.10	0.25				
В	0.36	0.48				
С	0.19	0.25				
D	4.80	4.98				
E	3.81	3.99				
е	1.27 BSC					
Н	5.80	6.20				
h	0.25	0.5				
L	0.41	1.27				
Α	1.37	1.73				
$\theta_1$	00	8°				
Х	0.55 ref					
θ2	7° BSC					

#### NOTE:

- 1. All dimensions are in millimeters.
- 2. Lead coplanarity should be 0 to 0.1mm (0.004") max.
- 3. Package surface finishing: VDI 24 $\sim$ 27
- 4. All dimension excluding mold flashes.
- 5. The lead width, B to be determined at 0.1905mm from the lead tip.

### For additional information regarding our products, please visit CADEKA at: cadeka.com

CADEKA Headquarters Loveland, Colorado

T: 970.663.5452

T: 877.663.5452 (toll free)

CADEKA, the CADEKA logo design, COMLINEAR, and the COMLINEAR logo design are trademarks or registered trademarks of CADEKA Microcircuits LLC. All other brand and product names may be trademarks of their respective companies.

CADEKA reserves the right to make changes to any products and services herein at any time without notice. CADEKA does not assume any responsibility or liability arising out of the application or use of any product or service described herein, except as expressly agreed to in writing by CADEKA; nor does the purchase, lease, or use of a product or service from CADEKA convey a license under any patent rights, copyrights, trademark rights, or any other of the intellectual property rights of CADEKA or of third parties.

Copyright ©2008, 2010-2011 by CADEKA Microcircuits LLC. All rights reserved.

