
# PHASE MONITOR RELAYS

Phase Loss, Phase Reversal, Phase Unbal ance, and Under/Over Vol tage PMD Series Surface-Mount







- Protects against phase loss, phase reversal, phase unbalance, undervoltage and overvoltage
- Variety of user-selectable and adjustable settings for the ultimate in three-phase protection
- u Automatic or Manual Reset
- Multi-Color LED indicates normal condition and provides fault indication to simplify troubleshooting
- u 45mm DIN-style surfacemount case
- u 10A SPDT & SPNC output contacts



The PMD Series Phase Monitor Relays utilize a microprocessor-based design to provide protection against phase loss, phase reversal, phase unbalance, undervoltage and overvoltage. The PMDU is a universal voltage product that works on any three-phase system voltage from 208-480V (separate 120V & 575V versions are available). These devices are designed to be compatible with most Wye or Delta systems. In Wye systems, a connection to a neutral is not required. PMD Series products protect against unbalanced voltages or single phasing regardless of any regenerative voltages.

The relay is energized when the phase sequence and all voltages are correct. Any one of five fault conditions will de-energize the relay. As standard, re-energization is automatic upon correction of the fault condition. Manual reset is available if a momentary N.C. switch is wired to the appropriate terminals. A multi-color LED indicates normal condition and also provides specific fault indication to simplify troubleshooting.

The PMD Series offers a variety of user-adjustable settings. The percent phase unbalance is adjustable from 2-10%, and also has a "Disable" setting for those applications where poor voltage conditions could cause nuisance tripping. The undervoltage drop-out can be set at 80-95% of operating voltage (overvoltage setting is fixed at 110% of nominal). The adjustable time delay drop-out on undervoltage (0.1-20 seconds) eliminates nuisance tripping caused by momentary voltage fluctuations. There is also an adjustable time delay (1-300 seconds) on both power up and restart after a fault has been cleared.

MOUNTING STYLE	OPERATING VOLTAGE 50/60 Hz	PRODUCT NUMBER u	WIRING n
Surface-Mount	120V	PMD120	ØA ØB ØC
	208-480V	PMDU	A\B C11 21
	575V	PMD600	
			12 14;M1M2;22
			'- ● ● - MANUAL RESET
			DIAGRAM 105



800-238-7474

www.macromatic.com sales@macromatic.com

- u To order PMD units with a second N.O. contact instead of the N.C. (terminals 21-22), add a suffix "-A1" to the Product Number, i.e., PMDU-A1. To order PMD units with DPDT output contacts instead of one SPDT and one SPNC, <u>but</u> with no manual reset feature, add a suffix "-A2" to the Product Number, i.e., PMDU-A2.
- n See Page 82 for Accessories.

16

# PHASE MONITOR RELAYS

Phase Loss, Phase Reversal, Phase Unbal ance, and Under/Over Vol tage PMD Series Surface-Mount Application Data & Dimensions

Application Data

# Phase Loss:

Unit trips on loss of any Phase A, B or C.

### Phase Reversal:

Unit trips if rotation (sequence) of the three phases is anything other than A-B-C.

# Undervoltage:

Adjustable from 80-95% of nominal voltage. Unit trips when the average of all three lines is less than the adjusted set point for a period longer than the adjustable time delay drop-out.

### Overvoltage:

Fixed at 110% of nominal voltage. Unit trips when the average of all three lines is greater than the fixed set point for a period longer than the time delay drop-out.

# Phase Unbalance:

Adjustable from 2 - 10% unbalance. Unit trips when any one of the three lines deviates from the average of all three lines by more than the adjusted set point. There is also a "Disable" setting adjustment that will turn off the Phase Unbalance Protection if nuisance tripping is a problem.

## **Output Contacts:**

10A SPDT & SPNC @ 240V AC/30VDC, 1/2HP @ 120/240V AC (N.O.), 1/3HP @ 120/240V AC (N.C.)

# Life:

Mechanical: 10,000,000 operations Full Load: 100,000 operations

## **Response Times:**

Power Up & Restart After Fault: 1 - 300 seconds adjustable

Drop-out Due to Fault:

Phase Loss & Reversal 100ms fixed 2 seconds fixed Phase Unbalance

Undervoltage 0.1 - 20 seconds adjustable Overvoltage Fixed Time Based on Inverse

Time Curve

Hysteresis: 2 - 3%

Load (burden): Less than 3VA

Temperature: -28° to 65°C (-20° to 150°F)

#### Mounting:

Does not require a socket. Can either be mounted directly on 35mm DIN track with no additional parts or to a back-panel with two screws.

#### Indicator LED:

LED Status	Indicator	
Green Steady	Normal / Relay ON	
Green Flashing	Power Up / Restart Delay	
Red Steady	Unbalance	
Red Flashing	Undervoltage / Overvoltage	
Amber Steady	Reversal	
Amber Flashing	Loss	
Green / Red Alternating	Undervoltage / Overvoltage Trip Pending	
Red / Amber Alternating *	Nominal Voltage Set Error	

Applies to 208-480V units only

#### Reset:


As standard, reset is automatic upon correction of fault. When a momentary-contact N.C. switch is wired across the Manual Reset terminals (5 & 6), the unit switches to manual reset mode and remote manual reset is available.

## Approvals:





# Dimensions

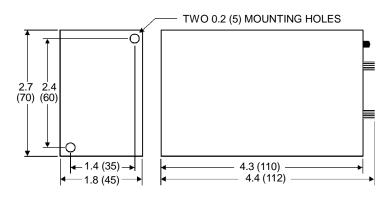

All Dimensions in Inches (Millimeters)

1/09 17