

SDRAM

MT48LC32M4A2 – 8 Meg x 4 x 4 banks MT48LC16M8A2 – 4 Meg x 8 x 4 banks

MT48LC8M16A2 - 2 Meg x 16 x 4 banks

For the latest data sheet, refer to Micron's Web site: www.micron.com

Features

- PC100- and PC133-compliant
- Fully synchronous; all signals registered on positive edge of system clock
- Internal pipelined operation; column address can be changed every clock cycle
- Internal banks for hiding row access/precharge
- Programmable burst lengths (BL): 1, 2, 4, 8, or full page
- Auto precharge, includes concurrent auto precharge, and auto refresh modes
- · Self refresh mode; standard and low power
- 64ms, 4,096-cycle refresh (commercial & industrial)
- 16ms, 4,096-cycle refresh (Automotive)
- LVTTL-compatible inputs and outputs
- Single +3.3 ±0.3V power supply

Options

Designator

•	5
 Configurations 	
 - 32 Meg x 4 (8 Meg x 4 x 4 banks) 	32M4
- 16 Meg x 8 (4 Meg x 8 x 4 banks)	16M8
- 8 Meg x 16 (2 Meg x 16 x 4 banks)	8M16
• Write recovery (^t WR)	
$- {}^{t}WR = "2 CLK"^{1}$	A2
 Package/Pinout 	
 Plastic package – OCPL² 	
– 54-pin TSOP II (400 mil)	TG
- 54-pin TSOP II (400 mil) Pb-free	Р
– 60-ball FBGA (8mm x 16mm)	FB ³
- 60-ball FBGA (8mm x 16mm) Pb-f	
– 54-ball VFBGA (8mm x 8mm)	$F4^4$
- 54-ball VFBGA (8mm x 8mm) Pb-f	ree B4 ⁴
 Timing (cycle time) 	
-7.5 m $^{\circ}$ CL $= 3$ (PC133)	-75
- 7.5ns @ CL = 2 (PC133)	-7E
- 6.0ns @ CL = 3 (x16 only)	-6A
Self refresh	
– Standard	None
 Low power 	L
Design revision	:G
Operating temperature range	
- Commercial (0°C to +70°C)	None
 Industrial (-40°C to +85°C) 	IT^3
 Automotive (-40°C to +105°C) 	AT ³
Notes: 1. Refer to Micron technical note: TN-4	18-05.
2. Off-center parting line.	
 Consult Micron for availability. x16 only. 	
4. x16 only.	

Figure 1:	54-Pin TSOP Pin Assignment
	(Top View)

<u>x</u> 4	<u>x8</u>	<u>x16</u>						<u>x16</u>	<u>x8</u>	<u>x4</u>
-	-	VDD		1.	\bigcirc	54	Ь	Vss	-	-
NC	DQ0	DQ0		2		53		DQ15	DQ7	NC
-	-	VddQ		3		52		VssQ	-	-
NC	NC	DQ1		4		51		DQ14	NC	NC
DQ0	DQ1	DQ2		5		50		DQ13	DQ6	DQ3
-	-	VssQ		6		49		VddQ	-	-
NC	NC	DQ3		7		48		DQ12	NC	NC
NC	DQ2	DQ4		8		47		DQ11	DQ5	NC
-	-	VddQ		9		46		VssQ	-	-
NC	NC	DQ5		10		45		DQ10	NC	NC
DQ1	DQ3	DQ6		11		44		DQ9	DQ4	DQ2
-	-	VssQ		12		43		VddQ	-	-
NC	NC	DQ7		13		42		DQ8	NC	NC
-	-	Vdd		14		41		Vss	-	-
NC	NC	DQML		15		40		NC	-	-
-	-	WE#		16		39		DQMH	DQM	DQM
-	-	CAS#		17		38		CLK	-	-
-	-	RAS#		18		37		CKE	-	-
-	-	CS#		19		36		NC	-	-
-	-	BA0		20		35		A11	-	-
-	-	BA1		21		34		A9	-	-
-	-	A10		22		33		A8	-	-
-	-	A0		23		32		A7	-	-
-	-	A1		24		31		A6	-	-
-	-	A2		25		30		A5	-	-
-	-	A3		26		29		A4	-	-
-	-	Vdd	Щ	27	\bigcirc	28	٣	Vss	-	-

Notes: 1. The # symbol indicates signal is active LOW. A dash (-) indicates x8 and x4 pin function is same as x16 pin function.

Table 1:Address Table

	32 Meg x 4	16 Meg x 8	8 Meg x 16
Configuration	8 Meg x 4 x 4 banks	4 Meg x 8 x 4 banks	2 Meg x 16 x 4 banks
Refresh count	4K	4K	4K
Row addressing	4K (A0–A11)	4K (A0–A11)	4K (A0–A11)
Bank addressing	4 (BA0, BA1)	4 (BA0, BA1)	4 (BA0, BA1)
Column addressing	2K (A0–A9, A11)	1K (A0–A9)	512 (A0–A8)

Table 2:Key Timing ParametersCL = CAS (Read) latency

Speed	Clock	Acces	s Time	Catur	Hold	
Speed Grade	Frequency CL =		CL = 3	Setup Time	Time	
-6A	167 MHz	-	5.4ns	1.5ns	0.8ns	
-7E	143 MHz	-	5.4ns	1.5ns	0.8ns	
-7E	133 MHz	5.4ns	-	1.5ns	0.8ns	
-75	133 MHz	-	5.4ns	1.5ns	0.8ns	
-75	100 MHz	6ns	-	1.5ns	0.8ns	

PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_1.fm - Rev. N 1/09 EN

1

Micron Technology, Inc., reserves the right to change products or specifications without notice. ©1999 Micron Technology, Inc. All rights reserved.

Products and specifications discussed herein are subject to change by Micron without notice.



Table 3: 128Mb SDRAM Part Numbers

Part Number	Architecture
MT48LC32M4A2TG	32 Meg x 4
MT48LC32M4A2P	32 Meg x 4
MT48LC16M8A2TG	16 Meg x 8
MT48LC16M8A2P	16 Meg x 8
MT48LC16M8A2FB ¹	16 Meg x 8
MT48LC16M8A2BB ¹	16 Meg x 8
MT48LC8M16A2TG	8 Meg x 16
MT48LC8M16A2P	8 Meg x 16
MT48LC8M16A2B4 ¹	8 Meg x 16
MT48LC8M16A2F4 ¹	8 Meg x 16

Notes: 1. FBGA Device Decode: http://www.micron.com/support/FBGA/FBGA.asp

General Description

The Micron[®] 128Mb SDRAM is a high-speed CMOS, dynamic random access memory containing 134,217,728 bits. It is internally configured as a quad-bank DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x4's 33,554,432-bit banks is organized as 4,096 rows by 2,048 columns by 4 bits. Each of the x8's 33,554,432-bit banks is organized as 4,096 rows by 1,024 columns by 8 bits. Each of the x16's 33,554,432-bit banks is organized as 4,096 rows by 512 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0–A11 select the row). The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable read or write burst lengths of 1, 2, 4, or 8 locations, or the full page, with a burst terminate option. An auto precharge function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence.

The 128Mb SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the 2*n* rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing one of the other three banks will hide the precharge cycles and provide seamless high-speed, random-access operation.

The 128Mb SDRAM is designed to operate in 3.3V memory systems. An auto refresh mode is provided along with a power-saving, power-down mode. All inputs and outputs are LVTTL-compatible.

SDRAMs offer substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic column-address generation, the ability to interleave between internal banks to hide precharge time, and the capability to randomly change column addresses on each clock cycle during a burst access.



Automotive Temperature

The automotive temperature (AT) option adheres to the following specifications:

- 16ms refresh rate
- Self refresh not supported
- Ambient and case temperature cannot be less than -40° C or greater than $+105^{\circ}$ C



Table of Contents

Features1
General Description
Automotive Temperature
FBGA Ball Assignments
Functional Block Diagrams
Pin/Ball Descriptions
Functional Description
Initialization
Register Definition
Mode Register
Burst Length (BL)
Burst Type
CAS Latency
Operating Mode
Write Burst Mode
Commands
COMMAND INHIBIT
NO OPERATION (NOP)
LOAD MODE REGISTER (LMR)
ACTIVE
READ
WRITE
PRECHARGE
Auto Precharge
BURST TERMINATE
AUTO REFRESH
SELF REFRESH
Operations
Bank/row Activation
Reads
WRITEs
PRECHARGE
Power-Down
Clock Suspend
BURST READ/SINGLE WRITE
Concurrent Auto Precharge
READ with Auto Precharge
WRITE with Auto Precharge
Electrical Specifications
Temperature and Thermal Impedance
Notes
Timing Diagrams
Package Dimensions



List of Figures

Figure 1:	54-Pin TSOP Pin Assignment (Top View)1
Figure 2:	60-Ball FBGA Ball Assignments (Top View), 16 Meg x 8, 8mm x 16mm
Figure 3:	54-Ball VFBGA Assignments (Top View), 8 Meg x 16, 8mm x 8mm9
Figure 4:	32 Meg x 4 SDRAM
Figure 5:	16 Meg x 8 SDRAM
Figure 6:	8 Meg x 16 SDRAM
Figure 7:	Mode Register Definition
Figure 8:	CAS Latency
Figure 9:	Activating a Specific Row in a Specific Bank
Figure 10:	Example: Meeting ^t RCD (MIN) When $2 < {}^{t}RCD$ (MIN)/ ${}^{t}CK \le 3$
Figure 11:	READ Command
Figure 12:	CAS Latency
Figure 13:	Consecutive READ Bursts
Figure 14:	Random READ Accesses
Figure 15:	READ-to-WRITE
Figure 16:	READ-to-WRITE with Extra Clock Cycle
Figure 17:	READ-to-PRECHARGE
Figure 18:	Terminating a READ Burst
Figure 19:	WRITE Command
Figure 20:	WRITE Burst
Figure 21:	WRITE-to-WRITE
Figure 22:	Random WRITE Cycles
Figure 23:	WRITE-to-READ
Figure 24:	WRITE-to-PRECHARGE
Figure 25:	Terminating a WRITE Burst
Figure 26:	PRECHARGE Command
Figure 27:	Power-Down
Figure 28:	Clock Suspend During WRITE Burst
Figure 29:	Clock Suspend During READ Burst
Figure 30:	READ With Auto Precharge Interrupted by a READ
Figure 31:	READ With Auto Precharge Interrupted by a WRITE
Figure 32:	WRITE With Auto Precharge Interrupted by a READ40
Figure 33:	WRITE With Auto Precharge Interrupted by a WRITE40
Figure 34:	Example Temperature Test Point Location, 54-Pin TSOP: Top View
Figure 35:	Example Temperature Test Point Location, 54-Ball VFBGA: Top View
Figure 36:	Example Temperature Test Point Location, 60-Ball FBGA: Top View
Figure 37:	Initialize and Load Mode Register
Figure 38:	Power-Down Mode
Figure 39:	Clock Suspend Mode
Figure 40:	Auto Refresh Mode
Figure 41:	Self Refresh Mode
Figure 42:	READ – Without Auto Precharge
Figure 43:	READ – With Auto Precharge
Figure 44:	Single READ – Without Auto Precharge
Figure 45:	Single READ – With Auto Precharge
Figure 46:	Alternating Bank Read Accesses
Figure 47:	READ – Full-Page Burst
Figure 48:	READ – DQM Operation
Figure 49:	WRITE – Without Auto Precharge
Figure 50:	WRITE – With Auto Precharge
Figure 51:	Single WRITE – Without Auto Precharge
Figure 52:	Single WRITE – With Auto Precharge
Figure 53:	Alternating Bank Write Accesses
Figure 54:	WRITE – Full-Page Burst
Figure 55:	WRITE – DQM Operation
Figure 56:	54-Pin Plastic TSOP (400 mil)



Figure 57:	60-Ball FBGA "FB/BB" Package (x8 device), 8mm x 16mm	73
Figure 58:	54-Ball VFBGA "F4/B4" Package (x16 device), 8mm x 8mm	74




List of Tables

Table 1:	Address Table	1
Table 2:	Key Timing Parameters	1
Table 3:	128Mb SDRAM Part Numbers	
Table 4:	Pin/Ball Descriptions	13
Table 5:	Burst Definition.	
Table 6:	CAS Latency	20
Table 7:	Truth Table 1 - Commands and DQM Operation	21
Table 8:	Truth Table 2 – CKE	41
Table 9:	Truth Table 3 – Current State Bank n, Command to Bank n	42
Table 10:	Truth Table 4 – Current State Bank n, Command to Bank m	44
Table 11:	Absolute Maximum Ratings	46
Table 12:	Temperature Limits	47
Table 13:	Thermal Impedance Simulated Values	47
Table 14:	DC Electrical Characteristics and Operating Conditions	49
Table 15:	IDD Specifications and Conditions	49
Table 16:	Capacitance	49
Table 17:	Electrical Characteristics and Recommended AC Operating Conditions	50
Table 18:	AC Functional Characteristics	50



FBGA Ball Assignments



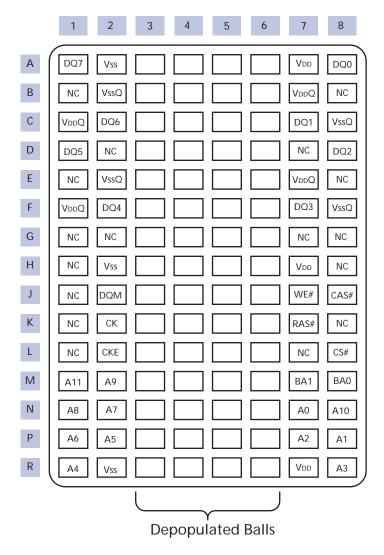



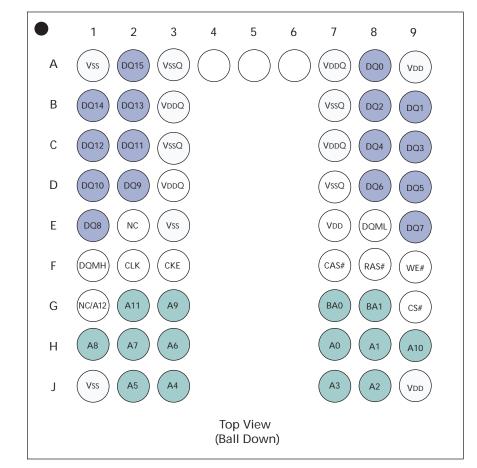


Figure 3: 54-Ball VFBGA Assignments (Top View), 8 Meg x 16, 8mm x 8mm

Notes: 1. The balls at A4, A5, and A6 are not in the physical package. They are included in the drawing to illustrate that rows 4, 5, and 6 exist but contain no solder balls.



Functional Block Diagrams

Figure 4: 32 Meg x 4 SDRAM

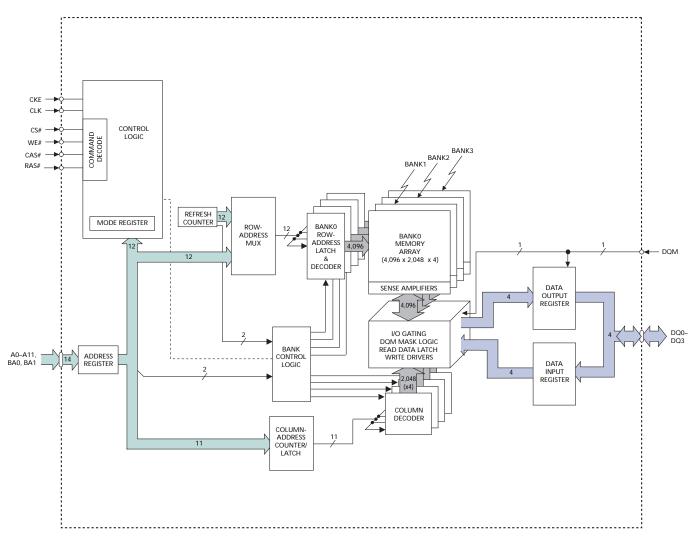




Figure 5: 16 Meg x 8 SDRAM


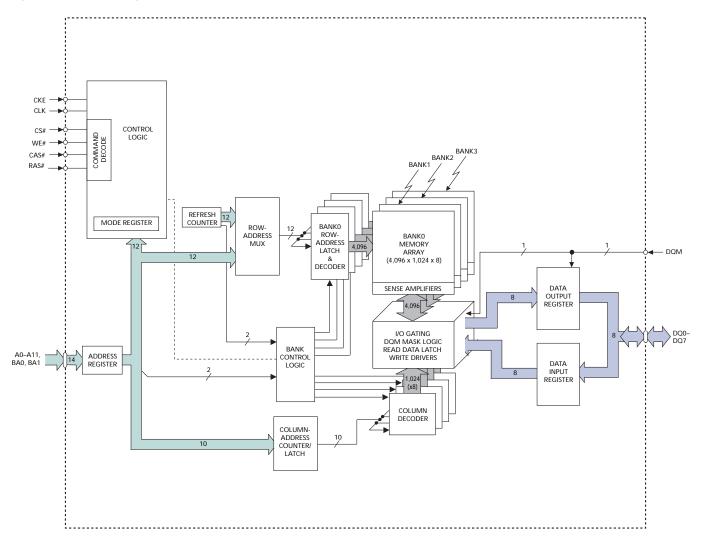




Figure 6: 8 Meg x 16 SDRAM



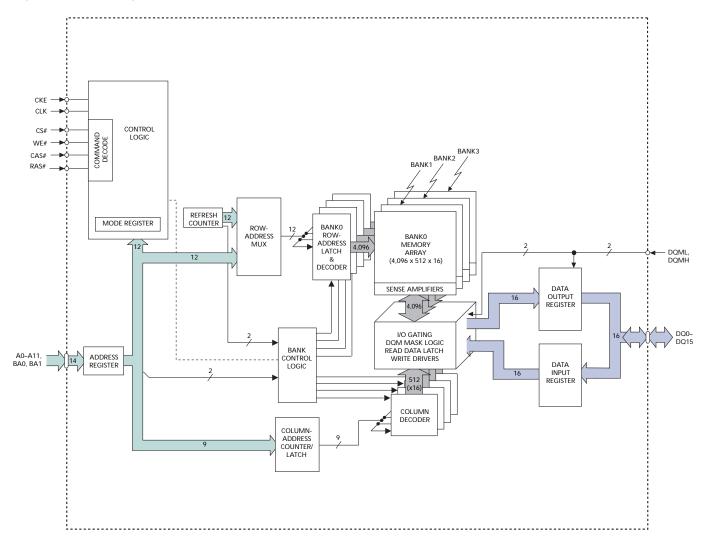

Pin/Ball Descriptions

Table 4:Pin/Ball Descriptions

54-Pin TSOP	54-Ball VFBGA	60-Ball FBGA	Symbol	Туре	Description
38	F2	К2	CLK	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
37	F3	L2	CKE	Input	Clock enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides PRECHARGE power-down and SELF REFRESH operation (all banks idle), ACTIVE power-down (row active in any bank), or CLOCK SUSPEND operation (burst/access in progress). CKE is synchronous except after the device enters power-down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, including CLK, are disabled during power-down and self refresh modes, providing low standby power. CKE may be tied HIGH.
19	G9	L8	CS#	Input	Chip select: CS# enables (registered LOW) and disables (registered HIGH) the command decoder. All commands are masked when CS# is registered HIGH, but READ/WRITE bursts already in progress will continue and DQM operation will retain its DQ mask capability while CS# is HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is considered part of the command code.
16, 17, 18	F9, F7, F8	J7, J8, K7	WE#, CAS#, RAS#	Input	Command inputs: WE#, CAS#, and RAS# (along with CS#) define the command being entered.
39 15, 39	– E8, F1	J2 -	x4, x8: DQM x16: DQML, DQMH	Input	Input/Output mask: DQM is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked when DQM is sampled HIGH during a WRITE cycle. The output buffers are placed in a High-Z state (2-clock latency) when DQM is sampled HIGH during a READ cycle. On the x4 and x8, DQML (pin 15) is a NC and DQMH is DQM. On the x16, DQML corresponds to DQ0– DQ7, and DQMH corresponds to DQ8–DQ15. DQML and DQMH are considered same state when referenced as DQM.
20, 21	G7, G8	M8, M7	BA0, BA1	Input	Bank address inputs: BA0 and BA1 define to which bank the ACTIVE, READ, WRITE, or PRECHARGE command is being applied.
23–26, 29– 34, 22, 35	H7, H8, J8, J7, J3, J2, H3, H2, H1, G3, H9, G2	N7, P8, P7, R8, R1, P2, P1, N2, N1, M2, N8, M1	A0-A11	Input	Address inputs: A0–A11 are sampled during the ACTIVE command (row-address A0–A11) and READ/WRITE command (column-address A0–A9, A11 [x4]; A0–A9 [x8]; A0–A8 [x16]; with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a precharge command to determine whether all banks are to be precharged (A10 [HIGH]) or bank selected by BA0, BA1 (A10 [LOW]). The address inputs also provide the op-code during a LOAD MODE REGISTER (LMR) command.



Table 4:	Pin/Ball Descriptions	(Continued)
----------	-----------------------	-------------

54-Pin TSOP	54-Ball VFBGA	60-Ball FBGA	Symbol	Туре	Description
2, 4, 5, 7, 8, 10, 11, 13, 42, 44, 45, 47, 48, 50, 51, 53	A8, B9, B8, C9, C8, D9, D8, E9, E1, D2, D1, C2, C1, B2, B1, A2	_	DQ0- DQ15	x16: I/O	Data input/output: Data bus for x16 (pins 4, 7, 10, 13, 42, 45, 48, and 51 are NCs for x8; and 2, 4, 7, 8, 10, 13, 42, 45, 47, 48, 51, and 53 are NCs for x4).
2, 5, 8, 11, 44, 47, 50, 53	-	A8, C7, D8, F7, F2, D1, C2, A1	DQ0-DQ7	x8: I/O	Data input/output: Data bus for x8 (pins 2, 8, 47, and 53 are NCs for x4; balls A8, D8, D1, and A1 are NCs for x4).
5, 11, 44, 50	_	C7, F7, F2, C2	DQ0-DQ3	x4: I/O	Data input/output: Data bus for x4.
40	E2	B1, B8, D2, D7, E1, E8, G1, G2, G7, G8, H1, H8, J1, K1, K8, L7	NC	_	No connect: These pins should be left unconnected.
36	G1	L1	NC	-	Address input (A12) for the 256Mb and 512Mb devices.
3, 9, 43, 49	A7, B3, C7, D3	B7, C1, E7, F1	VddQ	Supply	DQ power: Isolated DQ power on the die for improved noise immunity.
6, 12, 46, 52	A3, B7, C3, D7	B2, C8, E2, F8	VssQ	Supply	DQ ground: Isolated DQ ground on the die for improved noise immunity.
1, 14, 27	A9, E7, J9	A7, R7	Vdd	Supply	Power supply: +3.3 ±0.3V.
28, 41, 54	A1, E3, J1	A2, H2, R2	Vss	Supply	Ground.



Functional Description

In general, the 128Mb SDRAMs (8 Meg x 4 x 4 banks, 4 Meg x 8 x 4 banks, and 2 Meg x 16 x 4 banks) are quad-bank DRAMs that operate at 3.3V and include a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x4's 33,554,432-bit banks is organized as 4,096 rows by 2,048 columns by 4 bits. Each of the x8's 33,554,432-bit banks is organized as 4,096 rows by 1,024 columns by 8 bits. Each of the x16's 33,554,432-bit banks is organized as 4,096 rows by 512 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0 and BA1 select the bank, A0–A11 select the row). The address bits (x4: A0–A9, A11; x8: A0–A9; x16: A0–A8) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions, and device operation.

Initialization

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. After power is applied to VDD and VDDQ (simultaneously) and the clock is stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a 100µs delay prior to issuing any command other than a COMMAND INHIBIT or NOP. Starting at some point during this 100µs period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands must be applied.

After the 100µs delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, at least two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for mode register programming. Because the mode register will power up in an unknown state, it must be loaded prior to applying any operational command. If desired, the two AUTO REFRESH commands can be issued after the LMR command.

The recommended power-up sequence for SDRAMs:

- 1. Simultaneously apply power to VDD and VDDQ.
- 2. Assert and hold CKE at a LVTTL logic LOW since all inputs and outputs are LVTTLcompatible.
- 3. Provide stable CLOCK signal. Stable clock is defined as a signal cycling within timing constraints specified for the clock pin.
- 4. Wait at least 100 μs prior to issuing any command other than a COMMAND INHIBIT or NOP.
- 5. Starting at some point during this 100µs period, bring CKE HIGH. Continuing at least through the end of this period, one or more COMMAND INHIBIT or NOP commands must be applied.
- 6. Perform a PRECHARGE ALL command.



- 7. Wait at least ^tRP time; during this time, NOPs or DESELECT commands must be given. All banks will complete their precharge, thereby placing the device in the all banks idle state.
- 8. Issue an AUTO REFRESH command.
- 9. Wait at least ^tRFC time, during which only NOPs or COMMAND INHIBIT commands are allowed.
- 10. Issue an AUTO REFRESH command.
- 11. Wait at least ^tRFC time, during which only NOPs or COMMAND INHIBIT commands are allowed.
- 12. The SDRAM is now ready for mode register programming. Because the mode register will power up in an unknown state, it should be loaded with desired bit values prior to applying any operational command. Using the LMR command, program the mode register. The mode register is programmed via the MODE REGISTER SET command with BA1 = 0, BA0 = 0 and retains the stored information until it is programmed again or the device loses power. Not programming the mode register upon initialization will result in default settings, which may not be desired. Outputs are guaranteed High-Z after the LMR command is issued. Outputs should be High-Z already before the LMR command is issued.
- 13. Wait at least ^tMRD time, during which only NOP or DESELECT commands are allowed.

At this point, the DRAM is ready for any valid command.

Note: If desired, more than two AUTO REFRESH commands can be issued in the sequence. After steps 9 and 10 are complete, repeat them until the desired number of AUTO REFRESH + ^tRFC loops is achieved.

Register Definition

Mode Register	
	The mode register is used to define the specific mode of operation of the SDRAM. This definition includes the selection of a burst length (BL), a burst type, a CAS latency (CL), an operating mode, and a write burst mode, as shown in Figure 7 on page 18. The mode register is programmed via the LMR command and will retain the stored information until it is programmed again or the device loses power.
	Mode register bits M0–M2 specify the BL, M3 specifies the type of burst (sequential or interleaved), M4–M6 specify the CL, M7 and M8 specify the operating mode, M9 specifies the write burst mode, and M10 and M11 are reserved for future use.
	The mode register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.
Burst Length (BL)	
	Read and write accesses to the SDRAM are burst oriented, with the BL being program- mable, as shown in Figure 7 on page 18. BL determines the maximum number of column locations that can be accessed for a given READ or WRITE command. BL of 1, 2, 4, or 8 locations are available for both the sequential and the interleaved burst types, and a full-page burst is available for the sequential mode. The full-page burst is used in conjunction with the BURST TERMINATE command to generate arbitrary BLs.
	Reserved states cannot be used because unknown operation or incompatibility with future versions may result.

PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_2.fm - Rev. N 1/09 EN



When a READ or WRITE command is issued, a block of columns equal to the BL is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A1–A9, A11 (x4), A1–A9 (x8), or A1–A8 (x16) when BL = 2; by A2–A9, A11 (x4), A2–A9 (x8), or A2–A8 (x16) when BL = 4; and by A3–A9, A11 (x4), A3–A9 (x8), or A3–A8 (x16) when BL = 8. The remaining (least significant) address bit(s) is (are) used to select the starting location within the block. Full-page bursts wrap within the page if the boundary is reached.


Burst Type

Accesses within a given burst may be programmed either to be sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the BL, the burst type, and the starting column address, as shown in Table 5 on page 19.



Figure 7: Mode Register Definition

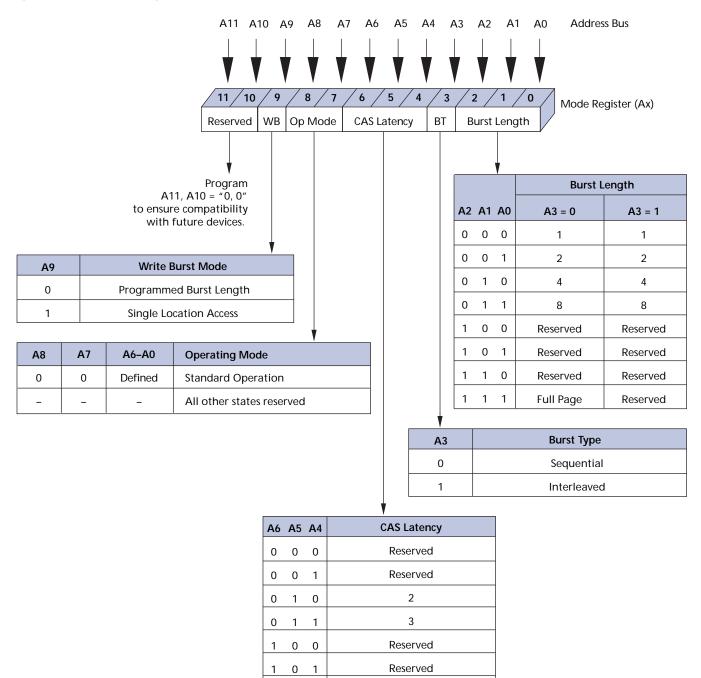

Reserved

Reserved

0

1 1

1 1 1



Table 5: **Burst Definition**

Burst	Stor	ting Col	ump	Order of Accesses Within a Burst					
Length	Star	ting Col Address	umm S	Type = Sequential	Type = Interleaved				
			A 0						
2			0	0-1	0-1				
			1	1-0	1-0				
		A1	A 0						
		0	0	0-1-2-3	0-1-2-3				
4		0	1	1-2-3-0	1-0-3-2				
		1 0		2-3-0-1	2-3-0-1				
		1	1	3-0-1-2	3-2-1-0				
	A2	A1	A0						
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7				
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6				
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5				
8	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4				
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3				
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2				
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1				
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0				
Full page (y)	n = A0–A11/9/8 (location 0–y)			Cn, Cn + 1, Cn + 2, Cn + 3, Cn + 4, Cn - 1, Cn	Not supported				

Notes: 1. For full-page accesses: y = 2,048 (x4), y = 1,024 (x8), and y = 512 (x16).

- 2. For BL = 2, A1–A9, A11 (x4), A1–A9 (x8), or A1–A8 (x16) select the block-of-two burst; A0 selects the starting column within the block.
- 3. For BL = 4, A2–A9, A11 (x4), A2–A9 (x8), or A2–A8 (x16) select the block-of-four burst; A0– A1 select the starting column within the block.
- 4. For BL = 8, A3-A9, A11 (x4), A3-A9 (x8), or A3-A8 (x16) select the block-of-eight burst; A0-A2 select the starting column within the block.
- 5. For a full-page burst, the full row is selected and A0-A9, A11 (x4), A0-A9 (x8), or A0-A8 (x16) select the starting column.
- 6. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.

CAS Latency

The CL is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to 2 or 3 clocks.

If a READ command is registered at clock edge *n* and the latency is *m* clocks, the data will be available by clock edge n + m. The DQ will start driving as a result of the clock edge 1 cycle earlier (n + m - 1), and provided that the relevant access times are met, the data will be valid by clock edge n + m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a read command is registered at T0 and the latency is programmed to 2 clocks, the DQ will start driving after T1 and the data will be valid by T2, as shown in Figure 8 on page 20. Table 6 on page 20 indicates the operating frequencies at which each CL setting can be used.


Reserved states should not be used as unknown operation or incompatibility with future versions may result.




Table 6: CAS Latency

	Allowable Operating Frequency (MHz)				
Speed	CL = 2	CL = 3			
-6A	-	≤ 167			
-7E	≤ 1 33	≤ 143			
-75	≤ 100	≤ 133			

Figure 8: CAS Latency

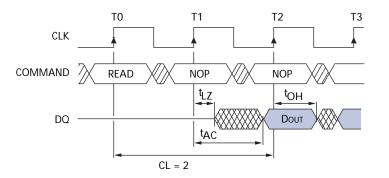

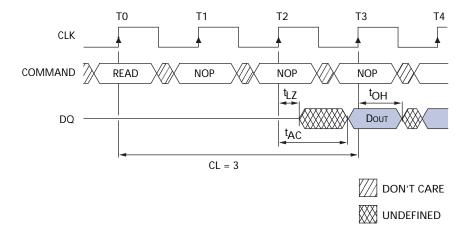

Operating Mode

The normal operating mode is selected by setting M7 and M8 to 0; the other combinations of values for M7 and M8 are reserved for future use and/or test modes. The programmed BL applies to both read and write bursts.

Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.

Write Burst Mode

When M9 = 0, the BL programmed via M0–M2 applies both to read and write bursts; when M9 = 1, the programmed BL applies to read bursts, but write accesses are single-location (nonburst) accesses.



Commands

Table 7 provides a quick reference of available commands. This is followed by a written description of each command. Three additional truth tables appear following "Operations" on page 24; these tables provide current state/next state information.

Table 7: Truth Table 1 – Commands and DQM Operation

CKE is HIGH for all commands shown except SELF REFRESH

Name (Function)	CS#	RAS#	CAS#	WE#	DQM	ADDR	DQ	Notes
COMMAND INHIBIT (NOP)	Н	Х	Х	Х	Х	Х	Х	
NO OPERATION (NOP)	L	Н	Н	Н	Х	Х	Х	
ACTIVE (Select bank and activate row)	L	L	Н	Н	Х	Bank/ row	Х	1
READ (Select bank and column, and start READ burst)	L	Н	L	Н	L/H8	Bank/ col	Х	2
WRITE (Select bank and column, and start WRITE burst)	L	Н	L	L	L/H8	Bank/ col	Valid	2
BURST TERMINATE	L	Н	Н	L	Х	Х	Active	
PRECHARGE (Deactivate row in bank or banks)	L	L	Н	L	Х	Code	Х	3
AUTO refresh or self refresh (Enter self refresh mode)	L	L	L	Н	Х	Х	Х	4, 5
LMR	L	L	L	L	Х	Op- code	Х	6
Write enable/output enable	-	-	-	-	L	-	Active	7
Write inhibit/output High-Z	-	-	-	-	Н	-	High-Z	7

Notes: 1. A0-A11 provide row address, and BA0, BA1 determine which bank is made active.

2. A0–A9; A11 (x4); A0–A9 (x8); or A0–A8 (x16) provide column address; A10 HIGH enables the auto precharge feature (nonpersistent), while A10 LOW disables the auto precharge feature; BA0, BA1 determine which bank is being read from or written to.

- 3. A10 LOW: BA0, BA1 determine the bank being precharged. A10 HIGH: All banks precharged and BA0, BA1 are "Don't Care."
- 4. This command is AUTO REFRESH if CKE is HIGH and SELF REFRESH if CKE is LOW.
- 5. Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 6. A0–A11 define the op-code written to the mode register.
- 7. Activates or deactivates the DQ during WRITEs (0-clock delay) and READs (2-clock delay).

COMMAND INHIBIT

The COMMAND INHIBIT function prevents new commands from being executed by the SDRAM, regardless of whether the CLK signal is enabled. The SDRAM is effectively deselected. Operations already in progress are not affected.

NO OPERATION (NOP)

The NO OPERATION (NOP) command is used to perform a NOP to an SDRAM, which is selected (CS# is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.



LOAD MODE REGISTER (LMR)

	The mode register is loaded via inputs A0–A11 (A12 should be driven LOW). See "Mode Register" heading in the "Register Definition" section on page 16. The LMR command can only be issued when all banks are idle, and a subsequent executable command cannot be issued until ^t MRD is met.
ACTIVE	
	The ACTIVE command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0–A11 selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.
READ	
	The READ command is used to initiate a burst read access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0–A9, A11 (x4), A0–A9 (x8), or A0–A8 (x16) selects the starting column location. The value on input A10 determines whether auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the read burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Read data appears on the DQs subject to the logic level on the DQM inputs 2 clocks earlier. If a given DQM signal was registered HIGH, the corresponding DQ will be High-Z 2 clocks later; if the DQM signal was registered LOW, the DQ will provide valid data.
WRITE	
	The WRITE command is used to initiate a burst write access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0–A9, A11 (x4), A0–A9 (x8), or A0–A8 (x16) selects the starting column location. The value on input A10 determines whether auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the write burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Input data appearing on the DQ is written to the memory array subject to the DQM input logic level appearing coin- cident with the data. If a given DQM signal is registered LOW, the corresponding data will be written to memory; if the DQM signal is registered HIGH, the corresponding data inputs will be ignored, and a write will not be executed to that byte/column location.
PRECHARGE	
	The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (^t RP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." After a bank has been precharged, it is in the idle state and must be acti- vated prior to any READ or WRITE commands being issued to that bank.
Auto Precharge	
	Auto precharge is a feature that performs the same individual-bank precharge function described above, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command.

Downloaded from Elcodis.com electronic components distributor



A precharge of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst, except in the full-page burst mode, where auto precharge does not apply. Auto precharge is nonpersistent in that either it is enabled or disabled for each individual READ or WRITE command.

Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge time (^tRP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time, as described for each burst type in the "Operations" section on page 24.

BURST TERMINATE

The BURST TERMINATE command is used either to truncate fixed-length or full-page bursts. The most recently registered READ or WRITE command prior to the BURST TERMINATE command will be truncated, as shown in the "Operations" section on page 24.

The BURST TERMINATE command does not precharge the row; the row will remain open until a PRECHARGE command is issued.

AUTO REFRESH

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS#-BEFORE-RAS# (CBR) refresh in older DRAMs. This command is nonpersistent, so it must be issued each time a refresh is required. All active banks must be PRECHARGED prior to issuing an AUTO REFRESH command. The AUTO REFRESH command should not be issued until the minimum ^tRP has been met after the PRECHARGE command as shown in the operation section.

The addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AUTO REFRESH command. Regardless of device width, the 128Mb SDRAM requires 4,096 AUTO REFRESH cycles every 64ms (commercial and industrial) or 16ms (automotive). Providing a distributed AUTO REFRESH command every 15.625µs (commercial and industrial) or 3.906µs (automotive) will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 4,096 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate (^tRFC), once every 64ms (commercial and industrial) or 16ms (automotive).

SELF REFRESH

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered down. When in the self refresh mode, the SDRAM retains data without external clocking. The SELF REFRESH command is initiated like an AUTO REFRESH command except CKE is disabled (LOW). After the SELF REFRESH command is registered, all the inputs to the SDRAM become "Don't Care" with the exception of CKE, which must remain LOW.

After self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own auto refresh cycles. The SDRAM must remain in self refresh mode for a minimum period equal to ^tRAS and may remain in self refresh mode for an indefinite period beyond that.



The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) prior to CKE going back HIGH. After CKE is HIGH, the SDRAM must have NOP commands issued (a minimum of 2 clocks) for ^tXSR because this amount of time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands must be issued every $15.625\mu s$ or less because both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.

Self refresh is not supported on automotive temperature (AT) devices.

Operations

Bank/row Activation

Before any READ or WRITE commands can be issued to a bank within the SDRAM, a row in that bank must be "opened." This is accomplished via the ACTIVE command, which selects both the bank and the row to be activated (see Figure 9 on page 25).

After opening a row (issuing an ACTIVE command), a READ or WRITE command may be issued to that row, subject to the ^tRCD specification. ^tRCD (MIN) should be divided by the clock period and rounded up to the next whole number to determine the earliest clock edge after the ACTIVE command on which a READ or WRITE command can be entered. For example, a ^tRCD specification of 20ns with a 125 MHz clock (8ns period) results in 2.5 clocks, rounded to 3. This is reflected in Figure 10 on page 25, which covers any case where $2 < {}^{t}RCD$ (MIN)/^tCK ≤ 3 . (The same procedure is used to convert other specification limits from time units to clock cycles.)

A subsequent ACTIVE command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive ACTIVE commands to the same bank is defined by ^tRC.

A subsequent ACTIVE command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive ACTIVE commands to different banks is defined by ^tRRD.






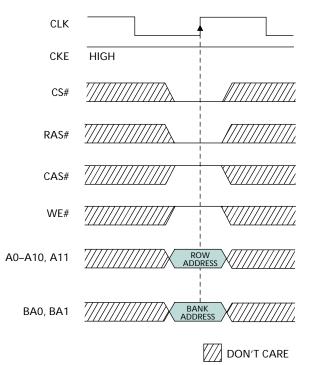


Figure 10: Example: Meeting ^tRCD (MIN) When 2 < ^tRCD (MIN)/^tCK \leq 3

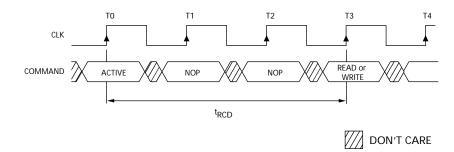

Reads

READ bursts are initiated with a READ command, as shown in Figure 11 on page 26.

The starting column and bank addresses are provided with the READ command, and auto precharge either is enabled or disabled for that burst access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic READ commands used in the following illustrations, auto precharge is disabled.

During READ bursts, the valid data-out element from the starting column address will be available following the CL after the READ command. Each subsequent data-out element will be valid by the next positive clock edge. Figure 12 on page 26 shows general timing for each possible CL setting.

Upon completion of a burst, assuming no other commands have been initiated, the DQ will go High-Z. A full-page burst will continue until terminated. (At the end of the page, it will wrap to column 0 and continue.)



Figure 11: READ Command


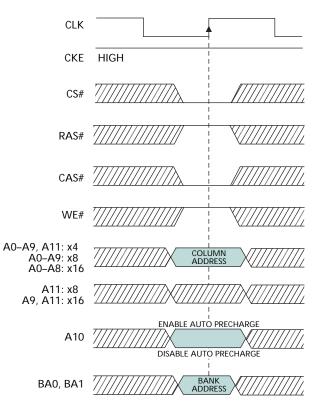


Figure 12: CAS Latency




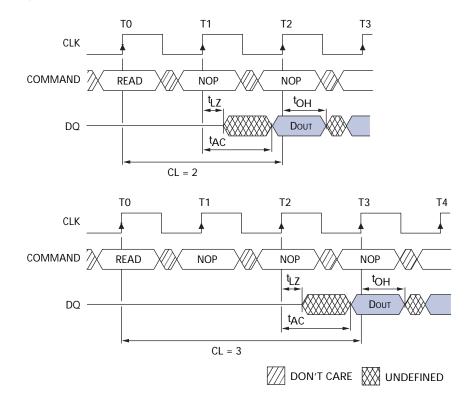

Data from any READ burst may be truncated with a subsequent READ command, and data from a fixed-length READ burst may be immediately followed by data from a READ command. In either case, a continuous flow of data can be maintained. The first data element from the new burst either follows the last element of a completed burst or the last desired data element of a longer burst that is being truncated. The new READ command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where x = CL - 1.

This is shown in Figure 13 for L = 2 and CL = 3; data element n + 3 is either the last of a burst of four or the last desired of a longer burst. The 128Mb SDRAM uses a pipelined architecture and, therefore, does not require the 2n rule associated with a prefetch architecture. A READ command can be initiated on any clock cycle following a previous READ command. Full-speed random read accesses can be performed to the same bank, as shown in Figure 14 on page 28, or each subsequent READ may be performed to a different bank.

Figure 13: Consecutive READ Bursts

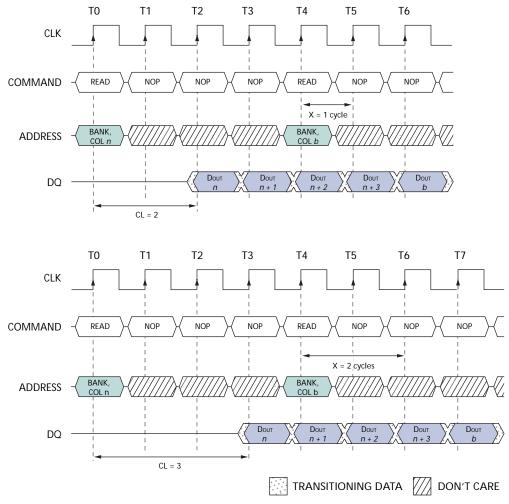


Notes: 1. Each READ command may be to any bank. DQM is LOW.

PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_2.fm - Rev. N 1/09 EN



Figure 14: Random READ Accesses

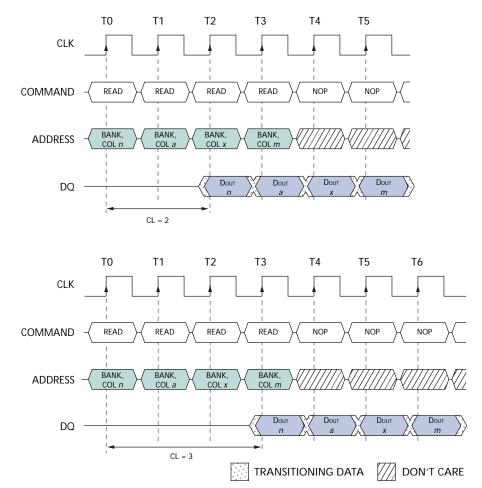

Notes: 1. Each READ command may be to any bank. DQM is LOW.


Data from any READ burst may be truncated with a subsequent WRITE command, and data from a fixed-length READ burst may be immediately followed by data from a WRITE command (subject to bus turnaround limitations). The WRITE burst may be initiated on the clock edge immediately following the last (or last desired) data element from the READ burst, provided that I/O contention can be avoided. In a given system design, there may be a possibility that the device driving the input data will go Low-Z before the SDRAM DQ go High-Z. In this case, at least a single-cycle delay should occur between the last read data and the WRITE command.

The DQM input is used to avoid I/O contention, as shown in Figure 15 on page 29 and Figure 16 on page 29. The DQM signal must be asserted (HIGH) at least 2 clocks prior to the WRITE command (DQM latency is 2 clocks for output buffers) to suppress data-out from the READ. After the WRITE command is registered, the DQ will go High-Z (or remain High-Z), regardless of the state of the DQM signal, provided the DQM was active on the clock just prior to the WRITE command that truncated the READ command. If not, the second WRITE will be an invalid WRITE. For example, if DQM was LOW during T4 in Figure 16, then the WRITEs at T5 and T7 would be valid, while the WRITE at T6 would be invalid.




The DQM signal must be de-asserted prior to the WRITE command (DQM latency is zero clocks for input buffers) to ensure that the written data is not masked. Figure 15 shows the case where the clock frequency allows for bus contention to be avoided without adding a NOP cycle, and Figure 16 shows the case where the additional NOP is needed.

Figure 15: READ-to-WRITE

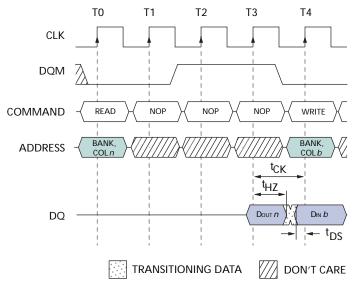

Notes: 1. CL = 3 is used for illustration. The READ command may be to any bank, and the WRITE command may be to any bank. If a burst of 1 is used, then DQM is not required.

Figure 16: READ-to-WRITE with Extra Clock Cycle

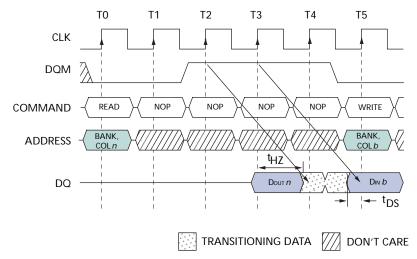

Notes: 1. CL = 3 is used for illustration. The READ command may be to any bank, and the WRITE command may be to any bank.

A fixed-length READ burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated), and a full-page burst may be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued *x* cycles before the clock edge at which the last




desired data element is valid, where x = CL - 1. This is shown in Figure 17 for each possible CL; data element n + 3 is either the last of a burst of four or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met. Note that part of the row precharge time is hidden during the access of the last data element(s).

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts.

Full-page READ bursts can be truncated with the BURST TERMINATE command, and fixed-length READ bursts may be truncated with a BURST TERMINATE command, provided that auto precharge was not activated. The BURST TERMINATE command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where x = CL - 1. This is shown in Figure 18 on page 31 for each possible CL; data element n + 3 is the last desired data element of a longer burst.




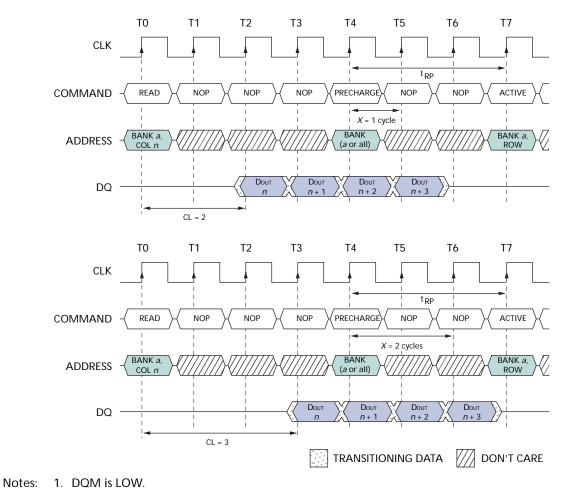

PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_2.fm - Rev. N 1/09 EN



Figure 18: Terminating a READ Burst

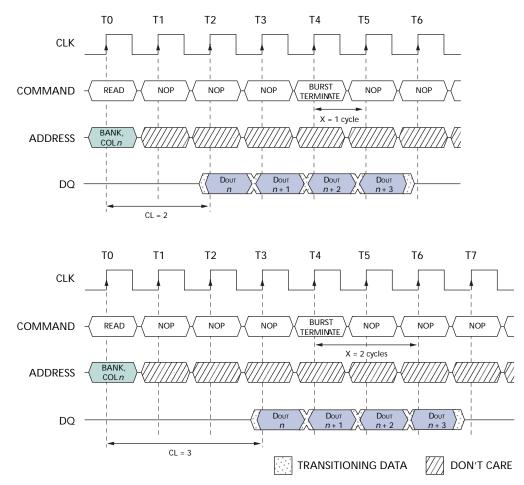



WRITEs


WRITE bursts are initiated with a WRITE command, as shown in Figure 19 on page 32.

The starting column and bank addresses are provided with the WRITE command, and auto precharge either is enabled or disabled for that access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst. For the generic WRITE commands used in the following illustrations, auto precharge is disabled.


During WRITE bursts, the first valid data-in element will be registered coincident with the WRITE command. Subsequent data elements will be registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQ will remain High-Z and any additional input data will be ignored (see Figure 20 on page 32). A full-page burst will continue until terminated. (At the end of the page, it will wrap to column 0 and continue.)



Figure 19: WRITE Command

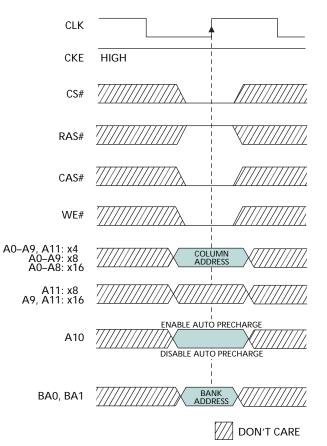



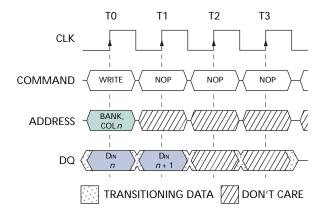

Notes: 1. BL = 2. DQM is LOW.

Data for any WRITE burst may be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst may be immediately followed by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command. An example is shown in Figure 21 on page 33. Data n + 1 is either the last of a burst of two or the last desired element of a longer burst. The 128Mb SDRAM uses a pipelined architecture and, therefore, does not require the 2n rule associated with


PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_2.fm - Rev. N 1/09 EN



a prefetch architecture. A WRITE command can be initiated on any clock cycle following a previous WRITE command. Full-speed random write accesses within a page can be performed to the same bank, as shown in Figure 22 on page 33, or each subsequent WRITE may be performed to a different bank.

Data for any WRITE burst may be truncated with a subsequent READ command, and data for a fixed-length WRITE burst may be immediately followed by a READ command. After the READ command is registered, the data inputs will be ignored, and writes will not be executed. An example is shown in Figure 23 on page 34. Data n + 1 is either the last of a burst of two or the last desired element of a longer burst.

Figure 21: WRITE-to-WRITE

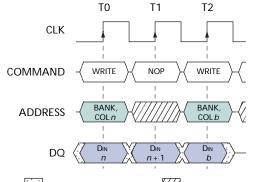

TRANSITIONING DATA 📶 DON'T CARE

Notes: 1. DQM is LOW. Each WRITE command may be to any bank.

Figure 22: Random WRITE Cycles


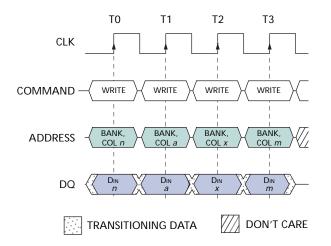




Figure 23: WRITE-to-READ

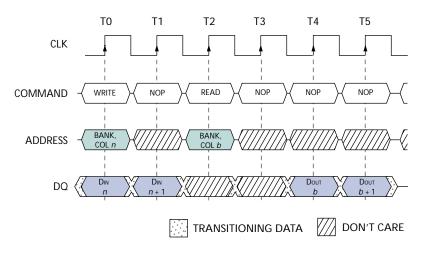

Data for a fixed-length WRITE burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated), and a full-page WRITE burst may be truncated with a PRECHARGE command to the same bank. The PRECHARGE command should be issued ^tWR after the clock edge at which the last desired input data element is registered. The auto precharge mode requires a ^tWR of at least 1 clock plus time (see note 24 on page 52), regardless of frequency. In addition, when truncating a WRITE burst, the DQM signal must be used to mask input data for the clock edge prior to, and the clock edge coincident with, the PRECHARGE command. An example is shown in Figure 24 on page 35. Data n + 1 is either the last of a burst of two or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until ^tRP is met.


In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length or full-page bursts.

Fixed-length or full-page WRITE bursts can be truncated with the BURST TERMINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command will be ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied 1 clock previous to the BURST TERMINATE command. This is shown in Figure 25 on page 35, where data *n* is the last desired data element of a longer burst.

PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_2.fm - Rev. N 1/09 EN




Figure 24: WRITE-to-PRECHARGE

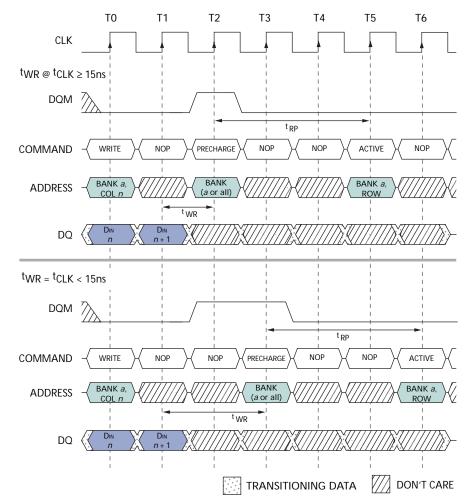

Notes: 1. DQM could remain LOW in this example if the WRITE burst is a fixed length of two.

Figure 25: Terminating a WRITE Burst

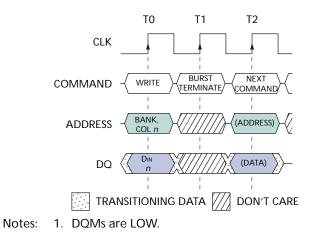


PDF: 09005aef8091e66d/Source: 09005aef8091e625 128MSDRAM_2.fm - Rev. N 1/09 EN



PRECHARGE

The PRECHARGE command (see Figure 26) is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (^tRP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

Figure 26: PRECHARGE Command

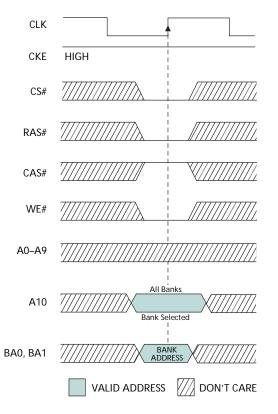


Power-Down

Power-down occurs if CKE is registered LOW coincident with a NOP or COMMAND INHIBIT when no accesses are in progress. If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby. The device may not remain in the power-down state longer than the refresh period (^tREF or ^tREF_{AT}) since no REFRESH operations are performed in this mode.

The power-down state is exited by registering a NOP or COMMAND INHIBIT and CKE HIGH at the desired clock edge (meeting ^tCKS). See Figure 27 on page 37.



Figure 27: Power-Down

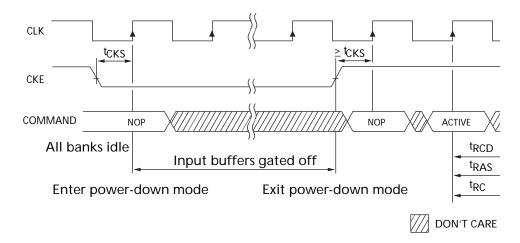

Clock Suspend

The clock suspend mode occurs when a column access/burst is in progress and CKE is registered low. In the clock suspend mode, the internal clock is deactivated, "freezing" the synchronous logic.

For each positive clock edge on which CKE is sampled LOW, the next internal positive clock edge is suspended. Any command or data present on the input pins at the time of a suspended internal clock edge is ignored; any data present on the DQ pins remains driven; and burst counters are not incremented, as long as the clock is suspended. (See examples in Figure 28 and Figure 29 on page 38.)

Clock suspend mode is exited by registering CKE HIGH; the internal clock and related operation will resume on the subsequent positive clock edge.

Figure 28: Clock Suspend During WRITE Burst


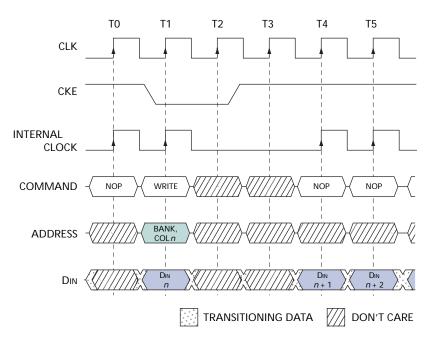




Figure 29: Clock Suspend During READ Burst

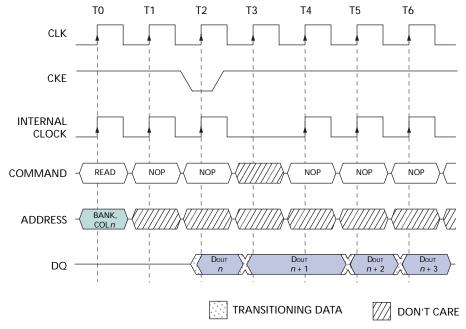

Notes: 1. For this example, CL = 2, BL = 4 or greater, and DQM is LOW.

BURST READ/SINGLE WRITE

The burst read/single write mode is entered by programming the write burst mode bit (M9) in the mode register to a logic 1. In this mode, all WRITE commands result in the access of a single column location (burst of one), regardless of the programmed BL. READ commands access columns according to the programmed BL and sequence, just as in the normal mode of operation (M9 = 0).

Concurrent Auto Precharge

An access command (READ or WRITE) to another bank while an access command with auto precharge enabled is executing is not allowed by SDRAMs, unless the SDRAM supports concurrent auto precharge. Micron SDRAMs support concurrent auto precharge. Four cases where concurrent auto precharge occurs are defined below.

READ with Auto Precharge

- Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a READ on bank *n*, CL later. The precharge to bank *n* will begin when the READ to bank *m* is registered (Figure 30 on page 39).
- Interrupted by a WRITE (with or without auto precharge): A WRITE to bank *m* will interrupt a READ on bank *n* when registered. DQM should be used 2 clocks prior to the WRITE command to prevent bus contention. The precharge to bank *n* will begin when the WRITE to bank *m* is registered (Figure 31 on page 39).




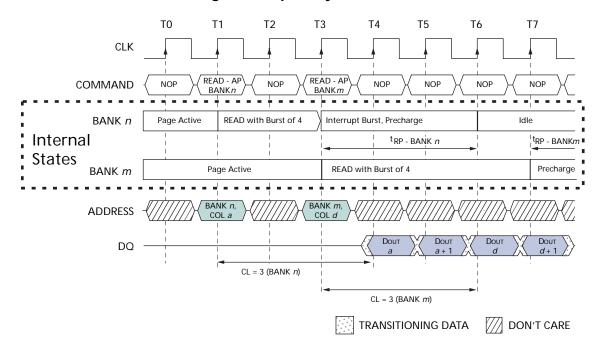


Figure 30: READ With Auto Precharge Interrupted by a READ

Notes: 1. DQM is LOW.

Figure 31: READ With Auto Precharge Interrupted by a WRITE

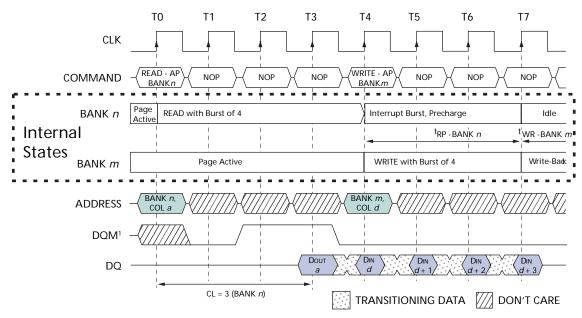

Notes: 1. DQM is HIGH at T2 to prevent DOUT a + 1 from contending with DIN at T4.


WRITE with Auto Precharge

• Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a WRITE on bank *n* when registered, with the data-out appearing CL later. The precharge to bank *n* will begin after ^tWR is met, where ^tWR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (Figure 32 on page 40).



• Interrupted by a WRITE (with or without auto precharge): A WRITE to bank *m* will interrupt a WRITE on bank *n* when registered. The precharge to bank *n* will begin after ^tWR is met, where ^tWR begins when the WRITE to bank *m* is registered. The last valid data WRITE to bank *n* will be data registered one clock prior to a WRITE to bank *m* (Figure 33).



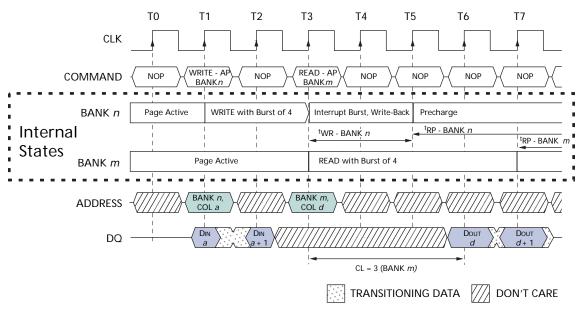

Notes: 1. DQM is LOW.



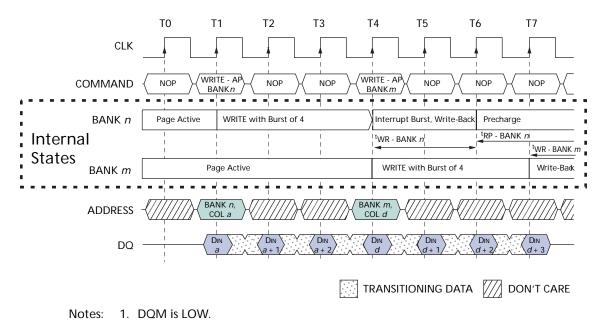




Table 8:Truth Table 2 - CKE

Notes: 1–4

CKE _{n - 1}	CKEn	Current State	Command _n	Action _n	Notes
L	L	Power-down	Х	Maintain power-down	
		Self refresh	Х	Maintain self refresh	
		Clock suspend	Х	Maintain clock suspend	
L	Н	Power-down	COMMAND INHIBIT or NOP	Exit power-down	5
		Self refresh	COMMAND INHIBIT or NOPX	Exit self refresh	6
		Clock suspend	Х	Exit clock suspend	7
Н	L	All banks idle	COMMAND INHIBIT or NOP	Power-down entry	
		All banks idle	AUTO REFRESH	Self refresh entry	
		Reading or writing	WRITE or NOP	Clock suspend entry	
Н	Н		See Table 9 on page 42		

Notes: 1. CKE_n is the logic state of CKE at clock edge n; CKE_{n-1} was the state of CKE at the previous clock edge.

2. Current state is the state of the SDRAM immediately prior to clock edge n.

3. COMMAND_n is the command registered at clock edge *n*, and ACTION_n is a result of COM-MAND_n.

4. All states and sequences not shown are illegal or reserved.

5. Exiting power-down at clock edge n will put the device in the all banks idle state in time for clock edge n + 1 (provided that ^tCKS is met).

6. Exiting self refresh at clock edge n will put the device in the all banks idle state after ^tXSR is met. COMMAND INHIBIT or NOP commands should be issued on any clock edges occurring during the ^tXSR period. A minimum of two NOP commands must be provided during ^tXSR period.

7. After exiting clock suspend at clock edge n, the device will resume operation and recognize the next command at clock edge n + 1.



Current State	CS#	RAS#	CAS#	WE#	Command (Action)	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/continue previous operation)	
	L	Н	Н	Н	NO OPERATION (NOP/continue previous operation)	
Idle	L	L	Н	Н	ACTIVE (Select and activate row)	
	L	L	L	Н	AUTO REFRESH	7
	L	L	L	L	LMR	7
	L	L	Н	L	PRECHARGE	11
Row active	L	Н	L	Н	READ (Select column and start READ burst)	10
	L	Н	L	L	WRITE (Select column and start WRITE burst)	10
	L	L	Н	L	PRECHARGE (Deactivate row in bank or banks)	8
Read	L	Н	L	Н	READ (Select column and start new READ burst)	10
(auto	L	Н	L	L	WRITE (Select column and start WRITE burst)	10
precharge disabled)	L	L	Н	L	PRECHARGE (Truncate READ burst, start precharge)	8
uisableu)	L	Н	Н	L	BURST TERMINATE	9
Write	L	Н	L	Н	READ (Select column and start READ burst)	10
(Aauto	L	Н	L	L	WRITE (Select column and start new WRITE burst)	10
precharge disabled)	L	L	Н	L	PRECHARGE (Truncate WRITE burst, start precharge)	8
uisableu)	L	Н	Н	L	BURST TERMINATE	9

 Table 9:
 Truth Table 3 - Current State Bank n, Command to Bank n

Notes: 1–6; notes appear below and on next page


Notes: 1. This table applies when CKE_{n-1} was HIGH and CKE_n is HIGH (see Table 8 on page 41) and after ^tXSR has been met (if the previous state was self refresh).

- 2. This table is bank-specific, except where noted; that is, the current state is for a specific bank, and the commands shown are those allowed to be issued to that bank when in that state. Exceptions are covered in the notes below.
- 3. Current state definitions:

Idle:	The bank has been precharged, and ^t RP has been met.
Row active:	A row in the bank has been activated, and ^t RCD has been met. No data
	bursts/accesses and no register accesses are in progress.
Read:	A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
Write:	A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.

4. The following states must not be interrupted by a command issued to the same bank. COM-MAND INHIBIT or NOP commands or allowable commands to the other bank should be issued on any clock edge occurring during these states. Allowable commands to the other bank are determined by its current state and Truth Table 3 and according to Truth Table 4.

Precharging:	Starts with registration of a PRECHARGE command and ends when ^t RP is met. After ^t RP is met, the bank will be in the idle state.
Row activating:	Starts with registration of an ACTIVE command and ends when ^t RCD is met. After ^t RCD is met, the bank will be in the row active state.
Read w/auto precharge enabled:	Starts with registration of a READ command with auto precharge enabled and ends when ^t RP has been met. After ^t RP is met, the bank will be in the idle state.
Write w/auto precharge enabled:	Starts with registration of a WRITE command with auto precharge enabled and ends when ^t RP has been met. After ^t RP is met, the bank will be in the idle state.





5. The following states must not be interrupted by any executable command; COMMAND INHIBIT or NOP commands must be applied on each positive clock edge during these states.

Refreshing:	Starts with registration of an AUTO REFRESH command and ends when ^t RC is met. After ^t RC is met, the SDRAM will be in the all banks idle state.
Accessing mode register:	Starts with registration of a LMR command and ends when ^t MRD has been met. After ^t MRD is met, the SDRAM will be in the all banks idle state.
Precharging all:	Starts with registration of a PRECHARGE ALL command and ends when ^t RP is met. After ^t RP is met, all banks will be in the idle state.

- 6. All states and sequences not shown are illegal or reserved.
- 7. Not bank-specific; requires that all banks are idle.
- 8. May or may not be bank-specific; if all banks are to be precharged, all must be in a valid state for precharging.
- 9. Not bank-specific; BURST TERMINATE affects the most recent READ or WRITE burst, regardless of bank.
- 10. READs or WRITEs listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 11. Does not affect the state of the bank and acts as a NOP to that bank.



Table 10: Truth Table 4 - Current State Bank n, Command to Bank m

Notes: 1–6; notes appear below and on next page

Current State	CS#	RAS#	CAS#	WE#	Command (Action)	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/continue previous operation)	
	L	Н	Н	Н	NO OPERATION (NOP/continue previous operation)	
ldle	Х	Х	Х	Х	Any command otherwise allowed to bank m	
Row	L	L	Н	Н	ACTIVE (Select and activate row)	
activating,	L	Н	L	Н	READ (Select column and start READ burst)	7
active, or	L	Н	L	L	WRITE (Select column and start WRITE burst)	7
precharging	L	L	Н	L	PRECHARGE	
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(auto	L	Н	L	Н	READ (Select column and start new READ burst)	7, 10
precharge disabled)	L	Н	L	L	WRITE (Select column and start WRITE burst)	7, 11
uisableu)	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(auto	L	Н	L	Н	READ (Select column and start READ burst)	7, 12
precharge disabled)	L	Н	L	L	WRITE (Select column and start new WRITE burst)	7, 13
uisableu)	L	L	Н	L	PRECHARGE	9
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(with auto	L	Н	L	Н	READ (Select column and start new READ burst)	7, 8, 14
precharge)	L	Н	L	L	WRITE (Select column and start WRITE burst)	7, 8, 15
	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(with auto	L	Н	L	Н	READ (Select column and start READ burst)	7, 8, 16
precharge)	L	Н	L	L	WRITE (Select column and start new WRITE burst)	7, 8, 17
	L	L	Н	L	PRECHARGE	9

Notes: 1. This table applies when CKE_{n - 1} was HIGH and CKE_n is HIGH (see Table 8 on page 41) and after ^tXSR has been met (if the previous state was self refresh).

- 2. This table describes alternate bank operation, except where noted; that is, the current state is for bank *n*, and the commands shown are those allowed to be issued to bank *m* (assuming that bank *m* is in such a state that the given command is allowable). Exceptions are covered in the notes below.
- 3. Current state definitions:

Idle:	The bank has been precharged, and ^t RP has been met.
Row active:	A row in the bank has been activated, and ^t RCD has been met. No data bursts/accesses and no register accesses are in progress.
Read:	A READ burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
Write:	A WRITE burst has been initiated, with auto precharge disabled, and has not yet terminated or been terminated.
Read w/auto precharge enabled:	Starts with registration of a READ command with auto precharge enabled, and ends when ^t RP has been met. After ^t RP is met, the bank will be in the idle state.
Write w/auto precharge enabled:	Starts with registration of a WRITE command with auto precharge enabled, and ends when ^t RP has been met. After ^t RP is met, the bank will be in the idle state.
ALITO REFRESH SELE	REERESH and LMR commands may only be issued when all banks are

 AUTO REFRESH, SELF REFRESH, and LMR commands may only be issued when all banks are idle.



- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.
- 6. All states and sequences not shown are illegal or reserved.
- 7. READs or WRITEs to bank *m* listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 8. Concurrent auto precharge: Bank *n* will initiate the auto precharge command when its burst has been interrupted by bank *m*'s burst.
- 9. Burst in bank *n* continues as initiated.
- 10. For a READ without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CL later (Figure 13 on page 27).
- 11. For a READ without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered (Figure 15 on page 29 and Figure 16 on page 29). DQM should be used 1 clock prior to the WRITE command to prevent bus contention.
- 12. For a WRITE without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered (Figure 23 on page 34), with the data-out appearing CL later. The last valid WRITE to bank *n* will be data-in registered 1 clock prior to the READ to bank *m*.
- 13. For a WRITE without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered (Figure 21 on page 33). The last valid WRITE to bank *n* will be data-in registered 1 clock prior to the READ to bank *m*.
- 14. For a READ with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CL later. The precharge to bank *n* will begin when the READ to bank *m* is registered (Figure 30 on page 39).
- 15. For a READ with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered. DQM should be used 2 clocks prior to the WRITE command to prevent bus contention. The precharge to bank *n* will begin when the WRITE to bank *m* is registered (Figure 31 on page 39).
- 16. For a WRITE with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the WRITE on bank *n* when registered, with the data-out appearing CL later. The precharge to bank *n* will begin after ^tWR is met, where ^tWR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (Figure 32 on page 40).
- 17. For a WRITE with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered. The precharge to bank *n* will begin after ^tWR is met, where ^tWR begins when the WRITE to bank *m* is registered. The last valid WRITE to bank *n* will be data registered 1 clock prior to the WRITE to bank *m* (Figure 33 on page 40).



Electrical Specifications

Stresses greater than those listed in Table 11 may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

Table 11: Absolute Maximum Ratings

Parameter	Min	Max	Rating
Voltage on VDD/VDDQ supply relative to Vss	-1	+4.6	V
Voltage on inputs, NC or I/O pins relative to Vss	-1	+4.6	V
Operating temperature			°C
T _A (commercial)	0	+70	
T _A (industrial)	-40	+85	
T _A (automotive)	-40	+105	
Storage temperature (plastic)	-55	+150	°C
Power dissipation	-	1	W

Temperature and Thermal Impedance

It is imperative that the SDRAM device's temperature specifications, shown in Table 12 on page 47, be maintained to ensure the junction temperature is in the proper operating range to meet data sheet specifications. An important step in maintaining the proper junction temperature is using the device's thermal impedances correctly. The thermal impedances are listed in Table 13 on page 47 for the applicable die revision and packages being made available. These thermal impedance values vary according to the density, package, and particular design used for each device.

Incorrectly using thermal impedances can produce significant errors. Read Micron technical note TN-00-08, "Thermal Applications" prior to using the thermal impedances listed in Table 13. To ensure the compatibility of current and future designs, contact Micron Applications Engineering to confirm thermal impedance values.

The SDRAM device's safe junction temperature range can be maintained when the $T_{\rm C}$ specification is not exceeded. In applications where the device's ambient temperature is too high, use of forced air and/or heat sinks may be required to satisfy the case temperature specifications.



Table 12: Temperature Limits

Parameter	Symbol	Min	Max	Units	Notes
Operating case temperature:	Т _С			°C	1, 2, 3, 4
Commercial		0	80		
Industrial		-40	90		
Automotive		-40	105		
Junction temperature:	Τj			°C	3
Commercial	_	0	85		
Industrial		-40	95		
Automotive		-40	110		
Ambient temperature:	Τ _Α			°C	3, 5
Commercial		0	70		
Industrial		-40	85		
Automotive		-40	105		
Peak reflow temperature	T _{PEAK}	-	260	°C	

Notes: 1. MAX operating case temperature, T_C is measured in the center of the package on the top side of the device, as shown in Figure 34, Figure 35, and Figure 36 on page 48.

- 2. Device functionality is not guaranteed if the device exceeds maximum T_C during operation.
- 3. All temperature specifications must be satisfied
- 4. The case temperature should be measured by gluing a thermocouple to the top center of the component. This should be done with a 1mm bead of conductive epoxy, as defined by the JEDEC EIA/JESD51 standards. Care should be taken to ensure the thermocouple bead is touching the case.
- 5. Operating ambient temperature surrounding the package.

Table 13: Thermal Impedance Simulated Values


Die Revision	Package	Substrate	θ JA (°C/W) Airflow = 0m/s	θ JA (°C/W) Airflow = 1m/s	θ JA (°C/W) Airflow = 2m/s	θ JB (°C/W)	θ JC (°C/W)
G	54-pin	2-layer	86.2	67.8	62	46.9	11.3
	TSOP	4-layer	58.9	50.7	47.6	41.5	
	54-ball	2-layer	72.1	57.3	50.6	36	4.1
	VFBGA	4-layer	54.5	46.6	42.8	35.5	
	60-ball	2-layer	70.9	56.8	50.3	36.3	1.9
	FBGA	4-layer	54.6	47.3	43.5	36.3	

Notes: 1. For designs expected to last beyond the die revision listed, contact Micron Applications Engineering to confirm thermal impedance values.


- 2. Thermal resistance data is sampled from multiple lots, and the values should be viewed as typical.
- 3. These are estimates; actual results may vary.





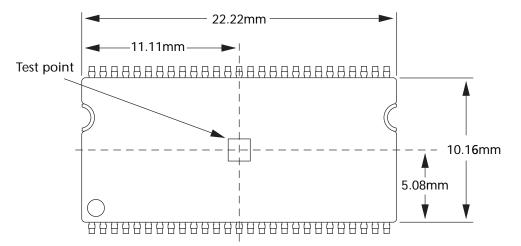



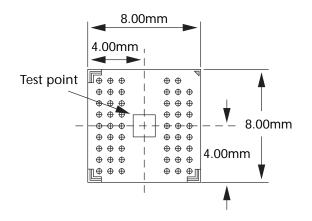



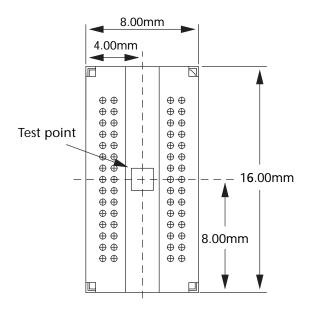




Table 14: DC Electrical Characteristics and Operating Conditions

Notes: 1, 5, 6; notes appear on page 51; VDD/VDDQ = +3.3 ±0.3V

Parameter/Condition	Symbol	Min	Max	Units	Notes
Supply voltage	Vdd/VddQ	3	3.6	V	
Input high voltage: Logic 1; All inputs	Viн	2	VDD + 0.3	V	22
Input low voltage: Logic 0; All inputs	VIL	-0.3	0.8	V	22
Input leakage current: Any input $0V \le VIN \le VDD$ (All other pins not under test = 0V)	li	-5	5	μA	
Output leakage current: DQ are disabled; $0V \le VOUT \le VDDQ$	loz	-5	5	μA	
Output levels: Output high voltage (IOUT = -4mA) Output low voltage (IOUT = 4mA)	Voh Vol	2.4	0.4	V V	

Table 15: IDD Specifications and Conditions

Notes: 1, 5, 6, 11, 13; notes appear on page 51; VDD/VDDQ = +3.3 ±0.3V

				Max			
Parameter/Condition		Symbol	-6A	-7E	-75	Units	Notes
Operating current: Active mode; Burst = 2; READ or WRITE; ^t RC = ^t RC (MIN)		IDD1	170	160	150	mA	3, 18, 19, 32
Standby current: Power-down mode; All banks idle; CKE = LOW		IDD2	2	2	2	mA	32
Standby current: Active mode; CKE = HIGH; CS# = HIGH; All banks active after accesses in progress	IDD3	50	50	50	mA	3, 12, 19, 32	
Operating current: Burst mode; Page burst; READ or WRITE; All banks active		IDD4	165	165	150	mA	3, 18, 19, 32
Auto refresh current:	^t RFC = ^t RFC (MIN)	Idd5	330	330	310	mA	3, 12,
CKE = HIGH; CS# = HIGH	^t RFC = 15.625µs	IDD6	3	3	3	mA	18, 19,
	t RFC = 3.906µs(AT)	IDD6	6	6	6	mA	32, 33
Self refresh current:	Standard	Idd7	2	2	2	mA	4
CKE ≤ 0.2V	Low power (L)	Idd7	-	1	1	mA	

Table 16: Capacitance

Note: 2; notes appear on page 51

Parameter – TSOP "TG" Package	Symbol	Min	Мах	Units	Notes				
Input capacitance: CLK	Ci1	2.5	3.5	pF	29				
Input capacitance: All other input-only pins	CI2	2.5	3.8	pF	30				
Input/output capacitance: DQ	Сю	4.0	6.0	pF	31				
Parameter – FBGA "FB"									
Input capacitance: CLK	CI1	1.5	3.5	pF	34				
Input capacitance: All other input-only pins	CI2	1.5	3.8	pF	35				



Table 17: Electrical Characteristics and Recommended AC Operating Conditions

Notes: 5, 6, 8, 9, 11; notes appear on page 51

AC Characteristics Parameter			-6A		-7E		-75			
		Symbol	Min	Max	Min	Max	Min	Max	Units	Notes
Access time from CLK (positive	CL = 3	^t AC(3)	-	5.4		5.4	-	5.4	ns	27
edge)	CL = 2	^t AC(2)	-	-		5.4	-	6	ns	
Address hold time		^t AH	0.8	-	0.8	-	0.8	-	ns	
Address setup time		^t AS	1.5	-	1.5	-	1.5	-	ns	
CLK high-level width		^t CH	2.5	-	2.5	-	2.5	-	ns	
CLK low-level width		^t CL	2.5	-	2.5	-	2.5	-	ns	
Clock cycle time	CL = 3	^t CK(3)	6	-	7	-	7.5	-	ns	23
-	CL = 2	^t CK(2)	-	-	7.5	-	10	-	ns	23
CKE hold time	•	^t CKH	0.8	-	0.8	-	0.8	-	ns	
CKE setup time		^t CKS	1.5	-	1.5	-	1.5	-	ns	
CS#, RAS#, CAS#, WE#, DQM ho	ld time	^t CMH	0.8	-	0.8	-	0.8	-	ns	
CS#, RAS#, CAS#, WE#, DQM set	up time	tCMS	1.5	-	1.5	-	1.5	-	ns	
Data-in hold time		^t DH	0.8	-	0.8	-	0.8	-	ns	
Data-in setup time		^t DS	1.5	-	1.5	-	1.5	-	ns	
Data-out High-Z time	CL = 3	^t HZ(3)	-	5.4		5.4	-	5.4	ns	10
	CL = 2	^t HZ(2)	-	-		5.4	-	6	ns	10
Data-out Low-Z time		^t LZ	1	-	1	-	1	-	ns	
Data-out hold time (load)		^t OH	3	-	3	-	3	-	ns	
Data-out hold time (no load)		^t OHN	1.8	-	1.8	-	1.8	-	ns	28
ACTIVE-to-PRECHARGE command		^t RAS	42	120,000	37	120,000	44	120,000	ns	
ACTIVE-to-ACTIVE command period		^t RC	60	-	60	-	66	-	ns	
ACTIVE-to-READ or WRITE delay		^t RCD	18	-	15	-	20	-	ns	
Refresh period (4,096 rows)		^t REF	-	64	-	64	-	64	ms	
Refresh period - Automotive (4,096 rows)		^t REF _{AT}	-	16	-	16	-	16	ms	
AUTO REFRESH period		^t RFC	60	-	66	-	66	-	ns	
PRECHARGE command period		^t RP	18	-	15	-	20	-	ns	
ACTIVE bank <i>a</i> to ACTIVE bank <i>b</i> command		^t RRD	12	-	14	-	15	_	ns	
Transition time		^t T	0.3	1.2	0.3	1.2	0.3	1.2	ns	7
WRITE recovery time		^t WR	1 CLK + 7ns	-	1 CLK + 7ns	-	1 CLK + 7.5ns	-	-	24
			12	-	14	-	15	-	ns	25
Exit SELF REFRESH to ACTIVE command		^t XSR	67	-	67	-	75	-	ns	20

Table 18: AC Functional Characteristics

Notes: 5, 6, 7, 8, 9, 11; notes appear on page 51

Parameter	Symbol	-6A	-7E	-75	Units	Notes
READ/WRITE command to READ/WRITE command	^t CCD	1	1	1	^t CK	17
CKE to clock disable or power-down entry mode	^t CKED	1	1	1	^t CK	14
CKE to clock enable or power-down exit setup mode	^t PED	1	1	1	^t CK	14
DQM to input data delay	^t DQD	0	0	0	^t CK	17




Table 18: AC Functional Characteristics

Notes: 5, 6, 7, 8, 9, 11; notes appear on page 51

Parameter		Symbol	-6A	-7E	-75	Units	Notes
DQM to data mask during WRITEs		^t DQM	0	0	0	^t CK	17
DQM to data High-Z during READs		^t DQZ	2	2	2	^t CK	17
WRITE command to input data delay		^t DWD	0	0	0	^t CK	17
Data-in to ACTIVE command		^t DAL	5	4	5	^t CK	15, 21
Data-in to PRECHARGE command		^t DPL	2	2	2	^t CK	16, 21
Last data-in to burst STOP command		^t BDL	1	1	1	^t CK	17
Last data-in to new READ/WRITE command		^t CDL	1	1	1	^t CK	17
Last data-in to PRECHARGE command	^t RDL	2	2	2	^t CK	16, 21	
LMR command to ACTIVE or REFRESH command		^t MRD	2	2	2	^t CK	26
Data-out to High-Z from PRECHARGE command	CL = 3	^t ROH(3)	3	3	3	^t CK	17
	CL = 2	^t ROH(2)	-	2	2	^t CK	17

Notes

- 1. All voltages referenced to Vss.
- 2. This parameter is sampled. VDD, VDDQ = +3.3V; f = 1 MHz, $T_A = 25^{\circ}C$; pin under test biased at 1.4V.
- 3. IDD is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- 4. Enables on-chip refresh and address counters.
- 5. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range (0°C \leq T_A \leq +70°C (commercial), -40°C \leq T_A \leq +85°C (industrial), and -40°C \leq T_A \leq +105°C (automotive)) is ensured.
- 6. An initial pause of 100µs is required after power-up, followed by two AUTO REFRESH commands, before proper device operation is ensured. (VDD and VDDQ must be powered up simultaneously. VSS and VSSQ must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the ^tREF refresh requirement is exceeded.
- 7. AC characteristics assume ${}^{t}T = 1ns$.
- 8. In addition to meeting the transition rate specification, the clock and CKE must transit between VIH and VIL (or between VIL and VIH) in a monotonic manner.
- 9. Outputs measured at 1.5V with equivalent load:



- 10. ^tHZ defines the time at which the output achieves the open circuit condition; it is not a reference to VOH or VOL. The last valid data element will meet ^tOH before going High-Z.
- 11. AC timing and IDD tests have VIL = 0V and VIH = 3V, with timing referenced to 1.5V crossover point. If the input transition time is longer than 1 ns, then the timing is referenced at VIL (MAX) and VIH (MIN) and no longer at the 1.5V crossover point. CLK should always be 1.5V referenced to crossover. Refer to Micron technical note TN-48-09 for more details.




- 12. Other input signals are allowed to transition no more than once every 2 clocks and are otherwise at valid VIH or VIL levels.
- 13. IDD specifications are tested after the device is properly initialized.
- 14. Timing actually specified by ^tCKS; clock(s) specified as a reference only at minimum cycle rate.
- 15. Timing actually specified by ^tWR plus ^tRP; clock(s) specified as a reference only at minimum cycle rate.
- 16. Timing actually specified by ^tWR.
- 17. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- **18**. The IDD current will increase or decrease proportionally according to the amount of frequency alteration for the test condition.
- 19. Address transitions average one transition every 2 clocks.
- 20. CLK must be toggled a minimum of two times during this period.
- 21. Based on ${}^{t}CK = 7.5$ ns for -75/-7E, and ${}^{t}CK = 6$ ns for -6A.
- 22. VIH overshoot: VIH (MAX) = VDDQ + 2V for a pulse width \leq 3ns, and the pulse width cannot be greater than one-third of the cycle rate. VIL undershoot: VIL (MIN) = -2V for a pulse width \leq 3ns.
- 23. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including ^tWR, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 24. Auto precharge mode only. The precharge timing budget (^tRP) begins 6ns for -6A, 7ns for -7E, and 7.5ns for -75 after the first clock delay, after the last WRITE is executed.
- 25. Precharge mode only.
- 26. JEDEC and PC100 specify 3 clocks.
- 27. ^tAC for -75/-7E at CL = 3 with no load is 4.6ns and is guaranteed by design.
- 28. Parameter guaranteed by design.
- 29. PC100 specifies a maximum of 4pF.
- 30. PC100 specifies a maximum of 5pF.
- 31. PC100 specifies a maximum of 6.5pF.
- 32. For -75, CL = 3 and ${}^{t}CK$ = 7.5ns; for -7E, CL = 2 and ${}^{t}CK$ = 7.5ns, and CL = 3 and ${}^{t}CK$ = 6ns.
- 33. CKE is HIGH during refresh command period ^tRFC (MIN) else CKE is LOW. The IDD6 limit is actually a nominal value and does not result in a fail value.
- 34. PC133 specifies a minimum of 2.5pF.
- 35. PC133 specifies a minimum of 2.5pF.
- 36. PC133 specifies a minimum of 3.0pE



Timing Diagrams

Figure 37: Initialize and Load Mode Register

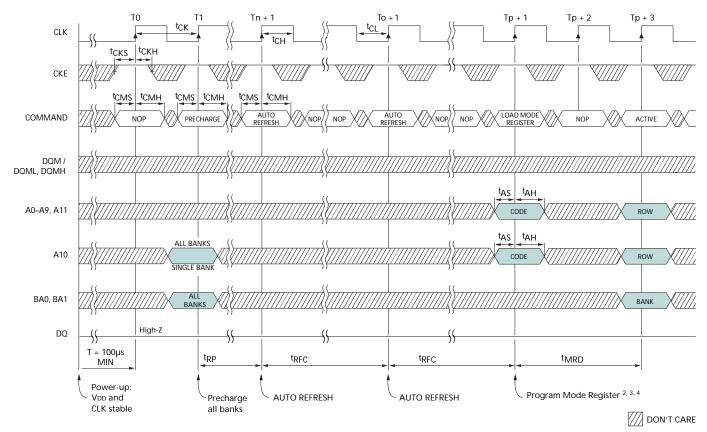


Notes: 1. If CS# is HIGH at clock HIGH time, all commands applied are NOP.

- 2. The mode register may be loaded prior to the AUTO REFRESH cycles if desired.
- 3. JEDEC and PC100 specify 3 clocks.
- 4. Outputs are guaranteed High-Z after command is issued.




Figure 38: Power-Down Mode

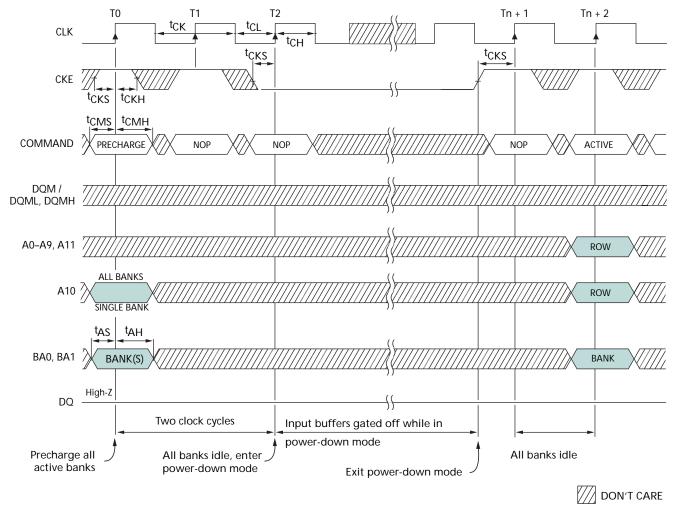

Notes: 1. Violating refresh requirements during power-down may result in a loss of data.




Figure 39: Clock Suspend Mode

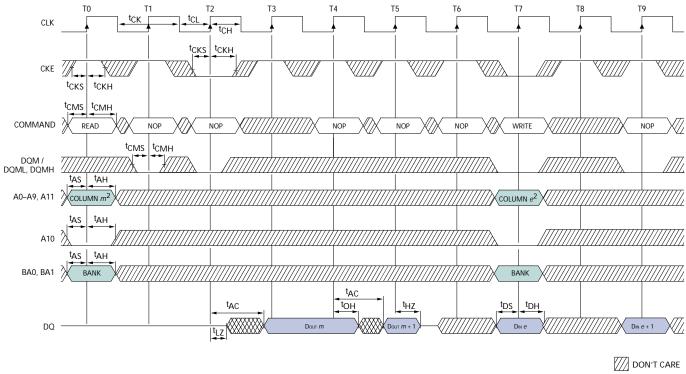

Notes: 1. For this example, BL = 2, CL = 3, and auto precharge is disabled.
2. x16: A9 and A11 = "Don't Care." x8: A11 = "Don't Care."






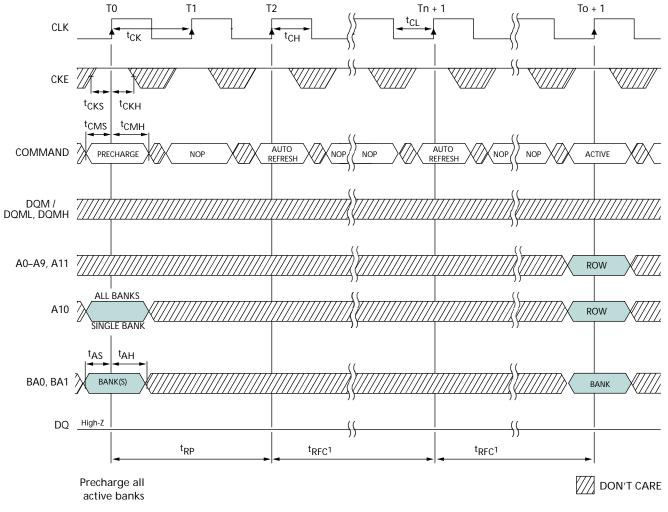

Notes: 1. Each AUTO REFRESH command performs a refresh cycle. Back-to-back commands are not required.



Figure 41: Self Refresh Mode

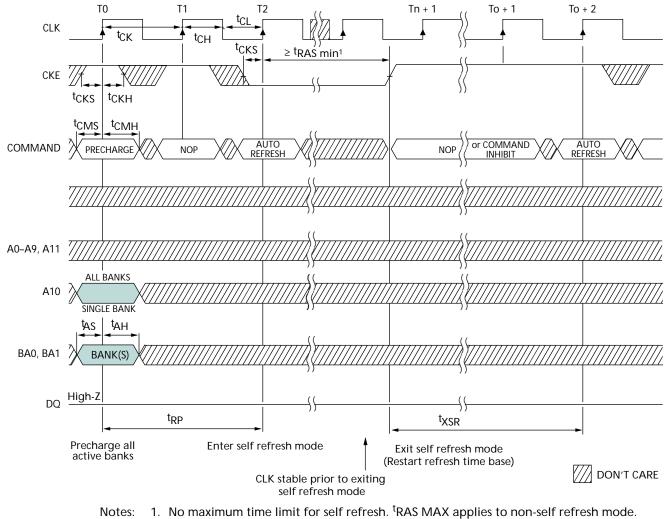

- 2. ^tXSR requires minimum of 2 clocks regardless of frequency or timing.
- 3. Self refresh mode not supported on automotive temperature (AT) devices.



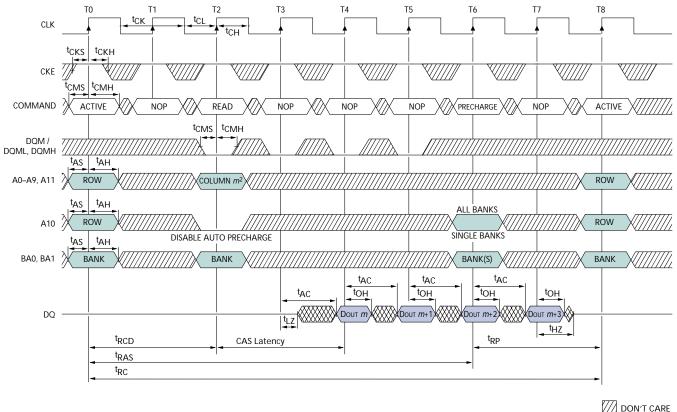


Figure 42: READ – Without Auto Precharge

- Notes: 1. For this example, BL = 4, CL = 2, and the READ burst is followed by a "manual" PRECHARGE.
 2. x16: A9 and A11 = "Don't Care."
 - x8: A11 = "Don't Care."



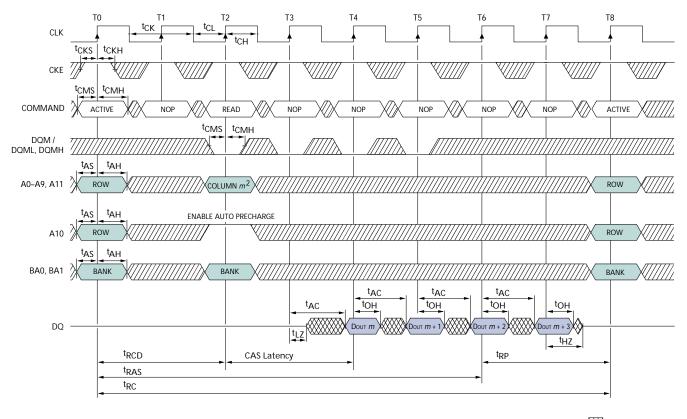


Figure 43: READ – With Auto Precharge

- Notes: 1. For this example, BL = 4, and CL = 2. 2. x16: A9 and A11 = "Don't Care."
 - x8: A11 = "Don't Care."




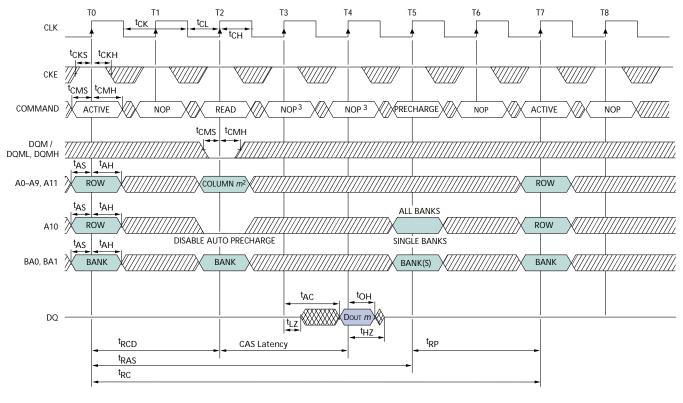


Figure 44: Single READ - Without Auto Precharge

- Notes: 1. For this example, BL = 1, CL = 2, and the READ burst is followed by a "manual" PRECHARGE.
 2. x16: A9 and A11 = "Don't Care."
 - x8: A11 = "Don't Care."
 - 3. PRECHARGE command not allowed or ^tRAS would be violated.



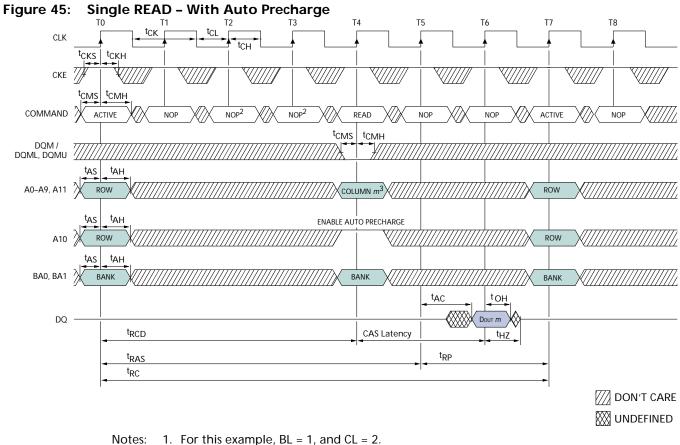

- 2. x16: A9 and A11 = "Don't Care."
 - x8: A11 = "Don't Care."
- 3. READ command not allowed or ^tRAS would be violated.



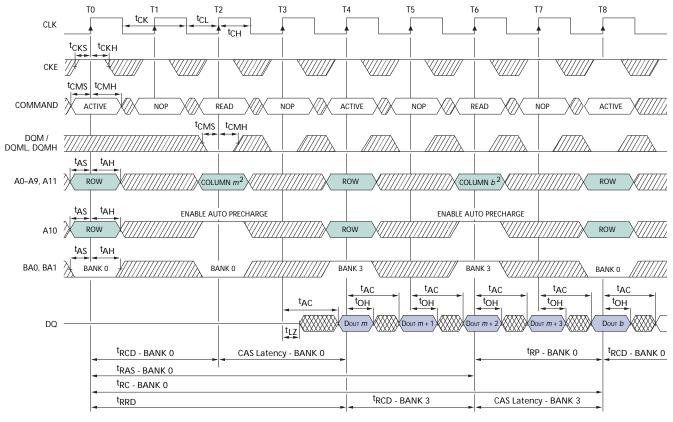


Figure 46: Alternating Bank Read Accesses


DON'T CARE

Notes: 1. For this example, BL = 4, and CL = 2. 2. x16: A9 and A11 = "Don't Care."

x8: A11 = "Don't Care."





Figure 47: READ – Full-Page Burst

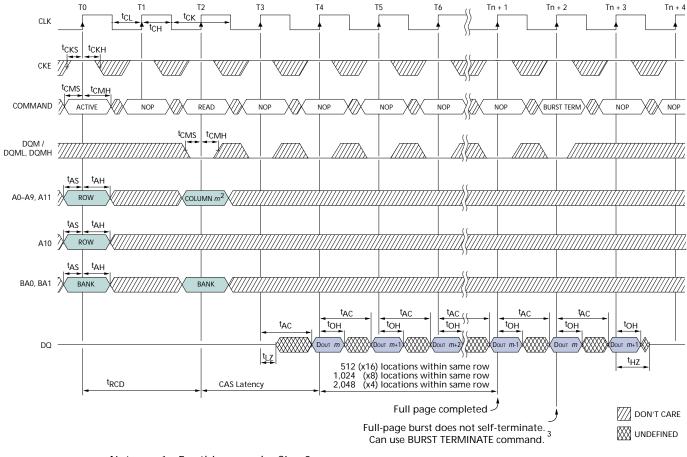

- Notes: 1. For this example, CL = 2.
 - x16: A9 and A11 = "Don't Care."
 x8: A11 = "Don't Care."
 - 3. Page left open; no ^tRP.



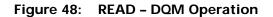

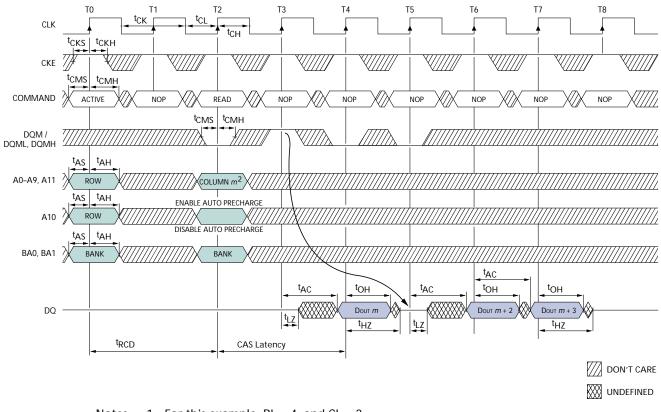

 Notes: 1. For this example, BL = 4, and CL = 2.
 2. x16: A9 and A11 = "Don't Care." x8: A11 = "Don't Care."



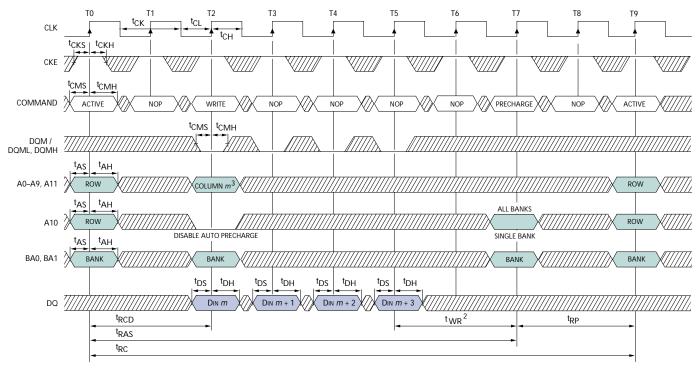


Figure 49: WRITE - Without Auto Precharge

- Notes: 1. For this example, BL = 4, and the WRITE burst is followed by a "manual" PRECHARGE.
 - 2. 15ns is required between $\langle DIN m + 3 \rangle$ and the PRECHARGE command, regardless of frequency.
 - x16: A9 and A11 = "Don't Care." x8: A11 = "Don't Care."



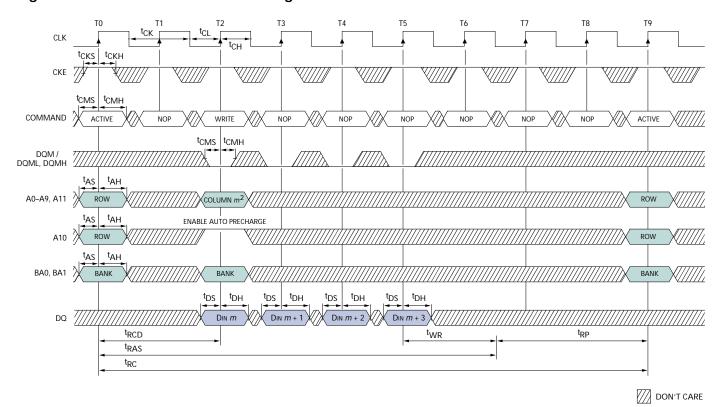
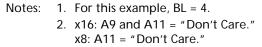
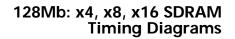


Figure 50: WRITE - With Auto Precharge







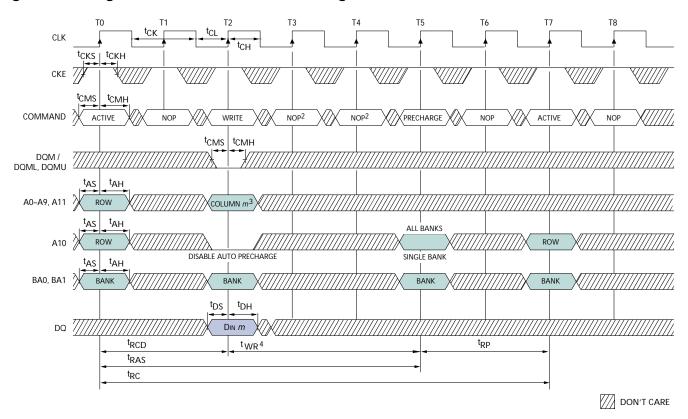


Figure 51: Single WRITE - Without Auto Precharge

Notes: 1. For this example, BL = 1, and the WRITE burst is followed by a "manual" PRECHARGE.

- 2. 15ns is required between $\langle DIN m \rangle$ and the PRECHARGE command, regardless of frequency.
- x16: A9 and A11 = "Don't Care." x8: A11 = "Don't Care."



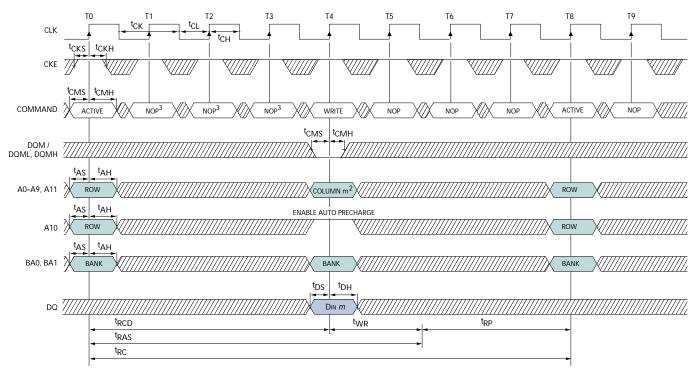


Figure 52: Single WRITE - With Auto Precharge

DON'T CARE

Notes: 1. For this example, BL = 1.

- x16: A9 and A11 = "Don't Care." x8: A11 = "Don't Care."
- 3. Write command not allowed or ^tRAS would be violated.




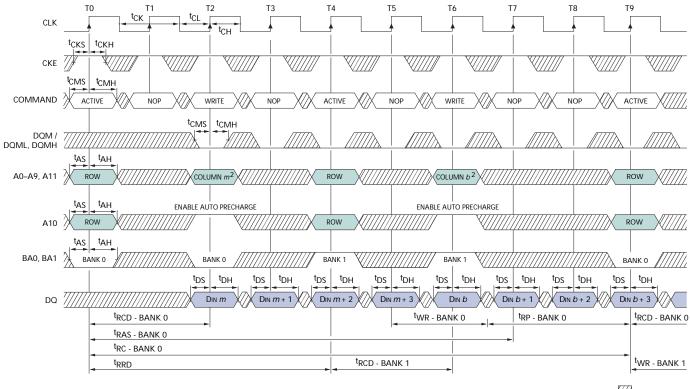


Figure 53: Alternating Bank Write Accesses

- Notes: 1. For this example, BL = 4.
 - x16: A9 and A11 = "Don't Care."
 x8: A11 = "Don't Care."






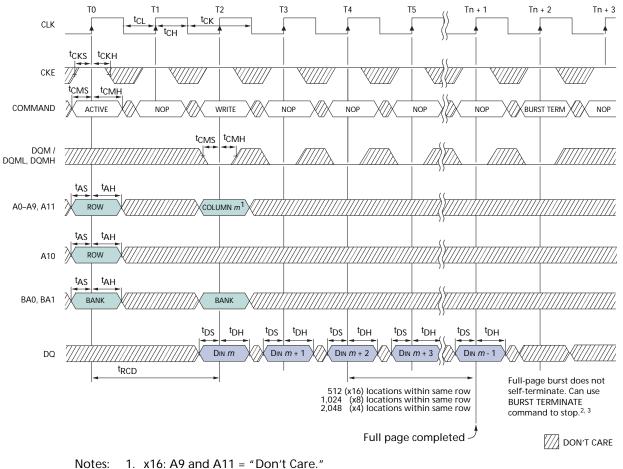


- x8: A11 = "Don't Care."
- 2. ^tWR must be satisfied prior to PRECHARGE command.
- 3. Page left open; no ^tRP.



Figure 55:

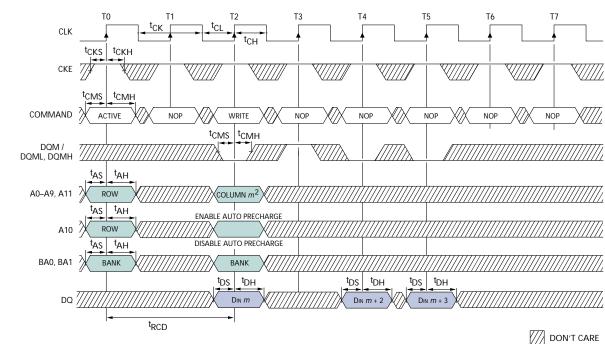

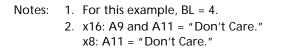


WRITE - DQM Operation



Package Dimensions

Figure 56: 54-Pin Plastic TSOP (400 mil)

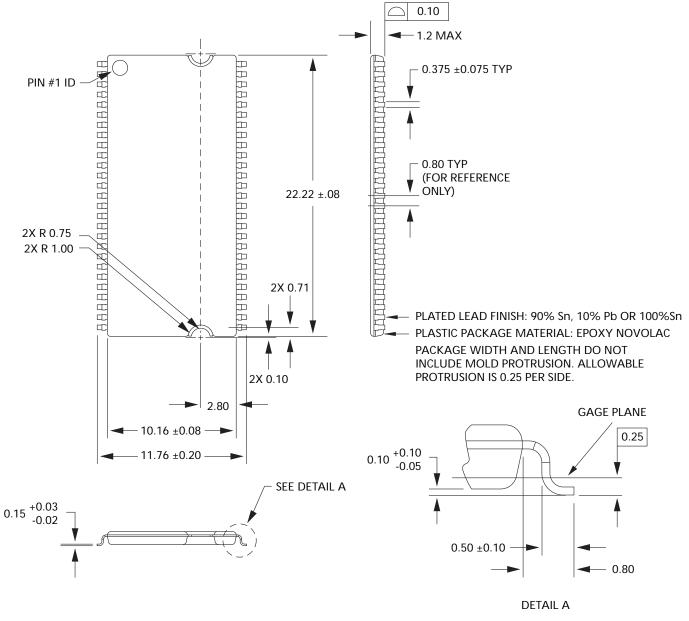

Notes: 1. All dimensions in millimeters.

- 2. Package width and length do not include mold protrusion; allowable mold protrusion is 0.25mm per side.
- 3. "2X" means the notch is present in two locations (both ends of the device).



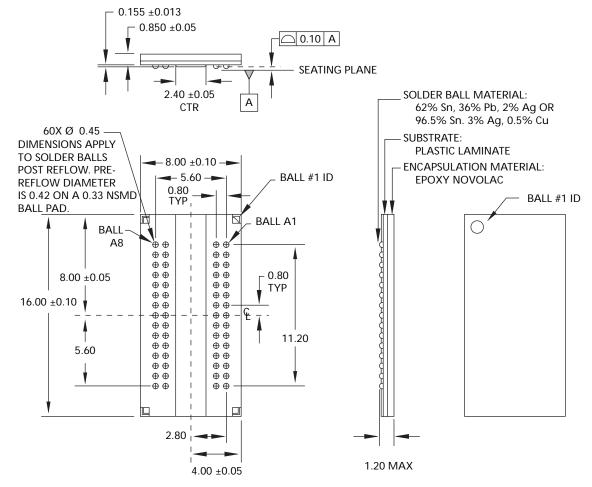


Figure 57: 60-Ball FBGA "FB/BB" Package (x8 device), 8mm x 16mm



- 2. Recommended pad size for PCB is 0.33mm ±0.025mm.
- 3. Topside part marking decoder can be found at http://www.micron.com/decoder.




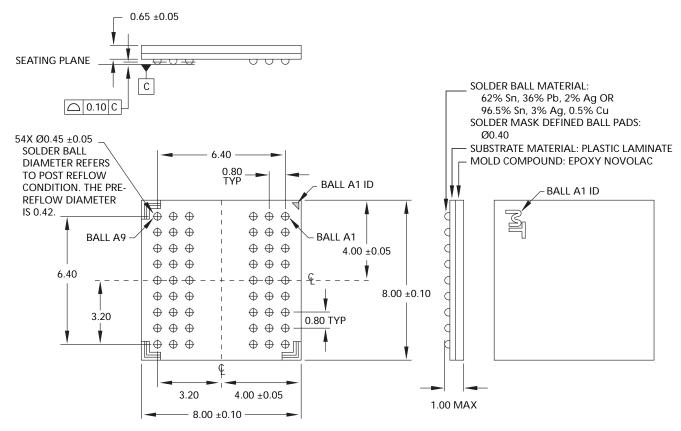


Figure 58: 54-Ball VFBGA "F4/B4" Package (x16 device), 8mm x 8mm



- 2. Recommended pad size for PCB is 0.40mm SMD.
- 3. Topside part marking decoder can be found at http://www.micron.com/decoder.



8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900

prodmktg@micron.com www.micron.com Customer Comment Line: 800-932-4992

Micron, the M logo, and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners.

This data sheet contains minimum and maximum limits specified over the complete power supply and temperature range set forth herein. Although considered final, these specifications are subject to change, as further product development and data characterization sometimes occur.