


# NAND04G-B2D NAND08G-BxC

4-Gbit, 8-Gbit, 2112-byte/1056-word page multiplane architecture, 1.8 V or 3 V, SLC NAND flash memories

### **Features**

- High density NAND flash memory
  - Up to 8 Gbits of memory array
  - Cost-effective solution for mass storage applications
- NAND interface
  - x8 or x16 bus width
  - Multiplexed address/data
- Supply voltage: 1.8 V or 3 V device
- Page size
  - x8 device: (2048 + 64 spare) bytes
  - x16 device: (1024 + 32 spare) words
- Block size
  - x8 device: (128K + 4 K spare) bytes
  - x16 device: (64K + 2K spare) words
- Multiplane architecture
  - Array split into two independent planes
  - Program/erase operations can be performed on both planes at the same time
- Page read/program
  - Random access: 25 µs (max)
  - Sequential access: 25 ns (min)
  - Page program time: 200 µs (typ)
  - Multiplane page program time (2 pages): 200 µs (typ)
- Copy back program with automatic error detection code (EDC)
- Cache read mode
- Fast block erase
  - Block erase time: 1.5 ms (typ)
  - Multiblock erase time (2 blocks):
     1.5 ms (typ)
- Status register
- Electronic signature
- Chip enable 'don't care'
- ONFI 1.0 compliant command set

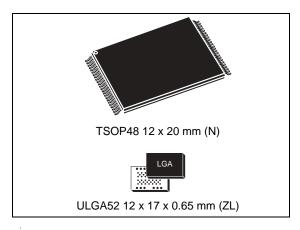

- Security features
  - OTP area
  - Serial number (unique ID)
  - Non-volatile protection option
- Data protection: hardware program/erase disabled during power transitions
- Data integrity
  - 100,000 program/erase cycles (with ECC)
  - 10 years data retention
- RoHS compliant packages

Table 1. Device summary

Reference	Part number				
	NAND04GR3B2D				
NAND04G-B2D	NAND04GW3B2D				
NANDU4G-B2D	NAND04GR4B2D <sup>(1)</sup>				
	NAND04GW4B2D <sup>(1)</sup>				
	NAND08GR3B2C,				
	NAND08GW3B2C				
NAND08G-BxC	NAND08GR4B2C <sup>(1)</sup>				
NANDUOG-BXC	NAND08GW4B2C <sup>(1)</sup>				
	NAND08GR3B4C				
	NAND08GW3B4C				

1. x16 organization only available for MCP products.

February 2010 Rev 9 1/72

# **Contents**

1	Description								
2	Mem	Memory array organization1							
3	Sign	Signals description							
	3.1	Inputs/outputs (I/O0-I/O7)	6						
	3.2	Inputs/outputs (I/O8-I/O15)	6						
	3.3	Address latch enable (AL)	6						
	3.4	Command latch enable (CL)	6						
	3.5	Chip enable (E)	6						
	3.6	Read enable ( $\overline{R}$ )	6						
	3.7	Write enable (W)	7						
	3.8	Write protect (WP)	7						
	3.9	Ready/Busy (RB)	7						
	3.10	V <sub>DD</sub> supply voltage	7						
	3.11	V <sub>SS</sub> ground	7						
4	Bus	operations	8						
	4.1	Command input	8						
	4.2	Address input	8						
	4.3	Data input	8						
	4.4	Data output	8						
	4.5	Write protect	9						
	4.6	Standby	9						
5	Com	mand set	1						
6	Devi	ce operations	2						
	6.1	Read memory array	2						
		6.1.1 Random read	2						
		6.1.2 Page read	2						
	6.2	Cache read	4						

	6.3	Page p	program	6
		6.3.1	Sequential input	6
		6.3.2	Random data input in page2	6
	6.4	Multiple	ane page program	8
	6.5	Copy b	pack program	9
	6.6	Multipla	ane copy back program	1
	6.7	Block 6	erase	2
	6.8	Multipla	ane block erase 3-	4
	6.9	Error d	letection code (EDC)	5
	6.10	Reset		6
	6.11	Read s	status register 30	6
		6.11.1	Write protection bit (SR7)	6
		6.11.2	P/E/R controller and cache ready/busy bit (SR6)	7
		6.11.3	P/E/R controller bit (SR5)	7
		6.11.4	Error bit (SR0)	
		6.11.5	SR4, SR3, SR2 and SR1 are reserved	
	6.12		status enhanced	
	6.13	Read E	EDC status register	8
	6.14	Read e	electronic signature	9
	6.15	Read C	ONFI signature	1
	6.16	Read p	parameter page 4	1
7	Conc	urrent	operations and extended read status4	5
8	Data	protect	tion	5
9	Softv	vare alg	gorithms4	6
	9.1	Bad blo	ock management 4	6
	9.2	NAND	flash memory failure modes	7
	9.3	Garbag	ge collection	8
	9.4	Wear-le	eveling algorithm 4	8
	9.5	Error c	orrection code 4	8
10	Prog	ram and	d erase times and endurance cycles 4	9



Contents		NAND04G-B2D, NAND08G-BxC
11	Maximum ratings	50
12	DC and AC parameters	51
	12.1 Ready/busy signal electrical characteristic	s65
	12.2 Data protection	66
13	Package mechanical	67
14	Ordering information	69
15	Revision history	70

# List of tables

Table 1.	Device summary	1
Table 2.	Product description	8
Table 3.	Signals names	. 10
Table 4.	Valid blocks	. 14
Table 5.	Bus operations	. 19
Table 6.	Address insertion (x8 devices)	. 19
Table 7.	Address insertion (x16 devices)	. 20
Table 8.	Address definition (x8 devices)	. 20
Table 9.	Address definition (x16 devices)	. 20
Table 10.	Commands	. 21
Table 11.	Copy back program addresses	
Table 12.	Address definition for EDC units (x8 devices)	. 35
Table 13.	Address definition for EDC units (x16 devices)	. 36
Table 14.	Status register bits	. 37
Table 15.	EDC status register bits	. 38
Table 16.	Electronic signature	. 39
Table 17.	Electronic signature byte 3	
Table 18.	Electronic signature byte 4	
Table 19.	Electronic signature byte 5	
Table 20.	Read ONFI signature	. 41
Table 21.	Parameter page data structure	
Table 22.	Extended Read Status Register commands	. 45
Table 23.	Block failure	
Table 24.	Program erase times and program erase endurance cycles	
Table 25.	Absolute maximum ratings	
Table 26.	Operating and AC measurement conditions	
Table 27.	Capacitance	
Table 28.	DC characteristics (1.8 V devices)	. 52
Table 29.	DC characteristics (3 V devices)	53
Table 30.	AC characteristics for command, address, data input	
Table 31.	AC characteristics for operations	
Table 32.	TSOP48 - 48 lead plastic thin small outline, 12 x 20 mm, package mechanical data	
Table 33.	ULGA52 12 x 17 x 0.65 mm, 1 mm pitch, package mechanical data	
Table 34.	Ordering information scheme	. 69
Table 35.	Document revision history	. 70



# List of figures

Figure 1.	Logic block diagram	
Figure 2.	Logic diagram	
Figure 3.	TSOP48 connections for NAND04G-B2D and NAND08G-BxC	
Figure 4.	ULGA52 connections for NAND04G-B2D and NAND08G-B2C devices	
Figure 5.	ULGA52 connections for the NAND08G-B4C devices	13
Figure 6.	Memory array organization	15
Figure 7.	Read operations	
Figure 8.	Random data output during sequential data output	24
Figure 9.	Cache read (sequential) operation	25
Figure 10.	Cache read (random) operation	
Figure 11.	Page program operation	
Figure 12.	Random data input during sequential data input	27
Figure 13.	Multiplane page program waveform	
Figure 14.	Copy back program (without readout of data)	30
Figure 15.	Copy back program (with readout of data)	31
Figure 16.	Page copy back program with random data input	31
Figure 17.	Multiplane copy back program	
Figure 18.	Block erase	
Figure 19.	Multiplane block erase	
Figure 20.	Page organization	
Figure 21.	Bad block management flowchart	
Figure 22.	Garbage collection	
Figure 23.	Equivalent testing circuit for AC characteristics measurement	
Figure 24.	Command latch AC waveforms	
Figure 25.	Address latch AC waveforms	
Figure 26.	Data input latch AC waveforms	
Figure 27.	Sequential data output after read AC waveforms	
Figure 28.	Sequential data output after read AC waveforms (EDO mode)	
Figure 29.	Read status register or read EDC status register AC waveform	
Figure 30.	Read status enhanced waveform	
Figure 31.	Read electronic signature AC waveform	
Figure 32.	Read ONFI signature waveform	
Figure 33.	Page read operation AC waveform	
Figure 34.	Page program AC waveform	
Figure 35.	Block erase AC waveform	
Figure 36.	Reset AC waveform	
Figure 37.	Program/erase enable waveform	
Figure 38.	Program/erase disable waveform	
Figure 39.	Read parameter page waveform	
Figure 40.	Ready/busy AC waveform	
Figure 41.	Ready/busy load circuit	
Figure 42.	Resistor value versus waveform timings for ready/busy signal	
Figure 43.	Data protection	
Figure 44.	TSOP48 - 48 lead plastic thin small outline, 12 x 20 mm, package outline	
Figure 45.	ULGA52 12 x 17 x 0.65 mm, 1 mm pitch, package outline	68

# 1 Description

The NAND04G-B2D and NAND08G-BxC are part of the NAND flash 2112-byte/1056-word page family of non-volatile flash memories. They use NAND cell technology have a density of 4 Gbits and 8 Gbits, respectively.

The NAND04G-B2D memory array is split into 2 planes of 2048 blocks each. This multiplane architecture makes it possible to program 2 pages at a time (one in each plane), or to erase 2 blocks at a time (one in each plane). This feature reduces the average program and erase times by 50%.

The NAND08G-BxC is a stacked device that combines two NAND04G-B2D dice, both of which feature a multiplane architecture.

In the NAND08G-B2C devices, only one of the memory components can be enabled at a time, therefore, operations can only be performed on one of the memory components at any one time.

The devices operate from a 1.8 V or 3 V voltage supply. Depending on whether the device has a x8 or x16 bus width, the page size is 2112 bytes (2048 + 64 spare) or 1056 words (1024 + 32 spare), respectively.

The address lines are multiplexed with the data input/output signals on a multiplexed x8 input/output bus. This interface reduces the pin count and makes it possible to migrate to other densities without changing the footprint.

Each block can be programmed and erased up to 100,000 cycles with ECC (error correction code) on. To extend the lifetime of NAND flash devices, the implementation of an ECC is mandatory.

A write protect pin is available to provide hardware protection against program and erase operations.

The devices feature an open-drain ready/busy output that identifies if the P/E/R (program/erase/read) controller is currently active. The use of an open-drain output allows the ready/busy pins from several memories to connect to a single pull-up resistor.

A Copy Back Program command is available to optimize the management of defective blocks. When a page program operation fails, the data can be programmed in another page without having to resend the data to be programmed. An embedded error detection code (EDC) is automatically executed after each copy back operation: 1 error bit can be detected for every 528 bytes. With this feature it is no longer necessary to use an external ECC to detect copy back operation errors.

The devices have a cache read feature that improves the read throughput for large files. During cache reading, the device loads the data in a cache register while the previous data is transferred to the I/O buffers to be read.

The devices have the chip enable 'don't care' feature, which allows code to be directly downloaded by a microcontroller. This is possible because chip enable transitions during the latency time do not stop the read operation.

Both the NAND04G-B2D and NAND08G-BxC support the ONFI 1.0 specification.

The devices are available in the following packages:

- TSOP48 (12 x 20 mm)
- ULGA52 (12 x 17 x 0.65 mm)

M numonyx

and come with three security features:

- OTP (one time programmable) area, which is a restricted access area where sensitive data/code can be stored permanently
- Serial number (unique identifier), which allows the device to be uniquely identified
- Non-volatile protection to lock sensible data permanently.

These security features are subject to an NDA (non-disclosure agreement) and are, therefore, not described in the datasheet. For more details about them, contact your nearest Numonyx sales office.

For information on how to order these options, refer to *Table 34: Ordering information scheme*. Devices are shipped from the factory with block 0 always valid and the memory content bits, in valid blocks, erased to '1'.

*Table 2: Product description* lists the part numbers and other information for all the devices available in the family.

Table 2. Product description

								Timing	s		
Part number	Density	Bus width	Page size	Block size	Memory array	Operating voltage	Sequential access time (min)	Random access time (max)	Page Program (typ)	Block Erase (typ)	Package
NAND04GR3B2D		x8	2048+64	128K+		1.7 to 1.95 V	45 ns				ULGA52
NAND04GW3B2D	4-Gbit	X8	bytes	4K bytes	64 pages x 4096	2.7 to 3.6 V	25 ns	25 110	200 µs	1.5 ms	TSOP48 ULGA52
NAND04GR4B2D	4-GDII	x16	1024+32	64K +	blocks	1.7 to 1.95 V	45 ns	25 μs	200 μs	1.5 1115	(1)
NAND04GW4B2D		XIO	words	2K words		2.7 to 3.6 V	25 ns				( )
NAND08GR3B2C		x8	2048+64	128K +		1.7 to 1.95 V	45 ns				ULGA52 <sup>(2)</sup>
NAND08GW3B2C		XO	bytes	4K bytes		2.7 to 3.6 V	25 ns				TSOP48 ULGA52 <sup>(2)</sup>
NAND08GR4B2C	8-Gbit	x16	1024+32	64K +	64 pages x 8192	1.7 to 1.95 V	45 ns	25 µs	200 µs	1.5 ms	(1)(2)
NAND08GW4B2C	8-Gbit	XIO	words	2K words	blocks	2.7 to 3.6 V	25 ns	25 μ5	200 μs	1.5 1115	,,,,
NAND08GR3B4C		x8	2048+64	128K +		1.7 to 1.95 V	45 ns				ULGA52 <sup>(2)</sup>
NAND08GW3B4C		x8	bytes	4K bytes		2.7 to 3.6 V	25 ns				ULGA52(=/

- 1. x16 organization is only available for MCP products.
- 2. The NAND08G-BxC is composed of two 4-Gbit dice.

Figure 1. Logic block diagram


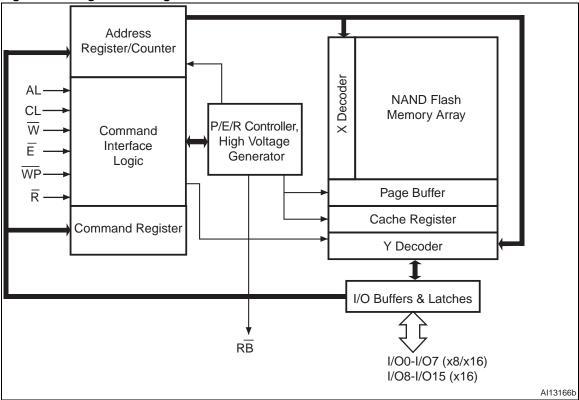


Figure 2. Logic diagram

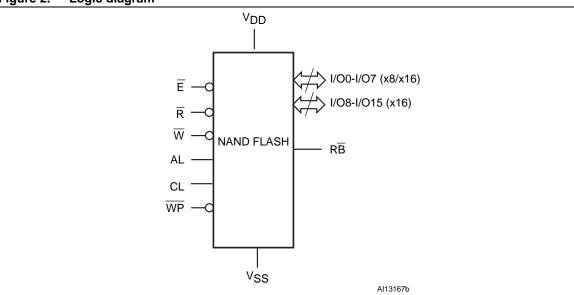

Numonyx 9/72

Table 3. Signals names

Signal	Function	Direction
I/O0-7	Data input/outputs, address inputs, or command inputs (x8/x16 devices)	Input/output
I/O8-15	Data input/outputs (x16 devices)	Input/output
AL	Address Latch Enable	Input
CL	Command Latch Enable	Input
Ē	Chip Enable	Input
R	Read Enable	Input
RB	Ready/Busy (open-drain output)	Output
W	Write Enable	Input
WP	Write Protect	Input
V <sub>DD</sub>	Supply voltage	Power supply
V <sub>SS</sub>	Ground	Ground
NC	Not connected internally	-
DU	Do not use	-

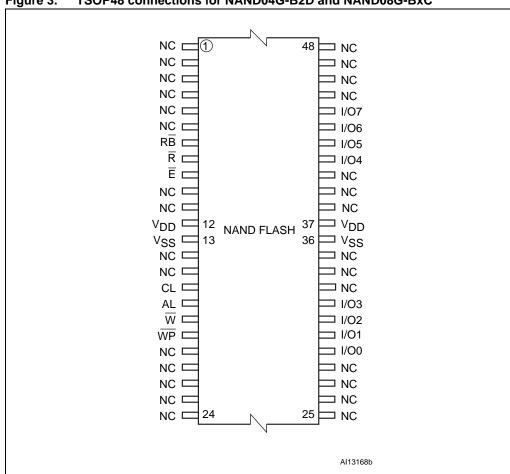


Figure 3. TSOP48 connections for NAND04G-B2D and NAND08G-BxC

Numonyx
11/72

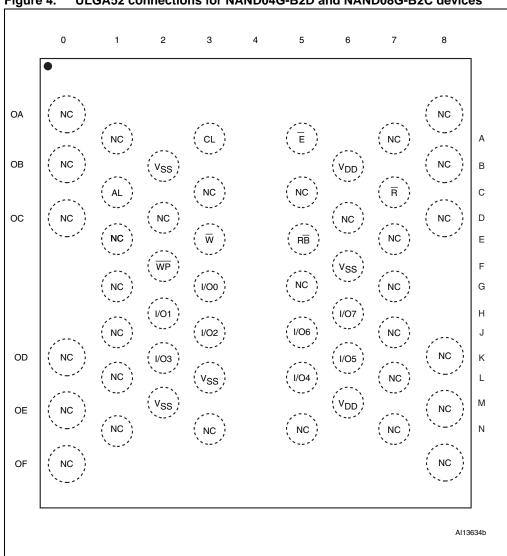


Figure 4. ULGA52 connections for NAND04G-B2D and NAND08G-B2C devices

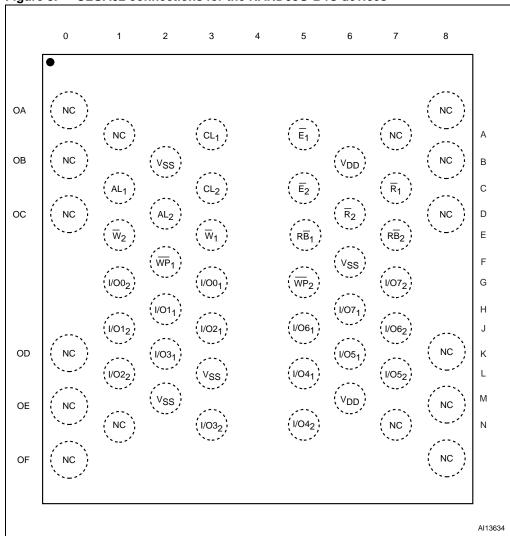


Figure 5. ULGA52 connections for the NAND08G-B4C devices

Numonyx 13/72

# 2 Memory array organization

The memory array of the devices is made up of NAND structures where 32 cells are connected in series. It is organized into blocks where each block contains 64 pages. The array is split into two areas, the main area, and the spare area. The main area of the array is used to store data, and the spare area typically stores error correction codes, software flags, or bad block identification.

In x8 devices, the pages are split into a 2048-byte main area and a spare area of 64 bytes. In x16 devices, the pages are split into a 1024-word main area and a spare area of 32 words. Refer to *Figure 6: Memory array organization*.

### **Bad blocks**

In x8 devices, the NAND flash 2112-byte/1056-word page devices may contain bad blocks, which are blocks that contain one or more invalid bits whose reliability is not guaranteed. Additional bad blocks may develop during the lifetime of the device.

The bad block information is written prior to shipping (refer to Section 9.1: Bad block management for more details).

*Table 4* shows the minimum number of valid blocks. The values shown include both the bad blocks that are present when the device is shipped and the bad blocks that could develop later on.


These blocks need to be managed using bad blocks management, block replacement, or error correction codes (refer to Section 9: Software algorithms).

Table 4. Valid blocks

Density of device	Min	Max
4 Gbits	4016	4096
8 Gbits <sup>(1)</sup>	8032	8192

The NAND08G-BxC devices are composed of two 4-Gbit dice. The minimum number of valid blocks is 4016 for each die.

Figure 6. Memory array organization

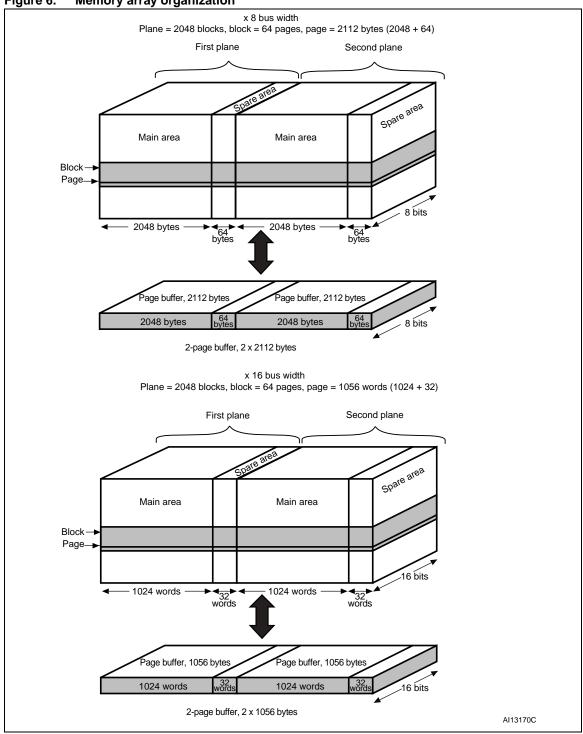

Numonyx

# 3 Signals description

See Figure 2: Logic diagram and Table 3: Signals names for a brief overview of the signals connected to this device.

## **3.1** Inputs/outputs (I/O0-I/O7)

Input/outputs 0 to 7 input the selected address, output the data during a read operation, or input a command or data during a write operation. The inputs are latched on the rising edge of Write Enable. I/O0-I/O7 are left floating when the device is deselected or the outputs are disabled.

## 3.2 Inputs/outputs (I/O8-I/O15)

Input/outputs 8 to 15 are only available in x16 devices. They output the data during a read operation or input data during a write operation. Command and address inputs only require I/O0 to I/O7.

The inputs are latched on the rising edge of Write Enable. I/O8-I/O15 are left floating when the device is deselected or the outputs are disabled.

## 3.3 Address latch enable (AL)

The address latch enable activates the latching of the address inputs in the command interface. When AL is High, the inputs are latched on the rising edge of Write Enable.

# 3.4 Command latch enable (CL)

The command latch enable activates the latching of the command inputs in the command interface. When CL is High, the inputs are latched on the rising edge of Write Enable.

# 3.5 Chip enable $(\overline{E})$

The Chip Enable input,  $\overline{E}$ , activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is Low,  $V_{IL}$ , the device is selected. If Chip Enable goes High,  $V_{IH}$ , while the device is busy, the device remains selected and does not go into standby mode.

# 3.6 Read enable $(\overline{R})$

The Read Enable pin,  $\overline{R}$ , controls the sequential data output during read operations. Data is valid  $t_{RLQV}$  after the falling edge of  $\overline{R}$ . The falling edge of  $\overline{R}$  also increments the internal column address counter by one.

# 3.7 Write enable $(\overline{W})$

The Write Enable input,  $\overline{W}$ , controls writing to the command interface, input address and data latches. Both addresses and data are latched on the rising edge of Write Enable.

During power-up and power-down a recovery time of 10  $\mu$ s (min) is required before the command interface is ready to accept a command. It is recommended to keep Write Enable High during the recovery time.

# 3.8 Write protect (WP)

The Write Protect pin is an input that gives a hardware protection against unwanted program or erase operations. When Write Protect is Low, V<sub>IL</sub>, the device does not accept any program or erase operations.

It is recommended to keep the Write Protect pin Low, V<sub>IL</sub>, during power-up and power-down.

# 3.9 Ready/Busy ( $\overline{RB}$ )

The Ready/Busy output,  $R\overline{B}$ , is an open-drain output that identifies if the P/E/R controller is currently active.

When Ready/Busy is Low,  $V_{OL}$ , a read, program or erase operation is in progress. When the operation completes, Ready/Busy goes High,  $V_{OH}$ .

The use of an open-drain output allows the ready/busy pins from several memories to be connected to a single pull-up resistor. A Low then indicates that one or more of the memories is busy.

During power-up and power-down a minimum recovery time of 10  $\mu$ s is required before the command interface is ready to accept a command. During this period the RB signal is Low,  $V_{OL}$ .

Refer to Section 12.1: Ready/busy signal electrical characteristics for details on how to calculate the value of the pull-up resistor.

# 3.10 V<sub>DD</sub> supply voltage

V<sub>DD</sub> provides the power supply to the internal core of the memory device. It is the main power supply for all operations (read, program and erase).

An internal voltage detector disables all functions whenever  $V_{DD}$  is below  $V_{LKO}$  (see *Table 29*) to protect the device from any involuntary program/erase during power-transitions.

Each device in a system should have  $V_{DD}$  decoupled with a 0.1  $\mu$ F capacitor. The PCB track widths should be sufficient to carry the required program and erase currents.

# 3.11 V<sub>SS</sub> ground

Ground,  $V_{SS}$ , is the reference for the power supply. It must be connected to the system ground.

N ∩umonyx 17/72

# 4 Bus operations

There are six standard bus operations that control the memory, as described in this section. See *Table 5: Bus operations* for a summary of these operations.

Typically, glitches of less than 5 ns on Chip Enable, Write Enable, and Read Enable are ignored by the memory and do not affect bus operations.

# 4.1 Command input

Command input bus operations give commands to the memory.

Commands are accepted when Chip Enable is Low, Command Latch Enable is High, Address Latch Enable is Low, and Read Enable is High. They are latched on the rising edge of the Write Enable signal.

Only I/O0 to I/O7 are used to input commands.

See Figure 24 and Table 30 for details of the timings requirements.

## 4.2 Address input

Address input bus operations input the memory addresses. Five bus cycles are required to input the addresses (refer to *Table 6: Address insertion (x8 devices)* and *Table 7: Address insertion (x16 devices)*).

The addresses are accepted when Chip Enable is Low, Address Latch Enable is High, Command Latch Enable is Low, and Read Enable is High. They are latched on the rising edge of the Write Enable signal.

Only I/O0 to I/O7 are used to input addresses.

See Figure 25 and Table 30 for details of the timings requirements.

## 4.3 Data input

Data input bus operations input the data to be programmed.

Data is accepted only when Chip Enable is Low, Address Latch Enable is Low, Command Latch Enable is Low, and Read Enable is High. The data is latched on the rising edge of the Write Enable signal. The data is input sequentially using the Write Enable signal.

See Figure 26 and Table 30 and Table 31 for details of the timings requirements.

# 4.4 Data output

Data output bus operations read the data in the memory array, the status register, the electronic signature, and the unique identifier.

Data is output when Chip Enable is Low, Write Enable is High, Address Latch Enable is Low, and Command Latch Enable is Low.

The data is output sequentially using the Read Enable signal.

Numonyx

If the Read Enable pulse frequency is lower then 33 MHz (t<sub>RLRL</sub> higher than 30 ns), the output data is latched on the rising edge of Read Enable signal (see *Figure 27*).

For higher frequencies (t<sub>RLRL</sub> lower than 30 ns), the EDO (extended data out) mode must be used. In this mode, data output bus operations are valid on the input/output bus for a time of t<sub>RLOX</sub> after the falling edge of Read Enable signal (see *Figure 28*).

See *Table 31* for details on the timings requirements.

## 4.5 Write protect

Write protect bus operations protect the memory against program or erase operations. When the Write Protect signal is Low the device does not accept program or erase operations, and, therefore, the contents of the memory array cannot be altered. The Write Protect signal is not latched by Write Enable to ensure protection, even during power-up.

# 4.6 Standby

When Chip Enable is High the memory enters standby mode, the device is deselected, outputs are disabled, and power consumption is reduced.

Table 5. Bus operations

Bus operation	E	AL	CL	R	W	WP	I/00 - I/07	I/O8 - I/O15 <sup>(1)</sup>
Command input	$V_{IL}$	$V_{IL}$	$V_{IH}$	$V_{IH}$	Rising	X <sup>(2)</sup>	Command	Х
Address input	$V_{IL}$	$V_{IH}$	$V_{IL}$	$V_{IH}$	Rising	Χ	Address	Х
Data input	$V_{IL}$	$V_{IL}$	$V_{IL}$	$V_{IH}$	Rising	$V_{IH}$	Data input	Data input
Data output	$V_{IL}$	$V_{IL}$	$V_{IL}$	Falling	$V_{IH}$	Χ	Data output	Data output
Write protect	Х	Х	Х	Х	Χ	$V_{IL}$	Х	Х
Standby	$V_{IH}$	Х	Χ	X	Х	$V_{IL}/V_{DD}$	Х	Х

<sup>1.</sup> Only for x16 devices.

Table 6. Address insertion (x8 devices)

iabio oi	/ taai 0	ridar do mortion (xo do 1000)									
Bus cycle <sup>(1)</sup>	1/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	1/00			
1 <sup>st</sup>	A7	A6	A5	A4	А3	A2	A1	A0			
2 <sup>nd</sup>	$V_{IL}$	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IL</sub>	A11	A10	A9	A8			
3 <sup>rd</sup>	A19	A18	A17	A16	A15	A14	A13	A12			
4 <sup>th</sup>	A27	A26	A25	A24	A23	A22	A21	A20			
5 <sup>th</sup>	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IL</sub>	A30 <sup>(2)</sup>	A29	A28			

- 1. Any additional address input cycles are ignored.
- A30 is only valid for the NAND08G-BxC devices.

<sup>2.</sup> WP must be V<sub>IH</sub> when issuing a Program or Erase command.

Table 7.	Address insertion	(x16 devices)

Bus cycle <sup>(1)</sup>	1/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	1/00
1 <sup>st</sup>	A7	A6	A5	A4	А3	A2	A1	A0
2 <sup>nd</sup>	$V_{IL}$	V <sub>IL</sub>	$V_{IL}$	$V_{IL}$	V <sub>IL</sub>	A10	A9	A8
3 <sup>rd</sup>	A18	A17	A16	A15	A14	A13	A12	A11
4 <sup>th</sup>	A26	A25	A24	A23	A22	A21	A20	A19
5 <sup>th</sup>	$V_{IL}$	V <sub>IL</sub>	$V_{IL}$	$V_{IL}$	V <sub>IL</sub>	A29 <sup>(2)</sup>	A28	A27

<sup>1.</sup> Any additional address input cycles are ignored.

Table 8. Address definition (x8 devices)

Address	Definition		
A0 - A11	Column address		
A12 - A17	Page address		
A18 - A29	Block address(NAND04G-B2D)		
A18 - A30	Block address (NAND08G-BxC)		
A18 = 0	First plane		
A18 = 1	Second plane		

Table 9. Address definition (x16 devices)

Address	Definition		
A0 - A10	Column address		
A11 - A16	Page address		
A17 - A28	Block address (NAND04G-B2D)		
A17 - A29	Block address (NAND08G-BxC)		
A17 = 0	First plane		
A17 = 1	Second plane		

<sup>2.</sup> A29 is only valid for the NAND08G-BxC devices.

# 5 Command set

All bus write operations to the device are interpreted by the command interface. The commands are input on I/O0-I/O7 and are latched on the rising edge of Write Enable when the command Latch Enable signal is High. Device operations are selected by writing specific commands to the command register. The two-step command sequences for program and erase operations are imposed to maximize data security.

Table 10 summarizes the commands.

Table 10. Commands

Command <sup>(1)</sup>		Commands accepted			
Command	1 <sup>st</sup> cycle	2 <sup>nd</sup> cycle	3 <sup>rd</sup> cycle	4 <sup>th</sup> cycle	during busy
Read	00h	30h	-	-	
Random Data Output	05h	E0h	-	_	
Cache Read (sequential)	31h	_	-	_	
Enhanced Cache Read (random)	00h	31h	-	_	
Exit Cache Read	3Fh	_	-	_	Yes <sup>(2)</sup>
Page Program (sequential input default)	80h	10h	_	_	
Random Data Input	85h	_	-	_	
Multiplane Page Program <sup>(3)</sup>	80h	11h	81h	10h	
Multiplane Page Program	80h	11h	80h	10h	
Copy Back Read	00h	35h	-	_	
Copy Back Program	85h	10h	-	_	
Multiplane Copy Back Program <sup>(3)</sup>	85h	11h	81h	10h	
Multiplane Copy Back Program	85h	11h	85h	10h	
Block Erase	60h	D0h	-	_	
Multiplane Block Erase <sup>(3)</sup>	60h	60h	D0h	_	
Multiplane Block Erase	60h	D1h	60h	D0h	
Reset	FFh	_	-	_	Yes
Read Electronic Signature	90h	-	-	_	
Read Status Register	70h	_	-	_	Yes
Read Status Enhanced	78h	_	_	_	Yes
Read Parameter Page	ECh	-	-	-	
Read EDC Status Register	7Bh	_	_	_	

- 1. Commands in bold are referring to ONFI 1.0 specifications.
- 2. Only during cache read busy.
- 3. Command maintained for backward compatibility.

#### **Device operations** 6

This section provides details of the device operations.

#### 6.1 Read memory array

At power-up the device defaults to read mode. To enter read mode from another mode, the Read command must be issued (see Table 10: Commands).

#### 6.1.1 Random read

Each time the Read command is issued, the first read is random read.

#### 6.1.2 Page read


After the first random read access, the page data (2112 bytes or 1056 words) are transferred to the page buffer in a time of t<sub>WHBH</sub> (see *Table 31*). Once the transfer is complete, the Ready/Busy signal goes High. The data can then be read sequentially (from selected column address to last column address) by pulsing the Read Enable signal.

The device can output random data in a page, instead of consecutive sequential data, by issuing a Random Data Output command. The Random Data Output command can be used to skip some data during a sequential data output.

The sequential operation can be resumed by changing the column address of the next data to be output, to the address which follows the Random Data Output command. The Random Data Output command can be issued as many times as required within a page.

The Random Data Output command is not accepted during cache read operations.

Figure 7. Read operations

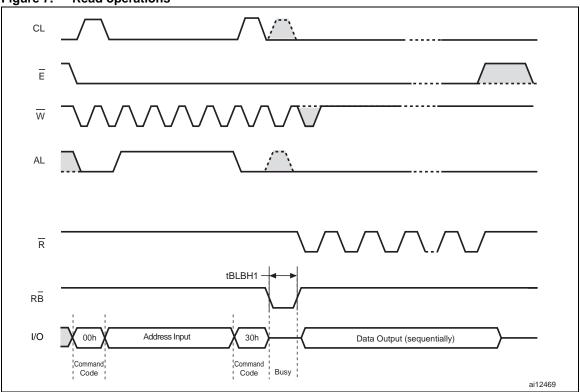

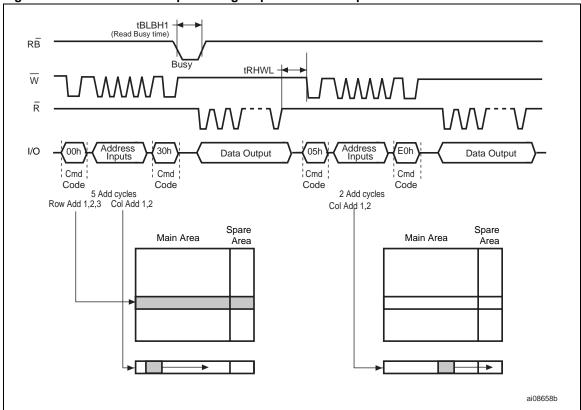


Figure 8. Random data output during sequential data output

### 6.2 Cache read

The cache read operation improves the read throughput by reading data using the cache register. As soon as the user starts to read one page, the device automatically loads the next page into the cache register.

A Read Page command, as defined in *Section 6.1.1: Random read*, is issued prior to the first Read Cache command in a read cache sequence. Once the Read Page command execution is terminated, the Cache Read command can be issued as follows:

- Issue a Sequential Cache Read command to copy the next page in sequential order to the cache register
- 2. Issue a Random Cache Read command to copy the page addressed in this command to the cache register.

The two commands can be used interchangeably, in any order. When there are no more pages are to be read, the final page is copied into the cache register by issuing the Exit Cache Read command. A Read Cache command must not be issued after the last page of the device is read. Data output only starts after issuing the 31h command for the first time.

See Figure 9: Cache read (sequential) operation and Figure 10: Cache read (random) operation for examples of the two sequences.

After the Sequential Cache Read or Random Cache Read command has been issued, the Ready/Busy signal goes Low and the status register bits are set to SR5 =' 0' and SR6 ='0' for a period of cache read busy time, t<sub>RCBSY</sub>, while the device copies the next page into the cache register.

After the cache read busy time has passed, the Ready/Busy signal goes High and the status register bits are set to SR5 = '0' and SR6 = '1', signifying that the cache register is ready to download new data. Data of the previously read page can be output from the page buffer by toggling the Read Enable signal. Data output always begins at column address 00h, but the Random Data Output command is also supported.

Figure 9. Cache read (sequential) operation


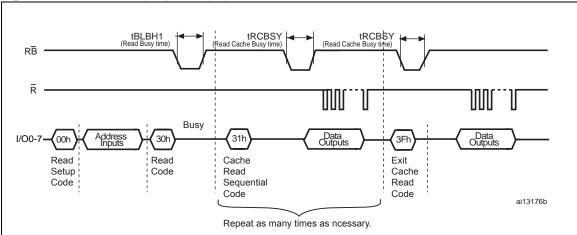


Figure 10. Cache read (random) operation

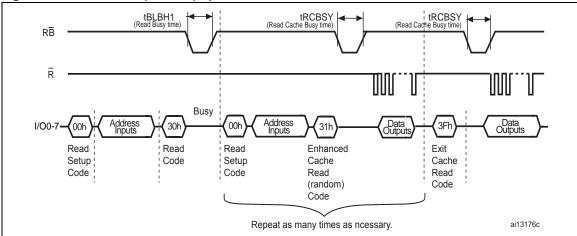

N numonyx
25/72

## 6.3 Page program

The page program operation is the standard operation to program data to the memory array. Generally, the page is programmed sequentially, however, the device does support random input within a page.

It is recommended to address pages sequentially within a given block.

The memory array is programmed by page, however, partial page programming is allowed where any number of bytes (1 to 2112) or words (1 to 1056) can be programmed.

The maximum number of consecutive, partial-page program operations allowed in the same page is four. After exceeding four operations a Block Erase command must be issued before any further program operations can take place in that page.

## 6.3.1 Sequential input

To input data sequentially the addresses must be sequential and remain in one block.

For sequential input each page program operation consists of the following five steps:

- 1. One bus cycle is required to set up the Page Program (sequential input) command (see *Table 10: Commands*)
- Five bus cycles are then required to input the program address (refer to Table 6: Address insertion (x8 devices) and Table 7: Address insertion (x16 devices)).
- 3. The data is then loaded into the data registers
- 4. One bus cycle is required to issue the Page Program Confirm command to start the P/E/R controller. The P/E/R controller only starts if the data has been loaded in step 3.
- 5. the P/E/R controller then programs the data into the array.

See Figure 11: Page program operation for more information.

## 6.3.2 Random data input in page

During a sequential input operation, the next sequential address to be programmed can be replaced by a random address by issuing a Random Data Input command. The following two steps are required to issue the command:

- One bus cycle is required to set up the Random Data Input command (see Table 10: Commands)
- 2. Two bus cycles are then required to input the new column address (refer to *Table 6: Address insertion (x8 devices)*).

Random data input can be repeated as often as required in any given page.

Once the program operation has started, the status register can be read using the Read Status Register command. During program operations the status register only flags errors for bits set to '1' that have not been successfully programmed to '0'.

During the program operation, only the Read Status Register and Reset commands are accepted; all other commands are ignored.

Once the program operation has completed, the P/E/R controller bit SR6 is set to '1' and the Ready/Busy signal goes High.

The device remains in read status register mode until another valid command is written to the command interface.

Figure 11. Page program operation


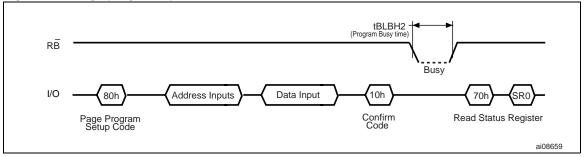


Figure 12. Random data input during sequential data input

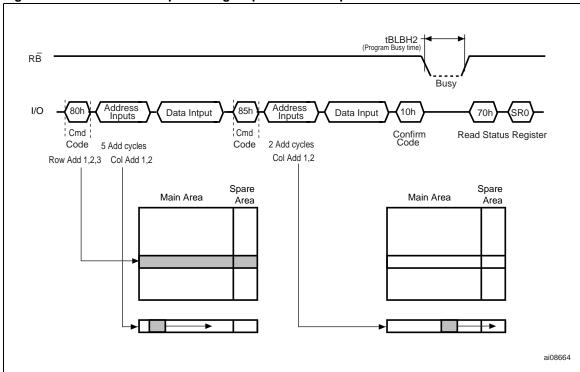

## 6.4 Multiplane page program

The devices support multiplane page program, which enables the programming of two pages in parallel, one in each plane.

A multiplane page program operation requires the following two steps:

- The first step serially loads up to two pages of data (4224 bytes) into the data buffer. It requires:
  - 1 clock cycle to set up the Page Program command (see Section 6.3.1: Sequential input)
  - 5 bus write cycles to input the first page address and data. The address of the first page must be within the first plane (A18 = 0 for x8 devices, A17 = 0 for x16 devices)
  - 1 bus write cycle to issue the page program confirm code. After this, the device is busy for a time of t<sub>IPBSY</sub>.
  - When the device returns to the ready state (Ready/Busy High), a multiplane page program setup code must be issued, followed by the 2nd page address (5 write cycles) and data. The address of the 2nd page must be within the second plane (A18 = 1 for x8 devices, A17 = 1 for x16 devices)
- 2. Parallel programming of both pages starts after the issue of Page Confirm command. Refer to *Figure 13: Multiplane page program waveform* for differences between ONFI and traditional sequences.

As for standard page program operation, the device supports random data input during both data loading phases.

Once the multiplane page program operation has started, that is during a delay of t<sub>IPBSY</sub>, the status register can be read using the Read Status Register command.

Once the multiplane page program operation has completed, the P/E/R controller bit SR6 is set to '1' and the Ready/Busy signal goes High.

If the multiplane page program fails, an error is signaled on bit SR0 of the status register. To know which page of the two planes failed, the Read Status Enhanced command must be issued twice, once for each plane (see Section 6.12).

*Figure 13* provides a description of the multiplane operation while showing the restrictions related to the multiplane page program and the differences between ONFI 1.0 and traditional sequences.

M numonyx

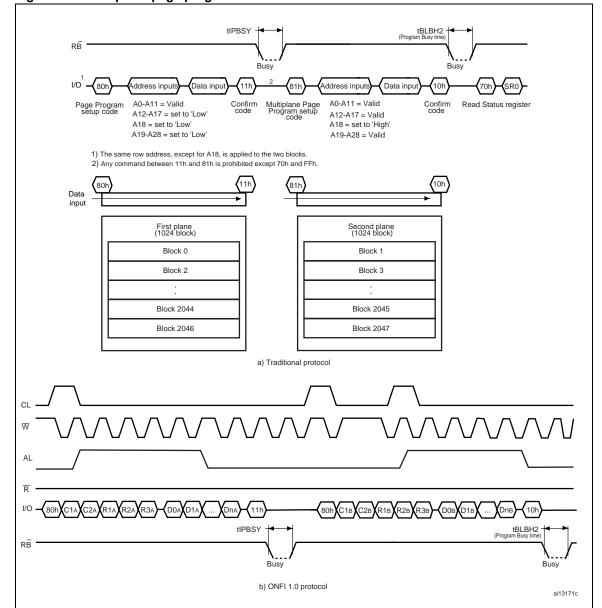


Figure 13. Multiplane page program waveform

1. This address scheme refers to x8 devices, remember to use the appropriate scheme for x16 devices.

# 6.5 Copy back program

The copy back program operation is used to copy the data stored in one page and reprogram it in another page.

The copy back program operation does not require external memory and so the operation is faster and more efficient because the reading and loading cycles are not required. The

**M** numonyx

operation is particularly useful when a portion of a block is updated and the rest of the block needs to be copied to the newly assigned block.

The NAND04G-B2D and NAND08G-BxC devices feature automatic EDC (error detection code) during a copy back operation. Consequently, it is no longer required to use an external ECC to detect copy back operation errors. Read error occurrences can be detected by checking the EDC status register (see Section 6.13: Read EDC status register). See also Section 6.9 for details of EDC operations.

The copy back program operation requires the following four steps:

- 1. The first step reads the source page. The operation copies all 2112 bytes from the page into the data buffer. It requires:
  - 1 bus write cycle to set up the command
  - 5 bus write cycles to input the source page address
  - 1 bus write cycle to issue the confirm command code
- 2. When the device returns to the ready state (ready/busy High), optional data readout is allowed by pulsing  $\overline{R}$ ; the next bus write cycle of the command is given with the 5 bus cycles to input the target page address. See *Table 11* for the addresses that must be the same for the source and target page.
- 3. Issue the confirm command to start the P/E/R controller.


To see the data input cycle for modifying the source page and an example of the copy back program operation, refer to *Figure 14: Copy back program (without readout of data)*.

Figure 16: Page copy back program with random data input shows a data input cycle to modify a portion or a multiple distant portion of the source page.

Table 11. Copy back program addresses

Density	Source and target page addresses		
4 Gbits	Same A18		
8 Gbits	Same A18 and A30		

Figure 14. Copy back program (without readout of data)

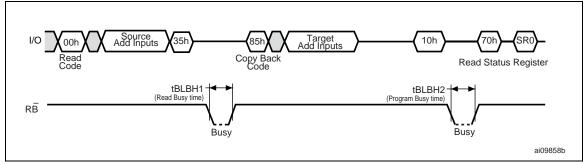

1. Copy back program is only permitted between odd address pages or even address pages.

🙌 numonyx

Figure 15. Copy back program (with readout of data)


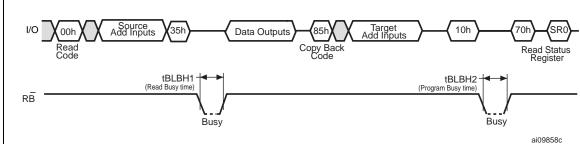


Figure 16. Page copy back program with random data input

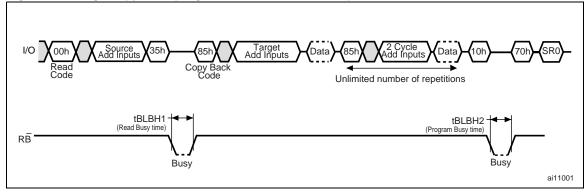

# 6.6 Multiplane copy back program

In addition to multiplane page program, the NAND04G-B2D and NAND08G-BxC devices support multiplane copy back program.

A Multiplane Copy Back Program command requires exactly the same steps as a Multiplane Page Program command, and must satisfy the same time constraints (see Section 6.4: Multiplane page program).

Prior to executing the multiplane copy back program operation, two single-page read operations must be executed to copy back the first page from the first plane and the second page from the second plane.

Two different sequences are allowed for the multiplane copy back operation:

- A traditional one (85h command, address insertion for the first plane, 11h command, 81h command, address insertion for the second plane, 10h command)
- 2. ONFI 1.0 (85h command, address insertion for the first plane, 11h command, 85h command, address insertion for the second plane, 10h command)

The EDC check is also performed during the multiplane copy back program. Errors during multiplane copy back operations can be detected by performing a read EDC status register operation (see Section 6.13: Read EDC status register).

If the multiplane copy back program fails, an error is signaled on bit SR0 of the status register. To know which page of the two planes failed, the Read Status Enhanced command must be executed twice, once for each plane (see Section 6.12). Figure 17: Multiplane copy back program provides a description of multiplane copy back program waveforms.

**N** numonyx

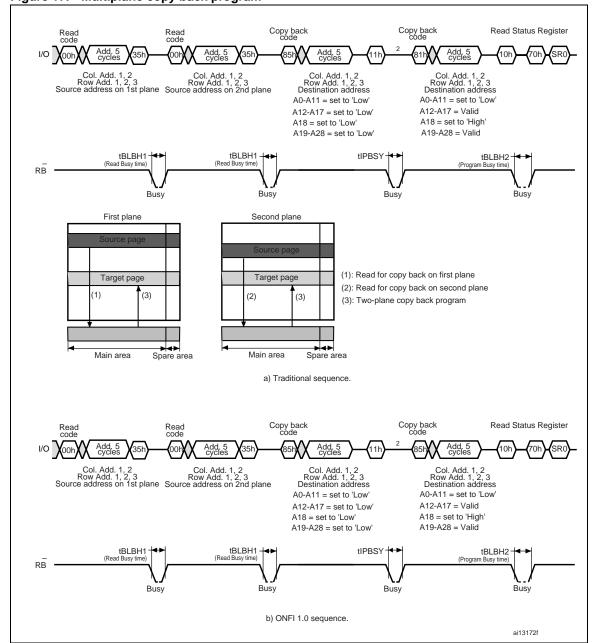


Figure 17. Multiplane copy back program

- 1. This address scheme refers to x8 devices. Please, remember to use the appropriate scheme for x16 devices.
- 2. Any command between 11h and 81h is prohibited except 70h and FFh.

## 6.7 Block erase

Erase operations are done one block at a time. An erase operation sets all of the bits in the addressed block to '1'. All previous data in the block is lost.

An erase operation consists of the following three steps (refer to Figure 18: Block erase):


- One bus cycle is required to set up the Block Erase command. Only addresses A18-A28 are used; all other address inputs are ignored
- 2. Three bus cycles are then required to load the address of the block to be erased. Refer to *Table 8: Address definition (x8 devices)* for the block addresses of each device
- 3. One bus cycle is required to issue the Block Erase Confirm command to start the P/E/R controller.

The operation is initiated on the rising edge of Write Enable,  $\overline{W}$ , after the Confirm command is issued. The P/E/R controller handles block erase and implements the verify process.

During the block erase operation, only the Read Status Register and Reset commands are accepted; all other commands are ignored.

Once the program operation has completed, the P/E/R controller bit SR6 is set to '1' and the Ready/Busy signal goes High. If the operation completed successfully, the write status bit SR0 is '0', otherwise it is set to '1'.

Figure 18. Block erase

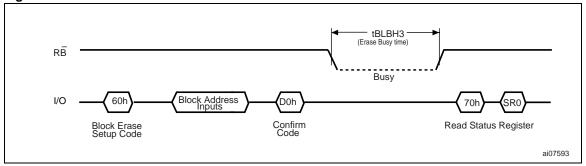


## 6.8 Multiplane block erase

The multiplane block erase operation allows the erasure of two blocks in parallel, one in each plane.

This operation consists of the following three steps (refer to *Figure 19: Multiplane block erase*):

- 1. 10 bus cycles are required to set up the Block Erase command and load the addresses of the blocks to be erased. The setup command followed by the address of the block to be erased must be issued for each block. t<sub>IEBSY</sub> busy time is required between the insertion of first and the second block addresses. As for multiplane page program operations, the address of the first and second page must be within the first plane (A18 = 0 for x8 devices, A17 = 0 for x16 devices) and second plane (A18 = 1 for x8 devices, A17 = 1 for x16 devices), respectively.
- 2. 1 bus cycle is then required to issue the Multiplane Block Erase Confirm command and start the P/E/R controller.

If the multiplane block erase fails, an error is signaled on bit SR0 of the status register. To know which page of the two planes failed, the Read Status Enhanced command must be issued twice, once for each plane (see Section 6.12).

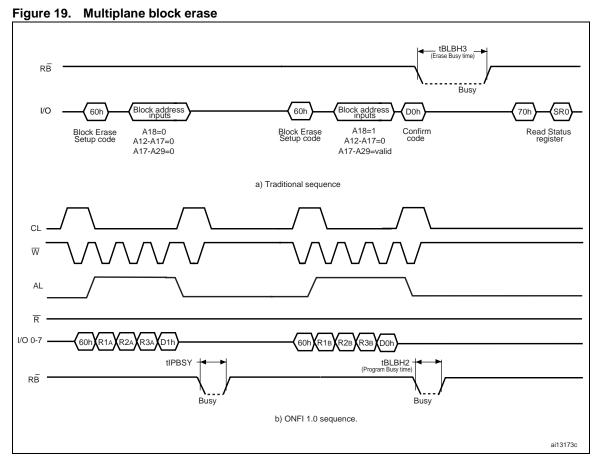

1. This address scheme refers to x8 devices. Please remember to use the appropriate scheme for x16 devices.

## 6.9 Error detection code (EDC)

The EDC (error detection code) is performed automatically during all program operations. It starts immediately after the device becomes busy.

The EDC detects 1 single bit error per EDC unit. Each EDC unit has a density of 528 bytes (or 264 words), split into 512 bytes of main area and 16 bytes of spare area (or 256 + 8 words). Refer to *Table 12* and *Figure 20* for EDC unit addresses definition. EDC results can only be retrieved during copy back program and multiplane copy back operations using the Read EDC Status Register command (see *Section 6.13: Read EDC status register*).

To properly use the EDC, the following conditions apply:

- Page program operations must be performed on a whole page, or on whole EDC unit(s)
- The modification of the content of an EDC unit using a random data input before the copy back program, must be performed on the whole EDC unit. It can only be done once per EDC unit. Any partial modification of the EDC unit results in the corruption of the on-chip EDCs.

Figure 20. Page organization

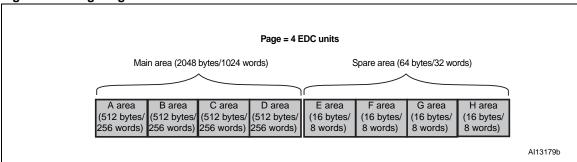


Table 12. Address definition for EDC units (x8 devices)

EDC unit	Main	area	Spare area		
EDC unit	Area name	Column address	Area name Column addre		
1st 528-byte EDC unit	А	0 to 511	Е	2048 to 2063	
2nd 528-byte EDC unit	В	512 to 1023	F	2064 to 2079	
3rd 528-byte EDC unit	С	1024 to1535	G	2080 to 2095	
4th 528-byte EDC unit	D	1536 to 2047	Н	2096 to 2111	

№ numonyx
35/72

EDC unit	Main	area	Spare area		
EDC unit	Area name	Column address	Area name	Column address	
1st 264-word EDC unit	Α	0 to 255	E	1024 to 1031	
2nd 264-word EDC unit	В	256 to 511	F	1032 to 1039	
3rd 264-word EDC unit	С	512 to 767	G	1040 to 1047	
4th 264-word EDC unit	D	768 to 1023	Н	1048 to 1055	

Table 13. Address definition for EDC units (x16 devices)

### 6.10 Reset

The Reset command is used to reset the command interface and status register. If the Reset command is issued during any operation, the operation is aborted. If the aborted operation is a program or erase, the contents of the memory locations being modified are no longer valid as the data is partially programmed or erased.

If the device has already been reset, then the new Reset command is not accepted.

The Ready/Busy signal goes Low for  $t_{BLBH4}$  after the Reset command is issued. The value of  $t_{BLBH4}$  depends on the operation that the device was performing when the command was issued. Refer to *Table 31* for the values.

## 6.11 Read status register

The devices contain a status register that provides information on the current or previous program or erase operation. The various bits in the status register convey information and errors on the operation.

The status register is read by issuing the Read Status Register command. The status register information is present on the output data bus (I/O0-I/O7) on the falling edge of Chip Enable or Read Enable, whichever occurs last. When several memories are connected in a system, the use of Chip Enable and Read Enable signals allows the system to poll each device separately, even when the Ready/Busy pins are common-wired. It is not necessary to toggle the Chip Enable or Read Enable signals to update the contents of the status register.

After the Read Status Register command has been issued, the device remains in read status register mode until another command is issued. Therefore, if a Read Status Register command is issued during a random read cycle, a new Read command must be issued to continue with a page read operation.

The status register bits are summarized in *Table 14: Status register bits*. Refer to *Table 14* in conjunction with the following sections.

### 6.11.1 Write protection bit (SR7)

The write protection bit identifies if the device is protected or not. If the write protection bit is set to '1', the device is not protected and program or erase operations are allowed. If the write protection bit is set to '0' the device is protected and program or erase operations are not allowed.

#### 6.11.2 P/E/R controller and cache ready/busy bit (SR6)

Status register bit SR6 has two different functions depending on the current operation.

During cache operations, SR6 acts as a cache ready/busy bit, which indicates whether the cache register is ready to accept new data. When SR6 is set to '0', the cache register is busy, and when SR6 is set to '1', the cache register is ready to accept new data.

During all other operations, SR6 acts as a P/E/R controller bit, which indicates whether the P/E/R controller is active or inactive. When the P/E/R controller bit is set to '0', the P/E/R controller is active (device is busy); when the bit is set to '1', the P/E/R controller is inactive (device is ready).

#### 6.11.3 P/E/R controller bit (SR5)

The Program/Erase/Read controller bit indicates whether the P/E/R controller is active or inactive during cache operations. When the P/E/R controller bit is set to '0', the P/E/R controller is active (device is busy); when the bit is set to '1', the P/E/R controller is inactive (device is ready).

Note: This bit is only valid for cache operations.

### 6.11.4 Error bit (SR0)

The error bit identifies if any errors have been detected by the P/E/R controller. The error bit is set to '1' when a program or erase operation has failed to write the correct data to the memory. If the error bit is set to '0' the operation has completed successfully.

#### 6.11.5 SR4, SR3, SR2 and SR1 are reserved

Table 14. Status register bits

Bit	Name	Logic level	Definition
SR7	Write protection	'1'	Not protected
Sixi	write protection	'0'	Protected
SR6			P/E/R controller inactive, device ready
SKO	Program/Erase/Read controller	'0'	P/E/R controller active, device busy
SR5	Program/Erase/Read controller <sup>(1)</sup>	'1'	P/E/R controller inactive, device ready
SKS	Frogram/Erase/Read controller	'0'	P/E/R controller active, device busy
SR4, SR3, SR2, SR1	Reserved	'don't care'	
SR0	Generic error	'1'	Error – operation failed
3/(0	Generic entit	'0'	No error – operation successful

<sup>1.</sup> Only valid for cache operations.

#### 6.12 Read status enhanced

In NAND flash devices with multiplane architecture, it is possible to independently read the status register of a single plane using the Read Status Enhanced command. If the error bit of the status register, SR0, reports an error during or after a multiplane operation, the Read Status Enhanced command is used to know which of the two planes contains the page that failed the operation. Three address cycles are required to address the selected block and page (A12-A28 for x8 devices and A11-A27 for x16 devices).

The output of the Read Status Enhanced command has the same coding as the Read Status command. See *Table 14* for a full description and *Figure 30* for the read status enhanced waveform.

### 6.13 Read EDC status register

The devices contain an EDC status register, which provides information on the errors that occurred during the read cycles of the copy back and multiplane copy back operations. In the case of multiplane copy back program, it is not possible to distinguish which of the two read operations caused the error.

The EDCS status register is read by issuing the Read EDC Status Register command.

After issuing the Read EDC Status Register command, a read cycle outputs the content of the EDC status register to the I/O pins on the falling edge of Chip Enable or Read Enable signals, whichever occurs last. The operation is similar to Read Status Register command.

*Table 15: EDC status register bits* summarizes the EDC status register bits. See *Figure 29* for a description of Read EDC Status Register waveforms.

Table 15.	EDC status	register bits	3
-----------	------------	---------------	---

Bit	Name	Logic level	Definition
0	D ""	'1'	Copy back or multiplane copy back operation failed
0	Pass/fail	'0'	Copy back or multiplane copy back operation succeeded
1	EDC status	'1'	Error
'	EDC status	'0'	No error
2	EDC validity	'1'	Valid
2	EDC validity	'0'	Invalid
3	Reserved	'don't care'	-
4	Reserved	'don't care'	-
5	Ready/busy <sup>(1)</sup>	'1'	Ready
5	Ready/busy */	'0'	Busy
6	Poody/busy(1)	'1'	Ready
0	Ready/busy <sup>(1)</sup>	'0'	Busy
7	Write protect	'1'	Not protected
,	Write protect	'0'	Protected

<sup>1.</sup> See Table 14: Status register bits for a description of SR5 and SR6 bits.

M numonyx

### 6.14 Read electronic signature

The devices contain a manufacturer code and device code. The following three steps are required to read these codes:

- 1. One bus write cycle to issue the Read Electronic Signature command (90h)
- 2. One bus write cycle to input the address (00h)
- 3. Five bus read cycles to sequentially output the data (as shown in *Table 16: Electronic signature*).

The device remains in this state until a new command is issued.

Table 16. Electronic signature

Root part number	Byte 1	Byte 2	Byte 3 (see Table 17)	Byte 4 (see Table 18)	Byte 5 (see Table 19)
NAND04GR3B2D NAND08GR3B4C <sup>(1)</sup>	20h	ACh	10h	15h	54h
NAND04GW3B2D NAND08GW3B4C <sup>(1)</sup>	20h	DCh	10h	95h	54h
NAND04GR4B2D	0020h	BCh	10h	55h	54h
NAND04GW4B2D	0020h	CCh	10h	D5h	54h
NAND08GR3B2C	20h	A3h	51h	15h	58h
NAND08GW3B2C	20h	D3h	51h	95h	58h
NAND08GR4B2C	0020h	B3h	51h	55h	58h
NAND08GW4B2C	0020h	C3h	51h	D5h	58h

<sup>1.</sup> For NAND08G-B4C devices, each 4-Gbit die returns its own electronic signature.

Table 17. Electronic signature byte 3

1/0	Definition	Value	Description
		0 0	1
I/O1-I/O0	Internal chin number	0 1	2
1/01-1/00	Internal chip number	1 0	4
		11	8
		0 0	2-level cell
I/O3-I/O2	Cell type	0 1	4-level cell
1/03-1/02		10	8-level cell
		11	16-level cell
		0 0	1
1/05 1/04	Number of simultaneously programmed pages	0 1	2
I/O5-I/O4		1 0	4
		11	8
1/00	Interleaved programming	0	Not supported
I/O6	between multiple devices	1	Supported
1/07	Cooke program	0	Not supported
1/07	Cache program	1	Supported

N numonyx 39/72

Table 18. Electronic signature byte 4

1/0	Definition	Value	Description
		0 0	1 Kbyte
I/O1-I/O0	Page size	0 1	2 Kbytes
1/01-1/00	(without spare area)	1 0	4 Kbytes
		1 1	8 Kbytes
1/02	Spare area size	0	8
1/02	(byte/512 byte)	1	16
		0 0	30/50 ns
1/07 1/03	Minimum sequential access time	1 0	25 ns
I/O7, I/O3		0 1	Reserved
		1 1	Reserved
		0 0	64 Kbytes
I/O5-I/O4	Block size	0 1	128 Kbytes
1/05-1/04	(without spare area)	1 0	256 Kbytes
		1 1	512 Kbytes
1/06	Organization	0	x8
1/06	Organization	1	x16

Table 19. Electronic signature byte 5

1/0	Definition	Value	Description
I/O1 - I/O0	Reserved	0 0	
		0 0	1 plane
I/O3 - I/O2	Plane number	0 1	2 planes
1/03 - 1/02	Flane number	1 0	4 planes
		1 1	8 planes
		0 0 0	64 Mbits
		0 0 1	128 Mbits
		0 1 0	256 Mbits
I/O6 - I/O4	Plane size	0 1 1	512 Mbits
1/06 - 1/04	(without spare area)	1 0 0	1 Gbit
		1 0 1	2 Gbits
		1 1 0	4 Gbits
		1 1 1	8 Gbits
1/07	Reserved	0	

### 6.15 Read ONFI signature

To recognize NAND flash devices that are compatible with the ONFI 1.0 command set, the Read Electronic Signature can be issued, followed by an address of 20h. The next four bytes output is the ONFI signature, which is the ASCII encoding of the 'ONFI' word. Reading beyond four bytes produces indeterminate values. The device remains in this state until a new command is issued.

Figure 32 provides a description of the read ONFI signature waveform and Table 20 provides the definition of the output bytes.

Table 20. Read ONFI signature

Byte	Value	ASCII character
1st byte	4Fh	0
2nd byte	4Eh	N
3rd byte	46h	F
4th byte	49h	I
5th byte	Undefined	Undefined

### 6.16 Read parameter page

The Read Parameter Page command retrieves the data structure that describes the NAND flash organization, features, timings and other behavioral parameters. This data structure enables the host processor to automatically recognize the NAND flash configuration of a device. The whole data structure is repeated at least five times.

See Figure 39 for a description of the read parameter page waveform.

The Random Data Read command can be issued during execution of the read parameter page to read specific portions of the parameter page.

The Read Status command may be used to check the status of read parameter page during execution. After completion of the Read Status command, 00h is issued by the host on the command line to continue with the data output flow for the Read Parameter Page command.

Read status enhanced is not be used during execution of the Read Parameter Page command.

*Table 21* defines the parameter page data structure; for parameters that span multiple bytes, the least significant byte of the parameter corresponds to the first byte.

Values are reported in the parameter page in bytes when referring to items related to the size of data access (as in an x8 data access device). For example, the chip returns how many data bytes are in a page. For a device that supports x16 data access, the host is required to convert byte values to word values for its use. Unused fields are set to 0h.

For more detailed information about parameter page data bits, refer to ONFI specification 1.0, section 5.4.1.

Table 21. Parameter page data structure

Table	Byte	O/M <sup>(1)</sup>	page data s	Description		
			Parameter pag	ge signature		
			- Byte 0: 4Fh, 'O'			
	0-3	М	- Byte 1: 4Eh, 'N'			
			<ul><li>Byte 2: 46h,</li><li>Byte 3: 49h,</li></ul>			
-			Byto 0. 4011,	Revision number		
			Bit 2 to bit 15	Reserved (0)		
	4-5	М	Bit 1	1 = supports ONFI version 1.0		
×			Bit 0	Reserved (0)		
pold			DIL U			
res				Features supported		
eatu			Bit 5 to bit 15	Reserved (0)		
ld fe			Bit 4	1 = supports odd to even page copy back		
n al	6-7	M	Bit 3	1 = supports interleaved operations		
atic			Bit 2	1 = supports non-sequential page programming		
form			Bit 1	1 = supports multiple LUN operations		
n in			Bit 0	1 = supports 16-bit data bus width		
Revision information and features block				Optional commands supported		
Re			Bit 6 to bit 15	Reserved (0)		
			Bit 5	1 = supports Read Unique ID		
	8-9	М	Bit 4	1 = supports Copy back		
	0 0	141	Bit 3	1 = supports Read Status Enhanced		
			Bit 2	1 = supports Get Features and Set Features		
			Bit 1	1 = supports Read Cache commands		
			Bit 0	1 = supports Page Cache Program command		
	10-31			Reserved (0)		
. ¥	32-43	М	Device manufa	acturer (12 ASCII characters)		
urer block	44-63	М	Device model	(20 ASCII characters)		
Ifact	64	М	JEDEC manufacturer ID			
Manufacti information	65-66	0	Date code			
infe	67-79		Reserved (0)			
	80-83	М		Number of data bytes per page		
	84-85	М	_	Number of spare bytes per page		
	86-89	М		Number of data bytes per partial page		
	90-91	М		Number of spare bytes per partial page		
	92-95	М		Number of pages per block		

Table 21. Parameter page data structure (continued)

	Byte	O/M <sup>(1)</sup>	Description		
	96-99	М		Number of blocks per logical unit (LUN)	
	100	М		Number of logical units (LUNs)	
			Number of address cycles		
	101	М	Bit 4 to bit 7	Column address cycles	
			Bit 0 to bit 3	Row address cycles	
	102	М		Number of bits per cell	
	103-104	М		Bad blocks maximum per LUN	
	105-106	М		Block endurance	
	107	М		Guaranteed valid blocks at beginning of target	
	108-109	М		Block endurance for guaranteed valid blocks	
¥	110	М		Number of programs per page	
ploc			Partial programming attributes		
tion		M	Bit 5 to bit 7	Reserved	
Memory organization block	111		4	1 = partial page layout is partial page data followed by partial page spare	
o			Bit 1 to bit 3	Reserved	
mor			0	1 = partial page programming has constraints	
Ĕ	112	М		Number of bits ECC correctability	
				Number of interleaved address bits	
	113	М	Bit 4 to bit 7	Reserved (0)	
			Bit 0 to bit 3	Number of interleaved address bits	
				Interleaved operation attributes	
			Bit 4 to bit 7	Reserved (0)	
	114	0	Bit 3	Address restrictions for program cache	
	114	114 0	Bit 2	1 = program cache supported	
			Bit 1	1 = no block address restrictions	
			Bit 0	Overlapped/concurrent interleaving support	
	115-127			Reserved (0)	
	128	М		I/O pin capacitance	

N numonyx
43/72

Table 21. Parameter page data structure (continued)

	Byte	O/M <sup>(1)</sup>	Description		
				Timing mode support	
			Bit 6 to bit 15	Reserved (0)	
			Bit 5	1 = supports timing mode 5	
	129-130	М	Bit 4	1 = supports timing mode 4	
	120 100	,,,,	Bit 3	1 = supports timing mode 3	
			Bit 2	1 = supports timing mode 2	
×			Bit 1	1 = supports timing mode 1	
polq			Bit 0	1 = supports timing mode 0, shall be 1	
Electrical parameters block				Program cache timing mode support	
ame			Bit 6 to bit 15	Reserved (0)	
l par			Bit 5	1 = supports timing mode 5	
rica	131-132	0	Bit 4	1 = supports timing mode 4	
ect	101 102		Bit 3	1 = supports timing mode 3	
ш			Bit 2	1 = supports timing mode 2	
			Bit 1	1 = supports timing mode 1	
			Bit 0	1 = supports timing mode 0	
	133-134	М		t <sub>PROG</sub> maximum page program time (μs)	
	135-136	М		t <sub>BERS</sub> maximum block erase time (μs)	
	137-138	М		$t_{R}$ maximum page read time (µs)	
	139-163	М		Reserved (0)	
ō ×	164-165	М		Vendor specific revision number	
Vendor block	166-253	М		Vendor specific	
	254-255	М		Integrity CRC	
am.	256-511	М		Value of bytes 0-255	
para	512-767	М		Value of bytes 0-255	
Red. param. pages	768+	0		Additional redundant parameter pages	

<sup>1.</sup> O = optional, M = mandatory.

## 7 Concurrent operations and extended read status

The NAND08G-BxC devices are composed of two 4-Gbit dice stacked together. This configuration allows the devices to support concurrent operations, which means that while performing an operation in one die (erase, read, program, etc.), another operation is possible in the other die.

The standard read status register operation returns the status of the NAND08G-BxC device. To provide information on each 4-Gbit die, the NAND08G-BxC devices feature an Extended Read Status Register command that independently checks the status of each NAND04G-B2D.

The following steps are required to perform concurrent operations:

- 1. Select one of the two dice by setting the most significant address bit A30 to '0' or '1'
- 2. Execute one operation on this die
- 3. Launch a concurrent operation on the other die
- 4. Check the status of these operations by performing an extended read status register operation.

All combinations of operations are possible except read while read. This is due to the fact that the input/output bus is common to both dice.

Refer to *Table 22* for the description of the Extended Read Status Register command sequence, and to *Table 14*. for the definition of the status register bits.

Table 22. Extended Read Status Register commands

Command	Address range	1 bus write cycle
Read 1st die status	Address ≤ 0x3FFFFFF	F2h
Read 2nd die status	0x3FFFFFFF < Address ≤ 0x7FFFFFF	F3h

# 8 Data protection

The devices feature a Write Protect,  $\overline{WP}$ , pin, which can be used to protect the device against program and erase operations. It is recommended to keep  $\overline{WP}$  at  $V_{IL}$  during power-up and power-down.

Numonyx 45/72

### 9 Software algorithms

This section provides information on the software algorithms that Numonyx recommends implementing to manage the bad blocks and extend the lifetime of the NAND device.

NAND flash memories are programmed and erased by Fowler-Nordheim tunnelling using high voltage. Exposing the device to high voltage for extended periods damages the oxide layer.

To extend the number of program and erase cycles and increase the data retention, the:

- Number of program and erase cycles is limited (see Table 24: Program erase times and program erase endurance cycles for the values)
- Implementation of a garbage collection, a wear-leveling algorithm and an error correction code is recommended.

To help integrate a NAND memory into an application, Numonyx provides a file system OS native reference software, which supports the basic commands of file management.

Contact the nearest Numonyx sales office for more details.

### 9.1 Bad block management

Devices with bad blocks have the same quality level and the same AC and DC characteristics as devices that have all valid blocks. A bad block does not affect the performance of valid blocks because it is isolated from the bit and common source lines by a select transistor.

The devices are supplied with all the locations inside valid blocks erased (FFh). The bad block information is written prior to shipping. Any block, where the 1st and 6th bytes (x8 devices) /1st word (x16 devices), in the spare area of the 1st page, does not contain FFh is a bad block.

The bad block information must be read before any erase is attempted as the bad block information may be erased. For the system to be able to recognize the bad blocks based on the original information, the creation of a bad block table following the flowchart shown in *Figure 21: Bad block management flowchart* is recommended.

Numonyx

#### 9.2 NAND flash memory failure modes

Over the lifetime of the device bad blocks may develop. To implement a highly reliable system, the possible failure modes must be considered.

#### Program/erase failure

In this case, the block has to be replaced by copying the data to a valid block. These additional bad blocks can be identified because attempts to program or erase them gives errors in the status register. As the failure of a page program operation does not affect the data in other pages in the same block, the block can be replaced by reprogramming the current data and copying the rest of the replaced block to an available valid block. The Copy Back Program command can be used to copy the data to a valid block. See Section 6.5: Copy back program for more details.

#### Read failure

In this case, ECC correction must be implemented. To efficiently use the memory space, the recovery of a single-bit error in read by ECC, without replacing the whole block, is recommended.

Refer to Table 23: Block failure for the recommended procedure to follow if an error occurs during an operation.

Table 23. **Block failure** 

Operation	Procedure
Erase	Block replacement
Program	Block replacement
Read	ECC

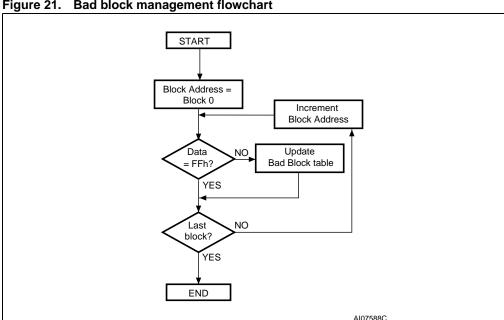


Figure 21. Bad block management flowchart


🔰 numonyx 47/72

### 9.3 Garbage collection

When a data page needs to be modified, it is faster to write to the first available page, resulting in the previous page being marked as invalid. After several updates it is necessary to remove invalid pages to free memory space.

To free this memory space and allow further program operations, the implementation of a garbage collection algorithm is recommended. In garbage collection software, the valid pages are copied into a free area and the block containing the invalid pages is erased as show in *Figure 22*.

Figure 22. Garbage collection

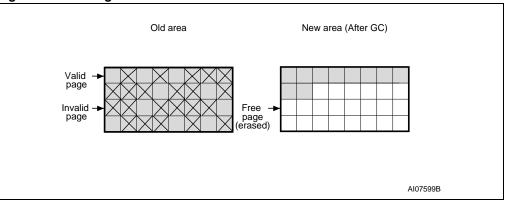

### 9.4 Wear-leveling algorithm

For write-intensive applications, the implementation of a wear-leveling algorithm is recommended to monitor and spread the number of write cycles per block.

In memories that do not use a wear-leveling algorithm, not all blocks get used at the same rate. The wear-leveling algorithm ensures that equal use is made of all the available write cycles for each block. There are two wear-leveling levels:

- First level wear-leveling, where new data is programmed to the free blocks that have had the fewest write cycles
- Second level wear-leveling, where long-lived data is copied to another block so that the original block can be used for more frequently-changed data.

The second level wear-leveling is triggered when the difference between the maximum and the minimum number of write cycles per block reaches a specific threshold.

#### 9.5 Error correction code

Users must implement an error correction code (ECC) to identify and correct errors in the data stored in the NAND flash memories. The ECC implemented must be able to correct 1 bit for every 512 bytes. Sensible data stored in the spare area must be covered by ECC as well.

🙌 numonyx

# 10 Program and erase times and endurance cycles

The program and erase times and the number of program/erase cycles per block are shown in *Table 24*.

Table 24. Program erase times and program erase endurance cycles

Parameters		NAND flash			
Farameters		Min	Тур	Max	Unit
Page program time			200	700	μs
Multiplana program timo	3 V		200	700	μs
Multiplane program time	1.8 V		250	800	μs
Block erase time			1.5	2	ms
Multiplane block erase time	3 V		1.5	2	ms
indupatie block erase time	1.8 V		2	2.5	ms
Multiplane program busy time (t <sub>IPBSY</sub> )			0.5	1	μs
Multiplane erase busy time (t <sub>IEBSY</sub> )			0.5	1	μs
Cache read busy time (t <sub>RCBSY</sub> )			3	t <sub>R</sub>	μs
Program/erase cycles per block (with ECC)		100,000			cycles
Data retention		10			years

## 11 Maximum ratings

Stressing the device above the ratings listed in *Table 25: Absolute maximum ratings* may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the operating sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Table 25. Absolute maximum ratings

Symbol	Parameter	Va	Unit	
Зушьог	Farameter	Min	Max	Oilit
T <sub>BIAS</sub>	Temperature under bias	- 50	125	°C
T <sub>STG</sub>	Storage temperature	<b>- 65</b>	150	°C
V <sub>IO</sub> <sup>(1)</sup>	Input or output voltage	- 0.6	4.6	V
V <sub>DD</sub>	Supply voltage	- 0.6	4.6	V

<sup>1.</sup> Minimum voltage may undershoot to -2 V for less than 20 ns during transitions on input and I/O pins. Maximum voltage may overshoot to  $V_{DD} + 2$  V for less than 20 ns during transitions on I/O pins.

## 12 DC and AC parameters

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the devices. The parameters in the following DC and AC characteristics tables are derived from tests performed under the measurement conditions summarized in *Table 26*. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 26. Operating and AC measurement conditions

Poromotor	Parameter				
Parameter	Parameter			Units	
Supply voltage (V	1.8 V device	1.7	1.95	V	
Supply voltage (V <sub>DD</sub> )	3 V device	2.7	3.6	V	
Ambient temperature (T <sub>Δ</sub> )	Grade 1	0	70	°C	
Ambient temperature (1 <sub>A</sub> )	Grade 6	-40	85		
Load capacitance (C <sub>L</sub> ) (1 TTL GATE	1.8 V device	30		pF	
and C <sub>L</sub> )	3 V device	50		ρι	
Input pulses voltages		0	$V_{DD}$	V	
Input and output timing ref. voltages	V <sub>D</sub>	V <sub>DD</sub> /2			
Output circuit resistor R <sub>ref</sub>	8.35		kΩ		
Input rise and fall times			ns		

Table 27. Capacitance<sup>(1)</sup>

Symbol	Parameter	Test condition	Тур	Max	Unit
C <sub>IN</sub>	Input capacitance	V <sub>IN</sub> = 0 V		10	pF
C <sub>I/O</sub>	Input/output capacitance <sup>(2)</sup>	V <sub>IL</sub> = 0 V		10	pF

<sup>1.</sup>  $T_A = 25$  °C, f = 1 MHz.  $C_{IN}$  and  $C_{I/O}$  are not 100% tested.

<sup>2.</sup> Input/output capacitances double in stacked devices.

NAND Flash

CL

QRref

GND

Ai11085

Figure 23. Equivalent testing circuit for AC characteristics measurement

Table 28. DC characteristics (1.8 V devices)<sup>(1)</sup>

Symbol	Paramete	er	Test conditions	Min	Тур	Max	Unit
I <sub>DD1</sub>	Operating	Sequential read	$t_{RLRL}$ minimum $\overline{E} = V_{IL}$ , $I_{OUT} = 0$ mA	-	10	20	mA
I <sub>DD2</sub>	current	Program	_	-	10	20	mA
I <sub>DD3</sub>		Erase	_	-	10	20	mA
I <sub>DD5</sub>	Standby current	Standby current (CMOS)		-	10	50	μA
I <sub>LI</sub>	Input leakage	current	V <sub>IN</sub> = 0 to V <sub>DD</sub> max	-	_	±10	μA
I <sub>LO</sub>	Output leakage	current	V <sub>OUT</sub> = 0 to V <sub>DD</sub> max	-	-	±10	μA
V <sub>IH</sub>	Input high vo	ltage	-	0.8 * V <sub>DD</sub>	_	V <sub>DD</sub> + 0.3	V
V <sub>IL</sub>	Input low vo	tage	_	-0.3	-	0.2 * V <sub>DD</sub>	V
V <sub>OH</sub>	Output high volta	age level	I <sub>OH</sub> = -100 μA	V <sub>DD</sub> - 0.1	-	_	V
V <sub>OL</sub>	Output low voltage level		I <sub>OL</sub> = 100 μA	-	-	0.1	V
I <sub>OL</sub> (RB)	Output low current (RB)		V <sub>OL</sub> = 0.1 V	3	-	4	mA
V <sub>LKO</sub>	V <sub>DD</sub> supply voltage program loc		-	-	_	1.1	V

Standby and leakage currents refer to a single die device. For a multiple die device, their value must be multiplied for the number of dice of the stacked device, while the active power consumption depends on the number of dice concurrently executing different operations.

Table 29. DC characteristics (3 V devices)<sup>(1)</sup>

Symbol	Paramete	er	Test conditions	Min	Тур	Max	Unit
I <sub>DD1</sub>	Operating	Sequential read	$\frac{t_{RLRL} \text{ minimum}}{E = V_{IL,} I_{OUT} = 0 \text{ mA}}$	_	15	30	mA
I <sub>DD2</sub>	current	Program	_	-	15	30	mA
I <sub>DD3</sub>		Erase	_	-	15	30	mA
I <sub>DD4</sub>	Standby currer	nt (TTL)	$E = V_{IH}, \overline{WP} = 0/V_{DD}$			1	mA
I <sub>DD5</sub>	Standby current (CMOS)		$\overline{E} = V_{DD} - 0.2,$ $\overline{WP} = 0/V_{DD}$	_	10	50	μΑ
I <sub>LI</sub>	Input leakage current		V <sub>IN</sub> = 0 to V <sub>DD</sub> max	-	_	±10	μA
I <sub>LO</sub>	Output leakage	current	V <sub>OUT</sub> = 0 to V <sub>DD</sub> max	-	_	±10	μA
V <sub>IH</sub>	Input high vo	ltage	_	0.8 V <sub>DD</sub>	_	V <sub>DD</sub> +0.3	V
V <sub>IL</sub>	Input low vo	ltage	-	-0.3	_	0.2 V <sub>DD</sub>	V
V <sub>OH</sub>	Output high volta	age level	I <sub>OH</sub> = -400 μA	2.4	_	-	V
V <sub>OL</sub>	Output low voltage level		I <sub>OL</sub> = 2.1 mA	_	-	0.4	V
I <sub>OL</sub> (RB)	Output Low current (RB)		V <sub>OL</sub> = 0.4 V	8	-	10	mA
V <sub>LKO</sub>	V <sub>DD</sub> supply voltage program loc		-	-	-	1.8	V

Standby and leakage currents refer to a single die device. For a multiple die device, their value must be multiplied for the number of dice of the stacked device, while the active power consumption depends on the number of dice concurrently executing different operations.

Table 30. AC characteristics for command, address, data input

Symbol	Alt.	Parameter	1.8 V	3 V	Unit		
t <sub>ALLWH</sub>	+	Address Latch Low to Write Enable High	AL setup time	Min	25	12	ns
t <sub>ALHWH</sub>	t <sub>ALS</sub>	Address Latch High to Write Enable High	AL setup time	IVIIII	25	12	115
t <sub>CLHWH</sub>	+	Command Latch High to Write Enable High	CL setup time	Min	25	12	ns
t <sub>CLLWH</sub>	t <sub>CLS</sub>	Command Latch Low to Write Enable High	CL setup time	IVIIII	25	12	115
t <sub>DVWH</sub>	t <sub>DS</sub>	Data Valid to Write Enable High	Data setup time	Min	20	12	ns
t <sub>ELWH</sub>	t <sub>CS</sub>	Chip Enable Low to Write Enable High		35	20	ns	
t <sub>WHALH</sub>	t <sub>ALH</sub>	Write Enable High to Address Latch High	AL hold time	Min	10	5	ns
t <sub>WHCLH</sub>	4	Write Enable High to Command Latch High	CL hold time	Min	10	5	20
t <sub>WHCLL</sub>	t <sub>CLH</sub>	Write Enable High to Command Latch Low	OL HOIG WITE	IVIII	10	5	ns
t <sub>WHDX</sub>	t <sub>DH</sub>	Write Enable High to Data Transition	Data hold time	Min	10	5	ns
t <sub>WHEH</sub>	t <sub>CH</sub>	Write Enable High to Chip Enable High	E hold time	Min	10	5	ns
t <sub>WHWL</sub>	t <sub>WH</sub>	Write Enable High to Write Enable Low	W high hold time	Min	15	10	ns
t <sub>WLWH</sub>	t <sub>WP</sub>	Write Enable Low to Write Enable High	/rite Enable Low to Write Enable High W pulse width Min		25	12	ns
t <sub>WLWL</sub>	t <sub>WC</sub>	Write Enable Low to Write Enable Low	Write cycle time	Min	45	25	ns

Numonyx 53/72

Table 31. AC characteristics for operations<sup>(1)</sup>

Symbol	Alt.		Parameter		1.8 V	3 V	Unit
t <sub>ALLRL1</sub>		Address Latch Low to Read	Read electronic signature	Min	10	10	ns
t <sub>ALLRL2</sub>	t <sub>AR</sub>	Enable Low	Read cycle	Min	10	10	ns
t <sub>BHRL</sub>	t <sub>RR</sub>	Ready/Busy High to Read Ena	ble Low	Min	20	20	ns
t <sub>BLBH1</sub>			Read Busy time	Max	25	25	μs
t <sub>BLBH2</sub>	t <sub>PROG</sub>		Program Busy time	Max	700	700	μs
t <sub>BLBH3</sub>	t <sub>BERS</sub>	,	Erase Busy time	Max	2	2	ms
		Ready/Busy Low to Ready/Busy High	Reset Busy time, during ready	Max	5	5	μs
		rtoddy/Ddoy r ligir	Reset Busy time, during read	Max	5	5	μs
t <sub>BLBH4</sub>	t <sub>RST</sub>		Reset Busy time, during program	Max	10	10	μs
			Reset Busy time, during erase	Max	500	500	μs
t <sub>CLLRL</sub>	t <sub>CLR</sub>	Command Latch Low to Read	Enable Low	Min	10	10	ns
t <sub>DZRL</sub>	t <sub>IR</sub>	Data Hi-Z to Read Enable Low	,	Min	0	0	ns
t <sub>EHQZ</sub>	t <sub>CHZ</sub>	Chip Enable High to Output Hi	-Z	Max	30	30	ns
t <sub>EHALX</sub>	4	Chip Enable High to Address L	atch 'don't care'	N 4"	10	10	ns
t <sub>EHCLX</sub>	tCSD	Chip Enable High to Command	d Latch 'don't care'	Min	10	10	115
t <sub>RHQZ</sub>	t <sub>RHZ</sub>	Read Enable High to Output F	li-Z	Max	100	100	ns
t <sub>ELQV</sub>	t <sub>CEA</sub>	Chip Enable Low to Output Val	lid	Max	45	25	ns
t <sub>RHRL</sub>	t <sub>REH</sub>	Read Enable High to Read Enable Low	Read Enable High Hold time	Min	15	10	ns
t <sub>EHQX</sub>	t <sub>COH</sub>	Chip Enable high to Output Ho	lld	Min	15	15	ns
t <sub>RHQX</sub>	t <sub>RHOH</sub>	Read Enable High to Output H	old	Min	15	15	ns
t <sub>RLQX</sub>	t <sub>RLOH</sub>	Read Enable Low to Output Ho	old (EDO mode)	Min	5	5	ns
t <sub>RLRH</sub>	t <sub>RP</sub>	Read Enable Low to Read Enable High	Read Enable pulse width	Min	25	12	ns
t <sub>RLRL</sub>	t <sub>RC</sub>	Read Enable Low to Read Enable Low	Read cycle time	Min	45	25	ns
t <sub>RLQV</sub>	t <sub>REA</sub>	Read Enable Low to Output Valid	Read Enable access time Read ES access time <sup>(2)</sup>	Max	30	20	ns
t <sub>WHBH</sub>	t <sub>R</sub>	Write Enable High to Ready/Busy High	Read Busy time	Max	25	25	μs
t <sub>WHBL</sub>	t <sub>WB</sub>	Write Enable High to Ready/Busy Low		Max	100	100	ns
t <sub>WHRL</sub>	t <sub>WHR</sub>	Write Enable High to Read En	able Low	Min	60	60	ns
t <sub>RHWL</sub>	t <sub>RHW</sub>	Read Enable High to Write Enable Low		Min	100	100	ns
t <sub>WHWH</sub>	t <sub>ADL</sub> <sup>(3)</sup>	Last address latched to data loading time during program operations			100	70	ns
t <sub>VHWH</sub>	t <sub>WW</sub> <sup>(4)</sup>	Write protection time		Min	100	100	ns

<sup>1.</sup> The time to ready depends on the value of the pull-up resistor tied to the ready/busy pin. See Figure 40, Figure 41 and Figure 42.

<sup>2.</sup> ES = electronic signature.

 $<sup>3. \</sup>quad t_{ADL} \text{ is the time from } \overline{W} \text{ rising edge during the final address cycle to } \overline{W} \text{ rising edge during the first data cycle.}$ 

<sup>4.</sup> During a program/erase enable operation,  $t_{WW}$  is the delay from  $\overline{WP}$  high to  $\overline{W}$  High. During a program/erase disable operation,  $t_{WW}$  is the delay from  $\overline{WP}$  Low to  $\overline{W}$  High.

Figure 24. Command latch AC waveforms


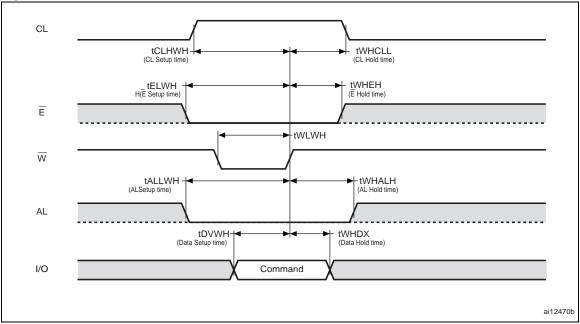


Figure 25. Address latch AC waveforms

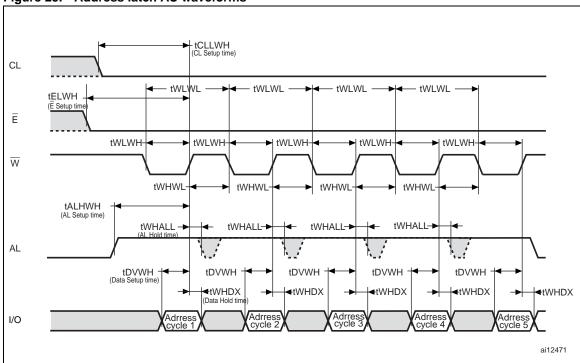

Numonyx 55/72

tWHCLH (CL Hold time) CL tWHEH (E Hold time) Ē (ALSetup time) -tWLWL ALtWLWH tWLWH **◆**tWLWH→ W tDVWH (Data Setup time) tDVWH tDVWH

◆ tWHDX (Data Hold time)

Data In 0

+tWHDX

Data In 1

Data In Last ₩HDX


ai12472

Figure 26. Data input latch AC waveforms

1. The last data input is the 2112th.

I/O

Figure 27. Sequential data output after read AC waveforms

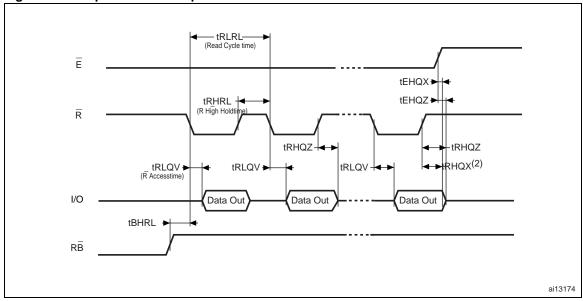

- 1.  $CL = Low, AL = Low, \overline{W} = High.$
- 2.  $t_{RHQX}$  is applicable for frequencies lower than 33 MHz (for instance,  $t_{RLRL}$  higher than 30 ns).

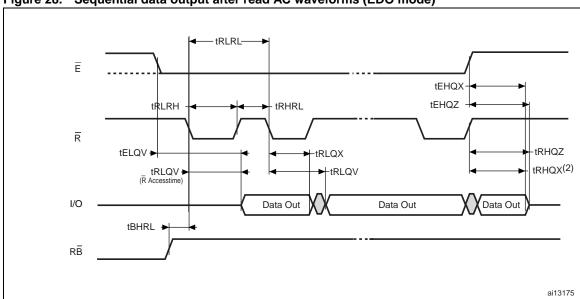



Figure 28. Sequential data output after read AC waveforms (EDO mode)

- 1. In EDO mode, CL and AL are Low,  $V_{IL}$ , and  $\overline{W}$  is High,  $V_{IH}$ .
- 2.  $t_{RLQX}$  is applicable for frequencies high than 33 MHz (for instance,  $t_{RLRL}$  lower than 30 ns).


tCLLRL-CL tWHCLL tCLHWH-+tWHEH Ē tELWH -tWLWH  $\overline{\mathsf{W}}$ - tELQV tEHQZ→ tWHRLtEHQX→  $\bar{\mathsf{R}}$ tDZRL + tRHQZtDVWH+ +tWHDX tRLQV 😽 tRHQX-(Data Setup time) Data Hold time) Status Register Output I/O 70h or 7Bh ai13177

Figure 29. Read status register or read EDC status register AC waveform

Figure 30. Read status enhanced waveform

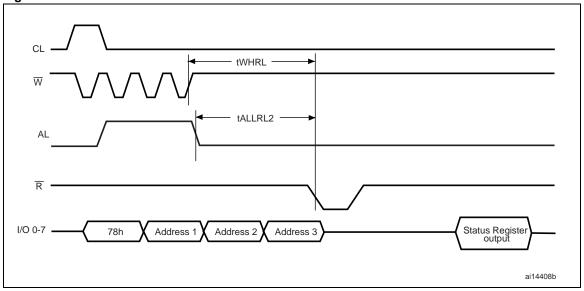




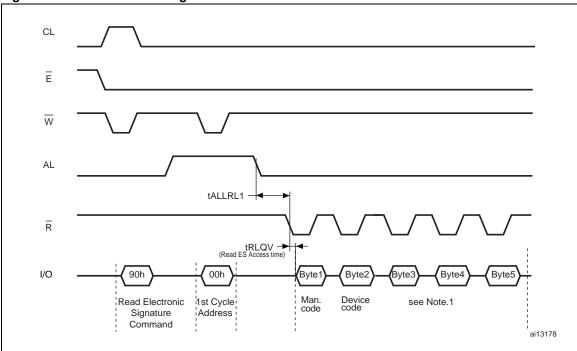

Refer to Table 16 for the values of the manufacturer and device codes, and to Table 17, Table 18, and Table 19 for the information contained in byte 3, byte 4, and byte 5.



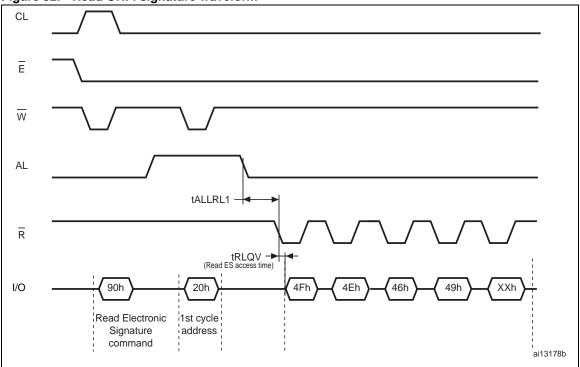

tEHALX<sub>1</sub> tEHCLX CL Ē - tWLWL tEHQZ  $\overline{\mathsf{W}}$ tWHBL→ AL **★** tALLRL2 tRLRL (Read Cycle time) tWHBH tRHQZ-R tRLRH 😽 tBLBH1 RB Add.N cycle 2 Add.N cycle 3 Add.N cycle 5 Data N+2 Data Last I/O 30h 00h Data Output Command Address N Input Busy from Address N to Last Byte or Word in Page Code ai12474b

Figure 33. Page read operation AC waveform

60/72 **N** numonyx



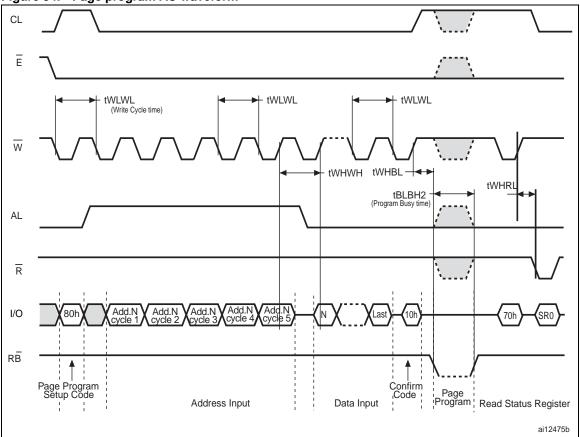


Figure 35. Block erase AC waveform

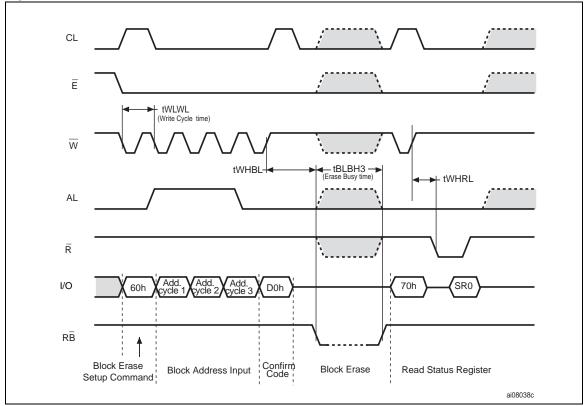


Figure 36. Reset AC waveform

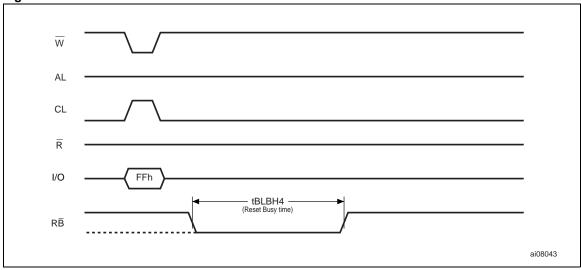


Figure 37. Program/erase enable waveform

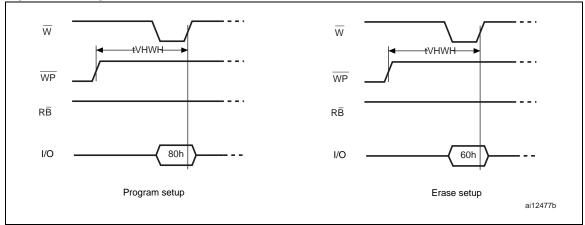


Figure 38. Program/erase disable waveform


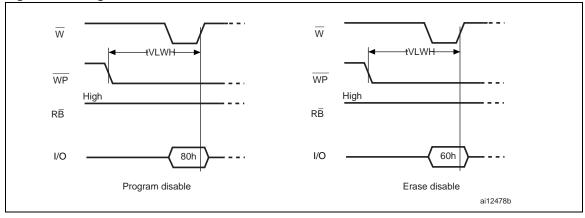


Figure 39. Read parameter page waveform

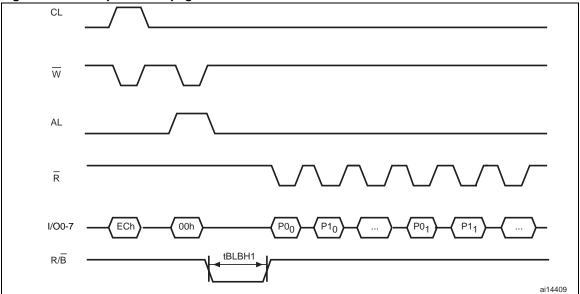

## 12.1 Ready/busy signal electrical characteristics

*Figure 41*, *Figure 40* and *Figure 42* show the electrical characteristics for the ready/busy signal. The value required for the resistor R<sub>P</sub> can be calculated using the following equation:

$$R_{p}min = \frac{(V_{DDmax} - V_{OLmax})}{I_{OL} + I_{L}}$$

This is an example for 3 V devices:

$$R_{P}min = \frac{3.2V}{8mA + I_{I}}$$

where  $I_L$  is the sum of the input currents of all the devices tied to the ready/busy signal.  $R_P$  max is determined by the maximum value of  $t_r$ .

Figure 40. Ready/busy AC waveform


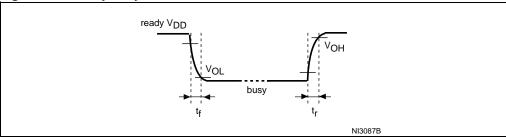


Figure 41. Ready/busy load circuit

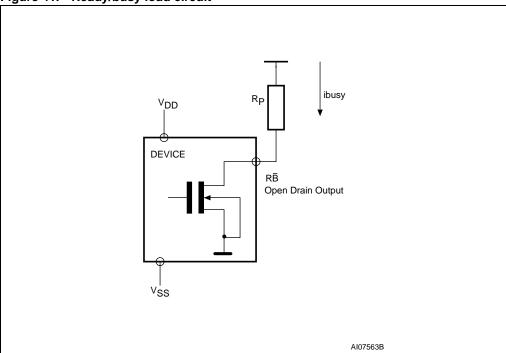

Numonyx 65/72

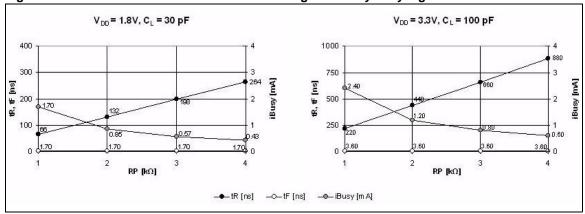


Figure 42. Resistor value versus waveform timings for ready/busy signal


1. T = 25 °C.

### 12.2 Data protection

The Numonyx NAND devices are designed to guarantee data protection during power transitions.

A  $V_{DD}$  detection circuit disables all NAND operations, if  $V_{DD}$  is below the  $V_{LKO}$  threshold.

In the  $V_{DD}$  range from  $V_{LKO}$  to the lower limit of nominal range, the  $\overline{WP}$  pin should be kept low ( $V_{IL}$ ) to guarantee hardware protection during power transitions as shown in the below figure.

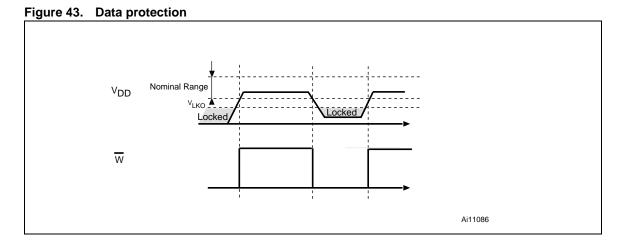

## 13 Package mechanical

To meet environmental requirements, Numonyx offers these devices in RoHS compliant packages, which have a lead-free second-level interconnect. The category of second-level interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97. The maximum ratings related to soldering conditions are also marked on the inner box label.

RoHS compliant specifications are available at www.numonyx.com.

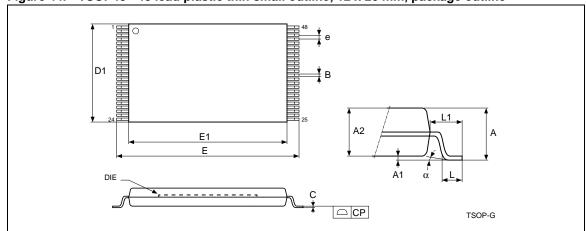


Figure 44. TSOP48 - 48 lead plastic thin small outline, 12 x 20 mm, package outline

1. Drawing is not to scale.

Table 32. TSOP48 - 48 lead plastic thin small outline, 12 x 20 mm, package mechanical data

Cumbal	Symbol Millimeters				Inches	hes		
Symbol	Тур	Min	Max	Тур	Min	Max		
А			1.20			0.047		
A1	0.10	0.05	0.15	0.004	0.002	0.006		
A2	1.00	0.95	1.05	0.039	0.037	0.041		
В	0.22	0.17	0.27	0.009	0.007	0.011		
С		0.10	0.21		0.004	0.008		
СР			0.08			0.003		
D1	12.00	11.90	12.10	0.472	0.468	0.476		
E	20.00	19.80	20.20	0.787	0.779	0.795		
E1	18.40	18.30	18.50	0.724	0.720	0.728		
е	0.50	-	_	0.020	-			
L	0.60	0.50	0.70	0.024	0.020	0.028		
L1	0.80			0.031				
а	3°	0°	5°	3°	0°	5°		

Numonyx 67/72

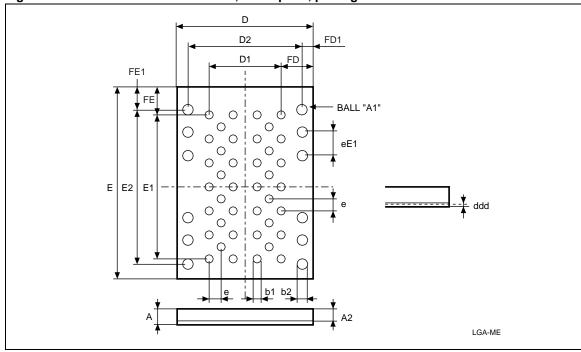



Figure 45. ULGA52 12 x 17 x 0.65 mm, 1 mm pitch, package outline

1. Drawing is not to scale.

Table 33. ULGA52 12 x 17 x 0.65 mm, 1 mm pitch, package mechanical data

Symbol		Millimeters			Inches			
Symbol	Тур	Min	Max	Тур	Min	Max		
Α			0.65			0.026		
A2			0.65			0.026		
b1	0.70	0.65	0.75	0.028	0.026	0.029		
b2	1.00	0.95	1.05	0.039	0.037	0.041		
D	12.00	11.90	12.10	0.472	0.468	0.476		
D1	6.00			0.236				
D2	10.00			0.394				
ddd			0.10			0.004		
E	17.00	16.90	17.10	0.669	0.665	0.673		
E1	12.00			0.472				
E2	13.00			0.512				
е	1.00	-	_	0.039	-	-		
eE1	2.00	_	_	0.079	-	_		
FD	3.00			0.118				
FD1	1.00			0.039				
FE	2.50			0.098				
FE1	2.00			0.079				

## 14 Ordering information

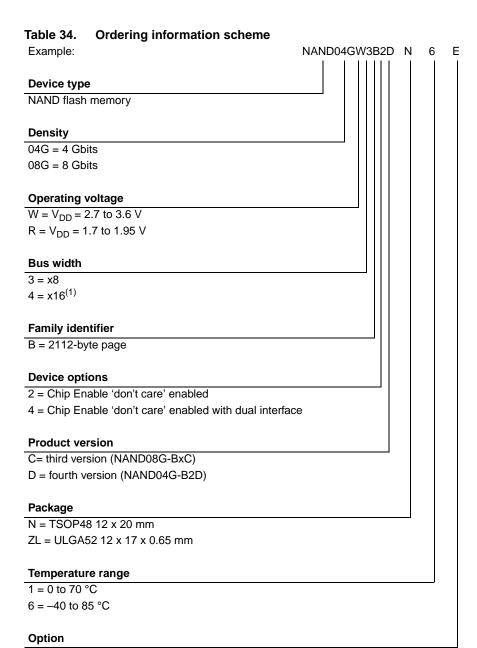

E = RoHS compliant package, standard packing

F = RoHS compliant package, tape and reel packing

1. x16 organization only available for MCP products

Note:

Not all combinations are necessarily available. For a list of available devices of for further information on any aspect of these products, please contact your nearest Numonyx sales office.

M numonyx

69/72

# 15 Revision history

Table 35. Document revision history

Date	Revision	Changes
22-June-2007	1	Initial release.
17-Sep-2007	2	Added the part numbers NAND08GR3B4C, NAND08GW3B4C, therefore referring to the 8-Gbit devices as the NAND08G-BxC. Modified all data throughout this document to reflect the addition of these part numbers, namely:  — Table 1, Table 2, Table 6, and Table 34.  — Added Figure 5: ULGA52 connections for the NAND08G-B4C devices.  Changed VLKO value in Table 28 from 1.1 to 1.2.
10-Dec-2007	3	Applied Numonyx branding.
23-Apr-2008	4	Modified: Figure 6: Memory array organization, Figure 13: Multiplane page program waveform, Figure 17: Multiplane copy back program, Figure 19: Multiplane block erase, Figure 30: Read status enhanced waveform, Figure 37: Program/erase enable waveform, Figure 38: Program/erase disable waveform, and Figure 42: Resistor value versus waveform timings for ready/busy signal, Section 6.2: Cache read, Section 6.4: Multiplane page program, Section 6.5: Copy back program, Section 6.8: Multiplane block erase and Section 6.15: Read ONFI signature, Table 24: Program erase times and program erase endurance cycles and Table 26: Operating and AC measurement conditions.  Added ECOPACK text in Section 13: Package mechanical. Removed 'or ECC' from Program failure in Table 23: Block failure. Minor text changes.
07-May-2008	5	Document status promoted from preliminary data to datasheet. Modified : Bad blocks in Section 2: Memory array organization.
11-Mar-2009	6	Added security features on the cover page and in Section 1:  Description. Modified Figure 40: Ready/busy AC waveform and Figure 42: Resistor value versus waveform timings for ready/busy signal.  References to ECOPACK packages removed and replaced by references to RoHS compliance throughout the document.
15-Jun-2009	7	Modified Figure 45: ULGA52 12 x 17 x 0.65 mm, 1 mm pitch, package outline. Minor text changes.

Table 35. Document revision history (continued)

Date	Revision	Changes
05-Jan-2010	8	Modified: EDC paragraph in Section 1: Description, Section 9.1: Bad block management, Note 1 below Table 28 and Table 29, Section 9.5: Error correction code, Figure 17: Multiplane copy back program.  Removed Fig.23 Error detection.
09-Feb-2010	9	Removed Note 1 below Figure 1: Logic block diagram, Figure 2: Logic diagram, Table 3: Signals names, and Figure 5: ULGA52 connections for the NAND08G-B4C devices.  Modified Figure 6: Memory array organization.

**№** numonyx 71/72

#### Please Read Carefully:

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX<sup>TM</sup> PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at <a href="http://www.numonyx.com">http://www.numonyx.com</a>.

Numonyx StrataFlash is a trademark or registered trademark of Numonyx or its subsidiaries in the United States and other countries.

\*Other names and brands may be claimed as the property of others.

Copyright © 11/5/7, Numonyx, B.V., All Rights Reserved.

N numonyx

72/72