

# **Mobile SDRAM**

# MT48H4M16LF - 1 Meg x 16 x 4 banks

For the latest data sheet, refer to Micron's Web site: www.micron.com/support

### **Features**

- Fully synchronous; all signals registered on positive edge of system clock
- Internal pipelined operation; column address can be changed every clock cycle
- Internal banks for hiding row access/precharge
- Programmable burst lengths: 1, 2, 4, or 8
- Auto Precharge, includes concurrent auto precharge
- · Self refresh mode
- 64ms, 4,096-cycle refresh
- LVTTL-compatible inputs and outputs
- Low voltage power supply
- On-die temperature compensated self refresh (TCSR)
- Deep power-down mode (DPD)
- Programmable output drive strength
- Operating temperature ranges:
  - Commercial (0°C to +70°C)
  - Industrial (-40°C to +85°C)

Options	Markin
• VDD/VDDQ	
- 1.7V - 1.95V	Н
<ul> <li>Configurations</li> </ul>	
<ul> <li>4 Meg x 16 (1 Meg x 16 x 4 banks)</li> </ul>	4M16
Package/Ball out	
- 54-ball VFBGA, 8mm x 8mm	<b>B4</b>
• Timing (Cycle Time)	
- 7.5ns @ CL = 3 (133 MHz)	-75
- 8ns @ CL = 3 (125 MHz)	-8
Operating Temperature	
<ul> <li>Commercial (0°C to +70°C)</li> </ul>	None
- Industrial (- $40^{\circ}$ C to + $85^{\circ}$ C)	IT
Die revision designator	:H

Figure 1: 54-Ball VFBGA Ball Assignment (Top View)

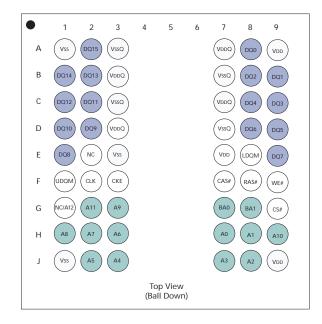


Table 1: Address Table

	4 Meg x 16
Configuration	1 Meg x 16 x 4 banks
Refresh count	4K
Row addressing	4K (A0-A11)
Bank addressing	4 (BA0, BA1)
Column addressing	256 (A0-A7)

**Table 2:** Key Timing Parameters CL = CAS (READ) latency

Speed	Clock (M		Access	Data Setup	Data Hold	
Speed Grade	CL = 2	CL = 3	CL = 2	CL = 3	Time	Time
-75	100	133	7ns	6ns	2.5ns	1ns
-8	83	125	8ns	6ns	2.5ns	1ns

g




# **Table of Contents**

Options	1
Marking	1
Table of Contents	2
List of Figures	3
List of Tables	4
General Description	5
Functional Description	
Initialization	
Mode Register Definition	
Burst Length	
Burst Type	
CAS Latency	
Operating Mode	
Write Burst Mode	
Extended Mode Register	
Temperature Compensated Self Refresh (TCSR)	
Partial Array Self Refresh (PASR)	
Driver Strength	
Commands	
Command Inhibit	
NO OPERATION (NOP)	
LOAD MODE REGISTER.	
ACTIVE	
READ.	
WRITE	
PRECHARGE	
Auto Precharge	
AUTO REFRESH	
SELF REFRESH	
Deep Power-Down.	
Operations	
Bank/Row Activation.	
READs	
WRITES	
PRECHARGE	
POWER-DOWN.	
Deep Power-Down	
BURST READ/SINGLE WRITE	
Concurrent Auto Precharge	
READ with Auto Precharge	
WRITE with Auto Precharge	
Absolute Maximum Ratings	
Notes	
Timing Diagrams	.47
	- /



# List of Figures

Figure 1:	54-Ball VFBGA Ball Assignment (Top View)	
Figure 2:	Part Numbering Diagram	.5
Figure 3:	Functional Block Diagram – 4 Meg x 16	.6
Figure 4:	Mode Register Definition	11
Figure 5:	CAS Latency	12
Figure 6:	Extended Mode Register	14
Figure 7:	Activating a Specific Row in a Specific Bank Register	19
Figure 8:	Meeting tRCD (MIN) when 2 < tRCD (MIN)/tCK< 3	20
Figure 9:	READ Command	
Figure 10:	Consecutive READ Bursts	21
Figure 11:	Random READ Accesses	
Figure 12:	READ-to-WRITE	
Figure 13:	READ-to-WRITE with Extra Clock Cycle	
Figure 14:	READ-to-PRECHARGE	
Figure 15:	Terminating a READ Burst	
Figure 16:	WRITE Command	
Figure 17:	WRITE Burst	
Figure 18:	WRITE-to-WRITE	
Figure 19:	Random WRITE Cycles	27
Figure 20:	WRITE-to-READ	27
Figure 21:	WRITE-to-PRECHARGE	
Figure 22:	Power-Down	
Figure 23:	Terminating a WRITE Burst	
Figure 24:	PRECHARGE Command	
Figure 25:	Clock Suspend During WRITE Burst	31
Figure 26:	Clock Suspend During READ Burst	
Figure 27:	READ with Auto Precharge Interrupted by a READ	
Figure 28:	READ with Auto Precharge Interrupted by a WRITE	33
Figure 29:	WRITE with Auto Precharge Interrupted by a READ	34
Figure 30:	WRITE with Auto Precharge Interrupted by a WRITE	34
Figure 31:	Typical Self Refresh Current vs. Temperature	44
Figure 32:	Initialize and Load Mode Register	47
Figure 33:	Power-Down Mode	
Figure 34:	Clock Suspend Mode	
Figure 35:	Auto Refresh Mode	50
Figure 36:	Self Refresh Mode	
Figure 37:	READ – Without Auto Precharge	
Figure 38:	READ - with Auto Precharge	53
Figure 39:	Single READ – Without Auto Precharge	
Figure 40:	Single READ – with Auto Precharge	55
Figure 41:	Alternating Bank Read Accesses	
Figure 42:	READ – DQM Operation	
Figure 43:	WRITE - Without Auto Precharge	58
Figure 44:	WRITE - with Auto Precharge	
Figure 45:	Single WRITE – Without Auto Precharge	60
Figure 46:	Single WRITE – with Auto Precharge	61
Figure 47:	Alternating Bank Write Accesses	
Figure 48:	WRITE – DQM Operation	
Figure 49:	54-Ball VFBGA (8mm x 8mm)	64
	<u> </u>	- 1






# **List of Tables**

Table 1:	Address Table	1
Table 2:	Key Timing Parameters	1
Table 3:	Ball Descriptions	
Table 4:	Burst Definition	
Table 5:	Truth Table 1 - Commands and DQM Operation	15
Table 6:	Truth Table 2 – CKE	35
Table 7:	Truth Table 3 – Current State Bank <i>n</i> , Command to Bank <i>n</i>	36
Table 8:	Truth Table 4 – Current State Bank <i>n</i> , Command to Bank <i>m</i>	38
Table 17:	Absolute Maximum DC Ratings	40
Table 18:	DC Electrical Characteristics and Operating Conditions	40
Table 19:	AC Electrical Characteristics and Operating Conditions	40
Table 20:	Electrical Characteristics and Recommended AC Operating Conditions	41
Table 21:	AC Functional Characteristics	
Table 22:	IDD Specifications and Conditions (x16)	43
Table 23:	IDD7 - Self Refresh Current Options	44
Table 24:	Capacitance	44



Figure 2: Part Numbering Diagram

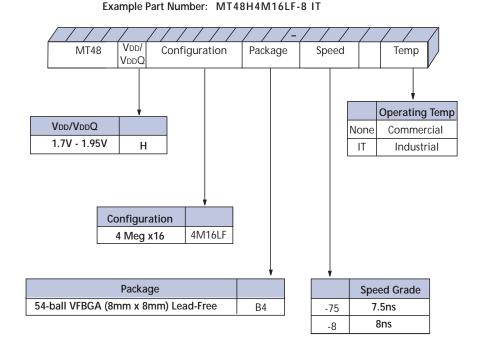

# **General Description**

The Micron  $^{\otimes}$  64Mb SDRAM is a high-speed CMOS, dynamic random-access memory containing 67,108,864-bits. It is internally configured as a quad-bank DRAM with a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x16's 16,777,216-bit banks is organized as 4,096 rows by 256 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0, BA1 select the bank; A0–A11 select the row). The address bits registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

The SDRAM provides for programmable read or write burst lengths of 1, 2, 4, or 8 locations with a burst terminate option. An AUTO PRECHARGE function may be enabled to provide a self-timed row precharge that is initiated at the end of the burst sequence.


The 64Mb SDRAM uses an internal pipelined architecture to achieve high-speed operation. This architecture is compatible with the 2*n* rule of prefetch architectures, but it also allows the column address to be changed on every clock cycle to achieve a high-speed, fully random access. Precharging one bank while accessing one of the other three banks will hide the PRECHARGE cycles and provide seamless high-speed, random-access operation.



The 64Mb SDRAM is designed to operate in 1.8V, low-power memory systems. An auto refresh mode is provided, along with a power-saving, deep power-down mode. All inputs and outputs are LVTTL-compatible.

SDRAMs offer substantial advances in DRAM operating performance, including the ability to synchronously burst data at a high data rate with automatic column-address generation, the ability to interleave between internal banks in order to hide precharge time, and the capability to randomly change column addresses on each clock cycle during a burst access.

Figure 3: Functional Block Diagram - 4 Meg x 16

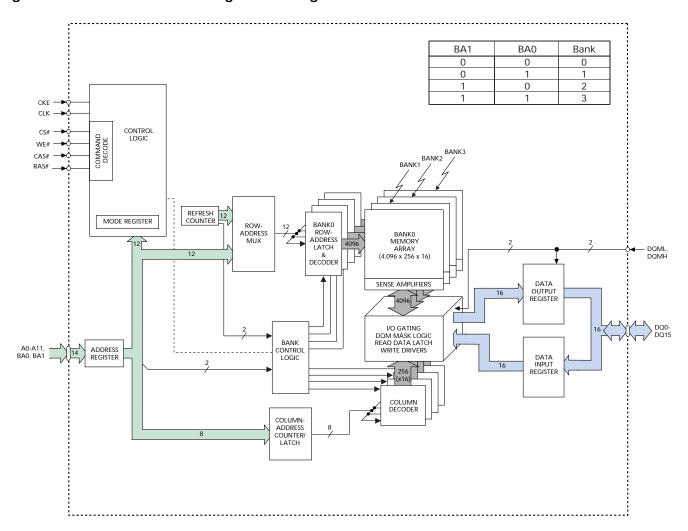





**Table 3: Ball Descriptions** 

54-Ball VFBGA	Symbol	Туре	Description
F2	CLK	Input	Clock: CLK is driven by the system clock. All SDRAM input signals are sampled on the positive edge of CLK. CLK also increments the internal burst counter and controls the output registers.
F3	CKE	Input	Clock enable: CKE activates (HIGH) and deactivates (LOW) the CLK signal. Deactivating the clock provides PRECHARGE POWER-DOWN and SELF REFRESH operation (all banks idle), ACTIVE POWER-DOWN (row active in any bank), DEEP POWER DOWN (all banks idle), or CLOCK SUSPEND operation (burst/access in progress). CKE is synchronous except after the device enters power-down and self refresh modes, where CKE becomes asynchronous until after exiting the same mode. The input buffers, including CLK, are disabled during power-down and self refresh modes, providing low standby power. CKE may be tied HIGH.
G9	CS#	Input	Chip select: CS# enables (registered LOW) and disables (registered HIGH) the command decoder. All commands are masked when CS# is registered HIGH. CS# provides for external bank selection on systems with multiple banks. CS# is considered part of the command code.
F7, F8, F9	CAS#, RAS#, WE#	Input	Command inputs: CAS#, RAS#, and WE# (along with CS#) define the command being entered.
E8, F1	LDQM, UDQM	Input	Input/Output Mask: DQM is sampled HIGH and is an input mask signal for write accesses and an output enable signal for read accesses. Input data is masked during a WRITE cycle. The output buffers are placed in a High-Z state (two-clock latency) when during a READ cycle. LDQM corresponds to DQ0-DQ7, UDQM corresponds to DQ8-DQ15. LDQM and UDQM are considered same state when referenced as DQM.
G7, G8	BA0, BA1	Input	Bank address input(s): BA0 and BA1 define to which bank the ACTIVE, READ, WRITE or PRECHARGE command is being applied. These pins also select between the mode register and the extended mode register.
H7, H8, J8, J7, J3, J2, H3, H2, H1, G3, H9, G2	A0-A11	Input	Address inputs: A0–A11 are sampled during the ACTIVE command (rowaddress A0–A11) and READ/WRITE command (column-address A0–A7; with A10 defining auto precharge) to select one location out of the memory array in the respective bank. A10 is sampled during a PRECHARGE command to determine if all banks are to be precharged (A10 HIGH) or bank selected by BA0, BA1. The address inputs also provide the op-code during a LOAD MODE REGISTER command.
A8, B9, B8, C9, C8, D9, D8, E9, E1, D2, D1, C2, C1, B2, B1, A2	DQ0-DQ15	I/O	Data Input/Output: Data bus.
E2, G1	NC	-	These could be left unconnected, but it is recommended they be connected to Vss. G1 is a no connect for this part but may be used as A12 in future designs.
A7, B3, C7, D3	VDDQ	Supply	DQ power: Provide isolated power to DQs for improved noise immunity.
A3, B7, C3, D7	VssQ	Supply	DQ ground: Provide isolated ground to DQs for improved noise immunity.
A9, E7, J9	Vdd	Supply	Core power supply.
A1, E3, J1	Vss	Supply	Ground.





## **Functional Description**

The 64Mb SDRAMs (1 Meg x 16 x 4 banks) are quad-bank DRAMs that operate at 1.8V and include a synchronous interface (all signals are registered on the positive edge of the clock signal, CLK). Each of the x16's 16,777,216-bit banks is organized as 4,096 rows by 256 columns by 16 bits.

Read and write accesses to the SDRAM are burst oriented; accesses start at a selected location and continue for a programmed number of locations in a programmed sequence. Accesses begin with the registration of an ACTIVE command, which is then followed by a READ or WRITE command. The address bits registered coincident with the ACTIVE command are used to select the bank and row to be accessed (BA0 and BA1 select the bank, A0–A11 select the row). The address bits (A0–A7) registered coincident with the READ or WRITE command are used to select the starting column location for the burst access.

Prior to normal operation, the SDRAM must be initialized. The following sections provide detailed information covering device initialization, register definition, command descriptions, and device operation.

#### Initialization

SDRAMs must be powered up and initialized in a predefined manner. Operational procedures other than those specified may result in undefined operation. Power should be applied to VDD and VDDQ simultaneously. Once the power is applied to VDD and VDDQ and the clock is stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin), the SDRAM requires a  $100\mu s$  delay prior to issuing any command other than a COMMAND INHIBIT or NOP. Starting at some point during this  $100\mu s$  period and continuing at least through the end of this period, COMMAND INHIBIT or NOP commands should be applied.

Once the  $100\mu s$  delay has been satisfied with at least one COMMAND INHIBIT or NOP command having been applied, a PRECHARGE command should be applied. All banks must then be precharged, thereby placing the device in the all banks idle state.

Once in the idle state, two AUTO REFRESH cycles must be performed. After the AUTO REFRESH cycles are complete, the SDRAM is ready for mode register programming. Because the mode register will power up in an unknown state, it should be loaded prior to applying any operational command.

# **Mode Register Definition**

In order to achieve low power consumption, there are two mode registers in the mobile component, mode register and extended mode register. The mode register is illustrated in Figure 4 on page 11 (the extended mode register is illustrated in Figure 6 on page 14).

The mode register defines the specific mode of operation of the SDRAM, including burst length, burst type, CAS latency, operating mode and write burst mode. The mode register is programmed via the LOAD MODE REGISTER command and will retain the stored information until it is programmed again or the device loses power.

Mode register bits M0–M2 specify the burst length, M3 specifies the type of burst (sequential or interleaved), M4–M6 specify the CAS latency, M7 and M8 specify the operating mode, M9 specifies the write burst mode, and M10, and M11 should be set to zero. M12 and M13 should be set to zero to prevent extended mode register.





The mode register must be loaded when all banks are idle, and the controller must wait the specified time before initiating the subsequent operation. Violating either of these requirements will result in unspecified operation.

## **Burst Length**

Read and write accesses to the SDRAM are burst oriented, with the burst length being programmable, as shown in Figure 4 on page 11. The burst length determines the maximum number of column locations that can be accessed for a given READ or WRITE command. Burst lengths of 1, 2, 4, or 8 locations are available for both the sequential and the interleaved burst types. Reserved states should not be used, as unknown operation or incompatibility with future versions may result.

When a READ or WRITE command is issued, a block of columns equal to the burst length is effectively selected. All accesses for that burst take place within this block, meaning that the burst will wrap within the block if a boundary is reached. The block is uniquely selected by A0–A7 when the burst length is set to two; by A2–A7 when the burst length is set to four; and by A3–A7 when the burst length is set to eight.



Table 4: **Burst Definition** 


Note 1; notes appear below table

Burst				Order of Accesses within a Burst				
Length	Starting Column Address			Type = Sequential	Type = Interleaved			
2 <sup>2</sup>	A0		Α0					
			0	0-1	0-1			
			1	1-0	1-0			
4 <sup>3</sup>		<b>A</b> 1	A0					
		0	0	0-1-2-3	0-1-2-3			
		0	1	1-2-3-0	1-0-3-2			
		1	0	2-3-0-1	2-3-0-1			
		1	1	3-0-1-2	3-2-1-0			
8 <sup>4</sup>	A2	A1	Α0					
	0	0	0	0-1-2-3-4-5-6-7	0-1-2-3-4-5-6-7			
	0	0	1	1-2-3-4-5-6-7-0	1-0-3-2-5-4-7-6			
	0	1	0	2-3-4-5-6-7-0-1	2-3-0-1-6-7-4-5			
	0	1	1	3-4-5-6-7-0-1-2	3-2-1-0-7-6-5-4			
	1	0	0	4-5-6-7-0-1-2-3	4-5-6-7-0-1-2-3			
	1	0	1	5-6-7-0-1-2-3-4	5-4-7-6-1-0-3-2			
	1	1	0	6-7-0-1-2-3-4-5	6-7-4-5-2-3-0-1			
	1	1	1	7-0-1-2-3-4-5-6	7-6-5-4-3-2-1-0			

- Notes: 1. Whenever a boundary of the block is reached within a given sequence above, the following access wraps within the block.
  - 2. For a burst length of two, A1-A7 select the block-of-two burst; A0 selects the starting column within the block.
  - 3. For a burst length of four, A2-A7 select the block-of-four burst; A0-A1 select the starting column within the block.
  - 4. For a burst length of eight, A3-A7 select the block-of-eight burst; A0-A2 select the starting column within the block.



Figure 4: Mode Register Definition

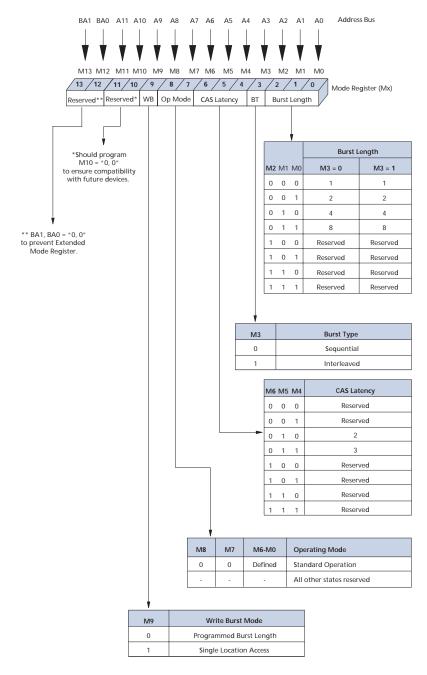

Note: The remaining (least significant) address bit(s) is (are) used to select the starting location within the block.

## **Burst Type**

Accesses within a given burst may be programmed to be either sequential or interleaved; this is referred to as the burst type and is selected via bit M3.

The ordering of accesses within a burst is determined by the burst length, the burst type and the starting column address, as shown in Table 4.




## **CAS Latency**


The CAS latency is the delay, in clock cycles, between the registration of a READ command and the availability of the first piece of output data. The latency can be set to one, two, or three clocks.

If a READ command is registered at clock edge n, and the latency is m clocks, the data will be available by clock edge n+m. The DQs will start driving as a result of the clock edge one cycle earlier (n+m-1), and provided that the relevant access times are met, the data will be valid by clock edge n+m. For example, assuming that the clock cycle time is such that all relevant access times are met, if a READ command is registered at T0 and the latency is programmed to two clocks, the DQs will start driving after T1 and the data will be valid by T2, as shown in Figure 5, CAS Latency. Table 5 indicates the operating frequencies at which each CAS latency setting can be used.

Reserved states should not be used as unknown operation or incompatibility with future versions may result.

Figure 5: CAS Latency

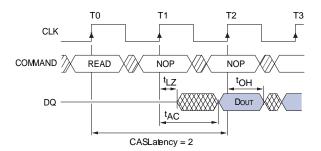

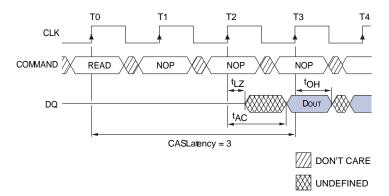

## **Operating Mode**

The normal operating mode is selected by setting M7 and M8 to zero; the other combinations of values for M7 and M8 are reserved for future use and/or test modes. The programmed burst length applies to both read and write bursts.

Test modes and reserved states should not be used because unknown operation or incompatibility with future versions may result.





#### **Write Burst Mode**

When M9 = 0, the burst length programmed via M0-M2 applies to both READ and WRITE bursts; when M9 = 1, the programmed burst length applies to READ bursts, but write accesses are single-location (nonburst) accesses.

## **Extended Mode Register**

The extended mode register controls the functions beyond those controlled by the mode register. These additional functions are special features of the mobile device. They include temperature compensated self refresh (TCSR) control, partial array self refresh (PASR), and output drive strength. Not programming the extended mode register upon initialization, will result in default settings for the low power features. The extended mode will default to the  $+85^{\circ}$ C setting for TCSR, full drive strength, and full array refresh.

The extended mode register is programmed via the MODE REGISTER SET command (BA1 = 1, BA0 = 0) and retains the stored information until it is programmed again or the device loses power.

The extended mode register must be programmed with E6 through E11 set to "0." It must be loaded when all banks are idle and no bursts are in progress, and the controller must wait the specified time before initiating any subsequent operation. Violating either of these requirements results in unspecified operation.

Once the values are entered the extended mode register settings will be retained even after exiting deep power-down.

## **Temperature Compensated Self Refresh (TCSR)**

Every cell in the SDRAM requires refreshing due to the capacitor losing its charge over time. The refresh rate is dependent on temperature. At higher temperatures a capacitor loses charge quicker than at lower temperatures, requiring the cells to be refreshed more often. Historically, during self refresh, the refresh rate has been set to accommodate the worst case, or highest temperature range expected.

With the inclusion of an onboard temperature sensor, the DRAM self regulates its self-refresh rate. When the temperature is above 45°C, the self refresh rate increases. When below 45°C, the rate will decrease, reducing the IDD current while still retaining data.

## Partial Array Self Refresh (PASR)

For further power savings during SELF REFRESH, the partial array self refresh (PASR) feature allows the controller to select the amount of memory that will be refreshed during SELF REFRESH. The refresh options are all banks (banks 0, 1, 2, and 3); two banks (banks 0 and 1); and one bank (bank 0). Also included in the refresh options are the 1/2 bank and 1/4 bank partial array self refresh (bank 0). WRITE and READ commands occur to any bank selected during standard operation, but only the selected banks in PASR will be refreshed during SELF REFRESH. Data in unused banks, or portions of banks, is lost when PASR is used. Data is lost in banks 1, 2, and 3 when the one bank, 1/2-bank, and 1/4-bank options are used.


## **Driver Strength**

Bits E5 and E6 of the extended mode register can be used to select the driver strength of the DQ outputs. This value should be set according to the application's requirements. Full drive strength was carried over from standard SDRAM and is suitable to drive higher load systems. Full drive strength is not recommended for loads under 20pF. Half drive



strength is intended for multi-drop systems with various loads. This drive option is not recommended for loads under 10pF. Quarter drive strength is intended for lighter loads or point-to-point systems.

Figure 6: Extended Mode Register

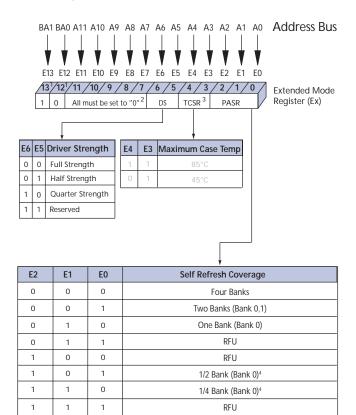

Notes:

- 1. E13 and E12 (BA1 and BA0) must be "1, 0" to select the extended mode register (vs. the base mode register).
- 2. RFU: Reserved for future use.
- 3. Onboard temperature sensor makes E3 and E4 "Don't Care."
- 4. 1/2- and 1/4-bank settings will default to one-bank PASR.



### Commands

Table 5 provides a quick reference of available commands. This is followed by a written description of each command. Three additional Truth Tables appear following "Operations" on page 19; these tables provide current state/next state information.

Table 5: Truth Table 1 - Commands and DQM Operation

Notes 1-10: notes appear below table

Name (Function)	CS#	RAS#	CAS#	WE#	DQM	ADDR	DQs	Notes
COMMAND INHIBIT (NOP)	Н	Х	Х	Χ	Χ	Х	Х	1
NO OPERATION (NOP)	L	Н	Н	Н	Χ	Х	Х	1
ACTIVE (Select bank and activate row)	L	L	Н	Н	Х	Bank/Row	Х	1, 3
READ (Select bank and column, and start READ burst)	L	Н	L	Н	L/H	Bank/Col	Х	1, 4
WRITE (Select bank and column, and start WRITE burst)	L	Н	L	L	L/H	Bank/Col	Valid	1, 4
BURST TERMINATE or DEEP POWER DOWN (Enter deep power down mode)	L	Н	Н	L	Х	Х	Х	1, 9, 10
PRECHARGE (Deactivate row in bank or banks)	L	L	Н	L	Х	Bank, A10	Х	1, 5
AUTO REFRESH or SELF REFRESH (Enter self refresh mode)	L	L	L	Н	Х	Х	Х	1, 6, 7
LOAD MODE REGISTER/LOAD EXTENDED MODE REGISTER	L	L	L	L	Х	Op-Code	Х	1, 2
Write Enable/Output Enable	Х	Х	Х	Χ	L	Х	Active	1, 8
Write Inhibit/Output High-Z	Х	Χ	Χ	Х	Н	Х	High-Z	1, 8

Notes.

- 1. CKE is HIGH for all commands shown except SELF REFRESH and DEEP POWER DOWN.
- 2. A0-A11 define op-code written to mode register.
- 3. A0–A11 provide row address, and BA0, BA1 determine which bank is made active.
- 4. A0–A7 provide column address; A10 HIGH enables the auto precharge feature (non persistent), while A10 LOW disables the auto precharge feature; BA0, BA1 determine which bank is being read from or written to.
- 5. A10 LOW: BA0, BA1 determine the bank being precharged. A10 HIGH: All banks precharged and BA0, BA1 are "Don't Care."
- 6. This command is AUTO REFRESH if CKE is HIGH, SELF REFRESH if CKE is LOW.
- 7. Internal refresh counter controls row addressing; all inputs and I/Os are "Don't Care" except for CKE.
- 8. Activates or deactivates the DQs during WRITEs (zero-clock delay) and READs (two-clock delay). LDQM controls DQ0-7, UDQM controls DQ8-15.
- 9. This command is BURST TERMINATE when CKE is HIGH and deep power down when CKE is LOW.
- 10. The purpose of the BURST TERMINATE command is to stop a data burst; thus, the command could coincide with data on the bus. However, the DQs column reads a "Don't Care" state to illustrate that the BURST TERMINATE command can occur when there is no data present.





#### **Command Inhibit**

The COMMAND INHIBIT function prevents new commands from being executed by the SDRAM, regardless of whether the CLK signal is enabled. The SDRAM is effectively deselected. Operations already in progress are not affected.

## **NO OPERATION (NOP)**

The NO OPERATION (NOP) command is used to perform a NOP to an SDRAM which is selected (CS# is LOW). This prevents unwanted commands from being registered during idle or wait states. Operations already in progress are not affected.

#### LOAD MODE REGISTER

The mode register is loaded via inputs A0–A11, BA0, BA1. See mode register heading in the Register Definition section. The LOAD MODE REGISTER and LOAD EXTENDED MODE REGISTER commands can only be issued when all banks are idle, and a subsequent executable command cannot be issued until <sup>t</sup>MRD is met.

The values of the mode register and extended mode register will be retained even when exiting deep power-down.

#### **ACTIVE**

The ACTIVE command is used to open (or activate) a row in a particular bank for a subsequent access. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0–A11 selects the row. This row remains active (or open) for accesses until a PRECHARGE command is issued to that bank. A PRECHARGE command must be issued before opening a different row in the same bank.

#### **READ**

The READ command is used to initiate a burst read access to an active row. The value on the BAO, BA1 inputs selects the bank, and the address provided on inputs A0–A7 selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the read burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Read data appears on the DQ subject to the logic level on the DQM inputs two clocks earlier. If a given DQM signal was registered HIGH, the corresponding DQ will be High-Z two clocks later; if the DQM signal was registered LOW, the DQ will provide valid data.

#### **WRITE**

The WRITE command is used to initiate a burst write access to an active row. The value on the BA0, BA1 inputs selects the bank, and the address provided on inputs A0–A7 selects the starting column location. The value on input A10 determines whether or not auto precharge is used. If auto precharge is selected, the row being accessed will be precharged at the end of the write burst; if auto precharge is not selected, the row will remain open for subsequent accesses. Input data appearing on the DQ is written to the memory array subject to the DQM input logic level appearing coincident with the data. If a given DQM signal is registered LOW, the corresponding data will be written to memory; if the DQM signal is registered HIGH, the corresponding data inputs will be ignored, and a write will not be executed to that byte/column location.





#### **PRECHARGE**

The PRECHARGE command is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access a specified time (<sup>t</sup>RP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. Otherwise BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

## **Auto Precharge**

Auto precharge is a feature which performs the same individual-bank PRECHARGE function described above, without requiring an explicit command. This is accomplished by using A10 to enable auto precharge in conjunction with a specific READ or WRITE command. A precharge of the bank/row that is addressed with the READ or WRITE command is automatically performed upon completion of the READ or WRITE burst. Auto precharge is non persistent in that it is either enabled or disabled for each individual READ or WRITE command.

Auto precharge ensures that the precharge is initiated at the earliest valid stage within a burst. The user must not issue another command to the same bank until the precharge time (<sup>t</sup>RP) is completed. This is determined as if an explicit PRECHARGE command was issued at the earliest possible time, as described for each burst type in "Operations" on page 19.

#### **AUTO REFRESH**

AUTO REFRESH is used during normal operation of the SDRAM and is analogous to CAS#-BEFORE-RAS# (CBR) refresh in conventional DRAMs. This command is non persistent, so it must be issued each time a refresh is required. All active banks must be PRECHARGED prior to issuing an AUTO REFRESH command. The AUTO REFRESH command should not be issued until the minimum <sup>t</sup>RP has been met after the PRECHARGE command as shown in the operation section.

The addressing is generated by the internal refresh controller. This makes the address bits "Don't Care" during an AUTO REFRESH command. The 64Mb SDRAM requires 4,096 AUTO REFRESH cycles every 64ms ( $^t$ REF). Providing a distributed AUTO REFRESH command every 15.625 $\mu$ s will meet the refresh requirement and ensure that each row is refreshed. Alternatively, 4,096 AUTO REFRESH commands can be issued in a burst at the minimum cycle rate ( $^t$ RFC), once every 64ms.

#### **SELF REFRESH**

The SELF REFRESH command can be used to retain data in the SDRAM, even if the rest of the system is powered down, as long as power is not completely removed from the SDRAM. When in the self refresh mode, the SDRAM retains data without external clocking. The SELF REFRESH command is initiated like an AUTO REFRESH command except CKE is disabled (LOW). Once the SELF REFRESH command is registered, all the inputs to the SDRAM become "Don't Care" with the exception of CKE, which must remain LOW.

Once self refresh mode is engaged, the SDRAM provides its own internal clocking, causing it to perform its own AUTO REFRESH cycles. The SDRAM must remain in self refresh mode for a minimum period equal to <sup>t</sup>RAS and may remain in self refresh mode for an indefinite period beyond that.





The procedure for exiting self refresh requires a sequence of commands. First, CLK must be stable (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) prior to CKE going back HIGH. Once CKE is HIGH, the SDRAM must have NOP commands issued (a minimum of two clocks) for <sup>t</sup>XSR because time is required for the completion of any internal refresh in progress.

Upon exiting the self refresh mode, AUTO REFRESH commands should be issued at once and then every  $15.625\mu s$  or less, as both SELF REFRESH and AUTO REFRESH utilize the row refresh counter.

## **Deep Power-Down**

The operating mode deep power-down achieves maximum power reduction by eliminating the power of the whole memory array of the device. Array data will not be retained once the device enters deep power-down mode.

This mode is entered by having all banks idle then CS# and WE# held LOW with RAS# and CAS# held HIGH at the rising edge of the clock, while CKE is LOW. This mode is exited by asserting CKE HIGH.



# **Operations**

#### **Bank/Row Activation**

Before any READ or WRITE commands can be issued to a bank within the SDRAM, a row in that bank must be "opened." This is accomplished via the ACTIVE command, which selects both the bank and the row to be activated (see Figure 7).

After opening a row (issuing an ACTIVE command), a READ or WRITE command may be issued to that row, subject to the  ${}^{t}RCD$  specification.  ${}^{t}RCD$  (MIN) should be divided by the clock period and rounded up to the next whole number to determine the earliest clock edge after the ACTIVE command on which a READ or WRITE command can be entered. For example, a  ${}^{t}RCD$  specification of 20ns with a 125 MHz clock (8ns period) results in 2.5 clocks, rounded to 3. This is reflected in Figure 8 on page 20, which covers any case where 2 <  ${}^{t}RCD$  (MIN)/ ${}^{t}CK \le 3$ . (The same procedure is used to convert other specification limits from time units to clock cycles.)

A subsequent ACTIVE command to a different row in the same bank can only be issued after the previous active row has been "closed" (precharged). The minimum time interval between successive ACTIVE commands to the same bank is defined by <sup>t</sup>RC.

A subsequent ACTIVE command to another bank can be issued while the first bank is being accessed, which results in a reduction of total row-access overhead. The minimum time interval between successive ACTIVE commands to different banks is defined by <sup>t</sup>RRD.

Figure 7: Activating a Specific Row in a Specific Bank Register


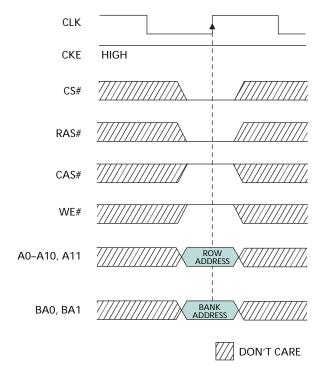




Figure 8: Meeting <sup>t</sup>RCD (MIN) when 2 < <sup>t</sup>RCD (MIN)/<sup>t</sup>CK≤ 3

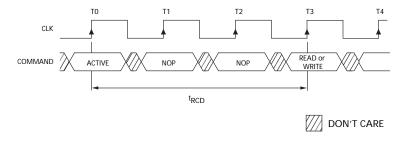

#### **READs**

READ bursts are initiated with a READ command, as shown in Figure 8.

The starting column and bank addresses are provided with the READ command, and auto precharge is either enabled or disabled for that burst access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst.

Note:

For the generic READ commands used in the following illustrations, auto precharge is disabled.

During READ bursts, the valid data-out element from the starting column address will be available following the CAS latency after the READ command. Each subsequent data-out element will be valid by the next positive clock edge. Figure 5 on page 12, shows general timing for each possible CAS latency setting.

Upon completion of a burst, assuming no other commands have been initiated, the DQ will go High-Z.

Data from any READ burst may be truncated with a subsequent READ command, and data from a fixed-length READ burst may be immediately followed by data from a READ command. In either case, a continuous flow of data can be maintained. The first data element from the new burst follows either the last element of a completed burst or the last desired data element of a longer burst that is being truncated. The new READ command should be issued *x* cycles before the clock edge at which the last desired data element is valid, where *x* equals the CAS latency minus one.

This is shown in Figure 10 on page 21 for CAS latencies of two and three; data element n+3 is either the last of a burst of four or the last desired of a longer burst. The 64Mb SDRAM uses a pipelined architecture and therefore does not require the 2n rule associated with a prefetch architecture. A READ command can be initiated on any clock cycle following a previous READ command. Full-speed random read accesses can be performed to the same bank, as shown in Figure 11 on page 22, or each subsequent READ may be performed to a different bank.

Data from any READ burst may be truncated with a subsequent WRITE command, and data from a fixed-length READ burst may be immediately followed by data from a WRITE command (subject to bus turnaround limitations). The WRITE burst may be initiated on the clock edge immediately following the last (or last desired) data element from the READ burst, provided that I/O contention can be avoided. In a given system design, there may be a possibility that the device driving the input data will go Low-Z before the SDRAM DQ go High-Z. In this case, at least a single-cycle delay should occur between the last read data and the WRITE command.



Figure 9: READ Command


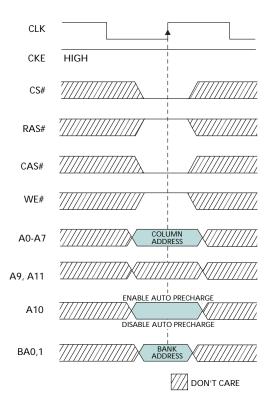



Figure 10: Consecutive READ Bursts

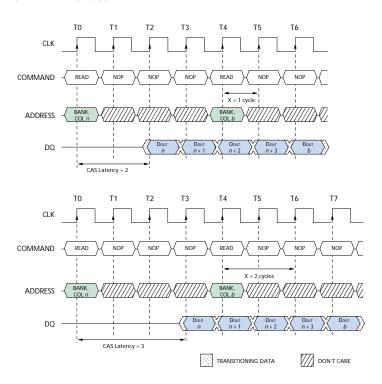

Note: Each READ command may be issued to any bank. DQM is LOW.



Figure 11: Random READ Accesses

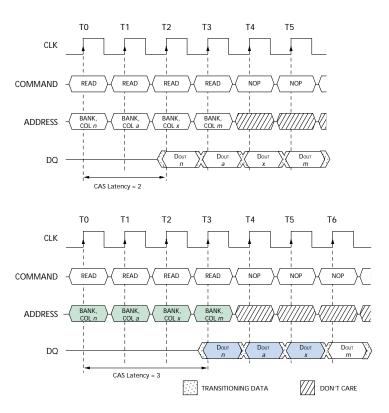

Note: Each READ command may be issued to any bank. DQM is LOW.

The DQM input is used to avoid I/O contention, as shown in Figure 12 on page 23, and Figure 13 on page 23. The DQM signal must be asserted (HIGH) at least two clocks prior to the WRITE command (DQM latency is two clocks for output buffers) to suppress dataout from the READ. Once the WRITE command is registered, the DQ will go High-Z (or remain High-Z), regardless of the state of the DQM signal, provided the DQM was active on the clock just prior to the WRITE command that truncated the READ command. If not, the second WRITE will be an invalid WRITE. For example, if DQM was LOW during T4 in Figure 14 on page 24, then the WRITEs at T5 and T7 would be valid, while the WRITE at T6 would be invalid.


The DQM signal must be de-asserted prior to the WRITE command (DQM latency is zero clocks for input buffers) to ensure that the written data is not masked. Figure 13 on page 23 shows the case where the clock frequency allows for bus contention to be avoided without adding an NOP cycle, and Figure 14 on page 24 shows the case where the additional NOP is needed. A fixed-length READ burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated). The PRECHARGE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one. This is shown in Figure 14 for each possible CAS latency; data element n+3 is either the last of a burst of four or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until  ${}^{t}RP$  is met.

**Note:** Part of the row precharge time is hidden during the access of the last data element(s).




In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length bursts.

Figure 12: READ-to-WRITE

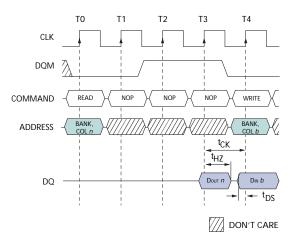

Note: A CAS latency of three is used for illustration. The READ command may be issued to any bank, and the WRITE command may be issued to any bank. If a burst of one is used, then DQM is not required.


Figure 13: READ-to-WRITE with Extra Clock Cycle

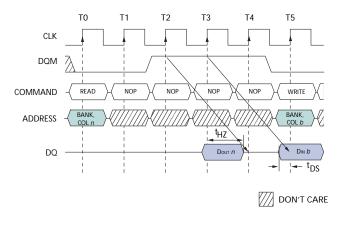

Note: A CAS latency of three is used for illustration. The READ command may be issued to any bank, and the WRITE command may be issued to any bank.




Figure 14: READ-to-PRECHARGE

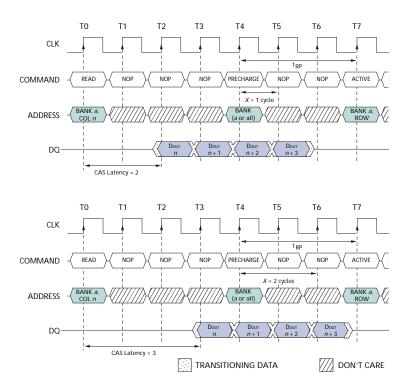

Note: DQM is LOW.

Figure 15: Terminating a READ Burst

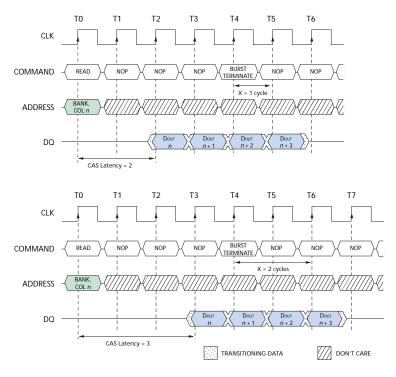

Note: DQM is LOW.



Fixed-length READ bursts may be truncated with a BURST TERMINATE command, provided that auto precharge was not activated. The BURST TERMINATE command should be issued x cycles before the clock edge at which the last desired data element is valid, where x equals the CAS latency minus one. This is shown in Figure 15 on page 24, for each possible CAS latency; data element n+3 is the last desired data element of a longer burst.

#### **WRITEs**

WRITE bursts are initiated with a WRITE command, as shown in Figure 16.


The starting column and bank addresses are provided with the WRITE command and auto precharge is either enabled or disabled for that access. If auto precharge is enabled, the row being accessed is precharged at the completion of the burst.

Note:

For the generic WRITE commands used in the following illustrations, auto precharge is disabled.

During WRITE bursts, the first valid data-in element will be registered coincident with the WRITE command. Subsequent data elements will be registered on each successive positive clock edge. Upon completion of a fixed-length burst, assuming no other commands have been initiated, the DQ will remain High-Z and any additional input data will be ignored (see Figure 18 on page 26).

Figure 16: WRITE Command

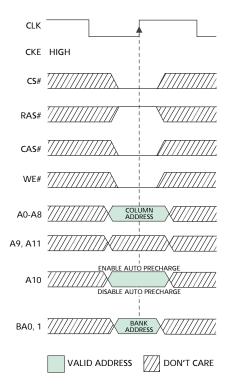


Data for any WRITE burst may be truncated with a subsequent WRITE command, and data for a fixed-length WRITE burst may be immediately followed by data for a WRITE command. The new WRITE command can be issued on any clock following the previous WRITE command, and the data provided coincident with the new command applies to the new command. An example is shown in Figure 19 on page 27. Data n+1 is either the




last of a burst of two or the last desired of a longer burst. The 64Mb SDRAM uses a pipelined architecture and therefore does not require the 2n rule associated with a prefetch architecture. A WRITE command can be initiated on any clock cycle following a previous WRITE command. Full-speed random write accesses within a page can be performed to the same bank, as shown in Figure 19, or each subsequent WRITE may be performed to a different bank.

Figure 17: WRITE Burst

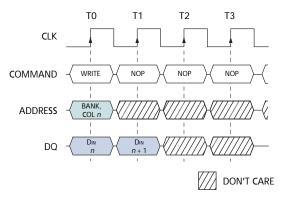

Note: Burst length = 2. DQM is LOW.

Figure 18: WRITE-to-WRITE

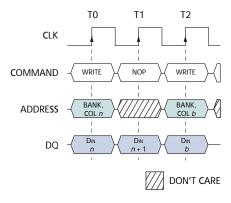

Note: DQM is LOW. Each WRITE command may be issued to any bank.

Data for any WRITE burst may be truncated with a subsequent READ command, and data for a fixed-length WRITE burst may be immediately followed by a READ command. Once the READ command is registered, the data inputs will be ignored, and writes will not be executed. An example is shown in Figure 20 on page 27. Data n+1 is either the last of a burst of two or the last desired of a longer burst.

Data for a fixed-length WRITE burst may be followed by, or truncated with, a PRECHARGE command to the same bank (provided that auto precharge was not activated). The PRECHARGE command should be issued <sup>t</sup>WR after the clock edge at which the last desired input data element is registered. The auto precharge mode requires a <sup>t</sup>WR of at least one clock plus time, regardless of frequency.

In addition, when truncating a WRITE burst, the DQM signal must be used to mask input data for the clock edge prior to, and the clock edge coincident with, the PRECHARGE command. An example is shown in Figure 21 on page 28. Data n+1 is




either the last of a burst of two or the last desired of a longer burst. Following the PRECHARGE command, a subsequent command to the same bank cannot be issued until <sup>t</sup>RP is met.

In the case of a fixed-length burst being executed to completion, a PRECHARGE command issued at the optimum time (as described above) provides the same operation that would result from the same fixed-length burst with auto precharge. The disadvantage of the PRECHARGE command is that it requires that the command and address buses be available at the appropriate time to issue the command; the advantage of the PRECHARGE command is that it can be used to truncate fixed-length bursts.


Fixed-length WRITE bursts can be truncated with the BURST TERMINATE command. When truncating a WRITE burst, the input data applied coincident with the BURST TERMINATE command will be ignored. The last data written (provided that DQM is LOW at that time) will be the input data applied one clock previous to the BURST TERMINATE command. This is shown in Figure 23 on page 29, where data n is the last desired data element of a longer burst.

Figure 19: Random WRITE Cycles

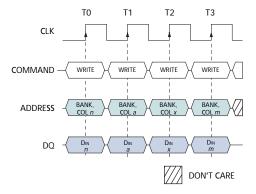

Note: Each WRITE command may be issued to any bank. DQM is LOW.


Figure 20: WRITE-to-READ

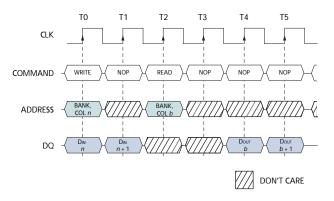

Note: The WRITE command may be issued to any bank, and the READ command may be issued to any bank. DQM is LOW. CAS latency = 2 for illustration.



Figure 21: WRITE-to-PRECHARGE

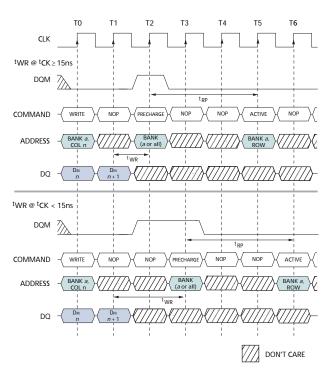

Note: DQM could remain LOW in this example if the WRITE burst is a fixed length of two.

#### **PRECHARGE**

The PRECHARGE command (see Figure 24 on page 29) is used to deactivate the open row in a particular bank or the open row in all banks. The bank(s) will be available for a subsequent row access some specified time (<sup>t</sup>RP) after the PRECHARGE command is issued. Input A10 determines whether one or all banks are to be precharged, and in the case where only one bank is to be precharged, inputs BA0, BA1 select the bank. When all banks are to be precharged, inputs BA0, BA1 are treated as "Don't Care." Once a bank has been precharged, it is in the idle state and must be activated prior to any READ or WRITE commands being issued to that bank.

#### POWER-DOWN

Power-down occurs if CKE is registered LOW coincident with a NOP or COMMAND INHIBIT when no accesses are in progress. If power-down occurs when all banks are idle, this mode is referred to as precharge power-down; if power-down occurs when there is a row active in any bank, this mode is referred to as active power-down. Entering power-down deactivates the input and output buffers, excluding CKE, for maximum power savings while in standby. The device may not remain in the power-down state longer than the refresh period (64ms) since no refresh operations are performed in this mode.

The power-down state is exited by registering a NOP or COMMAND INHIBIT and CKE HIGH at the desired clock edge (meeting <sup>t</sup>CKS). See Figure 22 on page 29.



Figure 22: Power-Down



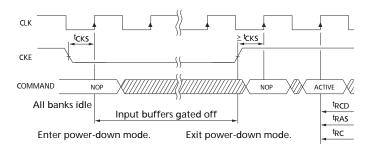


Figure 23: Terminating a WRITE Burst

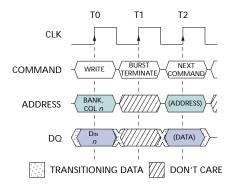

Note: DQMs are LOW.

Figure 24: PRECHARGE Command

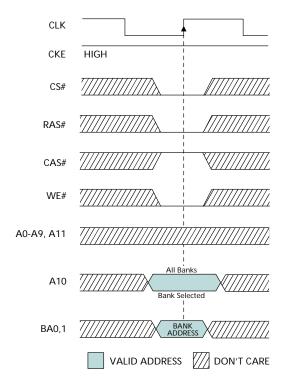





## **Deep Power-Down**

Deep power down mode is a maximum power savings feature achieved by shutting off the power to the entire memory array of the device. Data on the memory array will not be retained once deep power down mode is executed. Deep power down mode is entered by having all banks idle then CS# and WE# held LOW with RAS# and CAS# HIGH at the rising edge of the clock, while CKE is LOW. CKE must be held LOW during deep power-down.

In order to exit deep power down mode, CKE must be asserted HIGH. After exiting, the following sequence is needed in order to enter a new command. Maintain NOP input conditions for a minimum of  $100\mu s$ . Issue PRECHARGE commands for all banks. Issue eight or more AUTOREFRESH commands. The values of the mode register and extended mode register will be retained upon exiting deep power-down.

#### **CLOCK SUSPEND**

The clock suspend mode occurs when a column access/burst is in progress and CKE is registered low. In the clock suspend mode, the internal clock is deactivated, "freezing" the synchronous logic.

For each positive clock edge on which CKE is sampled LOW, the next internal positive clock edge is suspended. Any command or data present on the input pins at the time of a suspended internal clock edge is ignored; any data present on the DQ pins remains driven; and burst counters are not incremented, as long as the clock is suspended. (See examples in Figure 25 on page 31, and Figure 26 on page 31.)


Clock suspend mode is exited by registering CKE HIGH; the internal clock and related operation will resume on the subsequent positive clock edge.

#### **BURST READ/SINGLE WRITE**

The burst read/single write mode is entered by programming the write burst mode bit (M9) in the mode register to a logic 1. In this mode, all WRITE commands result in the access of a single column location (burst of one), regardless of the programmed burst length. READ commands access columns according to the programmed burst length and sequence, just as in the normal mode of operation (M9 = 0).




Figure 25: Clock Suspend During WRITE Burst

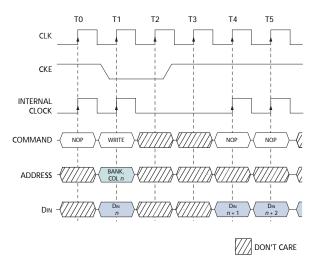

Note: For this example, burst length = 4 or greater, and DM is LOW.

Figure 26: Clock Suspend During READ Burst

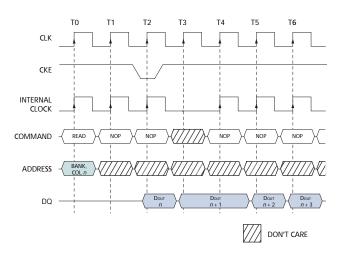

Note: For this example, CAS latency = 2, burst length = 4 or greater, and DQM is LOW.




## **Concurrent Auto Precharge**

Micron SDRAM devices support concurrent auto precharge, which allows an access command (READ or WRITE) to another bank while an access command with auto precharge enabled is executing. Four cases where concurrent auto precharge occurs are defined below.

#### **READ** with Auto Precharge

- 1. Interrupted by a READ (with or without auto precharge): A READ to bank *m* will interrupt a READ on bank *n*, two or three clocks later, depending on CAS latency. The precharge to bank *n* will begin when the READ to bank *m* is registered (Figure 27).
- 2. Interrupted by a WRITE (with or without auto precharge): When a WRITE to bank *m* registers, a READ on bank *n* will be interrupted. DQM should be used two clocks prior to the WRITE command to prevent bus contention. The precharge to bank *n* will begin when the WRITE to bank *m* is registered (Figure 28 on page 33).


Figure 27: READ with Auto Precharge Interrupted by a READ

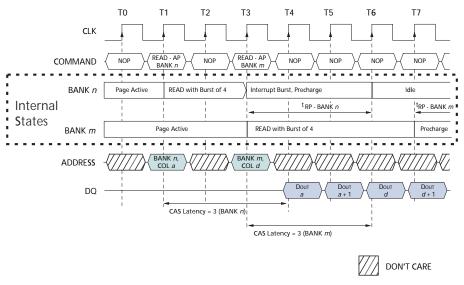

Note: DQM is LOW.



Figure 28: READ with Auto Precharge Interrupted by a WRITE

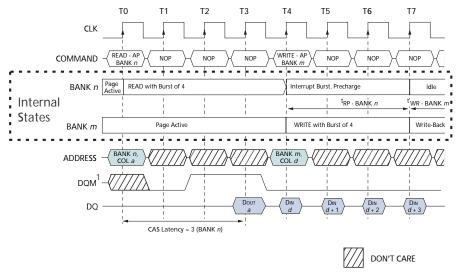


Note: DQM is HIGH at T2 to prevent DOUT a + 1 from contending with DIN d at T4.

#### **WRITE** with Auto Precharge

- 3. Interrupted by a READ (with or without auto precharge): When a READ to bank *m* registers, it will interrupt a WRITE on bank *n*, with the data-out appearing 2 or 3 clocks later, (depending on CAS latency). The precharge to bank *n* will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the READ to bank *m* is registered. The last valid WRITE to bank *n* will be data-in registered one clock prior to the READ to bank *m* (Figure 29 on page 34).
- 4. Interrupted by a WRITE (with or without auto precharge): When a WRITE to bank *m* registers, it will interrupt a WRITE on bank *n*. The precharge to bank *n* will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the WRITE to bank *m* is registered. The last valid data WRITE to bank *n* will be data registered one clock prior to a WRITE to bank *m* (see Figure 30 on page 34).




Figure 29: WRITE with Auto Precharge Interrupted by a READ

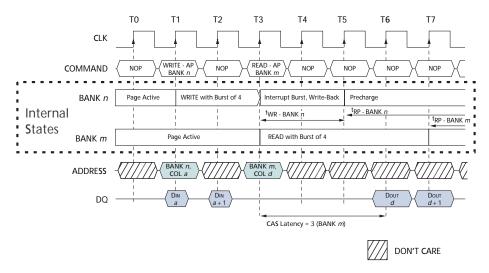

Note: DQM is LOW.

Figure 30: WRITE with Auto Precharge Interrupted by a WRITE

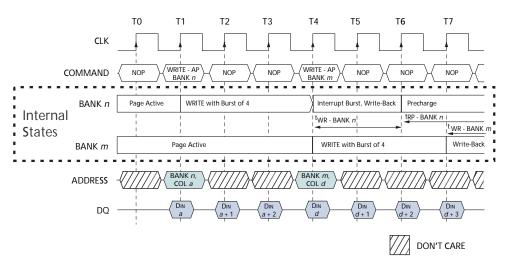

Note: DQM is LOW.





Table 6: **Truth Table 2 - CKE** 

Notes: 1-4; notes appear below table

CKE <sub>n-1</sub>	CKE <sub>n</sub>	Current State	Command <sub>n</sub>	Action <sub>n</sub>	Notes
L	L	Power-down	X	Maintain power-down	
		Self refresh	X	Maintain self refresh	
		Clock suspend	X	Maintain clock suspend	
		Deep power-down	X	Maintain deep power-down	8
L	Н	Power-down	COMMAND INHIBIT or NOP	Exit Power-down	5
		Deep power-down	X	Exit deep power-down	8
		Self refresh	COMMAND INHIBIT or NOP	Exit self refresh	6
		Clock suspend	X	Exit clock suspend	7
Н	L	All banks idle	COMMAND INHIBIT or NOP	Power-down entry	
		All banks idle	BURST TERMINATE	Deep power-down entry	8
		All banks idle	AUTO REFRESH	Self refresh entry	
		Reading or writing	VALID	Clock suspend entry	
Н	Н		See Table 7 on page 36		

- Notes: 1.  $CKE_n$  is the logic state of CKE at clock edge n;  $CKE_{n-1}$  was the state of CKE at the previous clock edge.
  - 2. Current state is the state of the SDRAM immediately prior to clock edge n.
  - 3. COMMAND<sub>n</sub> is the command registered at clock edge n, and ACTION<sub>n</sub> is a result of COM-MAND<sub>n</sub>.
  - 4. All states and sequences not shown are illegal or reserved.
  - 5. Exiting power-down at clock edge n will put the device in the all banks idle state in time for clock edge n + 1 (provided that <sup>t</sup>CKS is met).
  - 6. Exiting self refresh at clock edge n will put the device in the all banks idle state once <sup>t</sup>XSR is met. COMMAND INHIBIT or NOP commands should be issued on any clock edges occurring during the <sup>t</sup>XSR period. A minimum of two NOP commands must be provided during <sup>t</sup>XSR period.
  - 7. After exiting clock suspend at clock edge n, the device will resume operation and recognize the next command at clock edge n + 1.
  - 8. Deep power-down is a power-saving feature of this Mobile SDRAM device. This command is BURST TERMINATE when CKE is HIGH and deep power-down when CKE is LOW.





Table 7: Truth Table 3 - Current State Bank n, Command to Bank n

Notes: 1-5; notes appear below table and on next page

Current State	CS#	RAS#	CAS#	WE#	Command (Action)	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	Н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
Idle	L	L	Н	Н	ACTIVE (Select and activate row)	
	L	L	L	Н	AUTO REFRESH	6
	L	L	L	L	LOAD MODE REGISTER	6
	L	L	Н	L	PRECHARGE	10
Row active	L	Н	L	Н	READ (Select column and start READ burst)	9
	L	Н	L	L	WRITE (Select column and start WRITE burst)	9
	L	L	Н	L	PRECHARGE (Deactivate row in bank or banks)	7
Read (auto	L	Н	L	Н	READ (Select column and start new READ burst)	9
precharge	L	Н	L	L	WRITE (Select column and start WRITE burst)	9
disabled)	L	L	Н	L	PRECHARGE (Truncate READ burst, start PRECHARGE)	7
	L	Н	Н	L	BURST TERMINATE	8
Write (auto	L	Н	L	Н	READ (Select column and start READ burst)	9
precharge	L	Н	L	L	WRITE (Select column and start new WRITE burst)	9
disabled)	L	L	Н	L	PRECHARGE (Truncate WRITE burst, start PRECHARGE)	7
	L	Н	Н	L	BURST TERMINATE	8

Notes

- 1. This table applies when CKE<sub>n-1</sub> was HIGH and CKE<sub>n</sub> is HIGH (see Table 6 on page 35) and after <sup>t</sup>XSR has been met (if the previous state was self refresh).
- 2. This table is bank-specific, except where noted; i.e., the current state is for a specific bank and the commands shown are those allowed to be issued to that bank when in that state. Exceptions are covered in the notes below.
- 3. Current state definitions:

**Idle:** The bank has been precharged, and <sup>t</sup>RP has been met.

**Row** A row in the bank has been activated, and <sup>t</sup>RCD has been met. No data bursts/

active: accesses and no register accesses are in progress.

**Read:** A READ burst has been initiated, with auto precharge disabled, and has not yet

terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and has not yet

terminated or been terminated.

The following states must not be interrupted by a command issued to the same bank. COM-MAND INHIBIT or NOP commands, or allowable commands to the other bank should be issued on any clock edge occurring during these states. Allowable commands to the other bank are determined by its current state and Table 7, and according to Table 8.

**Precharging:** Starts with registration of a PRECHARGE command and ends when <sup>t</sup>RP is

met. Once <sup>t</sup>RP is met, the bank will be in the idle state.

**Row activating:** Starts with registration of an ACTIVE command and ends when <sup>t</sup>RCD is

met. Once <sup>t</sup>RCD is met, the bank will be in the row active state.

**Read with auto** Starts with registration of a READ command with auto precharge

precharge enabled and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank will

**enabled:** be in the idle state.

**Write with auto** Starts with registration of a WRITE command with auto precharge precharge enabled and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank will

**enabled:** be in the idle state.





4. The following states must not be interrupted by any executable command; COMMAND INHIBIT or NOP commands must be applied on each positive clock edge during these states.

**Refreshing:** Starts with registration of an AUTO REFRESH command and ends when

<sup>t</sup>RC is met. Once <sup>t</sup>RC is met, the SDRAM will be in the all banks idle

state.

Accessing mode register:

Starts with registration of a LOAD MODE REGISTER command and ends when <sup>t</sup>MRD has been met. Once <sup>t</sup>MRD is met, the SDRAM will be in the

all banks idle state.

Precharging all: Starts with registration of a PRECHARGE ALL command and ends when

<sup>t</sup>RP is met. Once <sup>t</sup>RP is met, all banks will be in the idle state.

- 5. All states and sequences not shown are illegal or reserved.
- 6. Not bank-specific; requires that all banks are idle.
- 7. May or may not be bank-specific; if all banks are to be precharged, all must be in a valid state for precharging.
- 8. Deep power-down is power savings feature of this Mobile SDRAM device. This command is BURST TERMINATE when CKE is HIGH and deep power-down when CKE is LOW.
- 9. READs or WRITEs listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 10. Does not affect the state of the bank and acts as a NOP to that bank.





Table 8: Truth Table 4 - Current State Bank n, Command to Bank m

Notes: 1-6; notes appear below table and on next page

<b>Current State</b>	CS#	RAS#	CAS#	WE#	Command (Action)	Notes
Any	Н	Х	Х	Х	COMMAND INHIBIT (NOP/Continue previous operation)	
	L	Н	Н	Н	NO OPERATION (NOP/Continue previous operation)	
Idle	Х	Х	Х	Х	Any Command Otherwise Allowed to Bank m	
Row	L	L	Н	Н	ACTIVE (Select and activate row)	
activating,	L	Н	L	Н	READ (Select column and start READ burst)	7
active, or precharging	L	Н	L	L	WRITE (Select column and start WRITE burst)	7
precharging	L	L	Н	L	PRECHARGE	
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(auto	L	Н	L	Н	READ (Select column and start new READ burst)	7, 10
precharge disabled)	L	Н	L	L	WRITE (Select column and start WRITE burst)	7, 11
uisableu)	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(auto	L	Н	L	Н	READ (Select column and start READ burst)	7, 12
precharge disabled)	L	Н	L	L	WRITE (Select column and start new WRITE burst)	7, 13
disabled)	L	L	Н	L	PRECHARGE	9
Read	L	L	Н	Н	ACTIVE (Select and activate row)	
(with auto	L	Н	L	Н	READ (Select column and start new READ burst)	7, 8, 14
precharge)	L	Н	L	L	WRITE (Select column and start WRITE burst)	7, 8, 15
	L	L	Н	L	PRECHARGE	9
Write	L	L	Н	Н	ACTIVE (Select and activate row)	
(with auto	L	Н	L	Н	READ (Select column and start READ burst)	7, 8, 16
precharge)	L	Н	L	L	WRITE (Select column and start new WRITE burst)	7, 8, 17
	L	L	Н	L	PRECHARGE	9

Notes:

- 1. This table applies when  $CKE_{n-1}$  was HIGH and  $CKE_n$  is HIGH (see Table 6 on page 35) and after <sup>t</sup>XSR has been met (if the previous state was self refresh).
- 2. This table describes alternate bank operation, except where noted; i.e., the current state is for bank *n* and the commands shown are those allowed to be issued to bank *m* (assuming that bank *m* is in such a state that the given command is allowable). Exceptions are covered in the notes below.
- 3. Current state definitions:

**Idle:** The bank has been precharged, and <sup>t</sup>RP has been met.

**Row active:** A row in the bank has been activated, and <sup>†</sup>RCD has been met. No data

bursts/accesses and no register accesses are in progress.

**Read:** A READ burst has been initiated, with auto precharge disabled, and has

not yet terminated or been terminated.

Write: A WRITE burst has been initiated, with auto precharge disabled, and has

not yet terminated or been terminated.

**Read with auto** Starts with registration of a READ command with auto precharge

**precharge** enabled, and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank will

**enabled:** be in the idle state.

**Write with auto** Starts with registration of a WRITE command with auto precharge precharge enabled, and ends when <sup>t</sup>RP has been met. Once <sup>t</sup>RP is met, the bank will

**enabled:** be in the idle state.

4. AUTO REFRESH, SELF REFRESH, and LOAD MODE REGISTER commands may only be issued when all banks are idle.





- 5. A BURST TERMINATE command cannot be issued to another bank; it applies to the bank represented by the current state only.
- 6. All states and sequences not shown are illegal or reserved.
- 7. READs or WRITEs to bank *m* listed in the Command (Action) column include READs or WRITEs with auto precharge enabled and READs or WRITEs with auto precharge disabled.
- 8. CONCURRENT AUTO PRECHARGE: Bank *n* will initiate the AUTO PRECHARGE command when its burst has been interrupted by bank *m*'s burst.
- 9. Burst in bank *n* continues as initiated.
- 10. For a READ without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CAS latency later (Figure 10 on page 21).
- 11. For a READ without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered (Figure 12 on page 23 and Figure 13 on page 23). DQM should be used one clock prior to the WRITE command to prevent bus contention.
- 12. For a WRITE without auto precharge interrupted by a READ (with or without auto precharge), the READ to bank m will interrupt the WRITE on bank n when registered (Figure 20 on page 27), with the data-out appearing CAS latency later. The last valid WRITE to bank n will be data-in registered one clock prior to the READ to bank m.
- 13. For a WRITE without auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank m will interrupt the WRITE on bank n when registered (Figure 18 on page 26). The last valid WRITE to bank n will be data-in registered one clock prior to the READ to bank m.
- 14. For a READ with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank *m* will interrupt the READ on bank *n*, CAS latency later (Figure 27 on page 32). The PRECHARGE to bank *n* will begin when the READ to bank *m* is registered.
- 15. For a READ with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the READ on bank *n* when registered (Figure 28 on page 33). DQM should be used two clocks prior to the WRITE command to prevent bus contention. The PRECHARGE to bank *n* will begin when the WRITE to bank *m* is registered.
- 16. For a WRITE with auto precharge interrupted by a READ (with or without auto precharge), the READ to bank m will interrupt the WRITE on bank n when registered, with the data-out appearing CAS latency later (Figure 29 on page 34). The PRECHARGE to bank n will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the READ to bank m is registered. The last valid WRITE bank n will be data-in registered one clock prior to the READ to bank m.
- 17. For a WRITE with auto precharge interrupted by a WRITE (with or without auto precharge), the WRITE to bank *m* will interrupt the WRITE on bank *n* when registered. The PRECHARGE to bank *n* will begin after <sup>t</sup>WR is met, where <sup>t</sup>WR begins when the WRITE to bank *m* is registered (Figure 30 on page 34). The last valid WRITE to bank *n* will be data registered one clock to the WRITE to bank *m*.



## **Absolute Maximum Ratings**

Stresses greater than those listed may cause permanent damage to the device. This is a stress rating only, and functional operation of the device at these or any other conditions above those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

**Table 17: Absolute Maximum DC Ratings** 

Parameter	Symbol	Min	Max	Units
VDD supply voltage relative to Vss	VDD	0.35	2.8	V
VDDQ supply voltage relative to VssQ	VDDQ	0.35	2.8	V
Voltage on any ball relative to Vss	-	0.35	2.8	V
Operating temperature  T <sub>A</sub> (commercial)  T <sub>A</sub> (industrial)	-	0 -40	70 85	°C

**Table 18: DC Electrical Characteristics and Operating Conditions** 

Notes: 1, 5, 6; notes appear on page 45; VDD/VDDQ = 1.7V - 1.95V

Parameter/Condition	Symbol	Min	Max	Units	Notes
Supply voltage	VDD	1.7	1.95	V	
I/O supply voltage	VddQ	1.7	1.95	V	
Input High Voltage: Logic 1; All inputs	VIH	0.8 × VDDQ	VDDQ +0.3	V	22
Input low voltage: Logic 0; All inputs	VIL	-0.3	+0.3	V	22
Output high voltage: all inputs: IOUT = -100µA	Voн	0.9 x VddQ	-	V	
Input low voltage: all inputs: IouT = 100µA	Vol	-	0.2	V	
Input leakage current: Any input $0V \le VIN \le VDD$ (All other pins not under test = $0V$ )	lı	-1.0	1.0	μA	
Output leakage current: DQ disabled; 0V ≤ Vout ≤ VDDQ	loz	-1.5	1.5	μΑ	

**Table 19: AC Electrical Characteristics and Operating Conditions** 

VDD/VDDQ = 1.7V - 1.95V

Parameter/Condition	Symbol	Min	Max	Units
Input high voltage: Logic 1; All inputs	VIH	1.4	-	V
Input low voltage: Logic 0; All inputs	VIL	_	+0.4	V



Table 20: Electrical Characteristics and Recommended AC Operating Conditions
Notes: 5, 6, 8, 9, and 11; notes appear on page 45

AC Characteristics		-	75		·8			
Parameter		Symbol	Min	Max	Min	Max	Units	Notes
Access time from CLK (pos. edge)	CL = 3	<sup>t</sup> AC (3)		6		6	ns	
	CL = 2	<sup>t</sup> AC (2)		7		8	ns	
Address hold time		<sup>t</sup> AH	1		1		ns	
Address setup time		tAS	2.5		2.5		ns	
CLK high-level width		<sup>t</sup> CH	3		3		ns	
CLK low-level width		<sup>t</sup> CL	3		3		ns	
Clock cycle time	CL = 3	<sup>t</sup> CK (3)	7.5	100	8	100	ns	23
	CL = 2	<sup>t</sup> CK (2)	10	100	12	100	ns	23
CKE hold time		<sup>t</sup> CKH	1		1		ns	
CKE setup time		<sup>t</sup> CKS	2.5		2.5		ns	
CS#, RAS#, CAS#, WE#, DQM hold time		<sup>t</sup> CMH	1		1		ns	
CS#, RAS#, CAS#, WE#, DQM setup time		<sup>t</sup> CMS	2.5		2.5		ns	
Data-in hold time		<sup>t</sup> DH	1		1		ns	
Data-in setup time		<sup>t</sup> DS	2.5		2.5		ns	
Data-out high-impedance time	CL = 3	<sup>t</sup> HZ (3)		6		7	ns	10
	CL = 2	<sup>t</sup> HZ (2)		7		8	ns	10
Data-out low-impedance time		<sup>t</sup> LZ	1		1		ns	
Data-out hold time (load)		<sup>t</sup> OH	2.5		2.5		ns	
Data-out hold time (no load)		<sup>t</sup> OH <sub>N</sub>	1.8		1.8		ns	27
ACTIVE to PRECHARGE command		<sup>t</sup> RAS	45	120,000	48	120,000	ns	
ACTIVE to ACTIVE command period		<sup>t</sup> RC	67.5		72		ns	
ACTIVE to READ or WRITE delay		t <sub>RCD</sub>	20		24		ns	
Refresh period (4,096 rows)		<sup>t</sup> REF		64		64	ms	
AUTO REFRESH period		<sup>t</sup> RFC	75		80		ns	
PRECHARGE command period		<sup>t</sup> RP	20		24		ns	
ACTIVE bank a to ACTIVE bank b command		<sup>t</sup> RRD	15		16		ns	
Transition time		<sup>t</sup> T	0.5	1.2	0.5	1.2	ns	7
WRITE recovery time		<sup>t</sup> WR (a)	1 CLK +		1 CLK +		-	24
			7.5ns		7ns			
		<sup>t</sup> WR (m)	15		15		ns	
Exit SELF REFRESH to ACTIVE command		<sup>t</sup> XSR	75		80		ns	20



**Table 21: AC Functional Characteristics** 

Notes: 5, 6, 8, 9, and 11; notes appear on page 45

Parameter			-75	-8	Units	Notes
READ/WRITE command to READ/WRITE command	tCCD	1	1	<sup>t</sup> CK	17	
CKE to clock disable or power-down entry mode		<sup>t</sup> CKED	1	1	<sup>t</sup> CK	14
CKE to clock enable or power-down exit setup mode		<sup>t</sup> PED	1	1	<sup>t</sup> CK	14
DQM to input data delay		<sup>t</sup> DQD	0	0	<sup>t</sup> CK	17
DQM to data mask during WRITEs		<sup>t</sup> DQM	0	0	<sup>t</sup> CK	17
DQM to data High-Z during READs		<sup>t</sup> DQZ	2	2	<sup>t</sup> CK	17
WRITE command to input data delay		<sup>t</sup> DWD	0	0	<sup>t</sup> CK	17
Data-in to ACTIVE command		<sup>t</sup> DAL	5	5	<sup>t</sup> CK	15, 21
Data-in to PRECHARGE command		<sup>t</sup> DPL	2	2	<sup>t</sup> CK	16, 21
Last data-in to burst STOP command		<sup>t</sup> BDL	1	1	<sup>t</sup> CK	17
Last data-in to new READ/WRITE command		<sup>t</sup> CDL	1	1	<sup>t</sup> CK	17
Last data-in to PRECHARGE command		<sup>t</sup> RDL	2	2	<sup>t</sup> CK	16, 21
LOAD MODE REGISTER command to ACTIVE or REFRESH	<sup>t</sup> MRD	2	2	<sup>t</sup> CK	25	
command						
Data-out to high-impedance from PRECHARGE command	CL = 3	tROH(3)	3	3	<sup>t</sup> CK	17
	CL = 2	tROH(2)	2	2	<sup>t</sup> CK	17



### **Table 22: IDD Specifications and Conditions (x16)**

Notes: 1, 5, 6, 11, 13 appear on page 45; Vdd = 1.7V to 1.95V, VddQ = 1.7V to 1.95V

			Max			
Parameter/Condition		Symbol	-75	-8	Units	Notes
<b>Operating current:</b> Active mode; Burst = 1; READ or WRITE; <sup>1</sup>	IDD1	60	55	mA	3, 18, 19	
Standby current: Power-down mode; All banks idle; CKE =	IDD2P	150	150	μA	26	
Standby current: Non-power-down mode; All banks idle; (	IDD2N	10	10	mA	3, 12, 19	
Standby current: Active mode; CKE = LOW; CS# = HIGH; Al accesses in progress	IDD3P	5	5	mA	3, 18, 19	
Standby current: Active mode; CKE = HIGH; CS# = HIGH; A <sup>t</sup> RCD met; No accesses in progress	II banks active after	IDD3N	15	15	mA	3, 18, 19
Operating current: Burst mode; Continuous burst; READ or V half DQs toggling every cycle	IDD4	50	50	mA	3, 18, 19	
Auto refresh current	<sup>t</sup> RFC = <sup>t</sup> RFC (MIN)	IDD5	75	60	mA	3, 12,
CKE = HIGH; CS# = HIGH	<sup>t</sup> RFC = 15.625µs	IDD6	2	2	mA	18, 19, 27
Deep power-down		Izz	10	10	μΑ	28



Table 23: IDD7 - Self Refresh Current Options

Notes: 4, and 29; notes appear on page 45; VDD/VDDQ = 1.7V - 1.95V

Temperature Compensated Self Refresh Parameter/Condition	Max Temperature	-75/-8	Units
Self refresh current:	85°C	180	μΑ
CKE< 0.2V – 4 Banks Open	45°C	120	μΑ
Self refresh current:	85°C	130	μΑ
CKE < 0.2V – 2 banks open	45°C	80	μΑ
Self refresh current:	85°C	100	μΑ
CKE < 0.2V – 1 bank open	45°C	80	μΑ
Self refresh current:	85°C	100	μΑ
CKE < 0.2V – 1/2 bank open	45°C	80	μΑ
Self refresh current:	85°C	100	μΑ
CKE < 0.2V – 1/4 bank open	45°C	80	μΑ

Figure 31: Typical Self Refresh Current vs. Temperature

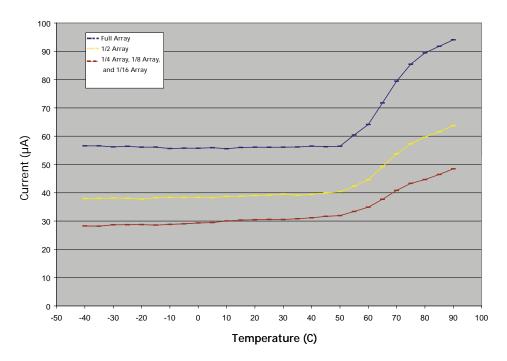


Table 24: Capacitance

Note: 2; notes appear on page 45


Parameter	Symbol	Min	Max	Units
Input capacitance: CLK	CI1	1.5	4.0	pF
Input capacitance: All other input-only pins	CI2	1.5	4.0	pF
Input/output capacitance: DQ	Сю	3.0	6.0	pF





#### **Notes**

- 1. All voltages referenced to Vss.
- 2. This parameter is sampled. VDD/VDDQ = 1.7V 1.95V;  $T_A = 25$ °C; pin under test biased at 1.4V. f = 1 MHz.
- 3. IDD is dependent on output loading and cycle rates. Specified values are obtained with minimum cycle time and the outputs open.
- Enables on-chip refresh and address counters.
- 5. The minimum specifications are used only to indicate cycle time at which proper operation over the full temperature range (0°C  $\leq$  T<sub>A</sub>  $\leq$  +70°C for commercial parts; -40°C  $\leq$  T<sub>A</sub>  $\leq$  +85°C for industrial parts) is ensured.
- 6. An initial pause of 100μs is required after power-up, followed by two AUTO REFRESH commands, before proper device operation is ensured. (VDD and VDDQ must be powered up simultaneously. VSS and VSSQ must be at same potential.) The two AUTO REFRESH command wake-ups should be repeated any time the <sup>t</sup>REF refresh requirement is exceeded.
- 7. AC characteristics assume  ${}^{t}T = 1$ ns.
- 8. In addition to meeting the transition rate specification, the clock and CKE must transition between VIH and VIL (or between VIL and VIH) in a monotonic manner.
- 9. Outputs measured for 1.8V at 0.9V with equivalent load:



- 10. <sup>t</sup>HZ defines the time at which the output achieves the open circuit condition; it is not a reference to VOH or VOL. The last valid data element will meet <sup>t</sup>OH before going High-Z.
- 11. AC timing and IDD tests have VIL and VIH, with timing referenced to VIH/2 = crossover point. If the input transition time is longer than  ${}^{t}T$  (MAX), then the timing is referenced at VIL (MAX) and VIH (MIN) and no longer at the VIH/2 crossover point.
- 12. Other input signals are allowed to transition no more than once every two clocks and are otherwise at valid VIH or VIL levels.
- 13. IDD specifications are tested after the device is properly initialized.
- 14. Timing actually specified by <sup>t</sup>CKS; clock(s) specified as a reference only at minimum cycle rate.
- 15. Timing actually specified by <sup>t</sup>WR plus <sup>t</sup>RP; clock(s) specified as a reference only at minimum cycle rate.
- 16. Timing actually specified by <sup>t</sup>WR.
- 17. Required clocks are specified by JEDEC functionality and are not dependent on any timing parameter.
- 18. The IDD current will increase or decrease proportionally according to the amount of frequency alteration for the test condition.
- 19. Address transitions average one transition every two clocks.
- 20. CLK must be toggled a minimum of two times during this period.
- 21. Based on  ${}^{t}CK = 7.5$ ns for -75 and  ${}^{t}CK = 8.0$ ns for -8.
- 22. VIH overshoot: VIH (MAX) = VDDQ + 2V for a pulse width  $\leq$  3ns, and the pulse width cannot be greater than one third of the cycle rate. VIL undershoot: VIL (MIN) = -2V for a pulse width  $\leq$  3ns.






- 23. The clock frequency must remain constant (stable clock is defined as a signal cycling within timing constraints specified for the clock pin) during access or precharge states (READ, WRITE, including <sup>t</sup>WR, and PRECHARGE commands). CKE may be used to reduce the data rate.
- 24. Auto precharge mode only. The precharge timing budget (<sup>t</sup>RP) begins at 7ns for -8 after the first clock delay, after the last WRITE is executed. May not exceed limit set for precharge mode.
- 25. .JEDEC and PC100 specify three clocks.
- 26. CL = 2,  ${}^{t}CK = 10$ ns.
- 27. CKE is HIGH during REFRESH command period <sup>t</sup>RFC (MIN) else CKE is LOW. The IDD6 limit is actually a nominal value and does not result in a fail value.
- 28. Deep power-down current is a nominal value at 25°C. The parameter is not tested.
- 29. Self refresh is tested at 85°C. IDD7 at 45°C is sampled only.



# **Timing Diagrams**


Figure 32: Initialize and Load Mode Register

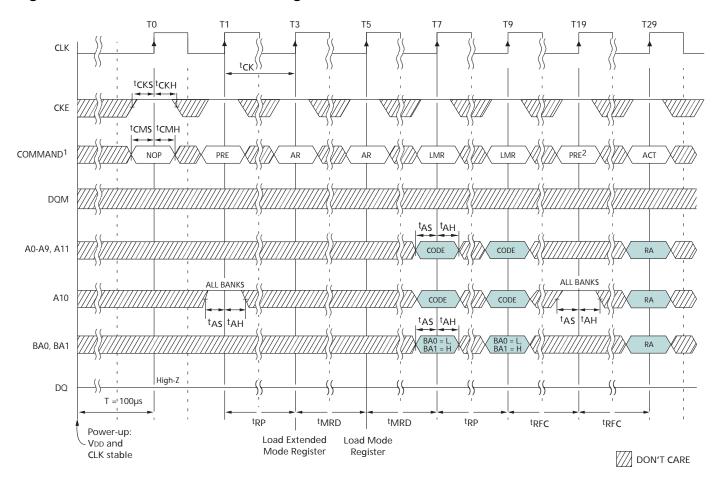

Notes: 1. PRE = PRECHARGE command, LMR = LOAD MODE REGISTER command, AR = AUTO REFRESH command, ACT = ACTIVE command, RA = Row Address, BA = Bank Address




Figure 33: Power-Down Mode

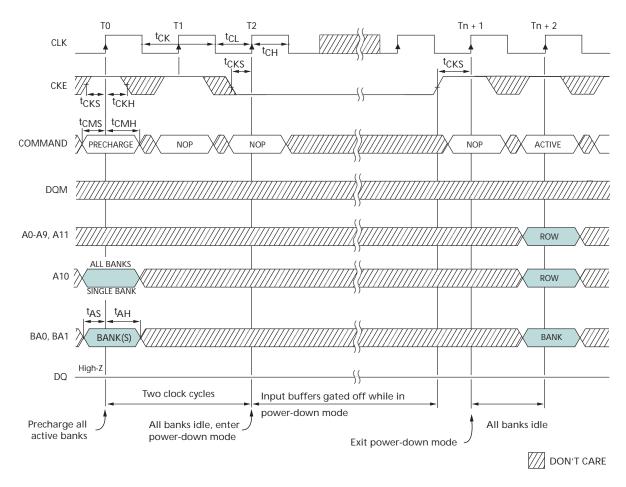

Note: Violating refresh requirements during power-down may result in a loss of data.




Figure 34: Clock Suspend Mode

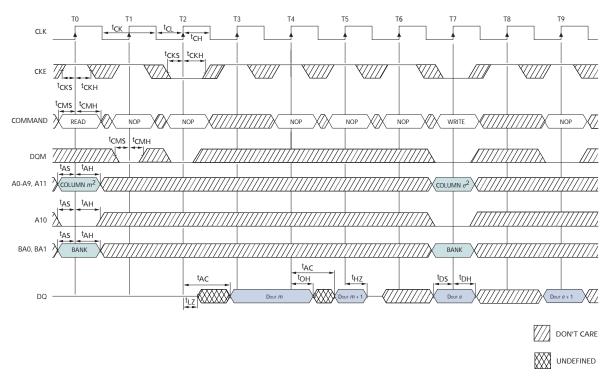

Notes: 1. For this example, the burst length = 2, the CAS latency = 3, and auto precharge is disabled.




Figure 35: Auto Refresh Mode

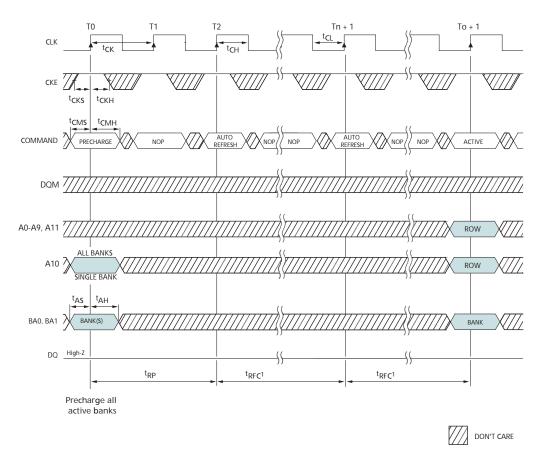

Note: Each AUTO REFRESH command performs a REFRESH cycle. Back-to-back commands are not required.




Figure 36: Self Refresh Mode

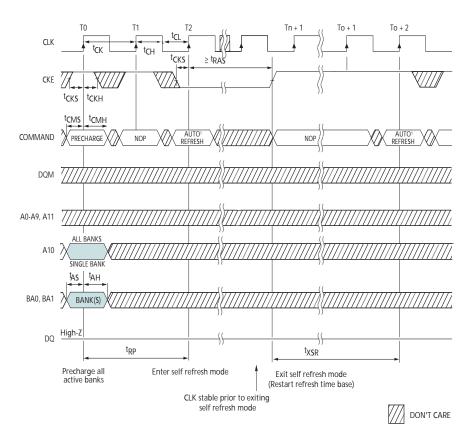

Note: Each AUTO REFRESH command performs a REFRESH cycle. Back-to-back commands are not required.




Figure 37: READ - Without Auto Precharge

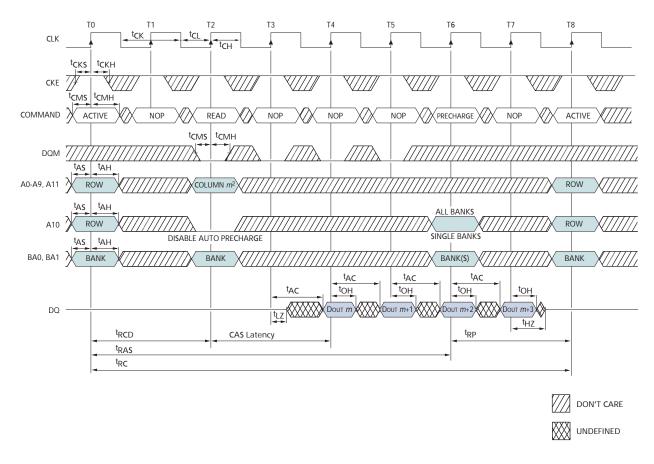

Notes: 1. For this example, the burst length = 4, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.




Figure 38: READ - with Auto Precharge

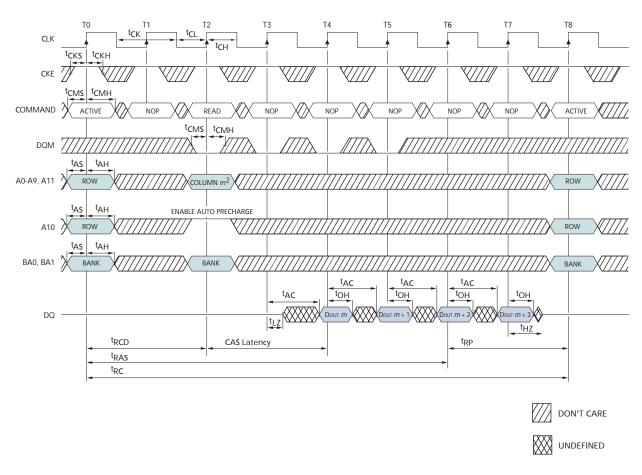

Notes: 1. For this example, the burst length = 4, the CAS latency = 2.



Figure 39: Single READ - Without Auto Precharge

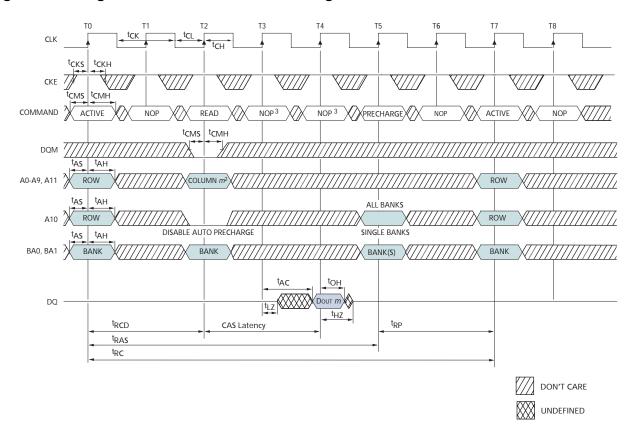


Notes: 1. For this example, the burst length = 4, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.

- 2. A9 and A11 = "Don't Care."
- 3. PRECHARGE command not allowed or <sup>t</sup>RAS would be violated



Figure 40: Single READ - with Auto Precharge

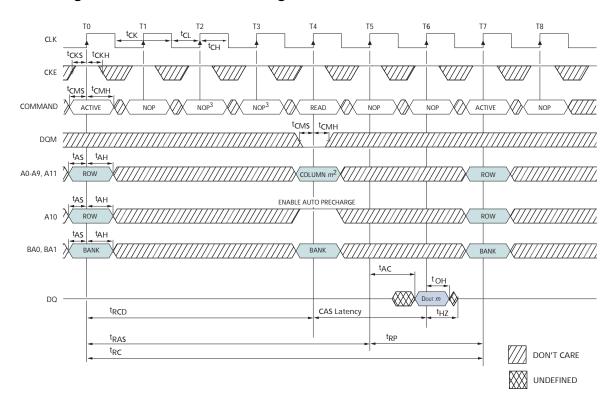


Notes:

- 1. For this example, the burst length = 4, the CAS latency = 2, and the READ burst is followed by a "manual" PRECHARGE.
- 2. A9 and A11 = "Don't Care."
- 3. PRECHARGE command not allowed or <sup>t</sup>RAS would be violated.




Figure 41: Alternating Bank Read Accesses

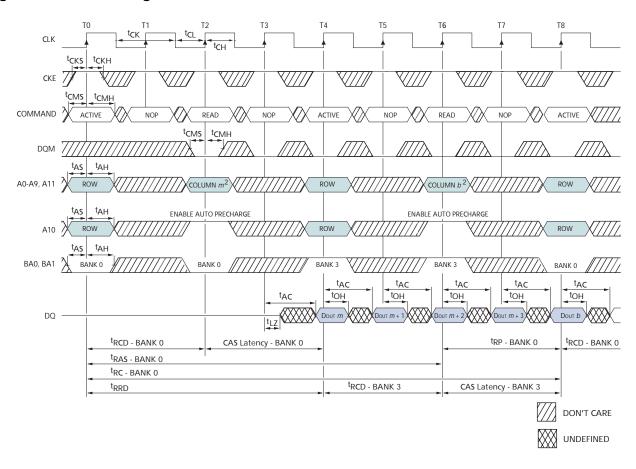

Notes: 1. For this example, the burst length = 4, the CAS latency = 2.




Figure 42: READ - DQM Operation

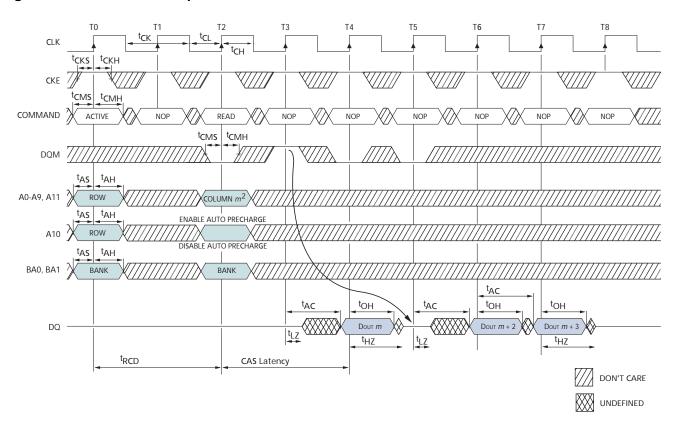

Notes: 1. For this example, the CAS latency = 2.



Figure 43: WRITE - Without Auto Precharge

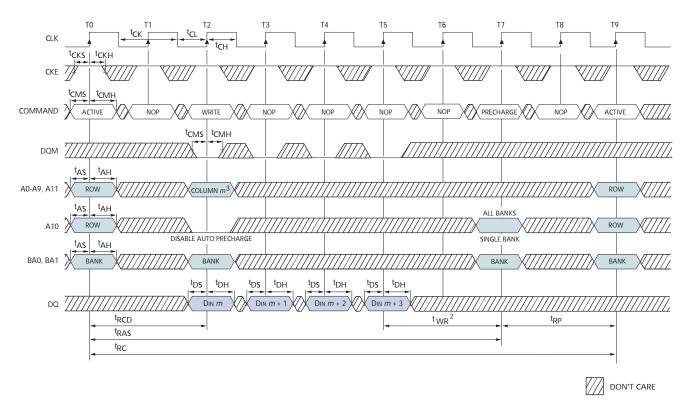


Notes:

- 1. For this example, the burst length = 4, and the WRITE burst is followed by a "manual" PRE-CHARGE.
- 2. 15ns is required between <DIN m + 3> and the PRECHARGE command, regardless of frequency.
- 3. A9 and A11 = "Don't Care."




Figure 44: WRITE - with Auto Precharge

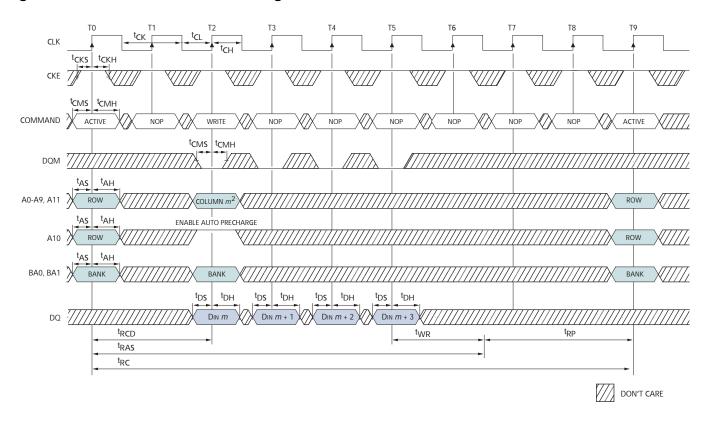

Notes: 1. For this example, the burst length = 4.



Figure 45: Single WRITE - Without Auto Precharge

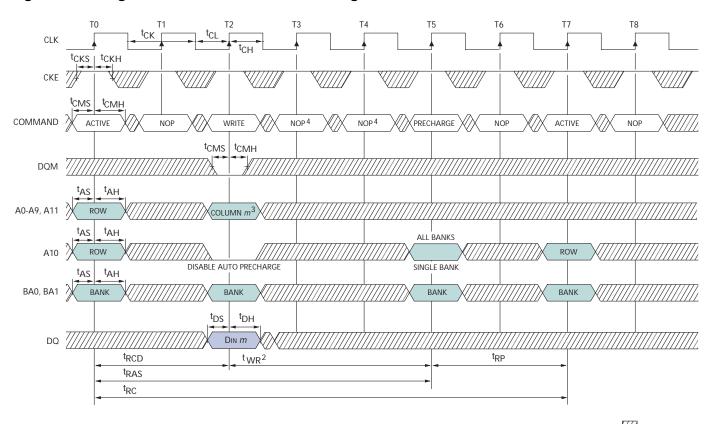


DON'T CARE

Notes:

- 1. For this example, the burst length = 1, and the WRITE burst is followed by a "manual" PRE-CHARGE.
- 2. 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency.
- 3. A9 and A11 = "Don't Care."
- 4. PRECHARGE command not allowed else <sup>t</sup>RAS would be violated.



Figure 46: Single WRITE - with Auto Precharge

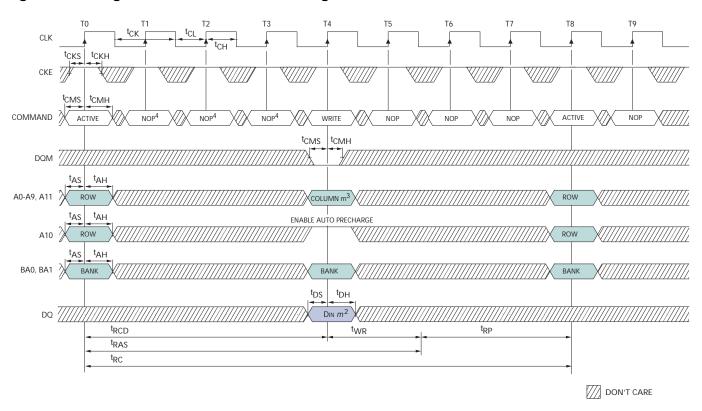


Notes:

- 1. For this example, the burst length = 1, and the WRITE burst is followed by a "manual" PRE-CHARGE.
- 2. 15ns is required between <DIN m> and the PRECHARGE command, regardless of frequency.
- 3. A9 and A11 = "Don't Care."
- 4. WRITE command not allowed else <sup>t</sup>RAS would be violated.




Figure 47: Alternating Bank Write Accesses

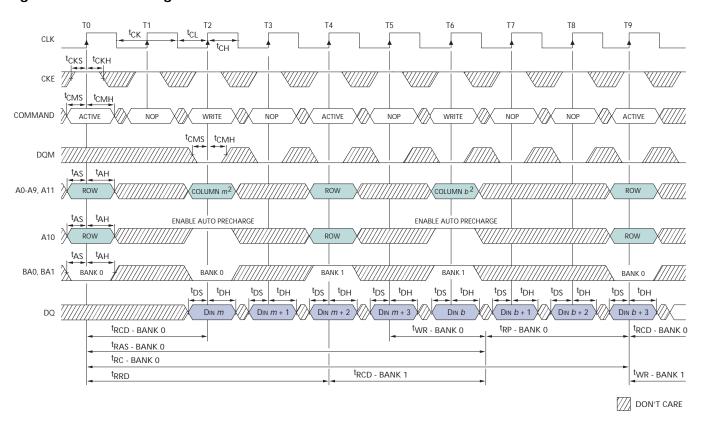

Notes: 1. For this example, the burst length = 4.



Figure 48: WRITE - DQM Operation

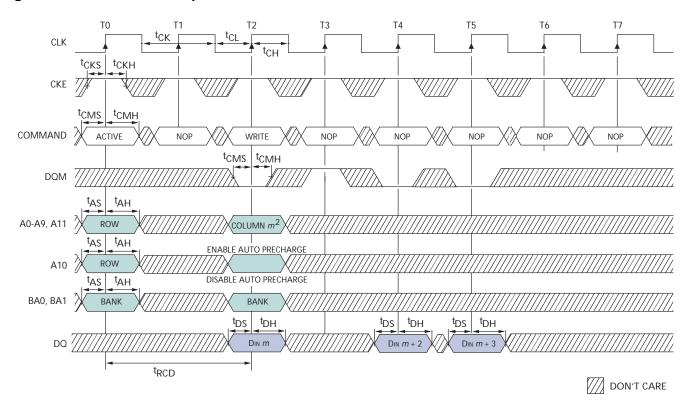


Notes: 1. For this example, the burst length = 4.



## **Package Dimensions**

Figure 49: 54-Ball VFBGA (8mm x 8mm)

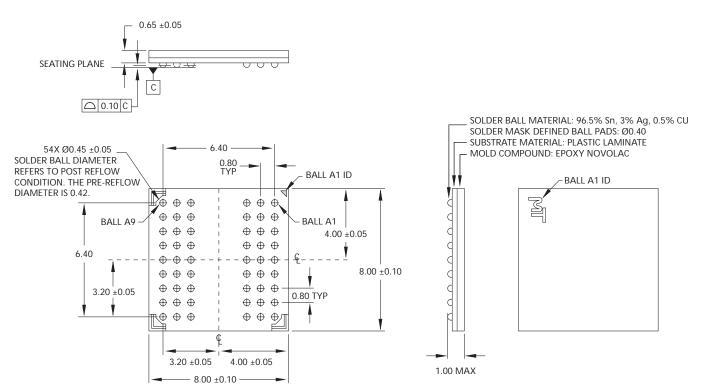

Notes: 1. All dimensions are in millimeters.



8000 S. Federal Way, P.O. Box 6, Boise, ID 83707-0006, Tel: 208-368-3900 prodmktg@micron.com www.micron.com Customer Comment Line: 800-932-4992

Micron, the M logo, and the Micron logo are trademarks of Micron Technology, Inc. All other trademarks are the property of their respective owners.

This data sheet contains minimum and maximum limits specified over the complete power supply and temperature range for production devices. Although considered final, these specifications are subject to change, as further product development and data characterization sometimes occur.