

M36P0R9060E0


512 Mbit (x16, Multiple Bank, Multi-Level, Burst) Flash memory 64 Mbit (Burst) PSRAM, 1.8V supply, Multi-Chip Package

Feature summary

- Multi-Chip Package
 - 1 die of 512 Mbit (32Mb x 16, Multiple Bank, Multi-Level, Burst) Flash memory
 - 1 die of 64 Mbit (4Mb x16) PSRAM
- Supply voltage
 - $-V_{DDF} = V_{CCP} = V_{DDQ} = 1.7 \text{ to } 1.95 \text{V}$
 - V_{PPF} = 9V for fast program
- Electronic signature
 - Manufacturer Code: 20h
 - Device Code: 8819
- ECOPACK® package

Flash memory

- Synchronous / asynchronous read
 - Synchronous Burst Read mode: 108MHz, 66MHz
 - Asynchronous Page Read mode
 - Random Access: 96ns
- Programming time
 - 4.2µs typical Word program time using Buffer Enhanced Factory Program command
- Memory organization
 - Multiple Bank memory array: 64 Mbit banks
 - Four Extended Flash Array (EFA) Blocks of 64 Kbits
- Dual operations
 - program/erase in one Bank while read in others
 - No delay between read and write operations
- Security
 - 64 bit unique device number
 - 2112 bit user programmable OTP Cells
- 100,000 Program/erase cycles per block
- Common Flash Interface (CFI)

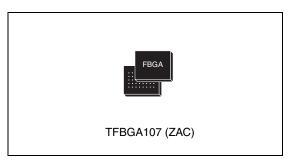

- Block locking
 - All Blocks locked at power-up
 - Any combination of Blocks can be locked with zero latency
 - WP_F for Block Lock-Down
 - Absolute Write Protection with V_{PPF} = V_{SS}

PSRAM

- User-selectable operating modes
 - Asynchronous modes: Random Read, and Write, Page Read
 - Synchronous modes: NOR-Flash, Full Synchronous (Burst Read and Write)
- Asynchronous Random Read
 - Access time: 70ns
- Asynchronous Page Read
 - Page size: 4, 8 or 16 Words
 - Subsequent Read within Page: 20ns
- Burst Read
 - Fixed length (4, 8, 16 or 32 Words) or Continuous
- Low power consumption
 - Active current: < 25mA
 - Standby current: 140µA
 - Deep Power-Down current: < 10μA
- Low-power features
 - Partial Array Self-Refresh (PASR)
 - Deep Power-Down (DPD) Mode
 - Automatic Temperature-compensated Self-Refresh

November 2007 Rev. 3 1/23

Contents

1	Sum	mary description 6
2	Sign	al descriptions 9
	2.1	Address inputs (A0-A24)
	2.2	Data input/output (DQ0-DQ15)
	2.3	Latch Enable (L)
	2.4	Clock (K)
	2.5	Wait (WAIT) 10
	2.6	Flash Chip Enable input (E _F) 10
	2.7	Flash Output Enable inputs (GF)10
	2.8	Flash Write Enable (\overline{W}_F)
	2.9	Flash Write Protect (WP _F) 10
	2.10	Flash Reset (RP _F) 10
	2.11	PSRAM Chip Enable input (\overline{E}_{P})
	2.12	PSRAM Write Enable (WP)11
	2.13	PSRAM Output Enable (GP)11
	2.14	PSRAM Upper Byte Enable (UB _P)
	2.15	PSRAM Lower Byte Enable (\overline{LB}_P)
	2.16	PSRAM Configuration Register Enable (CR _P)
	2.17	Deep Power-Down input (DPD _F)
	2.18	V _{DDF} Supply Voltage12
	2.19	V _{CCP} Supply Voltage12
	2.20	V _{DDQ} Supply Voltage
	2.21	V _{PPF} Program Supply Voltage
	2.22	V _{SS} Ground
3	Func	tional description14
4	Maxi	mum rating
5	DC a	nd AC parameters

M36P0R9060E0

6	Package mechanical19
7	Part numbering
8	Revision history

N numonyx 3/23

List of tables

	Signal names	
Table 2.	Main operating modes	15
Table 3.	Absolute maximum ratings	16
Table 4.	Operating and AC measurement conditions	17
	Capacitance	
Table 7.	Ordering information scheme	21
Table 8.	Document revision history	22



M36P0R9060E0

List of figures

Figure 1.	Logic diagram	- 6
Figure 2.	TFBGA connections (top view through package)	8
	Functional block diagram	
Figure 4.	AC measurement I/O waveform	17
Figure 5.	AC measurement load circuit	18
Figure 6.	TFBGA 107 8x11mm - 9x12 active ball array, 0.8mm pitch, package outline	19



1 Summary description

The M36P0R9060E0 combines two memory devices in a Multi-Chip Package:

- 512-Mbit Multiple Bank Flash memory (the M58PR512J)
- 64-Mbit PSRAM (the M69KB096AM)

The purpose of this document is to describe how the two memory components operate with respect to each other. It must be read in conjunction with the M58PRxxxJ and M69KB096AM datasheets, where all specifications required to operate the Flash memory and PSRAM components are fully detailed. These datasheets are available from the Numonyx website: www.numonyx.com.

Recommended operating conditions do not allow more than one memory to be active at the same time.

The memory is offered in a Stacked TFBGA107 package. It is supplied with all the bits erased (set to '1').

Figure 1. Logic diagram

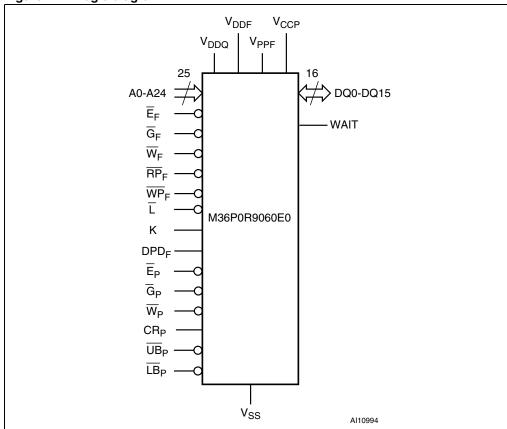


Table 1. Signal names

Table I. Signal II	anies				
A0-A24 ⁽¹⁾	Address Inputs				
DQ0-DQ15	Common Data Input/Output				
V_{DDQ}	Common Flash and PSRAM Power Supply for I/O Buffers				
V _{PPF}	Flash Memory Optional Supply Voltage for Fast Program & Erase				
V_{DDF}	Flash Memory Power Supply				
V _{CCP}	PSRAM Power Supply				
V _{SS}	Ground				
Ī	Latch Enable input				
К	Burst Clock				
WAIT	Wait Output				
NC	Not Connected Internally				
DU	Do Not Use as Internally Connected				
Flash Memory					
Ē _F	Chip Enable input				
G _F	Output Enable Input				
\overline{W}_F	Write Enable input				
RP _F	Reset input				
WP _F	Write Protect input				
DPD _F	Deep Power-Down				
PSRAM					
Ē _P	Chip Enable Input				
\overline{G}_P	Output Enable Input				
\overline{W}_{P}	Write Enable Input				
CR _P	Configuration Register Enable Input				
UB _P	Upper Byte Enable Input				
ŪB _P	Lower Byte Enable Input				

^{1.} A22-A24 are Address Inputs for the Flash memory component only.

1 3 7 8 9 Α DU В A21 A11 v_{SS} V_{DDF}; LB_P NC С V_{SS} A22 D WPF ī A20 Е RP_F UB_P; F DQ2 DQ10 DQ13 WAIT G DQ7 Н DU DU $\overline{\mathsf{G}_\mathsf{F}}$ DQ9 DQ4 DQ6 DQ15 DQ11 J 'VDDQ CRP NC NC NC Κ V_{CCP}, V_{DDQ} L V_{DDQ} v_{SS} v_{SS} V_{SS} V_{SS} DU DU DU } DU DU ; DU DU AI11098B

Figure 2. TFBGA connections (top view through package)

2 Signal descriptions

See *Figure 1., Logic diagram* and *Table 1., Signal names*, for a brief overview of the signals connected to this device.

2.1 Address inputs (A0-A24)

Addresses A0-A21 are common inputs for the Flash memory and PSRAM components. Addresses A22 and A24 are inputs for the Flash memory component only. The Address Inputs select the cells in the Flash memory array to access during Bus Read operations. During Bus Write operations they control the commands sent to the Command Interface of the Flash memory's Program/Erase Controller.

In the PSRAM the Address Inputs select the cells in the memory array to access during Bus read and write operations.

2.2 Data input/output (DQ0-DQ15)

The Data I/O output the data stored at the selected address during a Bus Read operation or input a command or the data to be programmed during a Bus Write operation.

For the PSRAM component, the upper Byte Data Inputs/Outputs (DQ8-DQ15) carry the data to or from the upper part of the selected address when Upper Byte Enable ($\overline{\text{UB}}_{P}$) is driven Low. The lower Byte Data Inputs/Outputs (DQ0-DQ7) carry the data to or from the lower part of the selected address when Lower Byte Enable ($\overline{\text{LB}}_{P}$) is driven Low. When both $\overline{\text{UB}}_{P}$ and $\overline{\text{LB}}_{P}$ are disabled, the Data Inputs/ Outputs are high impedance.

2.3 Latch Enable (\overline{L})

The Latch Enable pin is common to the Flash memory and PSRAM components.

For details of how the Latch Enable signal behaves, please refer to the datasheets of the respective memory components: M69KB096AM for the PSRAM and M58PRxxxJ for the Flash memory.

2.4 Clock (K)

The Clock input pin is common to the Flash memory and PSRAM components.

For details of how the Clock signal behaves, please refer to the datasheets of the respective memory components: M69KB096AM for the PSRAM and M58PRxxxJ for the Flash memory.

N numonyx 9/23

2.5 Wait (WAIT)

WAIT is an output pin common to the Flash memory and PSRAM components. However the WAIT signal does not behave in the same way for the PSRAM and the Flash memory.

For details of how it behaves, please refer to the M69KB096AM datasheet for the PSRAM and to the M58PRxxxJ datasheet for the Flash memory.

2.6 Flash Chip Enable input (\overline{E}_F)

The Chip Enable input activates the control logic, input buffers, decoders and sense amplifiers of the Flash memory. When Chip Enable is Low, V_{IL} , and Reset is High, V_{IH} , the device is in active mode. When Chip Enable is at V_{IH} the Flash memory are deselected, the outputs are high impedance and the power consumption is reduced to the standby level.

It is not allowed to have \overline{E}_F at V_{IL} and \overline{E}_P at V_{IL} at the same time. Only one memory component can be enabled at a time.

2.7 Flash Output Enable inputs (\overline{G}_F)

The Output Enable input controls the data outputs during Flash memory Bus Read operations.

2.8 Flash Write Enable (\overline{W}_F)

The Write Enable input controls the Bus Write operation of the Flash memory Command Interface. The data and address inputs are latched on the rising edge of Chip Enable or Write Enable whichever occurs first.

2.9 Flash Write Protect (\overline{WP}_F)

Write Protect is an input that gives an additional hardware protection for each block. When Write Protect is Low, V_{IL} , Lock-Down is enabled and the protection status of the Locked-Down blocks cannot be changed. When Write Protect is at High, V_{IH} , Lock-Down is disabled and the Locked-Down blocks can be locked or unlocked. (See the Lock Status Table in the M58PRxxxJ datasheet).

2.10 Flash Reset (\overline{RP}_F)

The Reset input provides a hardware reset of the Flash memories. When Reset is at V_{IL} , the memory is in Reset mode: the outputs are high impedance and the current consumption is reduced to the Reset Supply Current I_{DD2} . Refer to the M58PRxxxJ datasheet, for the value of I_{DD2} . After Reset all blocks are in the Locked state and the Configuration Register is reset. When Reset is at V_{IH} , the device is in normal operation. Exiting Reset mode the device enters Asynchronous Read mode, but a negative transition of Chip Enable or Latch Enable is required to ensure valid data outputs.

The Reset pin can be interfaced with 3V logic without any additional circuitry. It can be tied to V_{RPH} (refer to the M58PRxxxJ datasheet).

2.11 PSRAM Chip Enable input (\overline{E}_p)

The Chip Enable input activates the PSRAM when driven Low (asserted). When deasserted (V_{IH}) , the device is disabled, and goes automatically in low-power Standby mode or Deep Power-down mode, according to the RCR (Refresh Configuration Register) setting.

2.12 PSRAM Write Enable (\overline{W}_P)

Write Enable, \overline{W}_{P} controls the Bus Write operation of the PSRAM. When asserted (V_{IL}), the device is in Write mode and Write operations can be performed either to the configuration registers or to the memory array.

2.13 PSRAM Output Enable (\overline{G}_P)

When held Low, V_{IL} , the Output Enable, \overline{G}_{P} enables the Bus Read operations of the PSRAM.

2.14 PSRAM Upper Byte Enable ($\overline{\text{UB}}_{\text{P}}$)

The Upper Byte En-able, $\overline{\text{UB}}_{\text{P}}$ gates the data on the Upper Byte Data Inputs/Outputs (DQ8-DQ15) to or from the upper part of the selected address during a Write or Read operation.

2.15 PSRAM Lower Byte Enable (\overline{LB}_P)

The Lower Byte Enable, \overline{LB}_{P} gates the data on the Lower Byte Data Inputs/Outputs (DQ0-DQ7) to or from the lower part of the selected address during a Write or Read operation.

If both \overline{LB}_P and \overline{UB}_P are disabled (High), the device will disable the data bus from receiving or transmitting data. Although the device will seem to be deselected, it remains in an active mode as long as \overline{E}_P remains Low.

2.16 PSRAM Configuration Register Enable (CR_P)

When this signal is driven High, V_{IH} , bus read or write operations access either the value of the Refresh Configuration Register (RCR) or the Bus Configuration Register (BCR) according to the value of A19.

N numonyx 11/23

2.17 Deep Power-Down input (DPD_F)

The Deep Power-Down input is used to put the device in a Deep Power-Down mode.

When the device is in Standby mode and the Enhanced Configuration Register bit ECR15 is set, asserting the Deep Power-Down input will cause the memory to enter the Deep Power-Down mode.

When the device is in the Deep Power-Down mode, the memory cannot be modified and the data is protected.

The polarity of the DPD pin is determined by ECR14. The Deep Power-Down input is active Low by default.

2.18 V_{DDF} Supply Voltage

V_{DDF} provides the power supply to the internal core of the Flash memory. It is the main power supply for all Flash memory operations (Read, Program and Erase).

2.19 V_{CCP} Supply Voltage

The V_{CCP} Supply Voltage is the core supply voltage.

2.20 V_{DDO} Supply Voltage

 V_{DDQ} provides the power supply for the Flash memory and PSRAM I/O pins. This allows all Outputs to be powered independently of the Flash memory and PSRAM core power supplies, V_{DDE} and V_{CCP}

2.21 V_{PPF} Program Supply Voltage

V_{PPF} is both a control input and a power supply pin for the Flash memory. The two functions are selected by the voltage range applied to the pin.

If V_{PPF} is kept in a low voltage range (0V to V_{DDQ}) V_{PPF} is seen as a control input. In this case a voltage lower than V_{PPLK} gives an absolute protection against Program or Erase, while $V_{PPF} > V_{PP1}$ enables these functions (see the M58PRxxxJ datasheet for the relevant values). V_{PPF} is only sampled at the beginning of a Program or Erase; a change in its value after the operation has started does not have any effect and Program or Erase operations continue.

If V_{PPF} is in the range of V_{PPH} it acts as a power supply pin. In this condition V_{PPF} must be stable until the Program/Erase algorithm is completed.

2.22 V_{SS} Ground

 V_{SS} is the common ground reference for all voltage measurements in the Flashmemory (core and I/O Buffers) and PSRAM chips. It must be connected to the system ground.

Note: Each Flash memory device in a system should have their supply voltage (V_{DDF}) and the program supply voltage V_{PPF} decoupled with a $0.1\mu F$ ceramic capacitor close to the pin (high frequency, inherently low inductance capacitors should be as close as possible to the package). See *Figure 5., AC measurement load circuit*. The PCB track widths should be sufficient to carry the required V_{PPF} program and erase currents.

N numonyx 13/23

3 Functional description

The PSRAM and Flash memory components have separate power supplies but share the same grounds. They are distinguished by two Chip Enable inputs: \overline{E}_F for the Flash memory and \overline{E}_P for the PSRAM.

Recommended operating conditions do not allow more than one device to be active at a time. The most common example is a simultaneous read operations on the Flash memory and the PSRAM which would result in a data bus contention. Therefore it is recommended to put the other device in the high impedance state when reading the selected device.

Figure 3. Functional block diagram

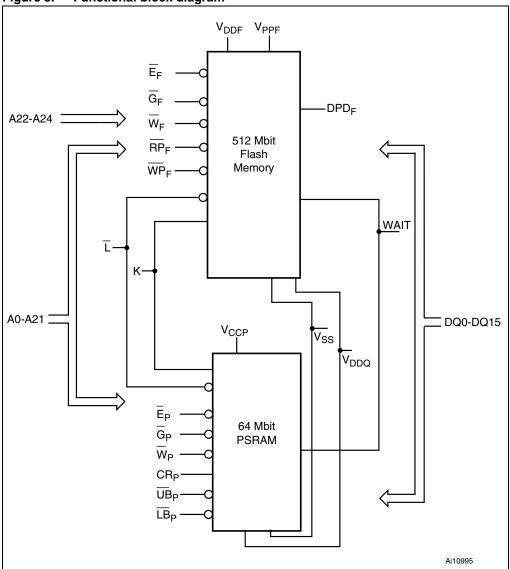


Table 2. Main operating modes⁽¹⁾

Table 2.		96		ing in												
Operation ⁽²⁾ (3)	Ē _F	G _F	W _F	Ē	RP _F	DPD _F ⁽⁴⁾	WAIT (5)	Ē _P	CR _P	<u>G</u> _P	₩ _P	LB _P , UB _P	A 19	A 18	A0-A17 A20- A21	DQ15- DQ0
Flash Bus Read	V _{IL}	V _{IL}	V _{IH}	V _{IL} ⁽⁶⁾	V _{IH}	de- asserted ⁽⁷⁾										Flash Data Out
Flash Bus Write	V _{IL}	V _{IH}	V _{IL}	V _{IL} ⁽⁶⁾	V _{IH}	de- asserted ⁽⁷⁾		PSRAM must be disabled. Dat				Flash Data In				
Flash Address Latch	V _{IL}	х	V _{IH}	V _{IL}	V _{IH}	de- asserted ⁽⁷⁾						Flash Data Out or Hi-Z ⁽⁸⁾				
Flash Output Disable	V _{IL}	V _{IH}	V _{IH}	Х	V _{IH}	de- asserted ⁽⁷⁾	Hi-Z					Hi-Z				
Flash Standby	V _{IH}	х	х	Х	V _{IH}	de- asserted ⁽⁷⁾	Hi-Z	Any PSRAM mode is				Hi-Z				
Flash Reset	х	х	Х	Х	V _{IL}	de- asserted ⁽⁷⁾	Hi-Z	allowed. Hi-Z					Hi-Z			
Flash Deep Power-Down	V _{IH}	х	х	Х	V _{IH}	asserted ⁽⁹⁾	Hi-Z									Hi-Z
PSRAM Read								V_{IL}	V _{IL}	$V_{\rm IL}$	V _{IH}	V_{IL}		Val	id	PSRAM data out
PSRAM Write		Fla	ash n	nemory	/ mus	t be disable	d	V _{IL}	V _{IL}	Х	V_{IL}	V _{IL}		Val	id	PSRAM data in
PSRAM Read Configuration Register					V _{IL}	V _{IH}	V _{IL}	V _{IH}	V_{IL}		RCR) BCR) DDR)	Х	PSRAM data out			
PSRAM Standby							V _{IH}	V _{IL}	х	Х	Х	Х	Х	Х	Hi-Z	
PSRAM Deep Power- Down ⁽¹⁰⁾	,	Any	Flasi	h mem	ory m	ode is allow	ed.	V _{IH}	х	х	Х	х	х	х	х	Hi-Z

- 1. X = Don't care
- 2. In the PSRAM, the Clock signal, K, must remain Low in asynchronous operating mode, and to achieve standby power in Standby and Deep Power-Down modes.
- 3. The PSRAM must have been configured to operate in asynchronous mode by setting BCR15 to '1' (default value).
- 4. The DPD_F signal polarity depends on the value of the ECR14 bit.
- WAIT signal polarity is configured using the Set Configuration Register command. See the M58PRxxxJ datasheet for details.
- 6. \overline{L}_F can be tied to V_{IH} if the valid address has been previously latched
- 7. ECR15 has to be set to '1' for the Flash memory device to enter Deep Power-Down.
- 8. Depends on \overline{G}_F
- 9. If ECR15 is set to '0', the Flash memory device cannot enter the Deep Power-Down mode, even if DPDF is asserted.
- 10. Bit 4 of the Refresh Configuration Register must be set to '0' and $\overline{\mathsf{E}}$ must be maintained High, V_IH , during Deep Power-Down mode

N numonyx 15/23

4 Maximum rating M36P0R9060E0

4 Maximum rating

Stressing the device above the rating listed in the Absolute Maximum Ratings table may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability. Refer also to the Numonyx SURE Program and other relevant quality documents.

Table 3. Absolute maximum ratings

Symbol	Parameter	Va	Unit	
Symbol	Farameter	Min	Max	Oille
T _A	Ambient Operating Temperature	-30	85	°C
T _{BIAS}	Temperature Under Bias	-30	85	°C
T _{STG}	Storage Temperature	- 55	125	°C
V _{IO}	Input or Output Voltage	-0.2	2.45	V
V_{DDF}	Flash Memory Supply Voltage	-1.0	3.00	V
V _{CCP}	PSRAM Supply Voltage	-0.2	2.45	V
V _{DDQ}	Input/Output Supply Voltage	-0.2	2.45	V
V _{PPF}	Flash Memory Program Voltage	-1	11.5	V
I _O	Output Short Circuit Current		100	mA
t _{VPPH}	Time for V _{PPF} at V _{PPH}		100	hours


5 DC and AC parameters

This section summarizes the operating measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement Conditions summarized in *Table 4., Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the operating conditions when relying on the quoted parameters.

Table 4. Operating and AC measurement conditions

Parameter	Flash	Memory	PSF	Unit	
Farameter	Min	Max	Min	Max	Oille
V _{DDF} Supply Voltage	1.7	1.95	_	_	V
V _{CCP} Supply Voltage	_	-	1.7	1.95	V
V _{DDQ} Supply Voltage	1.7	1.95	1.7	1.95	V
V _{PPF} Supply Voltage (Factory environment)	8.5	9.5	_	_	V
V _{PPF} Supply Voltage (Application environment)	-0.4	V _{DDQ} +0.4	-	_	V
Ambient Operating Temperature	-30	85	-30	85	°C
Load Capacitance (C _L)		30	3	pF	
Impedance Output (Z ₀)		50			Ω
Output Circuit Protection Resistance (R)		Ω			
Input Rise and Fall Times		3		2	ns
Input Pulse Voltages	0 to V _{DDQ}		0 to '	V	
Input and Output Timing Ref. Voltages	V	_{DDQ} /2	V _{DE}	_{OQ} /2	V

Figure 4. AC measurement I/O waveform

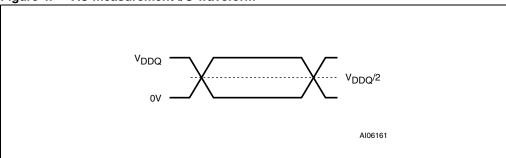

Numonyx 17/23

DEVICE UNDER TEST Z₀ OUT

Figure 5. AC measurement load circuit

1. V_{DD} means $V_{DDF} = V_{CCP}$.

Table 5. Capacitance⁽¹⁾

Symbol	Parameter	Test Condition	Min	Max	Unit
C _{IN}	Input Capacitance	$V_{IN} = 0V$	_	14	pF
C _{OUT}	Output Capacitance	$V_{OUT} = 0V$	_	14	pF

^{1.} Sampled only, not 100% tested.

Please refer to the M58PRxxxJ and M69KB096AM datasheets for further DC and AC characteristics values and illustrations.

Numonyx

6 Package mechanical

In order to meet environmental requirements, Numonyx offers these devices in ECOPACK® packages. These packages have a Lead-free second level interconnect. The category of second Level Interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97.

The maximum ratings related to soldering conditions are also marked on the inner box label.

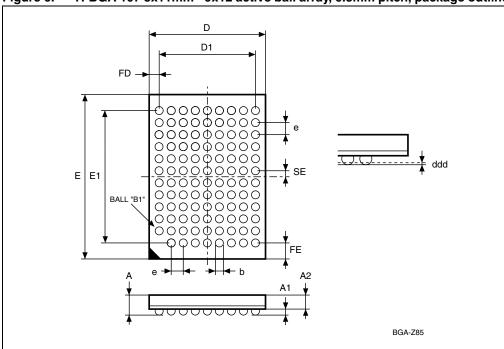


Figure 6. TFBGA 107 8x11mm - 9x12 active ball array, 0.8mm pitch, package outline


1. Drawing is not to scale.

Table 6. Stacked TFBGA107 8x11mm - 9x12 active ball array, 0.8mm pitch, package data

Cumbal		millimeters			inches	
Symbol	Тур	Min	Max	Тур	Min	Max
Α			1.20			0.047
A1		0.20			0.008	
A2	0.85			0.033		
b	0.35	0.30	0.40	0.014	0.012	0.016
D	8.00	7.90	8.10	0.315	0.311	0.319
D1	6.40			0.252		
ddd			0.10			0.004
Е	11.00	10.90	11.10	0.433	0.429	0.437
E1	8.80			0.346		
е	0.80			0.031		
FD	0.80			0.031		
FE	1.10			0.043		
SE	0.40			0.016		

M36P0R9060E0 7 Part numbering

7 Part numbering

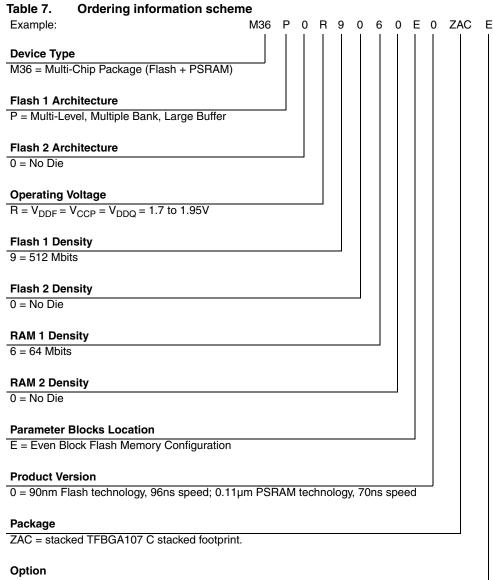

E = ECOPACK Package, Standard packing F = ECOPACK Package, Tape & Reel packing

Note: Devices are shipped from the factory with the memory content bits erased to '1'. For a list of available options (Speed, Package, etc.) or for further information on any aspect of this device, please contact the Numonyx Sales Office nearest to you.

N numonyx 21/23

8 Revision history M36P0R9060E0

8 Revision history

Table 8. Document revision history

Date	Revision	Changes
28-Nov-2005	1	Initial release.
20-Jul-2006	2	Document status promoted to full Datasheet. PSRAM part changed. Flash memory component specifications updated to latest version of M58PRxxxJ datasheet (V _{PP} changed in <i>Table 3</i>). H9 ball changed to DU in <i>Figure 2: TFBGA connections</i> (top view through package).
30-Nov-2007	3	Applied Numonyx branding.

Please Read Carefully:

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at http://www.numonyx.com.

Numonyx StrataFlash is a trademark or registered trademark of Numonyx or its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 11/5/7, Numonyx, B.V., All Rights Reserved.

