


Introduction

The Supertex HV254DB1 is a 32-channel 250V amplifier array with a nominal gain of 50V/V. The HV254DB1 provides a means to easily evaluate the Supertex HV254FG device. A high voltage supply, Vpp, and two low voltage supplies, V+ and V-, are required. These connections can be made via the J1 header provided on the board. There are 32 pads on the left side of the board for the input signals and 32 pads on the right for the outputs. Please follow the power up/down sequence to avoid damaging the device.

Specifications

Vpp, High voltage supply	275V
V+, Low voltage positive supply	4.75V to 5.25V
V-, Low voltage negative supply	-4.75V to -5.25V
Vin, Input signal range	0V to V+
HVout, Output voltage swing	7V to 250V
Av, Closed loop gain	50V/V ±5%
SR, Output slew rate into 100pF load	3.0V/µs

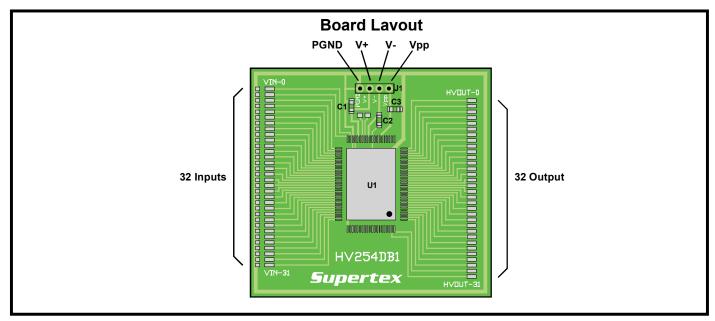

Power Up/Down Sequence

The device can be damaged due to improper power up/down sequence. To prevent such damage, please follow the acceptable power up/down sequences. Two external diodes, D1 and D2, are added in the demo board to prevent damage during power Up/Down. The first diode is a high voltage diode across Vpp and V+. Any low current high voltage diode such as a 1N4004 will be adequate. The second diode is a Schottky diode across V- and PGND. Any low current Schottky diode such as a 1N5817 will be adequate.

Acceptable Power Up Sequences

1) Vpp	2) V-	3) V+	4) Inputs & Anode
or 1) V-	2) V+	3) Vpp	4) Inputs & Anode

Acceptable Power Down Sequences

1) Inputs & Anode	2) Vpp	3) V+	4) V-
or 1) Inputs & Anode	2) V+	3) V-	4) Vpp

Inputs and Outputs

The output of the HV254FG will swing from 7V to 250V. It cannot swing to ground. With the internal gain set at 50V/V, a minimum input signal of 140mV will still maintain linearity. Input voltages below 140mV can be applied without damage to the device. The amplifier, however, will be saturated.


The maximum input signal can be as high as the positive supply voltage, V+. For a V+ of 5.0V and an input voltage of 5V, the output will be 250V. For additional information, please refer to the HV254 data sheet.

Temperature Diode

The HV254FG has an integrated silicon diode to help monitor the die temperature if desired. Pin 43 is the anode and pin 44 is the cathode. Pads are available on the board for these connections.

1

High Voltage Amplifier Array HV254DB1

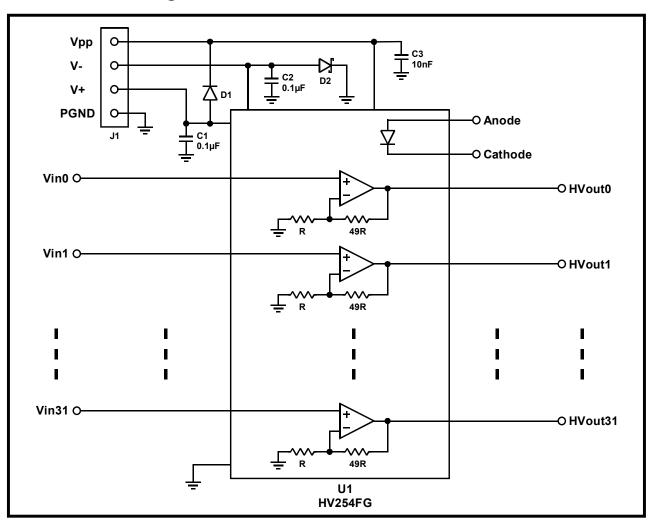

HV254DB1 Circuit Diagram

Bill of Material

	Description	Value	Package	Manuf.	Part Number
D1	Rectifier diode	400V, 1.0A	DO-41	Any	1N4004
D2	Schottky diode	20V, 1.0A	DO-41	Any	1N5817
C1	X7R chip capacitor	25V, 0.1µF±10%	0805	Tecate	CMC-025104KX0805T
C2	X7R chip capacitor	25V, 0.1µF±10%	0805	Tecate	CMC-025104KX0805T
C3	X7R chip capacitor	500V, 0.01µF±10%	0805	Tecate	CMC-500103KX0805T
U1	Amplifier array	250V	100 MQFP	Supertex	HV254FG
J1	Right Angle 4-pin	0.100", tin plating		Molex	22-05-3041
	header				

Supertex Inc. does not recommend the use of its products in life support applications and will not knowingly sell its products for use in such applications unless it receives an adequate "products liability indemnification insurance agreement." Supertex does not assume responsibility for use of devices described and limits its liability to the replacement of devices determined to be defective due to workmanship. No responsibility is assumed for possible omissions or inaccuracies. Circuitry and specifications, are subject to change without notice. For the latest product specifications, refer to the Supertex website: http://www.supertex.com. For complete liability information on all Supertex products, refer to the most current databook or to the Legal/Disclaimer page on the Supertex website.

©2004 Supertex Inc. All rights reserved. Unauthorized use or reproduction prohibited.

A071404

Supertex inc. 1235 Bordeaux Drive, Sunnyvale, CA 94809 TEL: (408) 222-8888 / FAX: (408) 222-4895 www.supertex.com