


M29DW128G

128-Mbit (8 Mbit x16, multiple bank, page, dual boot) 3 V supply flash memory

Features

- Supply voltage
 - V_{CC} = 2.7 to 3.6 V for program, erase and read
 - V_{CCO} = 1.65 to 3.6 V for I/O buffers
 - V_{PPH} = 9 V for fast program (optional)
- Asynchronous random/page read
 - Page width: 8 words
 - Page access: 25 ns
 - Random access: 60 or 70, 80 ns
- Enhanced Buffered Program commands
 - 256 words
- Programming time
 - 15 µs per word (typical)
 - 32-word write buffer
 - Chip program time: 5 s with V_{PPH} and 8 s without V_{PPH}
- Erase verify
- Memory blocks
 - Quadruple bank memory array:
 16 Mbit+48 Mbit+48 Mbit+16 Mbit
 - Parameter blocks (at top and bottom)
- Dual operation
 - while program or erase in one bank, read in any of the other banks
- Program/erase suspend and resume modes
 - Read from any block during program suspend
 - Read and program another block during erase suspend
- Unlock Bypass/Block Erase/Chip Erase/Write to Buffer/ Enhanced Buffered Program commands
 - Faster production/batch programming
 - Faster block and chip erase
- Common flash interface
 - 64-bit security code

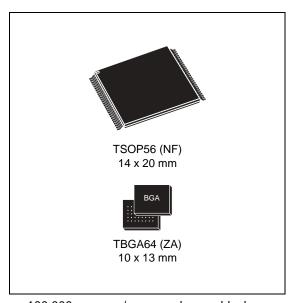

- 100,000 program/erase cycles per block
- Low power consumption
 - Standby and automatic standby
- Hardware block protection
 - V_{PP}/WP pin for fast program and write protect of the four outermost parameter blocks
- Security features
 - Volatile protection
 - Non-volatile protection
 - Password protection
 - Additional block protection
- Extended memory block
 - Extra block (128-word factory locked and 128-word customer lockable) used as security block or to store additional information
- Electronic signature
 - Manufacturer code: 0020h
 - Device code: 227Eh+2220h+2202h
- ECOPACK® packages available

June 2008 Rev 3 1/85

Contents M29DW128G

Contents

| 1 | Desc | cription |
|------|-------|---|
| 2 | Sign | al descriptions13 |
| | 2.1 | Address inputs (A0-A22) |
| | 2.2 | Data inputs/outputs (DQ0-DQ15) |
| | 2.3 | Chip Enable (E) |
| | 2.4 | Output Enable (G) |
| | 2.5 | Write Enable (W) |
| | 2.6 | V_{PP} /write protect (V_{PP} / \overline{WP}) |
| | 2.7 | Reset (RP) |
| | 2.8 | Ready/busy output (RB) |
| | 2.9 | V _{CC} supply voltage |
| | 2.10 | V _{CCQ input/output} supply voltage |
| | 2.11 | V _{ss} ground |
| 3 | Bus | operations16 |
| | 3.1 | Bus read |
| | 3.2 | Bus write |
| | 3.3 | Output disable |
| | 3.4 | Standby |
| | 3.5 | Reset 17 |
| | 3.6 | Automatic standby |
| 4 | Auto | select mode |
| | | 4.0.1 Read electronic signature |
| | | 4.0.2 Verify extended memory block protection indicator |
| | | 4.0.3 Verify block protection status |
| 5 | Hard | ware protection |
| | 5.1 | Write protect |
| 6 | Softv | ware protection |
| | 6.1 | Volatile protection mode |
| 2/85 | | N numony |

M29DW128G Contents

| | 0.0 | | |
|-----------------|------|------------|---|
| | 6.2 | | atile protection mode |
| | | 6.2.1 | Non-volatile protection bits |
| | | 6.2.2 | Non-volatile protection bit lock bit |
| | 6.3 | Passwo | rd protection mode |
| 7 | Comn | nand in | terface |
| | 7.1 | Standar | d commands 24 |
| | | 7.1.1 | Read/Reset command |
| | | 7.1.2 | Auto Select command |
| | | 7.1.3 | Read CFI Query command |
| | | 7.1.4 | Chip Erase command |
| | | 7.1.5 | Block Erase command |
| | | 7.1.6 | Erase Suspend command |
| | | 7.1.7 | Erase Resume command |
| | | 7.1.8 | Program Suspend command |
| | | 7.1.9 | Program Resume command |
| | | 7.1.10 | Program command |
| | 7.2 | Fast pro | ogram commands 30 |
| | | 7.2.1 | Write to Buffer Program command |
| | | 7.2.2 | Enhanced Buffered Program command |
| | | 7.2.3 | Buffered Program Abort and Reset command |
| | | 7.2.4 | Write to Buffer Program Confirm command |
| | | 7.2.5 | Enhanced Buffered Program Confirm command |
| | | 7.2.6 | Unlock Bypass command |
| | | 7.2.7 | Unlock Bypass Program command |
| | | 7.2.8 | Unlock Bypass Block Erase command |
| | | 7.2.9 | Unlock Bypass Chip Erase command |
| | | 7.2.10 | Unlock Bypass Write to Buffer Program command |
| | | 7.2.11 | Unlock Bypass Enhanced Buffered Program command |
| | | 7.2.12 | Unlock Bypass CFI command |
| | | 7.2.13 | Unlock Bypass Reset command |
| | 7.3 | Protection | on commands |
| | | 7.3.1 | Enter Extended Memory Block command |
| | | 7.3.2 | Exit Extended Memory Block command |
| | | 7.3.3 | Lock register command set |
| | | 7.3.4 | Password protection mode command set |
| | | 7.3.5 | Non-volatile protection mode command set |
| № numony | K | | 3/85 |
| · · | | | 5,00 |

Contents M29DW128G

| | | 7.3.6 | NVPB lock bit command set |
|----------|------|------------|--|
| | | 7.3.7 | Volatile protection mode command set |
| | | 7.3.8 | Exit protection command set command |
| 8 | Reg | isters | 43 |
| | 8.1 | Lock reg | gister |
| | | 8.1.1 | Volatile lock boot bit (DQ4)43 |
| | | 8.1.2 | Password protection mode lock bit (DQ2) |
| | | 8.1.3 | Non-volatile protection mode lock bit (DQ1) |
| | | 8.1.4 | Extended block protection bit (DQ0) |
| | | 8.1.5 | DQ15 to DQ5 and DQ3 reserved |
| | 8.2 | Status re | egister 46 |
| | | 8.2.1 | Data polling bit (DQ7) |
| | | 8.2.2 | Toggle bit (DQ6) |
| | | 8.2.3 | Error bit (DQ5) |
| | | 8.2.4 | Erase timer bit (DQ3) |
| | | 8.2.5 | Alternative toggle bit (DQ2) |
| | 8.3 | Buffered | I program abort bit (DQ1) |
| 9 | Dua | l operatio | ons and multiple bank architecture51 |
| 40 | N4 | | in 50 |
| 10 | wax | imum rat | ings |
| 11 | DC a | and AC pa | arameters 54 |
| 12 | Pac | kage mec | hanical 66 |
| 13 | Ord | ering info | rmation |
| Appendix | Α | Block add | dresses and read/modify protection groups 69 |
| Appendix | В | Common | flash interface (CFI)73 |
| | _ | | |
| Appendix | | | memory block |
| | C.1 | • | locked section of extended memory block |
| | C.2 | Custome | er lockable section of extended memory block |
| Appendix | D | Flowchar | ts 80 |
| 4/85 | | | N numonyx |

| M29DW128G | | Contents |
|---------------|--------|----------|
| 14 Revision h | istory | 84 |

Numonyx 5/85

List of tables M29DW128G

List of tables

| Table 1. | Signal names | |
|-----------|--|------|
| Table 2. | Bank architecture | 9 |
| Table 3. | V _{PP} /WP functions | |
| Table 4. | Bus operations | |
| Table 5. | Read electronic signature | |
| Table 6. | Block protection | . 19 |
| Table 7. | Hardware protection | . 20 |
| Table 8. | Standard commands | |
| Table 9. | Fast program commands | |
| Table 10. | Enhanced buffered program commands | |
| Table 11. | Block protection commands | |
| Table 12. | Program, erase times and program, erase endurance cycles | |
| Table 13. | Lock register bits | |
| Table 14. | Block protection status | |
| Table 15. | Status register bits | |
| Table 16. | Dual operations allowed in other banks | |
| Table 17. | Dual operations allowed in same bank | |
| Table 18. | Absolute maximum ratings | |
| Table 19. | Operating and AC measurement conditions | |
| Table 20. | Power-up waiting timings | |
| Table 21. | Device capacitance | . 56 |
| Table 22. | DC characteristics | |
| Table 23. | Read AC characteristics | |
| Table 24. | Write AC characteristics, write enable controlled | . 61 |
| Table 25. | Write AC characteristics, chip enable controlled | |
| Table 26. | Reset AC characteristics | |
| Table 27. | Accelerated program and data polling/data toggle AC characteristics | |
| Table 28. | TSOP56 – 56 lead plastic thin small outline, 14 x 20 mm, package mechanical data | |
| Table 29. | TBGA64 10 x 13 mm - 8 x 8 active ball array, 1 mm pitch, package mechanical data | |
| Table 30. | Ordering information scheme | |
| Table 31. | Block addresses | |
| Table 32. | Query structure overview | . 73 |
| Table 33. | CFI query identification string | . 73 |
| Table 34. | CFI query system interface information | . 74 |
| Table 35. | Device geometry definition | |
| Table 36. | Primary algorithm-specific extended query table | . 76 |
| Table 37. | Security code area | |
| Table 38. | Extended memory block address and data | |
| Table 39. | Document revision history | . 84 |

M29DW128G List of figures

List of figures

| Figure 1. | Logic diagram | 9 |
|------------|--|----|
| Figure 2. | TSOP connections | |
| Figure 3. | TBGA connections (top view through package) | 11 |
| Figure 4. | Block addresses | 12 |
| Figure 5. | Software protection scheme | 23 |
| Figure 6. | NVPB program/erase algorithm | 39 |
| Figure 7. | Lock register program flowchart | 45 |
| Figure 8. | Data polling flowchart | 49 |
| Figure 9. | Data toggle flowchart | 50 |
| Figure 10. | AC measurement load circuit | 54 |
| Figure 11. | AC measurement I/O waveform | 54 |
| Figure 12. | Power-up waiting timings | 55 |
| Figure 13. | Random read AC waveforms | |
| Figure 14. | Page read AC waveforms | 58 |
| Figure 15. | Write enable controlled program waveforms | 60 |
| Figure 16. | Chip enable controlled program waveforms | 62 |
| Figure 17. | Reset AC waveforms (no program/erase ongoing) | 63 |
| Figure 18. | Reset during program/erase operation AC waveforms | 63 |
| Figure 19. | Accelerated program timing waveforms | 64 |
| Figure 20. | Data polling AC waveforms | 64 |
| Figure 21. | TSOP56 – 56 lead plastic thin small outline, 14 x 20 mm, package outline | 66 |
| Figure 22. | TBGA64 10 x 13 mm - 8 x 8 active ball array, 1 mm pitch, package outline | 67 |
| Figure 23. | Write to buffer program flowchart and pseudocode | 80 |
| Figure 24. | Enhanced buffered program flowchart and pseudocode | 82 |

Numonyx 7/85

Description M29DW128G

1 Description

The M29DW128G is a 128-Mbit (8 Mbit x16) non-volatile memory that can be read, erased and reprogrammed. These operations can be performed using a single low voltage (2.7 to 3.6 V) supply. At power-up the memory defaults to its read mode.

The M29DW128G features an asymmetrical block architecture, with 8 parameter and 62 main blocks, divided into four banks, A, B, C and D, providing multiple bank operations. While programming or erasing in one bank, read operations are possible in any other bank. The bank architecture is summarized in *Table 2*. Four of the parameter blocks are at the top of the memory address space, and four are at the bottom.

Program and erase commands are written to the command interface of the memory. An onchip program/erase controller simplifies the process of programming or erasing the memory by taking care of all of the special operations that are required to update the memory contents. The end of a program or erase operation can be detected and any error conditions identified. The command set required to control the memory is consistent with JEDEC standards.

The Chip Enable, Output Enable and Write Enable signals control the bus operations of the memory. They allow simple connection to most microprocessors, often without additional logic.

The device supports asynchronous random read and page read from all blocks of the memory array. The device also features a write to buffer program capability that improves the programming throughput by programming in one shot a buffer of 32 words. The enhanced buffered program feature is also available to speed up the programming throughput, allowing to program 256 words in one shot. The V_{PP}/\overline{WP} signal can be used to enable faster programming of the device.

The M29DW128G has one extra 256 words block (extended block, 128 words factory locked and 128 words customer lockable) that can be accessed using a dedicated command. The extended block can be protected and so is useful for storing security information. However the protection is irreversible, once protected the protection cannot be undone.

Each block can be erased independently, so it is possible to preserve valid data while old data is erased.

The device features different levels of hardware and software block protection to avoid unwanted program or erase (modify):

- Hardware protection
 - The V_{PP}/WP provides a hardware protection of the four outermost parameter blocks (two at the top and two at the bottom of the address space)
- Software protection
 - Volatile protection
 - Non-volatile protection
 - Password protection
- Additional protection features are available upon customer request.

The memory is offered in TSOP56 (14 x 20 mm) and TBGA64 (10 x 13 mm, 1 mm pitch) packages. The memory is delivered with all the bits erased (set to '1').

M29DW128G Description

Table 1. Signal names

| Signal name | Function | Direction |
|---------------------|------------------------------------|--------------|
| A0-A22 | Address inputs | Inputs |
| DQ0-DQ15 | Data inputs/outputs | I/O |
| Ē | Chip Enable | Input |
| G | Output Enable | Input |
| W | Write Enable | Input |
| RP | Reset/Block Temporary Unprotect | Input |
| R₿ | Ready/Busy output | Output |
| V _{CC} | Supply voltage | Supply |
| V _{CCQ} | Input/output buffer supply voltage | Supply |
| V _{PP} /WP | V _{PP} /Write Protect | Supply/input |
| V _{SS} | Ground | - |
| NC | Not connected internally | _ |

Figure 1. Logic diagram


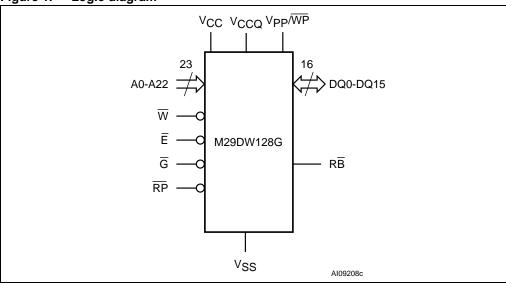


Table 2. Bank architecture


| Bank | Bank size | Parame | eter blocks | Main blocks | | | | | |
|------|------------|--------------|-------------|--------------|------------|--|--|--|--|
| | Dalik Size | N. of blocks | Block size | N. of blocks | Block size | | | | |
| А | 16 Mbit | 4 | 32 Kwords | 7 | 128 Kwords | | | | |
| В | 48 Mbit | _ | _ | 24 | 128 Kwords | | | | |
| С | 48 Mbit | _ | _ | 24 | 128 Kwords | | | | |
| D | 16 Mbit | 4 | 32 Kwords | 7 | 128 Kwords | | | | |

Description M29DW128G

Figure 2. TSOP connections

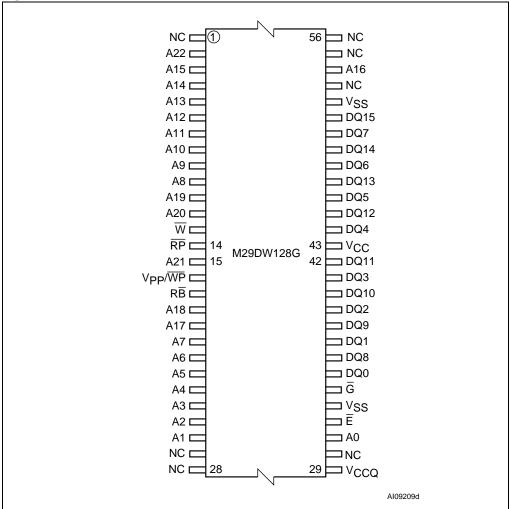


M29DW128G Description

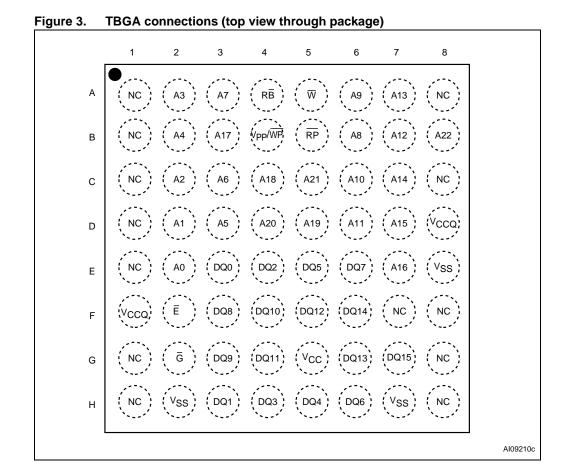

N numonyx 11/85

Description M29DW128G

Figure 4. Block addresses

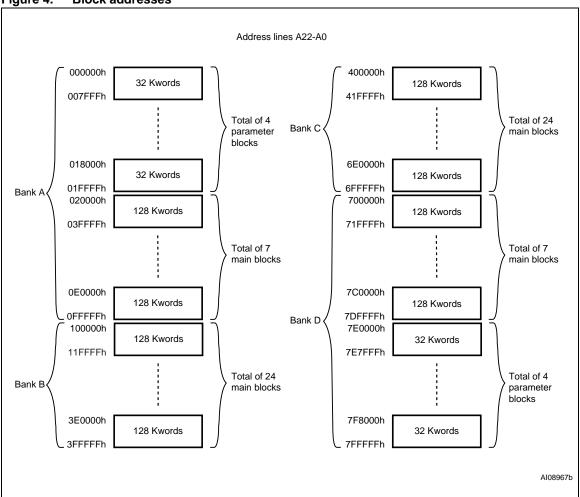

M29DW128G Signal descriptions

2 Signal descriptions

See Figure 1: Logic diagram and Table 1: Signal names for a brief overview of the signals connected to this device.

2.1 Address inputs (A0-A22)

The address inputs select the cells in the memory array to access during bus read operations. During bus write operations they control the commands sent to the command interface of the program/erase controller.

2.2 Data inputs/outputs (DQ0-DQ15)

The data I/O outputs the data stored at the selected address during a bus read operation. During bus write operations they represent the commands sent to the command interface of the internal state machine. During bus write operations the command register does not use DQ8-DQ15 bits that should be also ignored when reading the status register.

2.3 Chip Enable (\overline{E})

The Chip Enable pin, \overline{E} , activates the memory, allowing bus read and bus write operations to be performed. When chip enable is High, V_{IH} , all other pins are ignored.

2.4 Output Enable (\overline{G})

The Output Enable pin, \overline{G} , controls the bus read operation of the memory.

2.5 Write Enable (\overline{W})

The Write Enable pin, \overline{W} , controls the bus write operation of the memory's command interface.

2.6 $V_{PP}/write protect (V_{PP}/\overline{WP})$

The V_{PP} /write protect pin provides two functions. The V_{PPH} function allows the memory to use an external high voltage power supply to reduce the time required for program operations. This is achieved by bypassing the unlock cycles.

The write protect function provides a hardware method of protecting the four outermost blocks, that is the two 32-kword blocks at the top and the two 32-kword blocks at the bottom of the address space (see *Section 1: Description*). When V_{PP} /write protect is Low, V_{IL} , the 4 outermost blocks are protected. Program and erase operations on this block are ignored while V_{PP} /write protect is Low.

N numonyx 13/85

Signal descriptions M29DW128G

When V_{PP} /write protect is High, V_{IH} , the memory reverts to the previous protection status of the four outermost blocks. Program and erase operations can now modify the data in these blocks unless the blocks are protected using block protection.

When V_{PP} /write protect is raised to V_{PPH} the memory automatically enters the unlock bypass mode (see *Section 7.2.6*).

When V_{PP}/write protect is raised to V_{PPH}, the execution time of the command is lower (see *Table 12: Program, erase times and program, erase endurance cycles*).

When V_{PP} /write protect returns to V_{IH} or V_{IL} normal operation resumes. During unlock bypass program operations the memory draws I_{PP} from the pin to supply the programming circuits. See the description of the Unlock Bypass command in the command interface section. The transitions from V_{IH} to V_{PPH} and from V_{PPH} to V_{IH} must be slower than t_{VHVPP} (see *Figure 19: Accelerated program timing waveforms*).

Never raise V_{PP} /write protect to V_{PPH} from any mode except read mode, otherwise the memory may be left in an indeterminate state. A 0.1 μ F capacitor should be connected between the V_{PP} /write protect pin and the V_{SS} ground pin to decouple the current surges from the power supply. The PCB track widths must be sufficient to carry the currents required during unlock bypass program (see I_{PP1} , I_{PP2} , I_{PP3} , I_{PP4} in *Table 22: DC characteristics*).

The V_{PP}/write protect pin may be left floating or unconnected because it features an internal pull-up.

Refer to Table 3 for a summary of V_{PP}/WP functions.

Table 3. V_{PP}/WP functions

| V _{PP} /WP | Function |
|---------------------|--|
| V _{IL} | Four outermost blocks ⁽¹⁾ protected. |
| V _{IH} | Four outermost blocks ⁽¹⁾ unprotected unless a software protection is activated (see <i>Section 5: Hardware protection</i>). |
| V _{PPH} | Unlock bypass mode. It supplies the current needed to speed up programming. |

^{1.} Two at the top and two at the bottom of the address space.

2.7 Reset (RP)

The reset pin can be used to apply a hardware reset to the memory.

A hardware reset is achieved by holding reset Low, V_{IL} , for at least t_{PLPX} . After reset goes High, V_{IH} , the memory will be ready for bus read and bus write operations after t_{PHEL} or t_{RHEL} , whichever occurs last. See Section 2.8: Ready/busy output (RB), Table 26: Reset AC characteristics, Figure 17 and Figure 18 for more details.

2.8 Ready/busy output (RB)

The ready/busy pin is an open-drain output that can be used to identify when the device is performing a program or erase operation. During program or erase operations ready/busy is Low, V_{OL} (see *Table 15: Status register bits*). Ready/busy is high-impedance during read mode, auto select mode and erase suspend mode.

14/85 ► ↑ numonyx

M29DW128G Signal descriptions

After a hardware reset, bus read and bus write operations cannot begin until ready/busy becomes high-impedance. See *Table 26: Reset AC characteristics*, *Figure 17* and *Figure 18*.

The use of an open-drain output allows the ready/busy pins from several memories to be connected to a single pull-up resistor. A Low will then indicate that one, or more, of the memories is busy.

2.9 V_{CC} supply voltage

V_{CC} provides the power supply for all operations (read, program and erase).

The command interface is disabled when the V_{CC} supply voltage is less than the lockout voltage, V_{LKO} . This prevents bus write operations from accidentally damaging the data during power-up, power-down and power surges. If the program/erase controller is programming or erasing during this time then the operation aborts and the memory contents being altered will be invalid.

A 0.1 μ F capacitor should be connected between the V_{CC} supply voltage pin and the V_{SS} ground pin to decouple the current surges from the power supply. The PCB track widths must be sufficient to carry the currents required during program and erase operations (see I_{CC1}, I_{CC2}, I_{CC3} in *Table 22: DC characteristics*).

2.10 V_{CCQ} input/output supply voltage

 V_{CCQ} provides the power supply to the I/O pins and enables all outputs to be powered independently from V_{CC} .

2.11 V_{ss} ground

 V_{SS} is the reference for all voltage measurements. The device features two V_{SS} pins both of which must be connected to the system ground.

№ numonyx
15/85

Bus operations M29DW128G

3 **Bus operations**

There are five standard bus operations that control the device. These are bus read (random and page modes), bus write, output disable, standby and automatic standby.

Dual operations are possible in the M29DW128G, thanks to its multiple bank architecture. While programming or erasing in one bank, read operations are possible in any of the other banks. Write operations are only allowed in one bank at a time.

See Table 4: Bus operations for a summary. Typical glitches of less than 5 ns on chip enable, write enable, and reset pins are ignored by the memory and do not affect bus operations.

3.1 **Bus read**

Bus read operations read from the memory cells, or specific registers in the command interface. To speed up the read operation the memory array can be read in page mode where data is internally read and stored in a page buffer. The page has a size of 8 words and the specific word inside the page is addressed by the address inputs A0-A2.

A valid bus read operation involves setting the desired address on the address inputs, applying a Low signal, V_{II}, to Chip Enable and Output Enable and keeping Write Enable High, VIH. The data inputs/outputs will output the value, see Figure 13: Random read AC waveforms, Figure 14: Page read AC waveforms, and Table 23: Read AC characteristics, for details of when the output becomes valid.

3.2 **Bus write**

Bus write operations write to the command interface. A valid bus write operation begins by setting the desired address on the address inputs. The address inputs are latched by the command interface on the falling edge of Chip Enable or Write Enable, whichever occurs last. The data inputs/outputs are latched by the command interface on the rising edge of Chip Enable or Write Enable, whichever occurs first. Output Enable must remain High, VIH, during the whole bus write operation. See Figure 15: Write enable controlled program waveforms and Table 24 and Table 25, Write AC characteristics, for details of the timing requirements.

3.3 Output disable

The data inputs/outputs are in the high impedance state when output enable is High, VIH.

Standby 3.4

Driving Chip Enable High, $V_{\mbox{\scriptsize IH}}$, in read mode, causes the memory to enter standby mode and the data inputs/outputs pins are placed in the high-impedance state. To reduce the supply current to the standby supply current, I_{CC2}, Chip Enable should be held within V_{CC} ± 0.3 V. For the standby current level see *Table 22: DC characteristics*.

16/85 N numonyx M29DW128G Bus operations

During program or erase operations the memory will continue to use the program/erase supply current, I_{CC3} , for program or erase operations until the operation completes.

3.5 Reset

During reset mode the memory is deselected and the outputs are high impedance. The memory is in reset mode when \overline{RP} is at VIL. The power consumption is reduced to the standby level, independently from the Chip Enable, Output Enable or Write Enable inputs.

3.6 Automatic standby

Automatic standby allows the memory to achieve low power consumption during read mode.

After a read operation, if CMOS levels ($V_{CC} \pm 0.3 \text{ V}$) are used to drive the bus and the bus is inactive for $t_{AVQV} + 30$ ns or more, the memory enters automatic standby where the internal supply current is reduced to the standby supply current, I_{CC2} (see *Table 22: DC characteristics*). The data inputs/outputs will still output data if a bus read operation is in progress.

The power supplier of data bus, V_{CCQ} , can have a null consumption (depending on load circuits connected with data bus) when the memory enters automatic standby.

Table 4. Bus operations

| Operation ⁽¹⁾ | Ē | G | w | RP | V AND | Address inputs | Data inputs/outputs | |
|--------------------------|-----------------|-----------------|-----------------|-----------------|---------------------|-----------------|---------------------|--|
| Operation 7 | _ | G | VV | KP | V _{PP} /WP | A22-A0 | DQ15-DQ0 | |
| Bus Read | V_{IL} | V_{IL} | V_{IH} | V _{IH} | X | Cell address | Data output | |
| Bus Write | V _{IL} | V _{IH} | V _{IL} | V _{IH} | X ⁽²⁾ | Command address | Data input | |
| Standby | V_{IH} | Х | Χ | V _{IH} | Х | X | Hi-Z | |
| Output Disable | Х | V_{IH} | V _{IH} | V _{IH} | Х | Address | Hi-Z | |
| Reset | Х | Х | Х | V _{IL} | Х | Х | Hi-Z | |

^{1.} $X = V_{IL}$ or V_{IH} .

^{2.} To write the four outermost parameter blocks (first two and last two), V_{PP}/\overline{WP} must be equal to V_{IH} .

Auto select mode M29DW128G

4 Auto select mode

The auto select mode allows the system or the programming equipment to read the electronic signature, verify the protection status of the extended memory block, and apply/remove block protection. For example, this mode can be used by a programming equipment to automatically match a device and the application code to be programmed.

The auto select mode is entered by issuing the Auto Select command (see Section 7.1.2: Auto Select command).

At power-up, the device is in read mode, and can then be put in auto select mode by issuing the Auto Select command.

The device cannot enter auto select mode when a program or erase operation is ongoing $(R\overline{B} \text{ Low})$. However, auto select mode can be entered if the erase operation has been suspended by issuing an Erase Suspend command (see Section 7.1.6).

The auto select mode is exited by performing a reset. The device is returned to read mode, except if the auto select mode was entered after an Erase Suspend or a Program Suspend command. In this case, it returns to the erase or program suspend mode.

4.0.1 Read electronic signature

The memory has two codes, the manufacturer code and the device code used to identify the memory. These codes can be accessed by performing read operations with control signals and addresses set as shown in *Table 6: Block protection* and *Table 5: Read electronic signature*.

4.0.2 Verify extended memory block protection indicator

The extended memory block is either factory locked or customer lockable.

The protection status of the extended memory block (factory locked or customer lockable) can be accessed by reading the extended memory block protection indicator (see *Table 6: Block protection*).

The protection status of the extended memory block is then output on bit DQ7 of the data input/outputs (see *Table 4: Bus operations*).

4.0.3 Verify block protection status

The protection status of a block can be directly accessed by performing a read operation with control signals and addresses set as shown in *Table 6: Block protection*.

If the block is protected, then 01h is output on data input/outputs DQ0-DQ7, otherwise 00h is output.

M29DW128G Auto select mode

Table 5. Read electronic signature

| Read | Ē | G | w | | | Data inputs/outputs | | | | | | | | |
|--------------------------|-----------------|-----------------|-------------------|-------------|-------------|------------------------|----|-----------------|-----------|-----------------|-----------------|-----------------|-----------------|----------|
| cycle ⁽¹⁾ | | G | | A22- A12 | A11- A10 | А9 | A8 | A7-A6 | A5- A4 | А3 | A2 | A1 | Α0 | DQ15-DQ0 |
| Manufacturer code | | | | | | | | | Х | V _{IL} | V_{IL} | V_{IL} | V_{IL} | 0020h |
| Device code (cycle 1) | ., | | ., | DICA | · · | | х | V _{IL} | | V _{IL} | V _{IL} | V _{IL} | V _{IH} | 227Eh |
| Device code (cycle 2) | V _{IL} | V _{IL} | - V _{IH} | BKA | X | X | | | V_{IL} | V _{IH} | V _{IH} | V _{IH} | V _{IL} | 2220h |
| Device code (cycle 3) | | | | | | | | | | V _{IH} | V _{IH} | V _{IH} | V _{IH} | 2202h |

^{1.} $X = V_{IL}$ or V_{IH} . BKA bank address.

Table 6. Block protection

| Operation | | | | | V _{PP} / | Address inputs | | | | | | | | | Data inputs/outputs | |
|---|-----------------|-----------------|-----------------|-----------------|-------------------|----------------|-------------|----|----|-----------------|-----------------|-----------|-----------|-----------------|---------------------|---|
| Operation (1) | Ē | G | W | RP | WP WP | A22- A12 | A11- A10 | А9 | A8 | A7 | A6 | A5- A4 | A3- A2 | A 1 | A0 | DQ15-DQ0 |
| Verify extended memory block indicator bit | V _{IL} | V _{IL} | V _{IH} | V _{IH} | V _{IH} | ВКА | X | × | x | V _{IL} | V _{IL} | V_{IL} | V_{IL} | V _{IH} | V _{IH} | DQ15-DQ8=0 DQ7: 1=factory locked DQ6: 1=customer locked, 0=customer lockable DQ5: 1=reserved, 0=standard DQ4, DQ3-Hardware write protection: 00=WP protects 4 outermost blocks, 11=No WP protection DQ2-DQ0=0 |
| Verify block protection status | | | | | | BAd | | | | | | | | | V_{IL} | 0000h (unprotected) 0001h (protected) |

^{1.} $X = V_{IL}$ or V_{IH} . BAd any address in the block, BKA bank address.

Hardware protection M29DW128G

5 Hardware protection

The M29DW128G features hardware protection/unprotection. Refer to *Table 7: Hardware* protection for details on hardware block protection/unprotection using V_{PP}/\overline{WP} and \overline{RP} pins.

5.1 Write protect

The V_{PP}/\overline{WP} pin can be used to protect the four outermost parameter blocks (refer to Section 2: Signal descriptions for a detailed description of the signals). When V_{PP}/\overline{WP} is at V_{IL} the four outermost parameter blocks are protected and remain protected regardless of the block protection status or the reset pin state.

Table 7. Hardware protection

| V _{PP} /WP | Function |
|---------------------|---|
| V _{IL} | 4 outermost parameter blocks (first two and last two) protected from program/erase operations |
| V _{IH} | 4 outermost parameter blocks unprotected unless a software activated (see Section 5: Hardware protection) |
| V _{PPH} | Unlock bypass mode. It supplies the current needed to speed up programming |

6 Software protection

The M29DW128G has three different software protection modes:

- Volatile protection
- Non-volatile protection
- Password protection

On first use all parts default to operate in non-volatile protection mode and the customer is free to activate the non-volatile or the password protection mode.

The desired protection mode is activated by setting either the one-time programmable non-volatile protection mode lock bit or the password protection mode lock bit of the lock register (see *Section 8.1: Lock register*). Programming the non-volatile protection mode lock bit or the password protection mode lock bit to '0' will permanently activate the non-volatile or the password protection mode, respectively. These three bits are one-time programmable and non-volatile: once the protection mode has been programmed, it cannot be changed and the device will permanently operate in the selected protection mode. It is recommended to activate the desired software protection mode when first programming the device.

The non-volatile and password protection modes provide non-volatile protection. Volatilely protected blocks and non-volatilely protected blocks can co-exist within the memory array. However, the volatile protection only control the protection scheme for blocks that are not protected using the non-volatile or password protection.

M29DW128G Software protection

If the user attempts to program or erase a protected block, the device ignores the command and returns to read mode.

The device is shipped with all blocks unprotected. The block protection status can be read either by performing a read electronic signature (see *Table 5: Read electronic signature*) or by issuing an Auto Select command (see *Table 14: Block protection status*).

For the four outermost blocks (that is the two blocks at the top and the two at the bottom of the address space), an even higher level of block protection can be achieved by locking the blocks using the non-volatile protection and then by holding the V_{PP}/\overline{WP} pin Low.

6.1 Volatile protection mode

The volatile protection allows the software application to easily protect blocks against inadvertent change. However, the protection can be easily disabled when changes are needed. Volatile protection bits, VPBs, are volatile and unique for each block and can be individually modified. VPBs only control the protection scheme for unprotected blocks that have their non-volatile protection bits, NVPBs, cleared (erased to '1') (see Section 6.2: Non-volatile protection mode and Section 7.3.5: Non-volatile protection mode command set).

By issuing the VPB Program or VPB Clear commands, the VPBs are set (programmed to '0') or cleared (erased to '1'), thus placing each block in the protected or unprotected state respectively. The VPBs can be set (programmed to '0') or cleared (erased to '1') as often as needed.

The default values of the volatile protections are set through the VLBB (volatile lock boot bit) of the lock register (see *Table 13: Lock register bits*).

When the parts are first shipped, or after a power-up or hardware reset, the VPBs can be set or cleared depending upon the ordering option chosen:

- If the option to clear the VPBs after power-up is selected, then the blocks can be programmed or erased depending on the NVPBs state (see *Table 14: Block protection status*)
- If the option to set the VPBs after power-up is selected, the blocks default to be protected.

Refer to Section 7.3.7 for a description of the volatile protection mode command set.

6.2 Non-volatile protection mode

6.2.1 Non-volatile protection bits

A non-volatile protection bit (NVPB) is assigned to each block.

When a NVPB is set to '0', the associated block is protected, preventing any program or erase operations in this block.

The NVPB bits are set individually by issuing a NVPB Program command. They are non-volatile and will remain set through a hardware reset or a power-down/power-up sequence.

The NVPBs cannot be cleared individually, they can only be cleared all at the same time by issuing a Clear all Non-volatile Protection Bits command.

The NVPBs can be protected all at a time by setting a volatile bit, the NVPB lock bit (see Section 6.2.2: Non-volatile protection bit lock bit).

Numonyx

21/85

Software protection M29DW128G

If one of the non-volatile protected blocks needs to be unprotected (corresponding NVPB set to '1'), a few more steps are required:

- First, the NVPB lock bit must be cleared by either putting the device through a power cycle, or hardware reset
- 2. The NVPBs can then be changed to reflect the desired settings
- The NVPB lock bit must be set once again to lock the NVPBs. The device operates normally again.

Note: 1 To achieve the best protection, it is recommended to execute the NVPB Lock Bit Program command early in the boot code and to protect the boot code by holding $V_{PP} \overline{WP}$ Low, V_{II} .

2 The NVPBs and VPBs have the same function when $V_{PP} \overline{WP}$ pin is High, V_{IH} , as they do when $V_{PP} \overline{WP}$ pin is at the voltage for program acceleration (V_{PPH}).

Refer to *Table 14: Block protection status* and *Figure 5: Software protection scheme* for details on the block protection mechanism, and to *Section 7.3.5* for a description of the non-volatile protection mode command set.

6.2.2 Non-volatile protection bit lock bit

The non-volatile protection bit lock bit (NVPB lock bit) is a global volatile bit for all blocks.

When set (programmed to '0'), it prevents changing the state of the NVPBs. When cleared (programmed to '1'), the NVPBs can be set and reset using the NVPB Program command and Clear all NVPBs command, respectively.

There is only one NVPB lock bit per device.

Refer to Section 7.3.6 for a description of the NVPB lock bit command set.

Note: 1 No software command unlocks this bit unless the device is in password protection mode; it can be cleared only by taking the device through a hardware reset or a power-up.

2 The NVPB lock bit must be set (programmed to '0') only after all NVPBs are configured to the desired settings.

6.3 Password protection mode

The password protection mode provides an even higher level of security than the non-volatile protection mode by requiring a 64-bit password for unlocking the device NVPB lock bit.

In addition to this password requirement, the NVPB lock bit is set '0' after power-up and reset to maintain the device in password protection mode. Successful execution of the Password Unlock command by entering the correct password clears the NVPB lock bit, allowing for block NVPBs to be modified.

If the password provided is not correct, the NVPL Lock bit remains locked and the state of the NVPBs cannot be modified.

To place the device in password protection mode, the following steps are required:

- Prior to entering the password protection mode, it is necessary to set a 64-bit password and to verify it (see *Password Program command* and *Password Read command*).
 Password verification is only allowed during the password programming operation
- 2. The password protection mode is then activated by programming the password protection mode lock bit to '0'. This operation is not reversible and once the bit is

M29DW128G Software protection


programmed it cannot be erased, the device permanently remains in password protection mode, and the 64-bit password can neither be retrieved nor reprogrammed. Moreover, all commands to the address where the password is stored, are disabled. Refer to *Table 14: Block protection status* and *Figure 5: Software protection scheme* for details on the block protection scheme.

Refer to Section 7.3.4 for a description of the password protection mode command set.

Note:

There is no means to verify the password after it is set. If the password is lost after setting the password mode lock bit, there is no way to clear the NVPB lock bit.

Figure 5. Software protection scheme

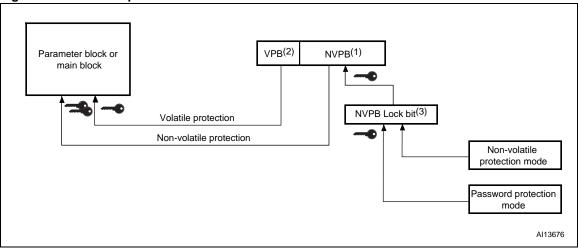

- 1. NVPBs default to '1' (block unprotected) after power-up and hardware reset. A block is protected or unprotected when its NVPB is set to '0' and '1', respectively. NVPBs are programmed individually and cleared collectively.
- VPB default status depends on ordering option. A block is protected or unprotected when its VPB is set to '0' and '1', respectively. VPBs are programmed and cleared individually. For the volatile protection to be effective, the NVPB lock bit must be set to '0' (NVPB bits unlocked) and the block NVPB must be set to '1' (block unprotected).
- 3. The NVPB Lock bit is volatile and default to '1' (NVPB bits unlocked) after power-up and hardware reset. NVPB bits are locked by setting the NVPB lock bit to '0'. Once programmed to '0', the NVPB lock bit can be reset to '1' only be taking the device through a power-up or hardware reset.

Command interface M29DW128G

7 Command interface

All bus write operations to the memory are interpreted by the command interface. Commands consist of one or more sequential bus write operations. Failure to observe a valid sequence of bus write operations will result in the memory returning to read mode. The long command sequences are imposed to maximize data security.

7.1 Standard commands

See Table 8: Standard commands for a summary of the standard commands.

7.1.1 Read/Reset command

The device is in read mode after reset or after power-up.

The Read/Reset command returns the memory to read mode. It also resets the errors in the status register. Either one or three bus write operations can be used to issue the Read/Reset command.

The Read/Reset command can be issued, between bus write cycles before the start of a program or erase operation, to return the device to read mode. If the Read/Reset command is issued during the timeout of a block erase operation, the memory will take up to 10 µs to abort. During the abort period no valid data can be read from the memory.

The Read/Reset command will not abort an erase operation when issued while in erase suspend.

7.1.2 Auto Select command

The Auto Select command puts the device in auto select mode (see Section 4: Auto select mode). When in auto select mode, the system can read the manufacturer code, the device code, the protection status of each block (block protection status) and the extended memory block protection indicator.

Three consecutive bus write operations are required to issue the Auto Select command. Once the Auto Select command is issued bus read operations to specific addresses output the manufacturer code, the device code, the extended memory block protection indicator and a block protection status (see *Table 8: Standard commands* in conjunction with *Table 5: Read electronic signature*, and *Table 6: Block protection*). The memory remains in auto select mode until a Read/Reset or CFI Query command is issued.

M29DW128G Command interface

7.1.3 Read CFI Query command

The memory contains an information area, named CFI data structure, which contains a description of various electrical and timing parameters, density information and functions supported by the memory. See *Appendix B*, *Table 32*, *Table 33*, *Table 34*, *Table 35*, *Table 36* and *Table 37* for details on the information contained in the common flash interface (CFI) memory area.

The Read CFI Query command is used to put the memory in read CFI query mode. Once in read CFI query mode, bus read operations to the memory will output data from the common flash interface (CFI) memory area. One bus write cycle is required to issue the Read CFI Query command. This command is valid only when the device is in the read array or auto select mode.

The Read/Reset command must be issued to return the device to the previous mode (the read array mode or auto select mode). A second Read/Reset command is required to put the device in read array mode from auto select mode.

7.1.4 Chip Erase command

The Chip Erase command can be used to erase the entire chip. Six bus write operations are required to issue the Chip Erase command and start the program/erase controller.

If some block are protected, then these are ignored and all the other blocks are erased. If all of the blocks are protected the chip erase operation appears to start but will terminate within about 100 μ s, leaving the data unchanged. No error condition is given when protected blocks are ignored.

During the erase operation the memory will ignore all commands, including the Erase Suspend command. It is not possible to issue any command to abort the operation. Typical chip erase times are given in *Table 12*. All bus read operations during the chip erase operation will output the status register on the data inputs/outputs. See *Section 8.2: Status register* for more details.

After the chip erase operation has completed the memory will return to the read mode, unless an error has occurred. When an error occurs the memory will continue to output the status register. A Read/Reset command must be issued to reset the error condition and return to read mode.

The Chip Erase command sets all of the bits in unprotected blocks of the memory to '1'. All previous data is lost.

The chip erase operation is aborted by performing a reset or powering down the device. In this case, data integrity cannot be ensured, and it is recommended to erase again the entire chip.

7.1.5 Block Erase command

The Block Erase command can be used to erase a list of one or more blocks. It sets all of the bits in the unprotected selected blocks to '1'. All previous data in the selected blocks is lost.

Six bus write operations are required to select the first block in the list. Each additional block in the list can be selected by repeating the sixth bus write operation using the address of the additional block. After the command sequence is written, a block erase timeout occurs. During the timeout period, additional sector addresses and sector erase commands may be written. Once the program/erase controller has started, it is not possible to select any more

M numonyx

25/85

Command interface M29DW128G

blocks. Each additional block must therefore be selected within the timeout period of the last block. The timeout timer restarts when an additional block is selected. After the sixth bus write operation, a bus read operation outputs the status register (bus reading operations from banks different from those including the blocks being erased, output the memory array content). See *Figure 15: Write enable controlled program waveforms* for details on how to identify if the program/erase controller has started the block erase operation.

After the block erase operation has completed, the memory returns to the read mode, unless an error has occurred. When an error occurs, bus read operations will continue to output the status register. A Read/Reset command must be issued to reset the error condition and return to read mode.

If any selected blocks are protected then these are ignored and all the other selected blocks are erased. If all of the selected blocks are protected the block erase operation appears to start but will terminate within about 100 μ s, leaving the data unchanged. No error condition is given when protected blocks are ignored.

During the block erase operation the memory ignores all commands except the Erase Suspend command and the Read/Reset command which is only accepted during the timeout period. Typical block erase time and block erase timeout are given in *Table 12*.

The block erase operation is aborted by performing a reset or powering down the device. In this case, data integrity cannot be ensured, and it is recommended to erase again the blocks aborted.

7.1.6 Erase Suspend command

The Erase Suspend command can be used to temporarily suspend a block erase operation. One bus write operation is required to issue the command together with the block address.

After the command sequence is written, a minimum block erase timeout occurs (see *Section 7.1.6: Erase Suspend command*). During the timeout period, additional block addresses and block erase commands can be written.

The program/erase controller suspends the erase operation within the erase suspend latency time of the Erase Suspend command being issued. However, when the Erase Suspend command is written during the block erase timeout, the device immediately terminates the timeout period and suspends the erase operation.

Once the program/erase controller has stopped, the memory operates in read mode and the erase is suspended.

During erase suspend it is possible to read and execute program or write to buffer program operations in blocks that are not suspended; both read and program operations behave as normal on these blocks. Reading from blocks that are suspended will output the status register. If any attempt is made to program in a protected block or in the suspended block then the Program command is ignored and the data remains unchanged. In this case the status register is not read and no error condition is given.

It is also possible to issue the Auto Select, Read CFI Query and Unlock Bypass commands during an erase suspend. The Read/Reset command must be issued to return the device to read array mode before the Resume command will be accepted.

During erase suspend a bus read operation to the extended memory block will output the extended memory block data. Once in the extended block mode, the Exit Extended Block command must be issued before the erase operation can be resumed.

The Erase Suspend command is ignored if written during chip erase operations.

🙌 numonyx

26/85

M29DW128G Command interface

Refer to *Table 12: Program, erase times and program, erase endurance cycles* for the values of block erase timeout and block erase suspend latency time.

If the erase suspend operation is aborted by performing a reset or powering down the device, data integrity cannot be ensured, and it is recommended to erase again the blocks suspended.

7.1.7 Erase Resume command

The Erase Resume command is used to restart the program/erase controller after an erase suspend.

The device must be in read array mode before the Resume command will be accepted. An erase can be suspended and resumed more than once.

7.1.8 Program Suspend command

The Program Suspend command allows the system to interrupt a program operation so that data can be read from any block. When the Program Suspend command is issued during a program operation, the device suspends the program operation within the program suspend latency time (see *Table 12: Program, erase times and program, erase endurance cycles*) and updates the status register bits.

After the program operation has been suspended, the system can read array data from any address. However, data read from program-suspended addresses is not valid.

The Program Suspend command may also be issued during a program operation while an erase is suspended. In this case, data may be read from any addresses not in Erase Suspend or Program Suspend. If a read is needed from the extended memory block area (one-time program area), the user must use the proper command sequences to enter and exit this region.

The system may also issue the Auto Select command sequence when the device is in the program suspend mode. The system can read as many auto select codes as required. When the device exits the auto select mode, the device reverts to the program suspend mode, and is ready for another valid operation. See Auto Select command sequence for more information.

If the program suspend operation is aborted by performing a reset or powering down the device, data integrity cannot be ensured, and it is recommended to program again the words or bytes aborted.

7.1.9 Program Resume command

After the Program Resume command is issued, the device reverts to programming. The controller can determine the status of the program operation using the DQ7 or DQ6 status bits, just as in the standard program operation. Refer to *Figure 15: Write enable controlled program waveforms* for details.

The system must issue a Program Resume command, to exit the program suspend mode and to continue the programming operation.

Further issuing of the Resume command is ignored. Another Program Suspend command can be written after the device has resumed programming.

Command interface M29DW128G

7.1.10 Program command

The Program command can be used to program a value to one address in the memory array at a time. The command requires four bus write operations, the final write operation latches the address and data in the internal state machine and starts the program/erase controller.

Programming can be suspended and then resumed by issuing a Program Suspend command and a Program Resume command, respectively (see Section 7.1.8: Program Suspend command and Section 7.1.9: Program Resume command).

If the address falls in a protected block then the Program command is ignored, the data remains unchanged. The status register is never read and no error condition is given.

After programming has started, bus read operations output the status register content (bus reading operations from banks different from those including the block being programmed, output the memory array content). See *Figure 15: Write enable controlled program waveforms* for more details. Typical program times are given in *Table 12: Program, erase times and program, erase endurance cycles*.

After the program operation has completed the memory will return to the read mode, unless an error has occurred. When an error occurs, bus read operations to the memory continue to output the status register. A Read/Reset command must be issued to reset the error condition and return to read mode.

One of the erase commands must be used to set all the bits in a block or in the whole memory from '0' to '1'.

The program operation is aborted by performing a reset or powering-down the device. In this case data integrity cannot be ensured, and it is recommended to reprogram the word or byte aborted.

M29DW128G Command interface

Table 8. Standard commands

| | | _ | Bus operations ⁽¹⁾ | | | | | | | | | | | |
|------------------------|--|--------|-------------------------------|------|-----|------|--------------|------|--------|--------|-----|------|-----|------|
| Command | | Length | 1st | | 2nd | | 3rd | | 4th | | 5th | | 6th | |
| | | | Add | Data | Add | Data | Add | Data | Add | Data | Add | Data | Add | Data |
| Read/Reset | | 1 | Х | F0 | | | | | | | | | | |
| | | 3 | 555 | AA | 2AA | 55 | Х | F0 | | | | | | |
| Auto Select | Manufacturer code | 3 | 555 | AA | 2AA | 55 | (BKA) 555 | 90 | (2)(3) | (2)(3) | | | | |
| | Device code | | | | | | | | | | | | | |
| | Extended memory block protection indicator | | | | | | | | | | | | | |
| | Block protection status | | | | | | | | | | | | | |
| Program ⁽⁴⁾ | | 4 | 555 | AA | 2AA | 55 | 555 | A0 | PA | PD | | | | |
| Chip Erase | | 6 | 555 | AA | 2AA | 55 | 555 | 80 | 555 | AA | 2AA | 55 | 555 | 10 |
| Block Erase | | 6+ | 555 | AA | 2AA | 55 | 555 | 80 | 555 | AA | 2AA | 55 | BAd | 30 |
| Erase/Program Suspend | | 1 | BKA | В0 | | | | | | | | | | |
| Erase/Program Resume | | 1 | BKA | 30 | | | | | | | | | | |
| Read CFI Query | | 1 | BKA (555) | 98 | | | | | | | | | | |

^{1.} X don't care, PA program address, PD program data, BAd any address in the block, BKA bank address. All values in the table are in hexadecimal.

^{2.} These cells represent read cycles. All the other cells are write cycles.

The auto select addresses and data are given in Table 5: Read electronic signature, and Table 6: Block protection, except for A9 that is 'don't care'.

^{4.} In unlock bypass, the first two unlock cycles are no more needed (see Table 9: Fast program commands).

Command interface M29DW128G

7.2 Fast program commands

The M29DW128G offers a set of fast program commands to improve the programming throughput:

- Write to Buffer Program
- Enhanced Buffered Program
- Unlock Bypass.

See Table 9: Fast program commands for a summary of the fast program commands.

When V_{PPH} is applied to the V_{PP}/write protect pin the memory automatically enters unlock bypass mode (see *Section 7.2.6: Unlock Bypass command*).

After programming has started, bus read operations in the memory output the status register content (bus reading operations from banks different from those including the block being programmed, output the memory array content). Write to Buffer Program command can be suspended and then resumed by issuing a Program Suspend command and a Program Resume command, respectively (see Section 7.1.8: Program Suspend command and Section 7.1.9: Program Resume command).

After the fast program operation has completed, the memory will return to the read mode, unless an error has occurred. When an error occurs bus read operations to the memory will continue to output the status register. A Read/Reset command must be issued to reset the error condition and return to read mode. One of the erase commands must be used to set all the bits in a block or in the whole memory from '0' to '1'.

Typical program times are given in *Table 12: Program, erase times and program, erase endurance cycles.*

7.2.1 Write to Buffer Program command

The Write to Buffer Program command makes use of the device's 32-word write buffer to speed up programming. 32 words can be loaded into the write buffer. Each write buffer has the same A22-A5 addresses. The Write to Buffer Program command dramatically reduces system programming time compared to the standard non-buffered Program command.

When issuing a Write to Buffer Program command, the V_{PP}/\overline{WP} pin can be either held High, V_{IH} , or raised to V_{PPH} .

See Table 12 for details on typical write to buffer program times in both cases.

Five successive steps are required to issue the Write to Buffer Program command:

- The Write to Buffer Program command starts with two unlock cycles
- The third bus write cycle sets up the Write to Buffer Program command. The setup code can be addressed to any location within the targeted block
- The fourth bus write cycle sets up the number of words to be programmed. Value N is written to the same block address, where N+1 is the number of words to be programmed. N+1 must not exceed the size of the write buffer or the operation will abort
- 4. The fifth cycle loads the first address and data to be programmed
- 5. Use N bus write cycles to load the address and data for each word into the write buffer. Addresses must lie within the range from the start address+1 to the start address + N-1. Optimum performance is obtained when the start address corresponds to a 32-word

M29DW128G Command interface

boundary. If the start address is not aligned to a 32-word boundary, the total programming time is doubled.

All the addresses used in the write to buffer program operation must lie within the same page.

To program the content of the write buffer, this command must be followed by a Write to Buffer Program Confirm command.

If an address is written several times during a write to buffer program operation, the address/data counter will be decremented at each data load operation and the data will be programmed to the last word loaded into the buffer.

Invalid address combinations or failing to follow the correct sequence of bus write cycles will abort the Write to Buffer Program.

The status register bits DQ1, DQ5, DQ6, DQ7 can be used to monitor the device status during a write to buffer program operation.

It is possible to detect program operation fails when changing programmed data from '0' to '1', that is when reprogramming data in a portion of memory already programmed. The resulting data will be the logical OR between the previous value and the current value.

See Appendix D, Figure 23: Write to buffer program flowchart and pseudocode, for a suggested flowchart on using the Write to Buffer Program command.

7.2.2 Enhanced Buffered Program command

The Enhanced Buffered Program command makes use of the device's 256-word write buffer to speed up programming. 256 words can be loaded into the write buffer. Each write buffer has the same A22-A8 addresses. The Enhanced Buffered Program command dramatically reduces system programming time compared to both the standard non-buffered Program command and the Write to Buffer command.

When issuing an Enhanced Buffered Program command, the V_{PP}/\overline{WP} pin can be either held High, V_{IH} , or raised to V_{PPH} .

See *Table 12: Program, erase times and program, erase endurance cycles* for details on typical enhanced buffered program times in both cases.

Three successive steps are required to issue the Enhanced Buffered Program command:

- The Enhanced Buffered Program command starts with two unlock cycles
- The third bus write cycle sets up the Enhanced Buffered Program command. The setup code can be addressed to any location within the targeted block
- The fourth bus write cycle loads the first address and data to be programmed. There a total of 256 address and data loading cycles.

To program the content of the write buffer, the Enhanced Buffered Program command must be followed by an Enhanced Buffered Program Confirm command. The command ends with an internal enhanced buffered program confirm cycle.

Note that address/data cycles must be loaded in an increasing address order (from ADD[7:0]=00000000 to ADD[7:0]=11111111) and completely (all 256 words). Invalid address combinations or failing to follow the correct sequence of bus write cycles will abort the enhanced buffered program.

The status register bits DQ1, DQ5, DQ6, and DQ7 can be used to monitor the device status during an enhanced buffered program operation.

M numonyx

31/85

Command interface M29DW128G

An external supply (12 V) can be used to improve programming efficiency.

It is possible to detect program operation fails when changing programmed data from '0' to '1', that is when reprogramming data in a portion of memory already programmed. The resulting data will be the logical OR between the previous and the current value.

See *Appendix D* and *Figure 24: Enhanced buffered program flowchart and pseudocode*, for a suggested flowchart on using the Enhanced Buffered Program command.

7.2.3 Buffered Program Abort and Reset command

A Buffered Program Abort and Reset command must be issued to abort the write to buffer program and enhanced buffered program operation and reset the device in read mode.

The write to buffer and enhanced buffered programming sequence can be aborted in the following ways:

- Load a value that is greater than the page buffer size during the number of locations to program step in the Write to Buffer Program command
- Write to an address in a block different than the one specified during the write-bufferload command
- Write an address/data pair to a different write-buffer-page than the one selected by the starting address during the write buffer data loading stage of the operation
- Write data other than the Confirm command after the specified number of data load cycles
- Load address/data pairs in an incorrect sequence during the enhanced buffered program.

The abort condition is indicated by DQ1 = 1, $DQ7 = \overline{DQ7}$ (for the last address location loaded), DQ6 = toggle, and DQ5 = 0 (all of which are status register bits). A Buffered Program Abort and Reset command sequence must be written to reset the device for the next operation. Note that the full 3-cycle Buffered Program Abort and Reset command sequence is required when using write to buffer and enhanced buffered programming features in unlock bypass mode.

M29DW128G Command interface

7.2.4 Write to Buffer Program Confirm command

The Write to Buffer Program Confirm command is used to confirm a Write to Buffer Program command and to program the N+1 words loaded in the write buffer by this command.

7.2.5 Enhanced Buffered Program Confirm command

The Enhanced Buffered Program Confirm command is used to confirm an Enhanced Buffered Program command and to program the 256 words loaded in the buffer.

7.2.6 Unlock Bypass command

The Unlock Bypass command is used to place the device in unlock bypass mode. When the device enters the unlock bypass mode, the two initial unlock cycles required in the standard program command sequence are no more needed, and only two write cycles are required to program data, instead of the normal four cycles (see *Note 4* below *Table 8: Standard commands*). This results in a faster total programming time.

Unlock Bypass command is consequently used in conjunction with the Unlock Bypass Program command to program the memory faster than with the standard program commands. When the cycle time to the device is long, considerable time saving can be made by using these commands. Three bus write operations are required to issue the Unlock Bypass command.

When in unlock bypass mode, only the following commands are valid:

- The Unlock Bypass Program command can be issued to program addresses within the memory
- The Unlock Bypass Block Erase command can then be issued to erase one or more memory blocks
- The Unlock Bypass Chip Erase command can be issued to erase the whole memory array
- The Unlock Bypass Write to Buffer Program command can be issued to speed up programming operation
- The Unlock Bypass Enhanced Buffered Program command can be issued to speed up programming operation
- The Unlock Bypass CFI command can be issued to read the CFI when the memory is in the unlock bypass mode
- The Unlock Bypass Reset command can be issued to return the memory to read mode.

In unlock bypass mode the memory can be read as if in read mode.

7.2.7 Unlock Bypass Program command

The Unlock Bypass Program command can be used to program one address in the memory array at a time. The command requires two bus write operations, the final write operation latches the address and data and starts the program/erase controller.

The program operation using the Unlock Bypass Program command behaves identically to the program operation using the Program command. The operation cannot be aborted, a bus read operation to the memory outputs the status register (bus reading operations from a bank different from the one including the block being programmed, output the memory array content). See the Program command for details on the behavior.

M numonyx

33/85

Command interface M29DW128G

7.2.8 Unlock Bypass Block Erase command

The Unlock Bypass Block Erase command can be used to erase one or more memory blocks at a time. The command requires two bus write operations instead of six using the standard Block Erase command. The final bus write operation latches the address of the block and starts the program/erase controller.

To erase multiple block (after the first two bus write operations have selected the first block in the list), each additional block in the list can be selected by repeating the second bus write operation using the address of the additional block.

The Unlock Bypass Block Erase command behaves in the same way as the Block Erase command: the operation cannot be aborted, and a bus read operation to the memory outputs the status register (bus reading operations from banks different from those including the blocks being erased, output the memory array content). See Section 7.1.5: Block Erase command for details.

7.2.9 Unlock Bypass Chip Erase command

The Unlock Bypass Chip Erase command can be used to erase all memory blocks at a time. The command requires two bus write operations only instead of six using the standard Chip Erase command. The final bus write operation starts the program/erase controller.

The Unlock Bypass Chip Erase command behaves in the same way as the Chip Erase command: the operation cannot be aborted, and a bus read operation to the memory outputs the status register (see *Section 7.1.4: Chip Erase command* for details).

7.2.10 Unlock Bypass Write to Buffer Program command

The Unlock Bypass Write to Buffer command can be used to program the memory in fast program mode. The command requires two bus write operations less than the standard Write to Buffer Program command.

The Unlock Bypass Write to Buffer Program command behaves in the same way as the Write to Buffer Program command: the operation cannot be aborted and a bus read operation to the memory outputs the status register (bus reading operations from a bank different from the one including the block being programmed, output the memory array content). See Section 7.2.1: Write to Buffer Program command for details.

The Write to Buffer Program Confirm command is used to confirm an Unlock Bypass Write to Buffer Program command and to program the N+1 words loaded in the write buffer by this command.

7.2.11 Unlock Bypass Enhanced Buffered Program command

The Unlock Bypass Enhanced Buffered Program command can be used to program the memory in fast program mode. The command requires two address/data loading cycles less than the standard Enhanced Buffered Program command (see *Table 10: Enhanced buffered program commands*).

The Unlock Bypass Enhanced Buffered Program command behaves identically to the enhanced buffered program operation using the Enhanced Buffered Program command. The operation cannot be aborted and a bus read operation to the memory outputs the status register (bus reading operations from a bank different from the one including the block being programmed, output the memory array content). See Section 7.2.2: Enhanced Buffered Program command for details on the behavior.

M29DW128G Command interface

The Enhanced Buffered Program Confirm command is used to confirm an Unlock Bypass Enhanced Buffered Program command and to program the 256 words loaded in the buffer.

7.2.12 Unlock Bypass CFI command

The Unlock Bypass CFI command allows to use any address in the bank to perform a CFI query when the memory is in the unlock bypass mode.

7.2.13 Unlock Bypass Reset command

The Unlock Bypass Reset command can be used to return to read/reset mode from unlock bypass mode. Two bus write operations are required to issue the Unlock Bypass Reset command. Read/Reset command does not exit from unlock bypass mode.

Table 9. Fast program commands

| | Length | Bus write operations ⁽¹⁾ | | | | | | | | | | | | |
|---|--------|-------------------------------------|------|-----|------------------|-----------|------|---------|------------------|-------------------|------|------------|------|--|
| Command | | 1st | | 2nd | | 3rd | | 4th | | 5th | | 6th | | |
| | | Add | Data | Add | Data | Add | Data | Add | Data | Add | Data | Add | Data | |
| Write to Buffer Program | N+5 | 555 | AA | 2AA | 55 | BAd | 25 | BAd | N ⁽²⁾ | PA ⁽³⁾ | PD | WBL (4) | PD | |
| Write to Buffer Program Confirm | 1 | BAd (5) | 29 | | | | | | | | | | | |
| Buffered Program Abort and Reset | 3 | 555 | AA | 2AA | 55 | 555 | F0 | | | | | | | |
| Unlock Bypass | 3 | 555 | AA | 2AA | 55 | 555 | 20 | | | | | | | |
| Unlock Bypass Program | 2 | Х | A0 | PA | PD | | | | | | | | | |
| Unlock Bypass Block Erase | 2+ | Х | 80 | BAd | 30 | | | | | | | | | |
| Unlock Bypass Chip Erase | 2 | Х | 80 | Х | 10 | | | | | | | | | |
| Unlock Bypass Write to Buffer Program | N+3 | BAd | 25 | BAd | N ⁽²⁾ | PA (3) | PD | WBL (4) | PD | | | | | |
| Unlock Bypass CFI | 1 | ВКА | 98 | | | | | | | | | | | |
| Unlock Bypass Reset | 2 | Х | 90 | Х | 00 | | | | | | | | | |

X don't care, PA program address, PD program data, BAd any address in the block, BKA bank address, WBL write buffer location. All values in the table are in hexadecimal.

35/85

- 4. The 6th cycle has to be issued N time. WBL scans the word inside the page.
- 5. BAd must be identical to the address loaded during the write to buffer program 3rd and 4th cycles.

The maximum number of cycles in the command sequence is 36. N+1 is the number of words to be programmed during the write to buffer program operation.

^{3.} Each buffer has the same A22-A5 addresses. A0-A4 are used to select a word within the N+1 word page.

Command interface M29DW128G

Bus write operations Length Command 1st 2nd 3rd 4th 257th 258th 259th 260th Add Add Data Add Data Add Data Add Data Data Add Data Add Data Add Data Add Data Enhanced BAd BAd Buffered 259 555 AA 2AA 55 BAd 33 Data Data (00)(FF) Program Enhanced Buffered BAd 29 Program (00)Confirm Unlock **Bypass** BAd BAd Enhanced 257 BAd Data Data 33 (00)Buffered Program

Table 10. Enhanced buffered program commands⁽¹⁾⁽²⁾

7.3 Protection commands

Blocks can be protected individually against accidental program, erase or read operations. The device block protection scheme is shown in *Figure 5: Software protection scheme*. See *Table 11: Block protection commands* for a summary of the block protection commands.

The memory block and extended memory block protection is configured through the Lock register (see Section 8.1: Lock register).

7.3.1 Enter Extended Memory Block command

The M29DW128G has one extra 256-word block (extended memory block) that can only be accessed using the Enter Extended Memory Block command.

The extended memory block is divided in two memory areas of 128 words each: the first one is factory locked and the second one is customer lockable.

Three Bus Write cycles are required to issue the Extended Memory Block command. Once the command has been issued the device enters the extended memory block mode where all bus read or program operations are conducted on the extended memory block. Once the device is in the extended block mode, the extended memory block is addressed by using the addresses occupied by the first boot block in the other operating modes (see *Table 31: Block addresses*).

The device remains in extended memory block mode until the Exit Extended Memory Block command is issued or power is removed from the device. After power-up or hardware reset, the device reverts to read mode where the commands issued to the first boot block address space will address the first boot block.

The extended memory block cannot be erased, and can be treated as one-time programmable (OTP) memory.

In extended block mode only array cell locations (bank A) with the same addresses as the extended block are not accessible. In extended block mode dual operations are allowed and

^{1.} Only available from week 8 of 2008.

^{2.} BAd any address in the block.

M29DW128G Command interface

the extended block physically belongs to bank A. In extended block mode, Erase, Chip Erase, Erase Suspend and Erase Resume commands are not allowed.

To exit from the extended memory block mode the Exit Extended Memory Block command must be issued.

The extended memory block can be protected by setting the extended memory block protection bit to '1' (see Section 8.1: Lock register); however once protected the protection cannot be undone.

Note:

When the device is in the extended memory block mode, the $V_{PP} \overline{WP}$ pin cannot be used for fast programming and the unlock bypass mode is not available (see Section 2.6: VPP/write protect (VPP/WP)).

7.3.2 Exit Extended Memory Block command

The Exit Extended Memory Block command is used to exit from the extended memory block mode and return the device to read mode. Four bus write operations are required to issue the command.

7.3.3 Lock register command set

The M29DW128G offers a set of commands to access the lock register and to configure and verify its content. See the following sections in conjunction with Section 8.1: Lock register and Table 11: Block protection commands.

Enter Lock Register Command Set command

Three bus write cycles are required to issue the Enter Lock Register Command set command. Once the command has been issued, all bus read or program operations are issued to the lock register.

Lock Register Program and Lock Register Read command

The Lock Register Program command allows to configure the lock register. The programmed data can then be checked by issuing a Lock Register Read command.

An Exit Protection Command set command must then be issued to return the device to read mode (see Section 7.3.8: Exit protection command set command).

7.3.4 Password protection mode command set

Enter Password Protection Command Set command

Three bus write cycles are required to issue the Enter Password Protection Command Set command. Once the command has been issued, the commands related to the password protection mode can be issued to the device.

Password Program command

The Password Program command is used to program the 64-bit password used in the password protection mode.

To program the 64-bit password, the complete command sequence must be entered four times at four consecutive addresses selected by A1-A0.

The password can be checked by issuing a Password Read command.

N numonyx

37/85

Command interface M29DW128G

Once password program operation has completed, an Exit Protection Command Set command must be issued to return the device to read mode. The password protection mode can then be selected.

By default, all password bits are set to '1'.

Password Read command

The Password Read command is used to verify the password used in password protection mode.

To verify the 64-bit password, the complete command sequence must be entered four times at four consecutive addresses selected by A1-A0.

If the password mode lock bit is programmed and the user attempts to read the password, the device will output FFh onto the I/O data bus.

An Exit Protection Command Set command must be issued to return the device to read mode.

Password Unlock command

The Password Unlock command is used to clear the NVPB lock bit allowing to modify the NVPBs.

The Password Unlock command must be issued along with the correct password.

There must be a 1 µs delay between successive password unlock commands in order to prevent hackers from cracking the password by trying all possible 64-bit combinations. If this delay is not respected, the latest command will be ignored.

Approximately 1 µs is required for unlocking the device after the valid 64-bit password has been provided.

7.3.5 Non-volatile protection mode command set

Enter Non-volatile Protection Command Set command

Three bus write cycles are required to issue the Enter Non-volatile Protection Command Set command. Once the command has been issued, the commands related to the non-volatile protection mode can be issued to the device.

Non-volatile Protection Bit Program command (NVPB Program)

A block can be protected from program or erase by issuing a Non-volatile Protection Bit command along with the block address. This command sets the NVPB to '1' for a given block.

Read Non-volatile Protection Bit Status command (Read NVPB Status)

The status of a NVPB for a given block or group of blocks can be read by issuing a Read Non-Volatile Modify Protection Bit command along with the block address.

Clear all Non-volatile Protection Bits command (Clear all NVPBs)

The NVPBs are erased simultaneously by issuing a Clear all Non-volatile Protection Bits command. No specific block address is required. If the NVPB lock bit is set to '0', the command fails.

M29DW128G Command interface

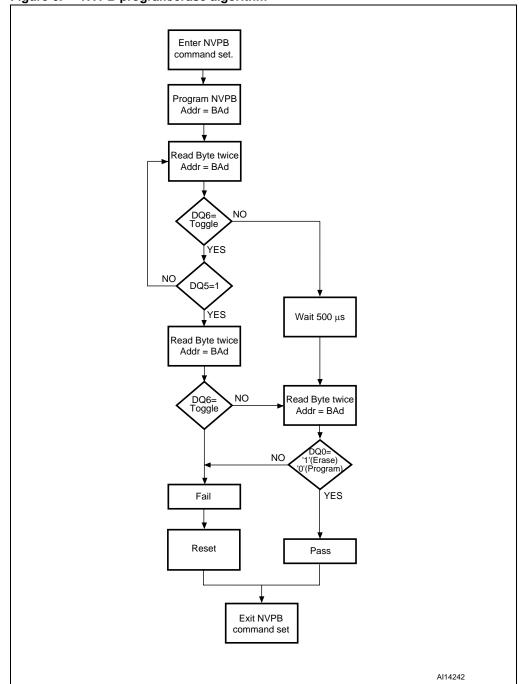


Figure 6. NVPB program/erase algorithm

Numonyx 39/85

Command interface M29DW128G

7.3.6 NVPB lock bit command set

Enter NVPB Lock Bit Command Set command

Three bus write cycles are required to issue the Enter NVPB Lock Bit Command Set command. Once the command has been issued, the commands allowing to set the NVPB lock bit can be issued to the device.

NVPB Lock Bit Program command

This command is used to set the NVPB Lock bit to '0' thus locking the NVPBs, and preventing them from being modified.

Read NVPB Lock Bit Status command

This command is used to read the status of the NVPB lock bit.

7.3.7 Volatile protection mode command set

Enter Volatile Protection Command Set command

Three bus write cycles are required to issue the Enter Volatile Protection Command Set command. Once the command has been issued, the commands related to the volatile protection mode can be issued to the device.

Volatile Protection Bit Program command (VPB Program)

The VPB Program command individually sets a VPB to '0' for a given block.

If the NVPB for the same block is set, the block is locked regardless of the value of the VPB bit (see *Table 14: Block protection status*).

Read VPB Status command

The status of a VPB for a given block can be read by issuing a Read VPB Status command along with the block address.

VPB Clear command

The VPB Clear command individually clears (sets to '1') the VPB for a given block.

If the NVPB for the same block is set, the block is locked regardless of the value of the VPB bit. (see *Table 14: Block protection status*).

7.3.8 Exit protection command set command

The Exit Protection Command Set command is used to exit from the Lock register, password protection, non-volatile protection, volatile protection, and NVPB lock bit command set mode. It returns the device to read mode.

M29DW128G Command interface

Table 11. Block protection commands⁽¹⁾⁽²⁾⁽³⁾

| | bie 11. Block prote | | | | | | | Bus ope | eratio | ns | | | | | | |
|-------------------------|---|--------|--------------|---------------------|--------------|---------------------|--------------|---------|--------|------|----|------|----|------|----|------|
| | Command | Length | | 1st | 2 | nd | 3 | rd | | 4th | | 5th | | 6th | 7 | 7th |
| | | | Ad | Data | Ad | Data | Ad | Data | Ad | Data | Ad | Data | Ad | Data | Ad | Data |
| Lock register | Enter Lock Register Command Set ⁽⁴⁾ | 3 | 555 | AA | 2AA | 55 | 555 | 40 | | | | | | | | |
| k rec | Lock Register Program | 2 | Х | A0 | 00 | DATA ⁽⁵⁾ | | | | | | | | | | |
| Loc | Lock Register Read | 1 | Х | DATA ⁽⁵⁾ | | | | | | | | | | | | |
| Password protection | Enter Password Protection Command Set ⁽⁴⁾ | 3 | 555 | AA | 2AA | 55 | 555 | 60 | | | | | | | | |
| prote | Password Program (6)(7) | 2 | Х | A0 | PWAn | PWDn | | | | | | | | | | |
| vord | Password Read | 4 | 00 | PWD0 | 01 | PWD1 | 02 | PWD2 | 03 | PWD3 | | | | | | |
| Pass | Password Unlock ⁽⁷⁾ | 7 | 00 | 25 | 00 | 03 | 00 | PWD0 | 01 | PWD1 | 02 | PWD2 | 03 | PWD3 | 00 | 29 |
| ction | Enter Non-volatile Protection Command Set ⁽⁴⁾ | 3 | 555 | AA | 2AA | 55 | (BKA) 555 | C0 | | | | | | | | |
| Non-volatile protection | NVPB Program ⁽⁸⁾ | 2 | Х | A0 | (BKA) BAd | 00 | | | | | | | | | | |
| olati | Clear all NVPBs ⁽⁹⁾ | 2 | Х | 80 | 00 | 30 | | | | | | | | | | |
| Non- | Read NVPB Status | 1 | (BKA) BAd | RD(0) | | | | | | | | | | | | |
| NVPB lock bit | Enter NVPB Lock Bit Command Set | 3 | 555 | AA | 2AA | 55 | 555 | 50 | | | | | | | | |
| JB IC | NVPB Lock Bit Program | 2 | Х | A0 | Х | 00 | | | | | | | | | | |
| ⋛ | Read NVPB Lock Bit Status | 1 | BKA | RD(0) | | | | | | | | | | | | |
| ç | Enter Volatile Protection Command Set | 3 | 555 | AA | 2AA | 55 | (BKA) 555 | E0 | | | | | | | | |
| rotectic | VPB Program | 2 | Х | A0 | (BKA) BAd | 00 | | | | | | | | | | |
| Volatile protection | Read VPB Status | 1 | (BKA) BAd | RD(0) | | | | | | | | | | | | |
| > | VPB Clear | 2 | Х | A0 | (BKA) BAd | 01 | | | | | | | | | | |
| tor | Enter Extended Block | 3 | 555 | AA | 2AA | 55 | 555 | 88 | | | | | | | | |
| k sec | Extended Block Program ⁽⁴⁾ | 2 | Х | A0 | PA | DATA ⁽⁵⁾ | | | | | | | | | | |
| ploc | Extended Block Read ⁽⁴⁾ | 1 | Ad | DATA ⁽⁵⁾ | | | | | | | | | | | | |
| Extended block sector | Exit Extended Block | 4 | 555 | AA | 2AA | 55 | 555 | 90 | х | 00 | | | | | | |
| Ex | it Protection Command Set ⁽¹⁰⁾ | 2 | Х | 90 | Х | 00 | | | | | | | | | | |

PA program address, Ad address, BAd any address in the block, BKA bank address, RD read data, PWDn password word (n = 0 to 3), PWAn password address (n = 0 to 3), X don't care. All values in the table are in hexadecimal.

- 2. Grey cells represent read cycles. The other cells are write cycles.
- 3. DQ15 to DQ8 are 'don't care' during unlock and command cycles. A22 to A16 are 'don't care' during unlock and command cycles unless an address is required.
- 4. An enter command sequence must be issued prior to any operation. It disables read and write operations from and to block 0. Read and write operations from any other block are allowed.
- 5. DATA = Extended block content.
- ${\bf 6.} \hspace{0.5cm} \hbox{Only one portion of password can be programmed or read by each Password Program command.} \\$
- 7. The password portion can be entered or read in any order as long as the entire 64-bit password is entered or read.
- 8. Protected and unprotected states correspond to 00 and 01, respectively.
- 9. The Clear all NVPBs command programs all NVPBs before erasure in order to prevent the over-erasure of previously cleared non-volatile modify protection bits.
- 10. If an Entry Command Set command is issued, an Exit Protection Command Set command must be issued to return the device to read mode.

Numonyx 41/85

Command interface M29DW128G

Table 12. Program, erase times and program, erase endurance cycles

| | Parameter | · | Min | Typ ⁽¹⁾⁽²⁾ | Max ⁽²⁾ | Unit |
|---|--|--|-----|-----------------------|--------------------|-------|
| Chip Erase | | | | 40 | 400 ⁽³⁾ | S |
| Block Erase (128 kwords) ⁽⁴⁾ | | | | 1 | | S |
| Erase Suspend late | ncy time | | | 25 | 35 | μs |
| Block Erase timeout | 50 | | | μs | | |
| | Single Word Program | | | 16 | | μs |
| Word Program | Write to Buffer Program | $V_{PP}/\overline{WP} = V_{PPH}$ | | 51 | 200 ⁽³⁾ | 110 |
| | (32 words at-a-time) | $V_{PP}/\overline{WP} = V_{IH}$ | | 78 | | μs |
| Chip Program (word | by word) | | | 135 | 400 ⁽³⁾ | S |
| Chip Program (Write | e to Buffer Program) ⁽⁵⁾ | | | 20 | 200 ⁽³⁾ | S |
| Chip Program (Write | e to Buffer Program with V _{PP} /WF | ² = V _{PPH}) ⁽⁵⁾ | | 13 | 50 ⁽³⁾ | S |
| Chip Program (Enha | anced Buffered Program) ⁽⁵⁾ | | | 8 | 40 | S |
| Chip Program (Enha | anced Buffered Program with V _P | | 5 | 25 | S | |
| Program Suspend la | atency time | | 5 | 15 | μs | |
| Program/Erase cycl | es (per block) | 100,000 | | | Cycles | |
| Data retention | | | 20 | | | Years |

^{1.} Typical values measured at room temperature and nominal voltages.

^{2.} Sampled, but not 100% tested.

^{3.} Maximum value measured at worst case conditions for both temperature and V_{CC} after 100,000 program/erase cycles.

^{4.} Block Erase polling cycle time (see Figure 20: Data polling AC waveforms).

^{5.} Intrinsic program timing, that means without the time required to execute the bus cycles to load the program commands.

M29DW128G Registers

8 Registers

The device feature two registers:

 A lock register that allows to configure the memory blocks and extended memory block protection (see Table 14: Block protection status)

 A status register that provides information on the current or previous program or erase operations.

8.1 Lock register

The lock register is a 16-bit one-time programmable register. The bits in the lock register are summarized in *Table 13: Lock register bits*.

See Section 7.3.3: Lock register command set for a description of the commands allowing to read and program the lock register.

8.1.1 Volatile lock boot bit (DQ4)

DQ4 sets the default values for volatile block protection: when programmed, the blocks are protected at power-up.

8.1.2 Password protection mode lock bit (DQ2)

The password protection mode lock bit, DQ2, is one-time programmable. Programming (setting to '0') this bit permanently places the device in password protection mode.

Any attempt to program the password protection mode lock bit when the non-volatile protection mode bit is programmed causes the operation to abort and the device to return to read mode.

8.1.3 Non-volatile protection mode lock bit (DQ1)

The non-volatile protection mode lock bit, DQ1, is one-time programmable. Programming (setting to '0') this bit permanently places the device in non-volatile protection mode.

When shipped from the factory, all parts default to operate in non-volatile protection mode. The memory blocks can be either unprotected (NVPBs set to '1') or protected (NVPBs set to '0'), according to the ordering option that has been chosen.

Any attempt to program the non-volatile protection mode lock bit when the password protection mode bit is programmed causes the operation to abort and the device to return to read mode.

8.1.4 Extended block protection bit (DQ0)

If the device has not been shipped with the extended memory block factory locked, the block can be protected by setting the extended memory block protection bit, DQ0, to '0'. However, this bit is one-time programmable and once protected the extended memory block cannot be unprotected.

The extended memory block protection status can be read in auto select mode by issuing an Auto Select command (see *Table 8: Standard commands*).

43/85

Numonyx

Registers M29DW128G

8.1.5 DQ15 to DQ5 and DQ3 reserved

They are 'don't care'.

Table 13. Lock register bits⁽¹⁾

| DQ15-5 | DQ4 | DQ3 | DQ2 | DQ1 | DQ0 |
|------------|---------------------------|------------|-----------------------------------|---------------------------------------|-------------------------------|
| Don't care | Volatile lock boot bit | Don't care | Password protection mode lock bit | Non-volatile protection mode lock bit | Extended block protection bit |

^{1.} DQ0, DQ1, DQ2 and DQ4 are set to '1' when shipped from the factory.

Table 14. Block protection status

| NVPB lock bit ⁽¹⁾ | Block NVPB ⁽²⁾ | Block VPB ⁽³⁾ | Block protection status | Block protection status |
|---------------------------------|------------------------------|-----------------------------|-------------------------|--|
| 0 | 0 | Х | 01h | Block protected (non-volatile protection through NVPB) |
| 0 | 1 | 1 | 00h | Block unprotected |
| 0 | 1 | 0 | 00h | Block protected (volatile protection through VPB) |
| 1 | 0 | х | 01h | Block protected (non-volatile protection through NVPB) |
| 1 | 1 | 0 | 01h | Block protected (volatile protection through VPB) |
| 1 | 1 | 1 | 00h | Block unprotected |


^{1.} If the NVPB lock bit is set to '0', all NVPBs are locked. If the NVPB lock bit is set to '1', all NVPBs are unlocked.

^{2.} If the block NVPB is set to '0', the block is protected, if set to '1', it is unprotected.

^{3.} If the block VPB is set to '0', the block is protected, if set to '1', it is unprotected.

M29DW128G Registers

Figure 7. Lock register program flowchart

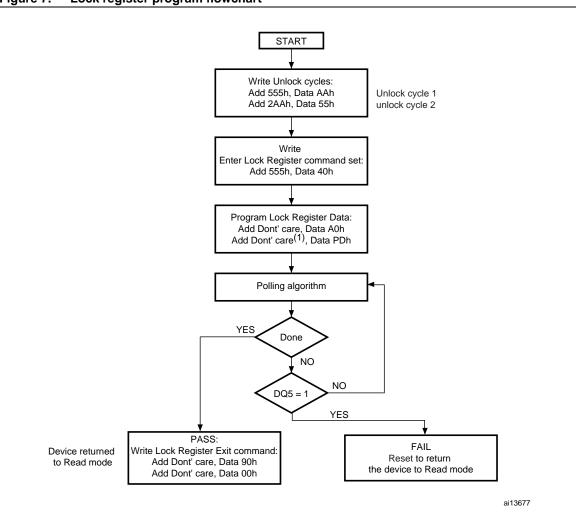

- 1. PD is the programmed data (see Table 13: Lock register bits).
- 2. The lock register can only be programmed once.

Registers M29DW128G

8.2 Status register

The M29DW128G has one status register. The various bits convey information and errors on the current and previous program/erase operation. Bus read operations from any address within the memory, always read the status register during program and erase operations. It is also read during erase suspend when an address within a block being erased is accessed.

The bits in the status register are summarized in *Table 15: Status register bits*.

8.2.1 Data polling bit (DQ7)

The data polling bit can be used to identify whether the program/erase controller has successfully completed its operation or if it has responded to an erase suspend. The data polling bit is output on DQ7 when the status register is read.

During program operations the data polling bit outputs the complement of the bit being programmed to DQ7. After successful completion of the program operation the memory returns to read mode and bus read operations, from the address just programmed, output DQ7, not its complement.

During erase operations the data polling bit outputs '0', the complement of the erased state of DQ7. After successful completion of the erase operation the memory returns to read mode.

In erase suspend mode the data polling bit will output a '1' during a bus read operation within a block being erased. The data polling bit will change from '0' to '1' when the program/erase controller has suspended the erase operation.

Figure 8: Data polling flowchart, gives an example of how to use the data polling bit. A valid address is the address being programmed or an address within the block being erased.

8.2.2 Toggle bit (DQ6)

The toggle bit can be used to identify whether the program/erase controller has successfully completed its operation or if it has responded to an erase suspend. The toggle bit is output on DQ6 when the status register is read.

During a program/erase operation the toggle bit changes from '0' to '1' to '0', etc., with successive bus read operations at any address. After successful completion of the operation the memory returns to read mode.

During erase suspend mode the toggle bit will output when addressing a cell within a block being erased. The toggle bit will stop toggling when the program/erase controller has suspended the erase operation.

Figure 9: Data toggle flowchart, gives an example of how to use the data toggle bit.

8.2.3 Error bit (DQ5)

The error bit can be used to identify errors detected by the program/erase controller. The error bit is set to '1' when a program, block erase or chip erase operation fails to write the correct data to the memory. If the error bit is set a Read/Reset command must be issued

M29DW128G Registers

before other commands are issued. The error bit is output on DQ5 when the status register is read.

Note that the Program command cannot change a bit set to '0' back to '1' and attempting to do so will set DQ5 to '1'. A bus read operation to that address will show the bit is still '0'. One of the erase commands must be used to set all the bits in a block or in the whole memory from '0' to '1'.

8.2.4 Erase timer bit (DQ3)

The erase timer bit can be used to identify the start of program/erase controller operation during a Block Erase command. Once the program/erase controller starts erasing the erase timer bit is set to '1'. Before the program/erase controller starts the erase timer bit is set to '0' and additional blocks to be erased may be written to the command interface. The erase timer bit is output on DQ3 when the status register is read.

8.2.5 Alternative toggle bit (DQ2)

The alternative toggle bit can be used to monitor the program/erase controller during erase operations. The alternative toggle bit is output on DQ2 when the status register is read.

During chip erase and block erase operations the toggle bit changes from '0' to '1' to '0', etc., with successive bus read operations from addresses within the blocks being erased. A protected block is treated the same as a block not being erased. Once the operation completes the memory returns to read mode.

During erase suspend the alternative toggle bit changes from '0' to '1' to '0', etc. with successive bus read operations from addresses within the blocks being erased. Bus read operations to addresses within blocks not being erased will output the memory array data as if in read mode.

After an erase operation that causes the error bit to be set, the alternative toggle bit can be used to identify which block or blocks have caused the error. The alternative toggle bit changes from '0' to '1' to '0', etc. with successive bus read operations from addresses within blocks that have not erased correctly. The alternative toggle bit does not change if the addressed block has erased correctly.

8.3 Buffered program abort bit (DQ1)

The Buffered program abort bit, DQ1, is set to '1' when a write to buffer program or enhanced buffered program operation aborts. The Buffered Program Abort and Reset command must be issued to return the device to read mode (see write to buffer program in Section 7.1: Standard commands).

Registers M29DW128G

Table 15. Status register bits⁽¹⁾


| Operation | Address | DQ7 | DQ6 | DQ5 | DQ3 | DQ2 | DQ1 | R₩ |
|---------------------------------------|----------------------|-----|--------------|---------|--------|--------------|-----|------|
| Program ⁽²⁾ | Bank address | DQ7 | Toggle | 0 | _ | _ | 0 | 0 |
| Program During Erase Suspend | Bank address | DQ7 | Toggle | 0 | _ | - | _ | 0 |
| Buffered Program Abort ⁽²⁾ | Bank address | DQ7 | Toggle | 0 | _ | - | 1 | 0 |
| Program Error | Bank address | DQ7 | Toggle | 1 | _ | - | _ | Hi-Z |
| Chip Erase | Any address | 0 | Toggle | 0 | 1 | Toggle | _ | 0 |
| | Erasing block | 0 | Toggle | 0 | 0 | Toggle | _ | 0 |
| Block Erase before timeout | Non-erasing block | 0 | Toggle | 0 | 0 | No toggle | - | 0 |
| | Erasing block | 0 | Toggle | 0 | 1 | Toggle | _ | 0 |
| Block Erase | Non-erasing block | 0 | Toggle | 0 | 1 | No toggle | - | 0 |
| Erosa Suspend | Erasing block | 1 | No Toggle | 0 | - | Toggle | - | Hi-Z |
| Erase Suspend | Non-erasing block | | Data rea | ad as r | normal | | - | Hi-Z |
| Erase Error | Good block address | 0 | Toggle | 1 | 1 | No toggle | - | Hi-Z |
| Liase Elloi | Faulty block address | 0 | Toggle | 1 | 1 | Toggle | - | Hi-Z |

^{1.} Unspecified data bits should be ignored.

^{2.} DQ7 for write to buffer program and enhanced buffered program is related to the last address location loaded.

M29DW128G Registers


Figure 8. Data polling flowchart

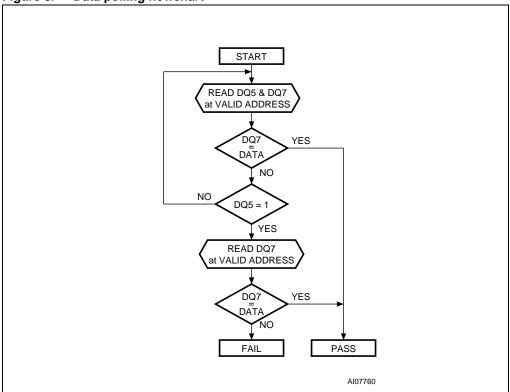

№ numonyx 49/85

Registers M29DW128G

Figure 9. Data toggle flowchart

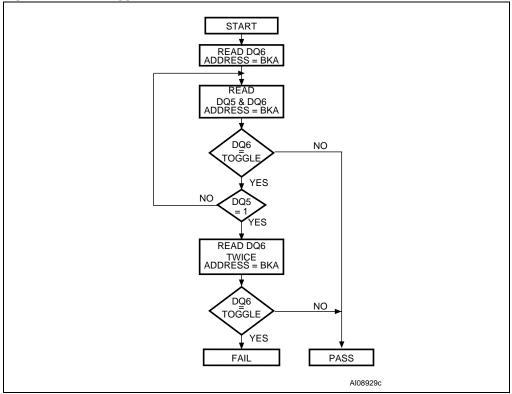

1. BKA=bank address being programmed or erased.

🙌 numonyx

Downloaded from Elcodis.com electronic components distributor

9 Dual operations and multiple bank architecture

The multiple bank architecture of the M29DW128G gives greater flexibility for software developers to split the code and data spaces within the memory array. The dual operations feature simplifies the software management of the device by allowing code to be executed from one bank while another bank is being programmed or erased.

The dual operations feature means that while programming or erasing in one bank, read operations are possible in another bank with zero latency.

Only one bank at a time is allowed to be in program or erase mode. However, certain commands can cross bank boundaries, which means that during an operation only the banks that are not concerned with the cross bank operation are available for dual operations. For example, if a Block Erase command is issued to erase blocks in both bank A and bank B, then only banks C or D are available for read operations while the erase is being executed.

If a read operation is required in a bank, which is programming or erasing, the program or erase operation can be suspended.

Also if the suspended operation was erase then a program command can be issued to another block, so the device can have one block in erase suspend mode, one programming and other banks in read mode.

By using a combination of these features, read operations are possible at any moment.

Table 16 and Table 17 show the dual operations possible in other banks and in the same bank. Note that only the commonly used commands are represented in these tables.

Table 16. Dual operations allowed in other banks⁽¹⁾

| | Commands allowed in another bank | | | | | | | | | | |
|--------------------|----------------------------------|-----------------------------------|----------|-----|---------|-------|--------------------------|-------------------------|--|--|--|
| Status of bank | Read | Read Status Register (2) | atus CFI | | Program | Erase | Program/Erase Suspend | Program/Erase Resume | | | |
| Idle | Yes | Yes ⁽³⁾ | Yes | Yes | Yes | Yes | Yes ⁽³⁾ | Yes ⁽⁴⁾ | | | |
| Programming | Yes | No | No | No | - | - | No | No | | | |
| Erasing | Yes | No | No | No | - | - | No | No | | | |
| Program suspended | Yes | No | Yes | Yes | No | No | _ | No | | | |
| Erase suspended | Yes | No | Yes | Yes | Yes | No | - | Yes ⁽⁵⁾ | | | |

- If several banks are involved in a program or erase operation, then only the banks that are not concerned with the
 operation are available for dual operations.
- 2. Read Status Register is not a command. The status register can be read during a block program or erase operation.
- 3. Only after a program or erase operation in that bank.
- 4. Only after a Program or Erase Suspend command in that bank.
- 5. Only an erase resume is allowed if the bank was previously in erase suspend mode.

Table 17. Dual operations allowed in same bank

| | | Commands allowed in another bank | | | | | | | | | |
|--------------------|--------------------|-----------------------------------|-------------------|----------------|--------------------|-------|------------------------------|-------------------------|--|--|--|
| Status of bank | Read | Read Status Register (1) | Read CFI Query | Auto Select | Program | Erase | Program/ Erase Suspend | Program/Erase Resume | | | |
| Idle | Yes | Yes | Yes | Yes | Yes | Yes | Yes ⁽²⁾ | Yes ⁽³⁾ | | | |
| Programming | No | Yes | No | No | _ | _ | Yes ⁽⁴⁾ | - | | | |
| Erasing | No | Yes | No | No | _ | No | Yes ⁽⁵⁾ | _ | | | |
| Program suspended | Yes | No | Yes | Yes | No | - | - | Yes | | | |
| Erase suspended | Yes ⁽⁶⁾ | Yes ⁽⁷⁾ | Yes | Yes | Yes ⁽⁶⁾ | No | _ | Yes | | | |

- 1. Read status register is not a command. The status register can be read during a block program or erase operation.
- 2. Only after a program or erase operation in that bank.
- 3. Only after a Program or Erase Suspend command in that bank.
- 4. Only a program suspend.
- 5. Only an erase suspend.
- 6. Not allowed in the block or word that is being erased or programmed.
- 7. The status register can be read by addressing the block being erase suspended.

M29DW128G Maximum ratings

10 Maximum ratings

Stressing the device above the rating listed in *Table 18: Absolute maximum ratings* may cause permanent damage to the device. Exposure to absolute maximum rating conditions for extended periods may affect device reliability. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the operating sections of this specification is not implied.

Table 18. Absolute maximum ratings

| Symbol | Parameter | Min | Max | Unit |
|---------------------------------|---|------|-----------------------|------|
| T _{BIAS} | Temperature under bias | -50 | 125 | °C |
| T _{STG} | Storage temperature | -65 | 150 | °C |
| V _{IO} | Input or output voltage ⁽¹⁾⁽²⁾ | -0.6 | V _{CC} + 0.6 | V |
| V _{CC} | Supply voltage | -0.6 | 4 | V |
| V _{CCQ} | Input/output supply voltage | -0.6 | 4 | V |
| V _{ID} | Identification voltage | -0.6 | 10.5 | V |
| V _{PPH} ⁽³⁾ | Program voltage | -0.6 | 10.5 | V |

- 1. Minimum voltage may undershoot to -2 V during transition and for less than 20 ns during transitions.
- 2. Maximum voltage may overshoot to V_{CC} + 2 V during transition and for less than 20 ns during transitions.
- 3. V_{PPH} must not remain at 9 V for more than a total of 80 hrs.

11 DC and AC parameters

This section summarizes the operating measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics tables that follow, are derived from tests performed under the measurement conditions summarized in *Table 19: Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the operating conditions when relying on the quoted parameters.

Table 19. Operating and AC measurement conditions

| Parameter | 70 or | 60 ns | 80 | Unit | |
|---|-----------------------|------------------|-----------------|------------------|----|
| | Min | Max | Min | Max | |
| V _{CC} supply voltage | 2.7 | 3.6 | 2.7 | 3.6 | V |
| V_{CCQ} supply voltage ($V_{CCQ} \le V_{CC}$) | 2.7 | 3.6 | 1.65 | 3.6 | V |
| Ambient operating temperature | - 40 | 85 | - 40 | 85 | °C |
| Load capacitance (C _L) | 3 | 80 | 3 | 0 | pF |
| Input rise and fall times | | 10 | | 10 | ns |
| Input pulse voltages | 0 to V _{CCQ} | | 0 to \ | / _{CCQ} | V |
| Input and output timing ref. voltages | V _C | _{CQ} /2 | V _{CC} | V | |

Figure 10. AC measurement load circuit

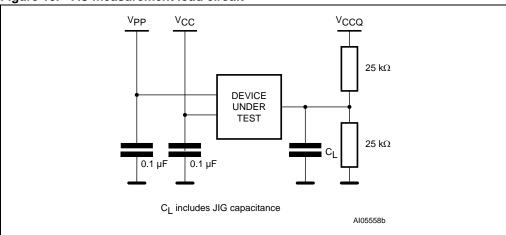


Figure 11. AC measurement I/O waveform

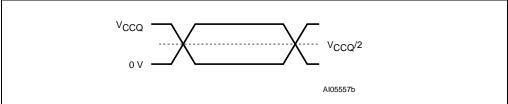
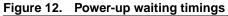


Table 20. Power-up waiting timings

| Symbol | Parameter | M29DW128 | Unit | | |
|---------------------|---|----------|-------------|-------|-------|
| Symbol | Farameter | | 70 or 60 ns | 80 ns | Offic |
| t _{VCHEL} | V _{CC} ⁽¹⁾ High to Chip Enable Low | Min | 55 | μs | |
| t _{VCQHEL} | V _{CCQ} ⁽¹⁾ High to Chip Enable Low | Min | 55 | | μs |
| t _{VCHWL} | V _{CC} High to Write Enable Low | Min | 500 | | μs |
| t _{VCQHWL} | V _{CCQ} High to Write Enable Low Min 500 | | | | μs |

^{1.} V_{CC} and V_{CCQ} ramps must be synchronized during power-up.



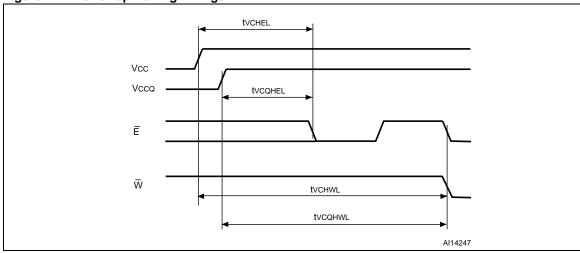


Table 21. Device capacitance⁽¹⁾

| Symbol | Parameter | Test condition | Min | Max | Unit |
|------------------|--------------------|------------------------|-----|-----|------|
| C _{IN} | Input capacitance | V _{IN} = 0 V | | 6 | pF |
| C _{OUT} | Output capacitance | V _{OUT} = 0 V | | 12 | pF |

^{1.} Sampled only, not 100% tested.

Table 22. DC characteristics

| Symbol | Para | meter | Test co | ndition | Min | Тур | Max | Unit |
|---------------------------------|---|-------------------|---|--|----------------------|-----|-----------------------|------|
| I _{LI} ⁽¹⁾ | Input leakage cu | ırrent | 0 V ≤ V _I | $N \le V_{CC}$ | | | ±1 | μΑ |
| I _{LO} | Output leakage | current | 0 V ≤ V _O | _{UT} ≤ V _{CC} | | | ±1 | μΑ |
| 1 | Read current | Random read | $\overline{E} = V_{IL},$ f = 6 | == = | | | 10 | mA |
| I _{CC1} | Nead Current | Page read | $\overline{E} = V_{IL}, \overline{G} = V_{IH},$ f = 10 MHz | | | | 15 | mA |
| I _{CC2} | Supply current (| standby) | $\overline{E} = V_{CCQ} \pm 0.2 \text{ V},$ $\overline{RP} = V_{CCQ} \pm 0.2 \text{ V}$ | | | | 100 | μA |
| I _{CC3} ⁽²⁾ | Supply current (| program/erase) | Program/Erase controller active | | | | 20 | mA |
| | | | $V_{PP}/\overline{WP} = V_{PPH}$ | | | | 20 | mA |
| I _{PP1} | Read or standby | | V _{PP} /WF | $\overline{S} \leq V_{CC}$ | | 1 | 5 | μΑ |
| I _{PP2} | Program current | Reset | RP = V _S | S ± 0.2 V | | 1 | 5 | μΑ |
| | current (Program) | Program | V _{PP} /WP = | 12 V ± 5% | | 1 | 10 | mA |
| I _{PP3} | | operation ongoing | V _{PP} /WF | | | 1 | 5 | μΑ |
| | Program | Erase | V _{PP} /WP = | 12 V ± 5% | | 3 | 10 | mA |
| I _{PP4} | current (Erase) | operation ongoing | V _{PP} /WF | = V _{CC} | | 1 | 5 | μΑ |
| V _{IL} | Input Low voltag | je | V _{CC} ≥ | 2.7 V | -0.5 | | 0.3V _{CCQ} | V |
| V _{IH} | Input High voltag | ge | V _{CC} ≥ | 2.7 V | 0.7V _{CCQ} | | V _{CCQ} +0.4 | V |
| V _{OL} | Output Low volta | age | I _{OL} = 100 μA, \ V _{CCQ} = \ | $V_{CC} = V_{CC(min)},$ $V_{CCQ(min)}$ | | | 0.15V _{CCQ} | V |
| V _{OH} | Output High voltage | | I _{OH} = 100 μA, \ V _{CCQ} = \ | $V_{CC} = V_{CC(min)},$ $V_{CCQ(min)}$ | 0.85V _{CCQ} | | | ٧ |
| V _{ID} | Identification vol | tage | | | 8.5 | | 9.5 | V |
| V _{PPH} | Voltage for V _{PP} /\(\bar{V}\) acceleration | VP program | | | 8.5 | | 9.5 | V |
| V _{LKO} ⁽²⁾ | Program/Erase l voltage | ockout supply | | | 2.3 | | 2.5 | V |

^{1.} The maximum input leakage current is ±5 $\,\mu\text{A}$ on the V_{PP}/\overline{WP} pin.

^{2.} Sampled only, not 100% tested.

57/85

Figure 13. Random read AC waveforms

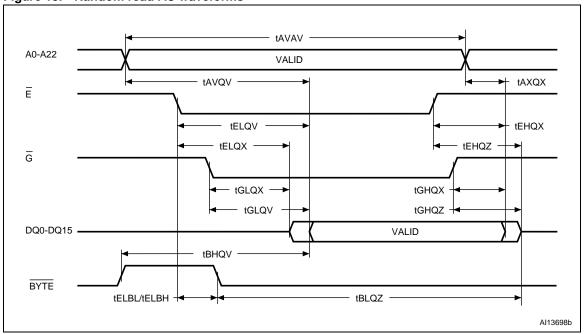


Figure 14. Page read AC waveforms

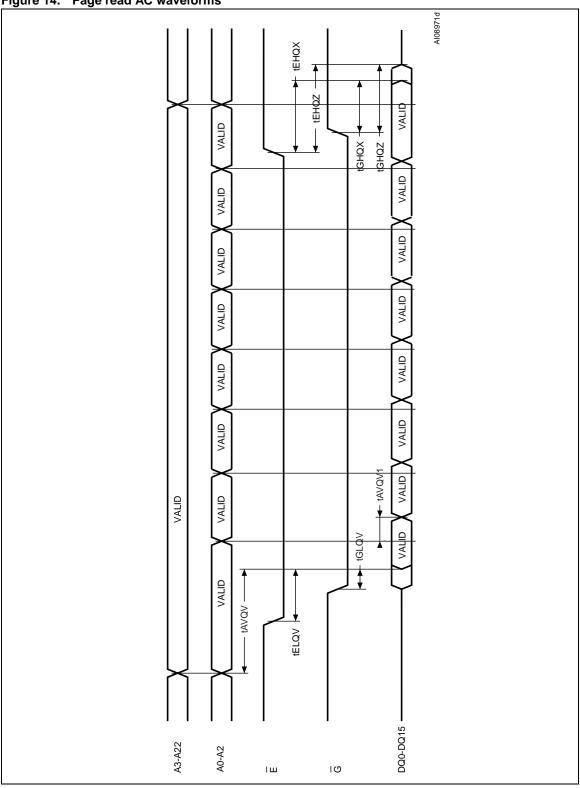


Table 23. Read AC characteristics

| | | | | | | M29DW1 | 28G | |
|---|-------------------|---|---|-----|--|--|---|------|
| Symbol | Alt. | Parameter | Tes condi | | 60 ns V _{CCQ} =V _{CC} | 70 ns V _{CCQ} =V _{CC} | 80 ns V _{CCQ} =1.65 V to V _{CC} | Unit |
| t _{AVAV} | t _{RC} | Address Valid to Next Address Valid | $\overline{\overline{E}} = V_{IL}$ $\overline{G} = V_{IL}$ | Min | 60 | 70 | 80 | ns |
| t _{AVQV} | t _{ACC} | Address Valid to Output Valid | $\overline{\overline{E}} = V_{IL}$ $\overline{G} = V_{IL}$ | Max | 60 | 70 | 80 | ns |
| t _{AVQV1} | t _{PAGE} | Address Valid to Output Valid (Page) | $\overline{\overline{E}} = V_{IL}$ $\overline{G} = V_{IL}$ | Max | 25 | 25 | 30 | ns |
| t _{ELQX} ⁽¹⁾ | t _{LZ} | Chip Enable Low to Output Transition | G = V _{IL} | Min | 0 | 0 | 0 | ns |
| t _{ELQV} | t _Ē | Chip Enable Low to Output Valid | G = V _{IL} | Max | 60 | 70 | 80 | ns |
| t _{GLQX} ⁽¹⁾ | t _{OLZ} | Output Enable Low to Output Transition | $\overline{E} = V_{IL}$ | Min | 0 | 0 | 0 | ns |
| t _{GLQV} | t _{OE} | Output Enable Low to Output Valid | $\overline{E} = V_IL$ | Max | 25 | 25 | 30 | ns |
| t _{EHQZ} ⁽¹⁾ | t _{HZ} | Chip Enable High to Output Hi-Z | G = V _{IL} | Max | 20 | 20 | 30 | ns |
| t _{GHQZ} ⁽¹⁾ | t _{DF} | Output Enable High to Output Hi-Z | $\overline{E} = V_IL$ | Max | 20 | 20 | 20 | ns |
| t _{EHQX} t _{GHQX} t _{AXQX} | t _{OH} | Chip Enable, Output Enable or Address Transition to Output Transition | | Min | 0 | 0 | 0 | ns |
| t _{ELBL} | t _{ELFL} | Chip Enable to BYTE Low or High | | Max | 5 | 5 | 5 | ns |
| t _{BLQZ} | t _{FLQZ} | BYTE Low to Output Hi-Z | | Max | 25 | 25 | 25 | ns |
| t _{BHQV} | t _{FHQV} | BYTE High to Output Valid | | Max | 30 | 30 | 30 | ns |

^{1.} Sampled only, not 100% tested.

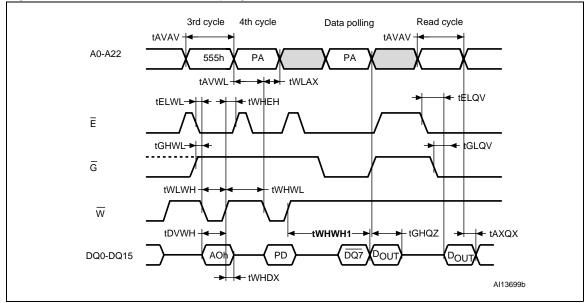


Figure 15. Write enable controlled program waveforms

- Only the third and fourth cycles of the Program command are represented. The Program command is followed by the check
 of status register data polling bit and by a read operation that outputs the data, DOUT, programmed by the previous
 Program command.
- 2. PA is the address of the memory location to be programmed. PD is the data to be programmed.
- 3. DQ7 is the complement of the data bit being programmed to DQ7 (see Section 8.2.1: Data polling bit (DQ7)).
- 4. See Table 24: Write AC characteristics, write enable controlled, Table 25: Write AC characteristics, chip enable controlled and Table 23: Read AC characteristics for details on the timings.

🙌 numonyx

Table 24. Write AC characteristics, write enable controlled

| Sumbol | Alt | Parameter | | | 29DW128 | G | Unit |
|----------------------------------|-------------------|--|---|-------|---------|------|------|
| Symbol | T arameter | | 60 ns | 70 ns | 80 ns | Unit | |
| t _{AVAV} | t _{WC} | Address Valid to Next Address Valid | Min | 60 | 70 | 80 | ns |
| t _{ELWL} | t _{CS} | Chip Enable Low to Write Enable Low | Min | 0 | 0 | 0 | ns |
| t _{WLWH} | t _{WP} | Write Enable Low to Write Enable High | Min | 35 | 35 | 35 | ns |
| t _{DVWH} | t _{DS} | Input Valid to Write Enable High | Min | 45 | 45 | 45 | ns |
| t _{WHDX} | t _{DH} | Write Enable High to Input Transition Min | | 0 | 0 | 0 | ns |
| t _{WHEH} | t _{CH} | Write Enable High to Chip Enable High | Write Enable High to Chip Enable High Min | | 0 | 0 | ns |
| t _{WHWL} | t _{WPH} | Write Enable High to Write Enable Low | Min | 30 | 30 | 30 | ns |
| t _{AVWL} | t _{AS} | Address Valid to Write Enable Low | Min | 0 | 0 | 0 | ns |
| t _{WLAX} | t _{AH} | Write Enable Low to Address Transition | Min | 45 | 45 | 45 | ns |
| t _{GHWL} | | Output Enable High to Write Enable Low | Min | 0 | 0 | 0 | ns |
| t _{WHGL} | t _{OEH} | Write Enable High to Output Enable Low Min | | 0 | 0 | 0 | ns |
| t _{WHRL} ⁽¹⁾ | t _{BUSY} | Program/Erase Valid to RB Low Max | | 30 | 30 | 30 | ns |
| t _{VCHEL} | t _{VCS} | V _{CC} High to Chip Enable Low | Min | 50 | 50 | 50 | μs |

^{1.} Sampled only, not 100% tested.

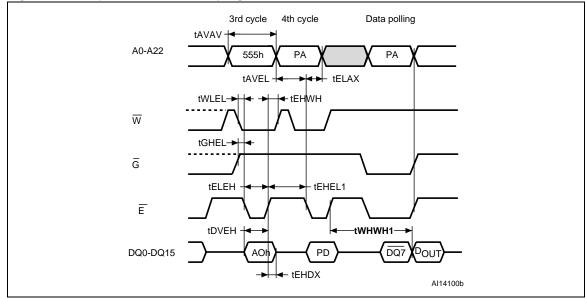


Figure 16. Chip enable controlled program waveforms

- Only the third and fourth cycles of the Program command are represented. The Program command is followed by the check
 of status register data polling bit.
- 2. PA is the address of the memory location to be programmed. PD is the data to be programmed.
- 3. DQ7 is the complement of the data bit being programmed to DQ7 (see Section 8.2.1: Data polling bit (DQ7)).
- 4. See Table 24: Write AC characteristics, write enable controlled, Table 25: Write AC characteristics, chip enable controlled and Table 23: Read AC characteristics for details on the timings.

Table 25. Write AC characteristics, chip enable controlled

| Symbol | Alt. | Parameter | | P | Unit | | |
|-------------------|------------------|---------------------------------------|-----|-------|-------|-------|------|
| Symbol | AIL. | | | 60 ns | 70 ns | 80 ns | Onit |
| t _{AVAV} | t _{WC} | Address Valid to Next Address Valid | Min | 60 | 70 | 80 | ns |
| t _{WLEL} | t _{WS} | Write Enable Low to Chip Enable Low | Min | 0 | 0 | 0 | ns |
| t _{ELEH} | t _{CP} | Chip Enable Low to Chip Enable High | Min | 35 | 35 | 35 | ns |
| t _{DVEH} | t _{DS} | Input Valid to Chip Enable High | Min | 45 | 45 | 45 | ns |
| t _{EHDX} | t _{DH} | Chip Enable High to Input Transition | Min | 0 | 0 | 0 | ns |
| t _{EHWH} | t _{WH} | Chip Enable High to Write Enable High | Min | 0 | 0 | 0 | ns |
| t _{EHEL} | t _{CPH} | Chip Enable High to Chip Enable Low | Min | 30 | 30 | 30 | ns |
| t _{AVEL} | t _{AS} | Address Valid to Chip Enable Low | Min | 0 | 0 | 0 | ns |
| t _{ELAX} | t _{AH} | Chip Enable Low to Address Transition | Min | 45 | 45 | 45 | ns |
| t _{GHEL} | | Output Enable High Chip Enable Low | Min | 0 | 0 | 0 | ns |

Figure 17. Reset AC waveforms (no program/erase ongoing)

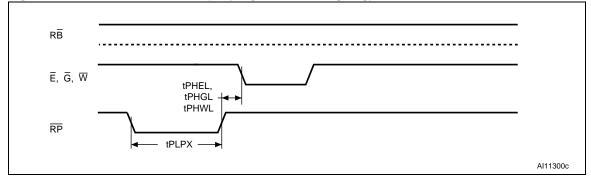


Figure 18. Reset during program/erase operation AC waveforms

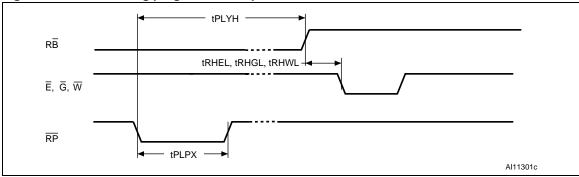


Table 26. Reset AC characteristics

| Symbol | | Alt. | Parameter | M29DW128G | | | Unit | |
|-------------------------------------|------|--------------------|--|-------------------|----|----|-------|-------|
| Symbo | Ji | Ait. | Falanielei | | | | 80 ns | Oiiit |
| t _{PLYH} (1 | 1) | t _{READY} | RP Low to read mode, during program or erase | Max | 50 | 50 | 50 | μs |
| t _{PLPX} | | t _{RP} | RP pulse width | P pulse width Min | | | 10 | μs |
| t _{PHEL} , t _{PH} | ქGL, | t _{RH} | RP High to Write Enable Low, Chip Enable Low, Output Enable Low | Min | 50 | 50 | 50 | ns |
| | | t | RP Low to standby mode, during read mode | Min | 10 | 10 | 10 | μs |
| | | t _{RPD} | RP Low to standby mode, during program or erase | Min | 50 | 50 | 50 | μs |
| t _{RHEL} , t _{RH} | IGL, | t _{RB} | RB High to Write Enable Low, Chip Enable Low, Output Enable Low | Min | 0 | 0 | 0 | ns |

^{1.} Sampled only, not 100% tested.

Figure 19. Accelerated program timing waveforms


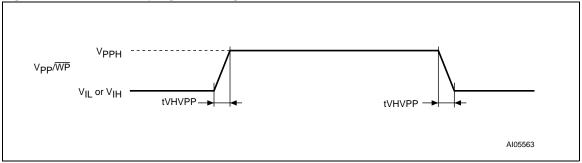


Figure 20. Data polling AC waveforms

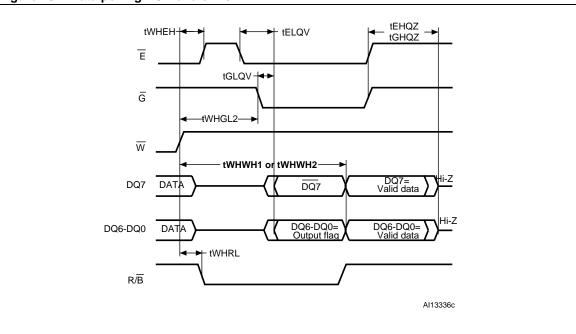

- 1. DQ7 returns valid data bit when the ongoing Program or Erase command is completed.
- See Table 27: Accelerated program and data polling/data toggle AC characteristics and Table 23: Read AC characteristics for details on the timings.

🙌 numonyx

64/85

Table 27. Accelerated program and data polling/data toggle AC characteristics

| Symbol | Λ 14 | Alt. Parameter | | | M29DW128G | | | |
|---|-------------------|---|-----|-----|-----------|-------|------|--|
| Syllibol | Ait. | | | | 70 ns | 80 ns | Unit | |
| t _{VHVPP} | | V _{PP} /WP raising and falling time | Min | 250 | 250 | 250 | ns | |
| t _{AXGL} | t _{ASO} | Address setup time to Output Enable Low during toggle bit polling | Min | 10 | 10 | 10 | ns | |
| t _{GHAX,} t _{EHAX} | t _{AHT} | Address hold time from Output Enable during toggle bit polling | Min | 10 | 10 | 10 | ns | |
| t _{EHEL2} | t _{EPH} | Chip Enable High during toggle bit polling | Min | 10 | 10 | 10 | ns | |
| t _{WHGL2,} t _{GHGL2} | t _{OEH} | Output hold time during data and toggle bit polling | Min | 20 | 20 | 20 | ns | |
| t _{WHRL} | t _{BUSY} | Program/Erase Valid to RB Low | Max | 30 | 30 | 30 | ns | |

Package mechanical M29DW128G

12 Package mechanical

To meet environmental requirements, Numonyx offers the M29DW128G in ECOPACK[®] packages. ECOPACK packages are lead-free. The category of second level Interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97. The maximum ratings related to soldering conditions are also marked on the inner box label.

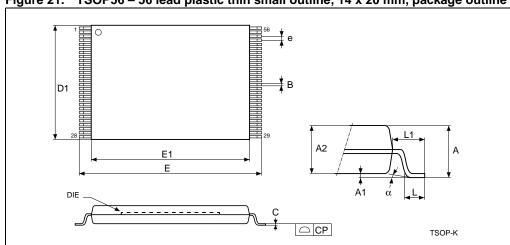


Figure 21. TSOP56 - 56 lead plastic thin small outline, 14 x 20 mm, package outline

1. Drawing is not to scale.

Table 28. TSOP56 – 56 lead plastic thin small outline, 14 x 20 mm, package mechanical data

| Complete | | Millimeters | | | Inches | |
|----------|-------|-------------|-------|-------|--------|-------|
| Symbol | Тур | Min | Max | Тур | Min | Max |
| А | | | 1.20 | | | 0.047 |
| A1 | 0.10 | 0.05 | 0.15 | 0.004 | 0.002 | 0.006 |
| A2 | 1.00 | 0.95 | 1.05 | 0.039 | 0.037 | 0.041 |
| В | 0.22 | 0.17 | 0.27 | 0.009 | 0.007 | 0.011 |
| С | | 0.10 | 0.21 | | 0.004 | 0.008 |
| СР | | | 0.10 | | | 0.004 |
| D1 | 14.00 | 13.90 | 14.10 | 0.551 | 0.547 | 0.555 |
| E | 20.00 | 19.80 | 20.20 | 0.787 | 0.780 | 0.795 |
| E1 | 18.40 | 18.30 | 18.50 | 0.724 | 0.720 | 0.728 |
| е | 0.50 | - | _ | 0.020 | - | - |
| L | 0.60 | 0.50 | 0.70 | 0.024 | 0.020 | 0.028 |
| α | 3 | 0 | 5 | 3 | 0 | 5 |

M29DW128G Package mechanical

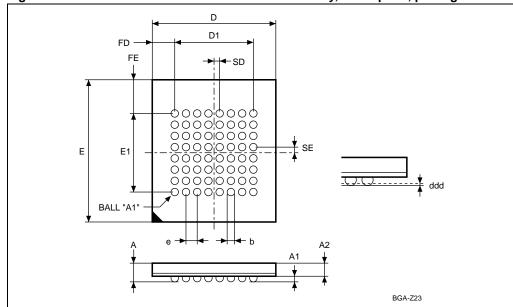


Figure 22. TBGA64 10 x 13 mm - 8 x 8 active ball array, 1 mm pitch, package outline

1. Drawing is not to scale.

Table 29. TBGA64 10 x 13 mm - 8 x 8 active ball array, 1 mm pitch, package mechanical data


| Symbol | | millimeters | | | | | |
|--------|-------|-------------|-------|-------|-------|-------|--|
| Symbol | Тур | Min | Max | Тур | Min | Max | |
| Α | | | 1.20 | | | 0.047 | |
| A1 | 0.30 | 0.20 | 0.35 | 0.012 | 0.008 | 0.014 | |
| A2 | 0.80 | | | 0.031 | | | |
| b | | 0.35 | 0.50 | | 0.014 | 0.020 | |
| D | 10.00 | 9.90 | 10.10 | 0.394 | 0.390 | 0.398 | |
| D1 | 7.000 | _ | _ | 0.276 | - | - | |
| ddd | | | 0.10 | | | 0.004 | |
| е | 1.00 | - | _ | 0.039 | _ | - | |
| Е | 13.00 | 12.90 | 13.10 | 0.512 | 0.508 | 0.516 | |
| E1 | 7.00 | _ | _ | 0.276 | _ | - | |
| FD | 1.50 | _ | _ | 0.059 | _ | - | |
| FE | 3.00 | _ | _ | 0.118 | _ | - | |
| SD | 0.50 | _ | _ | 0.020 | _ | - | |
| SE | 0.50 | _ | - | 0.020 | _ | - | |

Numonyx 67/85

Ordering information M29DW128G

13 Ordering information

Table 30. Ordering information scheme

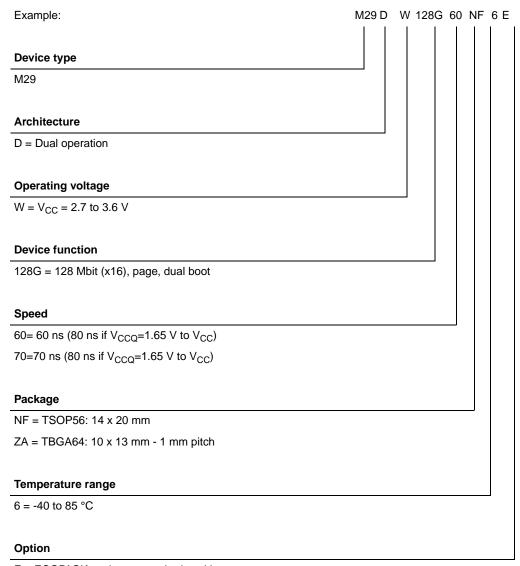

E = ECOPACK package, standard packing

F = ECOPACK package, tape & reel packing

Note: This product is also available with the extended block factory locked.

Devices are shipped from the factory with the memory content bits erased to '1'.

For a list of available options (speed, package, etc.) or for further information on any aspect of this device, please contact your nearest Numonyx sales office.

Appendix A Block addresses and read/modify protection groups

Table 31. Block addresses

| Bank | Block | Protection group | Block size (Kwords) | 16-bit address range (in hexadecimal) |
|--------|-------|------------------|------------------------|--|
| | 0 | Protection group | 32 | 0000000-0007FFF |
| | 1 | Protection group | 32 | 0008000-000FFFF |
| | 2 | Protection group | 32 | 0010000-0017FFF |
| | 3 | Protection group | 32 | 0018000-001FFFF |
| | 4 | Protection group | 128 | 0020000-003FFFF |
| Bank A | 5 | Protection group | 128 | 0040000-005FFFF |
| | 6 | Protection group | 128 | 0060000-007FFFF |
| | 7 | Protection group | 128 | 0080000-009FFFF |
| | 8 | Protection group | 128 | 00A0000-00BFFFF |
| | 9 | Protection group | 128 | 00C0000-00DFFFF |
| | 10 | Protection group | 128 | 00E0000-00FFFF |

Table 31. Block addresses (continued)

| Bank | Block | Protection group | Block size (Kwords) | 16-bit address range (in hexadecimal) |
|--------|-------|------------------|------------------------|--|
| | 11 | Protection group | 128 | 0100000-011FFFF |
| | 12 | Protection group | 128 | 0120000-013FFFF |
| | 13 | Protection group | 128 | 0140000-015FFFF |
| | 14 | Protection group | 128 | 0160000-017FFFF |
| | 15 | Protection group | 128 | 0180000-019FFFF |
| | 16 | Protection group | 128 | 01A0000-01BFFFF |
| | 17 | Protection group | 128 | 01C0000-01DFFFF |
| | 18 | Protection group | 128 | 01E0000-01FFFFF |
| | 19 | Protection group | 128 | 0200000-021FFFF |
| | 20 | Protection group | 128 | 0220000-023FFFF |
| | 21 | Protection group | 128 | 0240000-025FFFF |
| Bank B | 22 | Protection group | 128 | 0260000-027FFFF |
| вапк в | 23 | Protection group | 128 | 0280000-029FFFF |
| | 24 | Protection group | 128 | 02A0000-02BFFFF |
| | 25 | Protection group | 128 | 02C0000-02DFFFF |
| | 26 | Protection group | 128 | 02E0000-02FFFF |
| | 27 | Protection group | 128 | 0300000-031FFFF |
| | 28 | Protection group | 128 | 0320000-033FFFF |
| | 29 | Protection group | 128 | 0340000-035FFFF |
| | 30 | Protection group | 128 | 0360000-037FFFF |
| | 31 | Protection group | 128 | 0380000-039FFFF |
| | 32 | Protection group | 128 | 03A0000-03BFFFF |
| | 33 | Protection group | 128 | 03C0000-03DFFFF |
| | 34 | Protection group | 128 | 03E0000-03FFFFF |

Table 31. Block addresses (continued)

| Table 31. | | | | | | | |
|-----------|-------|------------------|------------------------|--|--|--|--|
| Bank | Block | Protection group | Block size (Kwords) | 16-bit address range (in hexadecimal) | | | |
| | 35 | Protection group | 128 | 0400000-041FFFF | | | |
| | 36 | Protection group | 128 | 0420000-043FFFF | | | |
| | 37 | Protection group | 128 | 0440000-045FFFF | | | |
| | 38 | Protection group | 128 | 0460000-047FFF | | | |
| | 39 | Protection group | 128 | 0480000-049FFFF | | | |
| | 40 | Protection group | 128 | 04A0000-04BFFFF | | | |
| | 41 | Protection group | 128 | 04C0000-04DFFFF | | | |
| | 42 | Protection group | 128 | 04E0000-04FFFF | | | |
| | 43 | Protection group | 128 | 0500000-051FFFF | | | |
| | 44 | Protection group | 128 | 0520000-053FFFF | | | |
| | 45 | Protection group | 128 | 0540000-055FFFF | | | |
| Bank C | 46 | Protection group | 128 | 0560000-057FFF | | | |
| Dalik C | 47 | Protection group | 128 | 0580000-059FFFF | | | |
| | 48 | Protection group | 128 | 05A0000-05BFFFF | | | |
| | 49 | Protection group | 128 | 05C0000-05DFFFF | | | |
| | 50 | Protection group | 128 | 05E0000-05FFFF | | | |
| | 51 | Protection group | 128 | 0600000-061FFFF | | | |
| | 52 | Protection group | 128 | 0620000-063FFFF | | | |
| | 53 | Protection group | 128 | 0640000-065FFFF | | | |
| | 54 | Protection group | 128 | 0660000-067FFF | | | |
| | 55 | Protection group | 128 | 0680000-069FFFF | | | |
| | 56 | Protection group | 128 | 06A0000-06BFFFF | | | |
| | 57 | Protection group | 128 | 06C0000-06DFFFF | | | |
| | 58 | Protection group | 128 | 06E0000-06FFFF | | | |

Table 31. Block addresses (continued)

| Bank | Block | Protection group | Block size (Kwords) | 16-bit address range (in hexadecimal) |
|--------|-------|------------------|------------------------|--|
| | 59 | Protection group | 128 | 0700000-071FFFF |
| | 60 | Protection group | 128 | 0720000-073FFFF |
| | 61 | Protection group | 128 | 0740000-075FFFF |
| | 62 | Protection group | 128 | 0760000-077FFFF |
| | 63 | Protection group | 128 | 0780000-079FFFF |
| Bank D | 64 | Protection group | 128 | 07A0000-07BFFFF |
| | 65 | Protection group | 128 | 07C0000-07DFFFF |
| | 66 | Protection group | 32 | 07E0000-07E7FFF |
| | 67 | Protection group | 32 | 07E8000-07EFFFF |
| | 68 | Protection group | 32 | 07F0000-07F7FFF |
| | 69 | Protection group | 32 | 07F8000-07FFFF |

Appendix B Common flash interface (CFI)

The common flash interface is a JEDEC approved, standardized data structure that can be read from the flash memory device. It allows a system software to query the device to determine various electrical and timing parameters, density information and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the Read CFI Query command is issued, the memory enters read CFI query mode and read operations output the CFI data. *Table 32*, *Table 33*, *Table 34*, *Table 35*, *Table 36* and *Table 37* show the addresses (A0-A7) used to retrieve the data. The CFI data structure also contains a security area where a 64-bit unique security number is written (see *Table 37*: *Security code area*). This area can be accessed only in read mode by the final user. It is impossible to change the security number after it has been written by Numonyx.

Table 32. Query structure overview⁽¹⁾

| Address | Sub-section name | Description |
|---------|---|---|
| 10h | CFI query identification string | Command set ID and algorithm data offset |
| 1Bh | System interface information | Device timing & voltage information |
| 27h | Device geometry definition | Flash device layout |
| 40h | Primary algorithm-specific extended query table | Additional information specific to the primary algorithm (optional) |
| 61h | Security code area | 64-bit unique device number |

^{1.} Query data are always presented on the lowest order data outputs.

Table 33. CFI query identification string⁽¹⁾

| Address | Data | Description | Value |
|---------|-------|---|------------|
| 10h | 0051h | | 'Q' |
| 11h | 0052h | Query unique ASCII string 'QRY' | 'R' |
| 12h | 0059h | | 'Y' |
| 13h | 0002h | Primary algorithm command set and control interface ID code 16 bit ID | Spansion |
| 14h | 0000h | code defining a specific algorithm | compatible |
| 15h | 0040h | Address for primary algorithm extended guery table (see Table 26) | P = 40h |
| 16h | 0000h | Address for primary algorithm extended query table (see <i>Table 36</i>) | P = 40H |
| 17h | 0000h | Alternate vendor command set and control interface ID code second | NA |
| 18h | 0000h | vendor - specified algorithm supported | NA . |
| 19h | 0000h | Address for alternate algorithm extended quary table | NA |
| 1Ah | 0000h | Address for alternate algorithm extended query table | INA |

^{1.} Query data are always presented on the lowest order data outputs (DQ7-DQ0) only. DQ8-DQ15 are '0'.

Table 34. CFI query system interface information⁽¹⁾

| Address | Data | Description | Value |
|---------|-------|--|--------|
| 1Bh | 0027h | V _{CC} logic supply minimum program/erase voltage bit 7 to 4 value in volts bit 3 to 0 value in 100 mV | 2.7 V |
| 1Ch | 0036h | V _{CC} logic supply maximum program/erase voltage bit 7 to 4BCD value in volts bit 3 to 0BCD value in 100 mV | 3.6 V |
| 1Dh | 0085h | V _{PPH} [programming] supply minimum program/erase voltage bit 7 to 4 value in volts bit 3 to 0 value in 100 mV | 8.5 V |
| 1Eh | 0095h | V _{PPH} [programming] supply maximum program/erase voltage bit 7 to 4 value in volts bit 3 to 0 value in 100 mV | 9.5 V |
| 1Fh | 0004h | 1Fh 3Eh 0004h typical timeout for single byte/word program = 2^{n} µs | 16 µs |
| 20h | 0004h | 20h 40h 0004h typical timeout for minimum size write buffer program = $2^n \mu s$ | 16 µs |
| 21h | 000Ah | Typical timeout for individual block erase = 2 ⁿ ms | 1 s |
| 22h | 0010h | Typical timeout for full Chip Erase = 2 ⁿ ms | 40 s |
| 23h | 0004h | Maximum timeout for word program = 2 ⁿ times typical | 200 µs |
| 24h | 0002h | Maximum timeout for write buffer program = 2 ⁿ times typical | 200 µs |
| 25h | 0004h | Maximum timeout per individual block erase = 2 ⁿ times typical | 4.6 s |
| 26h | 0004h | Maximum timeout for Chip Erase = 2 ⁿ times typical | 400 s |

^{1.} The values given in the above table are valid for both packages.

Table 35. Device geometry definition

| Address | Data | Description | Value |
|--------------------------|----------------------------------|--|-------------------------|
| 27h | 0018h | Device size = 2 ⁿ in number of bytes | 16 Mbytes |
| 28h 29h | 0001h 0000h | Flash device interface code description | x16 async. |
| 2Ah 2Bh | 0006h 0000h | Maximum number of bytes in multiple-byte program or page= 2 ⁿ | 64 |
| 2Ch | 0003h | Number of erase block regions. It specifies the number of regions containing contiguous erase blocks of the same size. | 3 |
| 2Dh 2Eh 2Fh 30h | 0003h 0000h 0000h 0001h | Erase block region 1 information 2Dh-2Eh: number of erase blocks of identical size 2Fh-30h: block size (n*256 bytes) | 4 blocks 64 Kbytes |
| 31h 32h 33h 34h | 003Dh 0000h 0000h 0004h | Erase block region 2 information | 62 blocks 256 Kbytes |
| 35h 36h 37h 38h | 0003h 0000h 0000h 0001h | Erase block region 3 information | 4 blocks 64 Kbytes |
| 39h 3Ah 3Bh 3Ch | 0000h 0000h 0000h 0000h | Erase block region 4 information | NA |

Table 36. Primary algorithm-specific extended query table ⁽¹⁾

| Address | Data | Description | Value |
|---------|-------|--|---------------|
| 40h | 0050h | | 'P' |
| 41h | 0052h | Primary algorithm extended query table unique ASCII string 'PRI' | 'R' |
| 42h | 0049h | | 'l' |
| 43h | 0031h | Major version number, ASCII | '1' |
| 44h | 0033h | Minor version number, ASCII | '3' |
| 45h | 000Dh | Address sensitive unlock (bits 1 to 0) 00 = required, 01= not required Silicon revision number (bits 7 to 2) | Yes, 90 nm |
| 46h | 0002h | Erase Suspend 00 = not supported, 01 = read only, 02 = read and write | 2 |
| 47h | 0001h | Block protection 00 = not supported, x = number of blocks per group | 1 |
| 48h | 0000h | Temporary block unprotect 00 = not supported, 01 = supported | Not supported |
| 49h | 0008h | Block protect /unprotect 08 = M29DW128G | 8 |
| 4Ah | 003Bh | Simultaneous operations: x= block number (excluding bank A) | 59 |
| 4Bh | 0000h | Burst mode, 00 = not supported, 01 = supported | Not supported |
| 4Ch | 0002h | Page mode, 00 = not supported, 02 = 8-word page | Yes |
| 4Dh | 0085h | V _{PPH} [programming/erasing] supply minimum program/erase voltage bit 7 to 4 value in volts bit 3 to 0 value in 100 mV | 8.5 V |
| 4Eh | 0095h | V _{PPH} [programming/erasing] supply maximum program/erase voltage bit 7 to 4 value in volts bit 3 to 0 value in 100 mV | 9.5 V |
| 4Fh | 0001h | 01 = dual boot | Dual boot |
| 50h | 0001h | Program suspend, 00 = not supported, 01 = supported | Supported |
| 51h | 0001h | Unlock bypass: 00 = not supported, 01 = supported | Supported |
| 52h | 0008h | Extended memory block size (customer lockable), 2 ⁿ bytes | 256 |
| 57h | 0004h | Bank organization, 00 = data at 4Ah is 0, x= bank number | 4 |
| 58h | 000Bh | Bank A information, x = number of blocks in bank A | 11 |
| 59h | 0018h | Bank B information, x = number of blocks in bank B | 24 |
| 5Ah | 0018h | Bank C information, x = number of blocks in bank C | 24 |
| 5Bh | 000Bh | Bank D information, x = number of blocks in bank D | 11 |

^{1.} The values given in the above table are valid for both packages.

Table 37. Security code area

| Address | Data | Description | Value |
|---------|------|-------------|------------------------------|
| 61h | XXXX | XXXX | |
| 62h | XXXX | XXXX | 64 bit unique device pumber |
| 63h | XXXX | XXXX | 64 bit: unique device number |
| 64h | XXXX | XXXX | |

Appendix C Extended memory block

The M29DW128G has an extra block, the extended memory block, that can be accessed using a dedicated command. This extended memory block is 256 words. It is used as a security block (to provide a permanent security identification number) or to store additional information.

The extended memory block is divided into two memory areas of 128 words each:

- The first one is factory locked.
- The second one is customer lockable. It is up to the customer to protect it from program operations. Its status is indicated by bit DQ6 and DQ7. When DQ7 is set to '1' and DQ6 to '0', it indicates that this second memory area is customer lockable. When DQ7 and DQ6 are both set to '1', it indicates that the second part of the extended memory block is customer locked and protected from program operations.

Bits DQ6 and DQ7 are the most significant bits in the extended block protection indicator and a specific procedure must be followed to read it. See Section 4.0.2: Verify extended memory block protection indicator and Table 6: Block protection for details of how to read bit DQ7.

The extended memory block can only be accessed when the device is in extended block mode. For details of how the extended block mode is entered and exited, refer to the Section 7.1.10: Program command and Section 7.3.2: Exit Extended Memory Block command, and to Table 11: Block protection commands.

C.1 Factory locked section of extended memory block

The first section of the extended memory block is permanently protected from program operations and cannot be unprotected. The random number, electronic serial number (ESN) and security identification number (see *Table 38: Extended memory block address and data*) are written in this section in the factory.

Numonyx

78/85

C.2 Customer lockable section of extended memory block

The device is delivered with the second section of the extended memory block 'customer lockable': bits DQ7 and DQ6 are set to '1' and '0' respectively. It is up to the customer to program and protect this section of the extended memory block but care must be taken because the protection is not reversible.

This section can be protected by setting the extended memory block protection bit, DQ0, to '0'.

Bit DQ6 of the extended block protection indicator is automatically set to '1' to indicate that the second section of the extended memory block is customer locked.

Once the extended memory block is programmed and protected, the Exit Extended Block command must be issued to exit the extended block mode and return the device to read mode.

Table 38. Extended memory block address and data


| Device | Address ⁽¹⁾ | Data | |
|-----------|------------------------|--|------------------------|
| Device | | Factory locked | Customer lockable |
| M29DW128G | 000000h-00007Fh | Random number, ESN ⁽²⁾ , security identification number | Unavailable |
| | 000080h-0000FFh | Unavailable | Determined by customer |

- 1. See Table 31: Block addresses.
- 2. ESN = electronic serial number.

Flowcharts M29DW128G

Appendix D Flowcharts

Figure 23. Write to buffer program flowchart and pseudocode

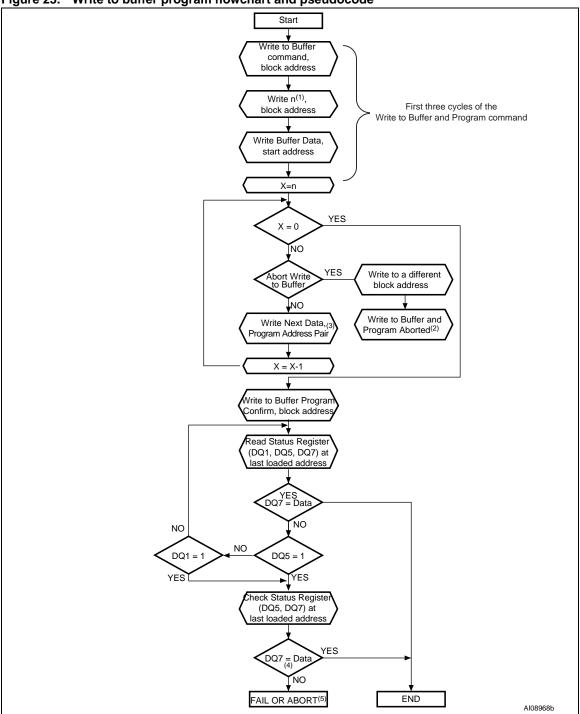

^{1.} n+1 is the number of addresses to be programmed.

M29DW128G Flowcharts

- 2. A write to buffer program abort and reset must be issued to return the device in read mode.
- 3. When the block address is specified, any address in the selected block address space is acceptable. However when loading write buffer address with data, all addresses must fall within the selected write buffer page.
- 4. DQ7 must be checked since DQ5 and DQ7 may change simultaneously.
- 5. If this flowchart location is reached because DQ5='1', then the Write to Buffer Program command failed. If this flowchart location is reached because DQ1='1', then the Write to Buffer Program command aborted. In both cases, the appropriate Reset command must be issued to return the device in read mode: a Reset command if the operation failed, a Write to Buffer Program Abort and Reset command if the operation aborted.
- 6. See Table 8: Standard commands, for details on Write to Buffer Program command sequence.

Flowcharts M29DW128G

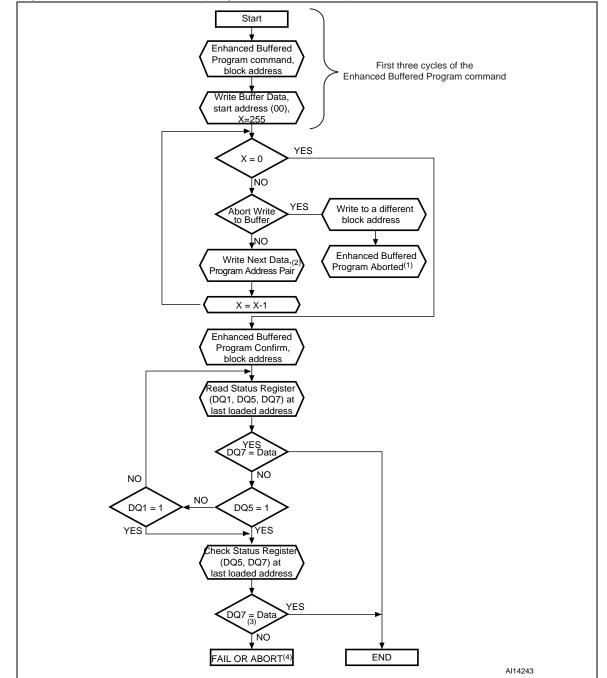


Figure 24. Enhanced buffered program flowchart and pseudocode

- 1. A buffered program abort and reset must be issued to return the device in read mode.
- When the block address is specified, all the addresses in the selected block address space must be issued starting from (00). Furthermore, when loading write buffer address with data, data program addresses must be consecutive.
- 3. DQ7 must be checked since DQ5 and DQ7 may change simultaneously.
- 4. If this flowchart location is reached because DQ5='1', then the Enhanced Buffered Program command failed. If this flowchart location is reached because DQ1='1', then the Enhanced Buffered Program command aborted. In both cases, the appropriate reset command must be issued to return the device in read mode: a Reset command if the operation failed, a

M29DW128G Flowcharts

Buffered Program Abort and Reset command if the operation aborted.

5. See *Table 10: Enhanced buffered program commands*, for details on Enhanced Buffered Program command sequence.

Revision history M29DW128G

14 Revision history

Table 39. Document revision history

| Date | Version | Revision details |
|-------------|---------|--|
| 03-Mar-2008 | 1 | Initial release. |
| | | Modified: Figure 12: Power-up waiting timings and Table 20: Power-up waiting timings. |
| 18-Apr-2008 | 2 | Added t _{PHWL} and t _{RHWL} timings in <i>Table 26: Reset AC characteristics</i> , Figure 17: Reset AC waveforms (no program/erase ongoing), and Figure 18: Reset during program/erase operation AC waveforms. Applied Numonyx branding. |
| 10-Jun-2008 | 3 | Modified: Table 6: Block protection and Note 1 below Table 6, Appendix C: Extended memory block. Minor text changes. |

Please Read Carefully:

INFORMATION IN THIS DOCUMENT IS PROVIDED IN CONNECTION WITH NUMONYX™ PRODUCTS. NO LICENSE, EXPRESS OR IMPLIED, BY ESTOPPEL OR OTHERWISE, TO ANY INTELLECTUAL PROPERTY RIGHTS IS GRANTED BY THIS DOCUMENT. EXCEPT AS PROVIDED IN NUMONYX'S TERMS AND CONDITIONS OF SALE FOR SUCH PRODUCTS, NUMONYX ASSUMES NO LIABILITY WHATSOEVER, AND NUMONYX DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY, RELATING TO SALE AND/OR USE OF NUMONYX PRODUCTS INCLUDING LIABILITY OR WARRANTIES RELATING TO FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Numonyx products are not intended for use in medical, life saving, life sustaining, critical control or safety systems, or in nuclear facility applications.

Numonyx may make changes to specifications and product descriptions at any time, without notice.

Numonyx, B.V. may have patents or pending patent applications, trademarks, copyrights, or other intellectual property rights that relate to the presented subject matter. The furnishing of documents and other materials and information does not provide any license, express or implied, by estoppel or otherwise, to any such patents, trademarks, copyrights, or other intellectual property rights.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Numonyx reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

Contact your local Numonyx sales office or your distributor to obtain the latest specifications and before placing your product order.

Copies of documents which have an order number and are referenced in this document, or other Numonyx literature may be obtained by visiting Numonyx's website at http://www.numonyx.com.

Numonyx StrataFlash is a trademark or registered trademark of Numonyx or its subsidiaries in the United States and other countries.

*Other names and brands may be claimed as the property of others.

Copyright © 11/5/7, Numonyx, B.V., All Rights Reserved.

