FLASH MEMORY



4M x 8 Bit NAND Flash Memory

Revision History

Revision No. History

0.0

0.1

Initial issue.

Draft Date Remark April 10th 1998 April 10th 1999

Advanced Information Final

Data Sheet, 1999

MMM.DatasheethU. 1) Added $\overline{\text{CE}}$ dont care mode during the data-loading and reading

eetau.com The attached datasheets are prepared and approved by SAMSUNG Electronics. SAMSUNG Electronics CO., LTD, reserve the right to change the specifications. SAMSUNG Electronics will evaluate and reply to your requests and questions about device. If you have any questions, please contact the SAMSUNG branch office near you.



Downloaded from Elcodis.com electronic components distributor

1

www.

4M x 8 Bit NAND Flash Memory

FEATURES

- Voltage Supply : 2.7V ~ 5.5V
- Organization
- Memory Cell Array : (4M + 128K)bit x 8bit
- Data Register : (512 + 16)bit x8bit
- Automatic Program and Erase
- Page Program : (512 + 16)Byte
- Block Erase : (8K + 256)Byte
- Status Register
- 528-Byte Page Read Operation
- Random Access : 10µs(Max.)
- Serial Page Access : 50ns(Min.)
- Fast Write Cycle Time
- Program time : 250µs(typ.)
- Block Erase time : 2ms(typ.)
- Command/Address/Data Multiplexed I/O port
- Hardware Data Protection
- Program/Erase Lockout During Power Transitions
- Reliable CMOS Floating-Gate Technology
 Endurance : 1M Program/Erase Cycles
- Data Retention : 10 years
- Command Register Operation

PIN CONFIGURATION

• 44(40) - Lead TSOP Type II (400mil / 0.8 mm pitch) - Forward Type

GENERAL DESCRIPTION

The KM29W32000A is a 4M(4,194,304)x8bit NAND Flash Memory with a spare 128K(131,072)x8bit. Its NAND cell provides the most cost-effective solution for the solid state mass storage market. A program operation programs the 528-byte page in typically 250µs and an erase operation can be performed in typically 2ms on an 8K-byte block.

Data in the page can be read out at 50ns cycle time per byte. The I/O pins serve as the ports for address and data input/output as well as command inputs. The on-chip write controller automates all program and erase system functions, including pulse repetition, where required, and internal verify and margining of data. Even the write-intensive systems can take advantage of the KM29W32000A extended reliability of one million program/erase cycles by providing either ECC(Error Correction Code) or real time mapping-out algorithm. These algorithms have been implemented in many mass storage applications and also the spare 16 bytes of a page combined with the other 512 bytes can be utilized by system-level ECC.

The KM29W32000A is an optimum solution for large nonvolatile storage application such as solid state storage, digital voice recorder, digital still camera and other portable applications requiring nonvolatility.

2C 43 ⊐ <u>CE</u> ⊐ RE 42 41 40 39 38 37 36 35 34 33 32 31 30 29 28 27 26 3 4 5 6 7 WE = ⊐ <u>R/</u>B ⊐ SE N.C ⊏ ⊐ Ñ.C ⊐ N.C ⊐ N.C N.C N.C = 8 9 N.C □ ⊐ N.C N.C 10 ⊐ N.C 11 12 □ N.C □ N.C □ N.C □ N.C N.C 13 14 15 16 17 ⊐ N.C N.C ⊏ I/O0 ⊏ I/O1 ⊏ 18 19 □ I/O7 □ I/O6 I/O2 ⊏ 20 25 ⊐ I/O5 ⊐ I/O4 ⊐ VccQ 21 22 24 23 I/O3 ⊏ Vss 44(40) TSOP (II) **STANDARD TYPE**

PIN DESCRIPTION

Pin Name	Pin Function
I/O0 ~ I/O7	Data Inputs/Outputs
CLE	Command Latch Enable
ALE	Address Latch Enable
CE	Chip Enable
RE	Read Enable
WE	Write Enable
WP	Write Protect
SE	Spare area Enable
R/B	Ready/Busy output
Vcc	Power(2.7V ~ 5.5V)
VccQ	Output Butter Power(2.7V ~ 5.5V)
Vss	Ground
N.C	No Connection

NOTE : Connect all Vcc, VccQ and Vss pins of each device to power supply outputs. Do not leave Vcc or Vss disconnected.



Figure 1. FUNCTIONAL BLOCK DIAGRAM


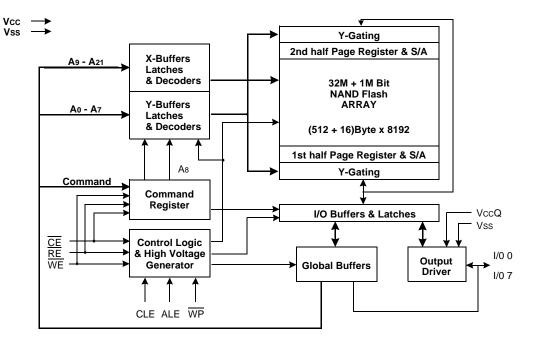


Figure 2. ARRAY ORGANIZATION

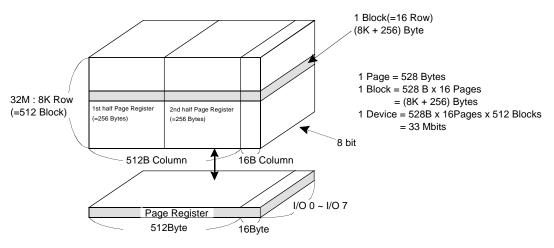

	I/O 0	I/O 1	I/O 2	I/O 3	I/O 4	I/O 5	I/O 6	I/O 7]
1st Cycle	Ao	A1	A2	Аз	A4	A5	A6	A7	Column Address
2nd Cycle	A9	A10	A11	A12	A13	A14	A15	A16	Row Address
3rd Cycle	A17	A18	A19	A20	A21	*X	*Х	*Х	(Page Address)

NOTE : Column Address : Starting Address of the Register.

00H Command(Read) : Defines the starting Address of the 1st half of the Register.

01H Command(Read) : Defines the sarting Address of the 2nd half of the Register.

* A8 is initially set to "Low" or "High" by the 00H or 01H Command.

* X can be High or Low.



PRODUCT INTRODUCTION

The KM29W32000A is a 33Mbit(34,603,008 bit) memory organized as 8192 rows by 528 columns. Spare sixteen columns are located from column address of 512 to 527. A 528-byte data register is connected to memory cell arrays accommodating data transfer between the I/O buffers and memory during page read and page program operations. The memory array is made up of 16 cells that are serially connected to form a NAND structure. Each of the 16 cells resides in a different page. A block consists of the 16 pages formed by one NAND structures, totaling 4,224 NAND structures of 16 cells. The array organization is shown in Figure 2. The program and read operations are executed on a page basis, while the erase operation is executed on block basis. The memory array consists of 512 separately or grouped erasable 8K-byte blocks. It indicates that the bit by bit erase operation is prohibited on the KM29W32000A.

The KM29W32000A has addresses multiplexed into 8 I/O's. This scheme dramatically reduces pin counts and allows systems upgrades to future densities by maintaining consistency in system board design. Command, address and data are all written through I/O's by bringing \overline{WE} to low while \overline{CE} is low. Data is latched on the rising edge of \overline{WE} . Command Latch Enable(CLE) and Address Latch Enable(ALE) are used to multiplex command and address respectively, via the I/O pins. All commands require one bus cycle except for Block Erase command which requires two cycles : a cycle for erase-setup and another for erase-execution after block address loading. The 4M byte physical space requires 22 addresses, thereby requiring three cycles for byte-level addressing: column address, low row address and high row address, in that order. Page Read and Page Program need the same three address cycles following the required command input. In Block Erase operation, however, only the two row address cycles are used.

Device operations are selected by writing specific commands into the command register. Table 1 defines the specific commands of the KM29W32000A.

Function	1st. Cycle	2nd. Cycle	Acceptable Command during Busy
		Zild. Oyole	Acceptable command during busy
Sequential Data Input	80h	-	
Read 1	00h/01h ⁽¹⁾	-	
Read 2	50h ⁽²⁾	-	
Read ID	90h	-	
Reset	FFh	-	0
Page Program	10h	-	
Block Erase	60h	D0h	
Erase Suspend	B0h	-	0
Erase Resume	D0h	-	
Read Status	70h	-	0

Table 1. COMMAND SETS

NOTE : 1. The 00H command defines starting address of the 1st half of registers.

The 01H command defines starting address of the 2nd half of registers.

After data access on the 2nd half of register by the 01H command, the status pointer is

automatically moved to the 1st half register(00H) on the next cycle.

2. The 50H command is valid only when the \overline{SE} (pin 40) is low level.



FLASH MEMORY

PIN DESCRIPTION

Command Latch Enable(CLE)

The CLE input controls the path activation for commands sent to the command register. When active high, commands are latched into the command register through the I/O ports on the rising edge of the WE signal.

Address Latch Enable(ALE)

The ALE input controls the path activation for address and input data to the internal address/data register. Addresses are latched on the rising edge of $\overline{\text{WE}}$ with ALE high, and input data is latched when ALE is low.

Chip Enable(CE)

The \overline{CE} input is the device selection control. When \overline{CE} goes high during a read operation the device is returned to standby mode. However, when the device is in the busy state during program or erase, \overline{CE} high is ignored, and does not return the device to standby mode.

Write Enable(WE)

The WE input controls writes to the I/O port. Commands, address and data are latched on the rising edge of the WE pulse.

Read Enable(RE)

The RE input is the serial data-out control, and when active drives the data onto the I/O bus. Data is valid tREA after the falling edge of RE which also increments the internal column address counter by one.

Spare Area Enable(SE)

The \overline{SE} input controls the spare area selection when \overline{SE} is high, the device is deselected the spare area during Read1, Sequential data input and page Program.

I/O Port : I/O 0 ~ I/O 7

The I/O pins are used to input command, address and data, and to output data during read operations. The I/O pins float to high-z when the chip is deselected or when the outputs are disabled.

Write Protect(WP)

The WP pin provides inadvertent write/erase protection during power transitions. The internal high voltage generator is reset when the WP pin is active low.

Ready/Busy(R/B)

The R/B output indicates the status of the device operation. When low, it indicates that a program, erase or random read operation is in process and returns to high state upon completion. It is an open drain output and does not float to high-z condition when the chip is deselected or when outputs are disabled.

Power Line(Vcc & Vccq)

The Vccq is the power supply for I/O interface logic. It is electrically isolated from main power line(Vcc=2.7~5.5V) for supporting 5V tolerant I/O with 5V power supply at Vccq.



ABSOLUTE MAXIMUM RATINGS

Parameter		Symbol	Rating	Unit
Voltage on any pin relative to Vss		Vin	-0.6 to +7.0	V
Tanan anatana Undan Dian	KM29W32000AT	Taulo	-10 to +125	°C
Temperature Under Bias	KM29W32000AIT	TBIAS	-40 to +125	÷ل
Storage Temperature		Тѕтс	-65 to +150	°C
Short Circuit Output Current		los	5	mA

NOTE :

1. Minimum DC voltage is -0.3V on input/output pins. During transitions, this level may undershoot to -2.0V for periods <30ns.

Maximum DC voltage on input/output pins is VccQ+0.3V which, during transitions, may overshoot to Vcc+2.0V for periods <20ns.

2. Permanent device damage may occur if ABSOLUTE MAXIMUM RATINGS are exceeded. Functional operation should be restricted to the conditions as detailed in the operational sections of this data sheet. Exposure to absolute maximum rating conditions for extended periods may affect reliability.

RECOMMENDED OPERATING CONDITIONS

(Voltage reference to GND, KM29W32000AT:TA=0 to 70°C, KM29W32000AIT:TA=-40 to 85°C)

Parameter	Symbol	Min	Тур.	Max	Unit
Supply Voltage	Vcc	2.7	-	5.5	V
Supply Voltage	VccQ	2.7	-	5.5	V
Supply Voltage	Vss	0	0	0	V

NOTE : 1. Vcc and VccQ pins are separated each other.

DC AND OPERATING CHARACTERISTICS (Recommended operating conditions otherwise noted.)

		Cumhal	Test Conditions	Vo	c=2.7	/ ~ 3.6V	Vc	c=3.6V	~ 5.5V	Unit
Parameter		Symbol	Di lest Conditions		Тур	Max	Min	Тур	Max	Unit
o	Sequential Read Icc1		tcycle=80ns, CE=VIL, IOUT=0mA	-	10	20	-	15	30	
Operating Current	Program	lcc2	-	-	10	20	-	15	30	
	Erase	lcc3	-	-	10	20	-	25	40	mA
Stand-by	Current(TTL)	ISB1	CE=VIH, WP=SE=0V/Vcc	-	-	1	-	-	1	
Stand-by	Stand-by Current(CMOS)		CE=Vcc-0.2, WP=SE=0V/Vcc	-	10	50	-	10	50	
Input Leakage Current		Iц	VIN=0 to 5.5V	-	-	±10	-	-	±10	μA
Output Le	akage Current	Ilo	Vout=0 to 5.5V	-	-	±10	-	-	±10	
المعربة الأمراء	Valtara	Vін	I/O pins	2.0	-	VccQ+0.3	3.0	-	VccQ+0.5	
Input High	i voltage	VIH	Except I/O pins	2.0	-	Vcc+0.3	3.0	-	Vcc+0.5	
Input Low	Voltage, All inputs	VIL	-	-0.3	-	0.6	-0.3	-	0.8	V
Output High Voltage Level		Vон	Іон=-400μА	2.4	-	-	2.4	-	-	
Output Low Voltage Level VoL		Vol	IoL=2.1mA	-	-	0.4	-	-	0.4	
Output Lo	w Current(R/B)	IOL(R/B)	Vol=0.4V	8	10	-	8	10	-	mA



FLASH MEMORY

VALID BLOCK

Parameter	Symbol	Min	Тур.	Мах	Unit
Valid Block Number	N∨в	502	508	512	Blocks

NOTE :

The KM29W32000A may include invalid blocks. Invalid blocks are defined as blocks that contain one or more bad bits. Do not try to access these invalid blocks for program and erase. During its lifetime of 10 years and/or 1million program/erase cycles, the minimum number of valid blocks are guaranteed though its initial number could be reduced. (Refer to the attached technical notes)
 The 1st block, which is placed on 00h block address, is guaranteed to be a valid block

AC TEST CONDITION

(KM29W32000AT:TA=0 to 70°C, KM29W32000AIT:TA=-40 to 85°C, Vcc=2.7V ~ 5.5V unless otherwise noted)

Parameter	Va	lue			
Falameter	Vcc=2.7V ~ 3.6V	Vcc=3.6V ~ 5.5V			
Input Pulse Levels	0.4V to 2.4V 0.4V to 3.4V				
Input Rise and Fall Times	5ns				
Input and Output Timing Levels	0.8V ar	nd 2.0V			
Output Load	1 TTL GATE and	1 TTL GATE and CL=100pF			
	CL=50pF(3.0V+/-10%),100pF(3.0V~3.6V)	TTE GATE and CL=100pr			

CAPACITANCE(TA=25°C, Vcc=5.0V f=1.0MHz)

Item	Symbol	Test Condition	Min	Max	Unit
Input/Output Capacitance	Cı/o	VIL=0V	-	10	pF
Input Capacitance	CIN	VIN=0V	-	10	pF

 $\ensuremath{\textbf{NOTE}}$: Capacitance is periodically sampled and not 100% tested.

MODE SELECTION

CLE	ALE	CE	WE	RE	SE	WP	Mode		
Н	L	L		Н	Х	Х	Read Mode	Command Input	
L	Н	L		Н	Х	Х	Read Mode	Address Input(3clock)	
Н	L	L		Н	Х	Н	Write Mode	Command Input	
L	Н	L		Н	Х	Н		Address Input(3clock)	
L	L	L		Н	L/H ⁽³⁾	Н	Data Input		
L	L	L	Н	₹	L/H ⁽³⁾	Х	Sequential Read & Dat	a Output	
L	L	L	Н	Н	L/H ⁽³⁾	Х	During Read(Busy)		
Х	Х	Х	Х	Х	L/H ⁽³⁾	н	During Program(Busy)		
Х	Х	Х	Х	Х	Х	Н	During Erase(Busy)		
Х	X ⁽¹⁾	Х	Х	Х	Х	L	Write Protect		
Х	Х	Н	Х	Х	0V/Vcc ⁽²⁾	0V/Vcc ⁽²⁾	Stand-by		

NOTE : 1. X can be VIL or VIH

2. WP should be biased to CMOS high or CMOS low for standby.

3. When \overline{SE} is high, spare area is deselected.

Program/Erase Characteristics

Parameter	Symbol	Min	Тур	Max	Unit
Program Time	tprog	-	0.25	1.5	ms
Number of Partial Program Cycles in the Same Page	Nop	-	-	10	cycles
Block Erase Time	tBERS	-	2	10	ms



FLASH MEMORY

AC Timing Characteristics for Command / Address / Data Input

Parameter	Symbol	Min	Мах	Unit
CLE Set-up Time	tcls	0	-	ns
CLE Hold Time	t CLH	10	-	ns
CE Setup Time	tcs	0	-	ns
CE Hold Time	tсн	10	-	ns
WE Pulse Width	twp	25	-	ns
ALE Setup Time	tals	0	-	ns
ALE Hold Time	talh	10	-	ns
Data Setup Time	tDS	20	-	ns
Data Hold Time	tDH	10	-	ns
Write Cycle Time	twc	50	-	ns
WE High Hold Time	twн	15	-	ns

AC Characteristics for Operation

Parameter	Symbol	Min	Max	Unit
Data Transfer from Cell to Register	tR	-	10	μs
ALE to RE Delay(read ID)	tar1	150	-	ns
ALE to RE Delay(Read cycle)	tAR2	50	-	ns
CE to RE Delay(ID read)	tCR	100	-	ns
Ready to RE Low	trr	20	-	ns
RE Pulse Width	tRP	30	-	ns
WE High to Busy	twв	-	100	ns
Read Cycle Time	trc	50	-	ns
RE Access Time	trea	-	35	ns
RE High to Output Hi-Z	tRHZ	15	30	ns
CE High to Output Hi-Z	tCHZ	-	20	ns
RE High Hold Time	treh	15	-	ns
Output Hi-Z to RE Low	tır	0	-	ns
Last RE High to Busy(at sequential read)	trв	-	100	ns
\overline{CE} High to Ready(in case of interception by \overline{CE} at read) ⁽¹⁾	tCRY	-	50 +tr(R/B)(2)	ns
CE High Hold Time(at the last serial read)(3)	t CEH	100	-	ns
RE Low to Status Output	trsto	-	35	ns
CE Low to Status Output	tcsto	-	45	ns
RE High to WE Low	tRHW	0	-	ns
WE High to RE Low	twhr	60	-	ns
Erase Suspend Input to Ready	tSR	-	500	μs
RE access time(Read ID)	treadid	-	35	ns
Device Resetting Time(Read/Program/Erase/after erase suspend)	trst	-	5/10/500/5	μs

NOTE : 1. If CE goes high within 30ns after the rising edge of the last RE, R/B will not return to VoL.
2. The time to Ready depends on the <u>value</u> of the pull-up resistor tied R/B pin.
3. To break the sequential read cycle, CE must be held high for longer time than tceH.



NAND Flash Technical Notes

Invalid Block(s)

Invalid blocks are defined as blocks that contain one or more invalid bits whose reliability is not guaranteed by Samsung. Typically, an invalid block will contain a single bad bit. The information regarding the invalid block(s) is so called as the invalid block information. The invalid block information is written to the 1st or the 2nd page of the invalid block(s) with 00h data. Devices with invalid block(s) have the same quality level or as devices with all valid blocks and have the same AC and DC characteristics. An invalid block(s) does not affect the performance of valid block(s) because it is isolated from the bit line and the common source line by a select transistor. The system design must be able to mask out the invalid block(s) via address mapping. The 1st block of the NAND Flash, however, is fully guaranteed to be a valid block.

Identifying Invalid Block(s)

All device locations are erased(FFh) except locations where the invalid block information is written prior to shipping. Since the invalid block information is also erasable in most cases, it is impossible to recover the information once it has been erased. Therefore, the system must be able to recognize the invalid block(s) based on the original invalid block information and create the invalid block table via the following suggested flow chart(Figure 1). Any intentional erasure of the original invalid block information is prohibited.

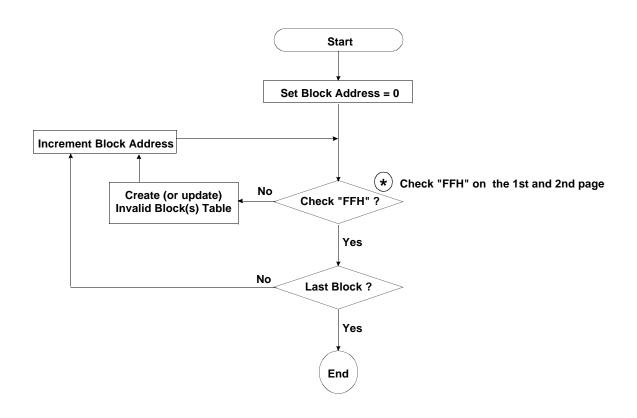


Figure 1. Flow chart to create invalid block table.



NAND Flash Technical Notes (Continued)

Error in write or read operation


Over its life time, the additional invalid blocks may occur. Though the tight process control and intensive testing, Samsung minimizes the additional block failure rate, which is projected far below 0.1% up until 1million program/erase cycles. Refer to the qualification report for the actual data. The following possible failure modes should be considered to implement a highly reliable system.

	Failure Mode	Detection and Countermeasure sequence
	Erase Failure	Status Read after Erase> Block Replacement
Write		Status Read after Program> Block Replacement
	Program Failure	Read back (Verify after Program)> Block Replacement
		or ECC Correction
Read	Single Bit Failure	Verify ECC -> Block Replacement or ECC Correction



: Error Correcting Code --> Hamming Code etc. Example) 1bit correction & 2bit detection


Program Flow Chart

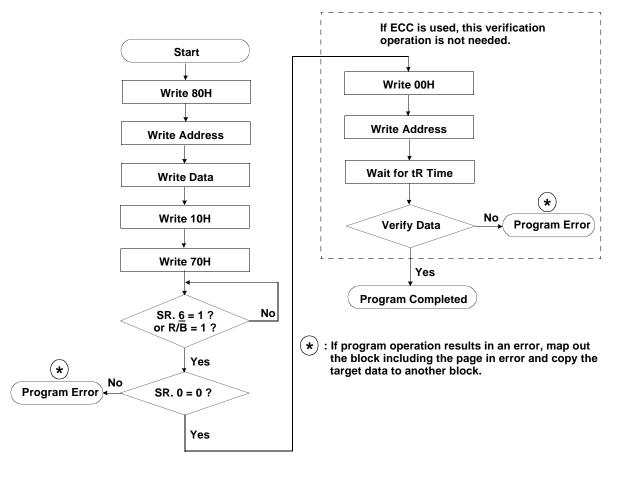




FLASH MEMORY


NAND Flash Technical Notes (Continued)



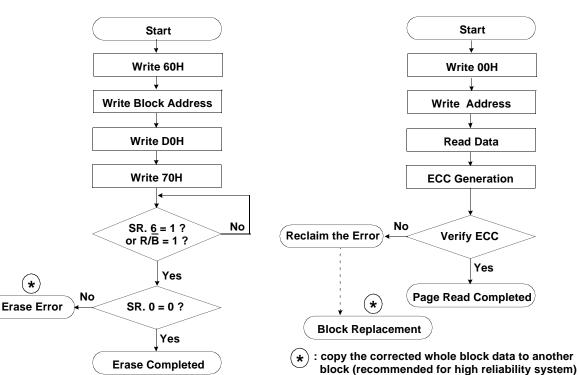

Read Flow Chart

(*) : If erase operation results in an error, map out the failing block and replace it with another block.

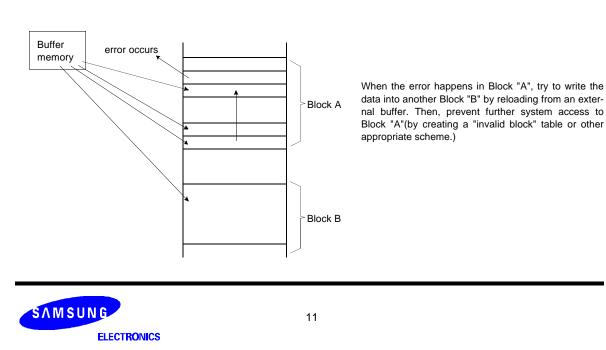

Block Replacement

FLASH MEMORY

Pointer Operation of KM29W32000A

The KM29W32000A has three read modes to set the destination of the pointer. The pointer is set to "A" area by the "00h" command, to "B" area by the "01" command, and to "C" area by the "50h" command. Table 1 shows the destination of the pointer, and figure 2 shows the block diagram of its operations.

Table 1. Destination of the pointer

Command	Pointer position	Area
00H 01H	0 ~ 255 byte 256 ~ 511 byte	1st half array(A) 2nd half array(B)
50H	512 ~ 527 byte	spare array(C)

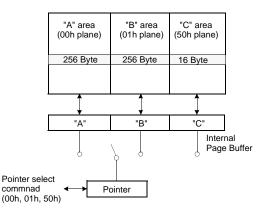


Figure 2. Block diagram of pointer Operation

Example of Pointer Operation programming

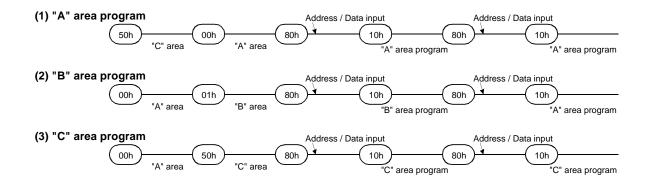


Table 2. Pointer Status after each operation

Operation	Pointer status after operation	
Program/Erase	With previous 00H, Device is set to 00H Plane With previous 01H, Device is set to 00H Plane* With previous 50H, Device is set to 50H Plane	
Reset	"00h" Plane("A" area)	
Power up	"00h" Plane("A" area)	

* 01H command is valid just one time when it is used as a pointer for program/erase.



System Interface Using CE dont-care.

For a easier system interface, \overline{CE} may be inactive during the data-loading or sequential data-reading as shown below. The internal 528byte page registers are utilized as seperate buffers for this operation and the system design gets more flexible. In addition, for voice or audio applications which use slow cycle time on the order of u-seconds, de-activating \overline{CE} during the data-loading and reading would provide significant savings in power consumption.


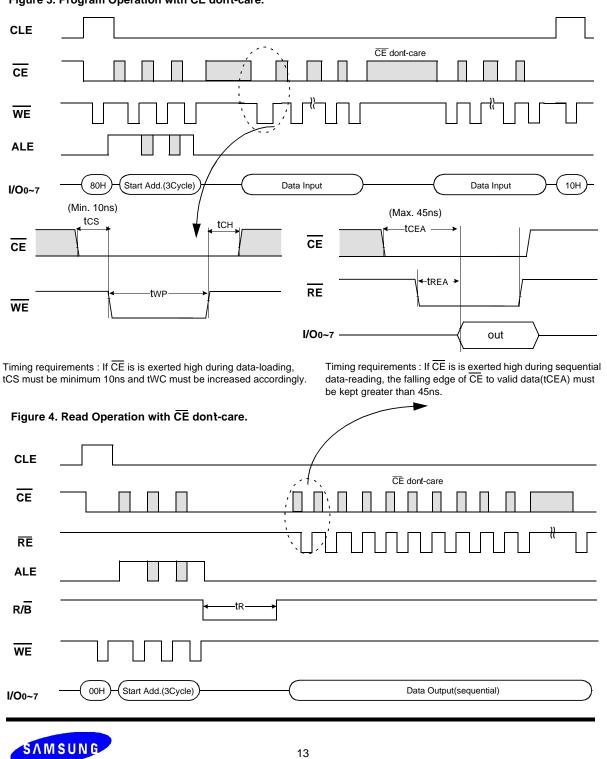



Figure 3. Program Operation with CE dont-care.

ELECTRONICS

* Command Latch Cycle

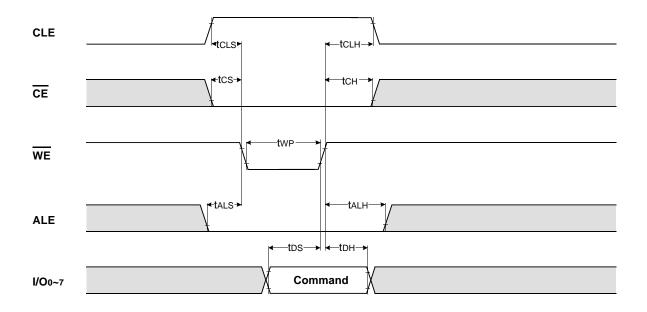


* Address Latch Cycle

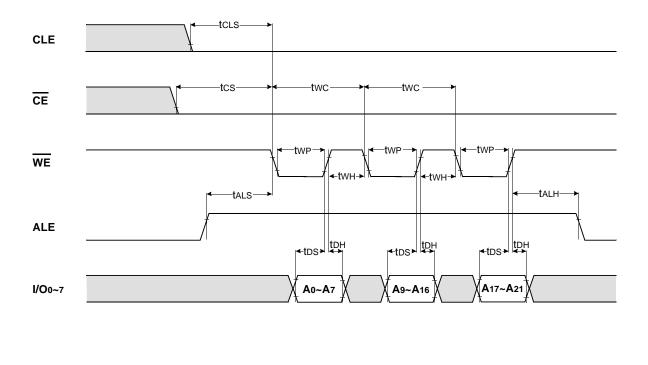


SAMSUNG ELECTRONICS

FLASH MEMORY

* Input Data Latch Cycle

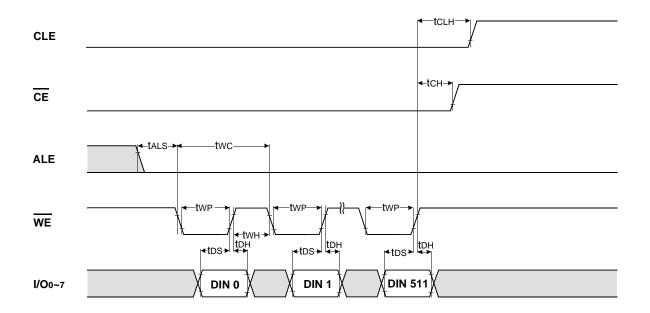


* Sequential Out Cycle after Read(CLE=L, WE=H, ALE=L)

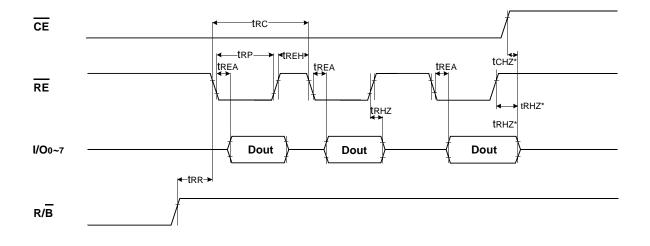


NOTES : Transition is measured ±200mV from steady state voltage with load. This parameter is sampled and not 100% tested.




* Status Read Cycle

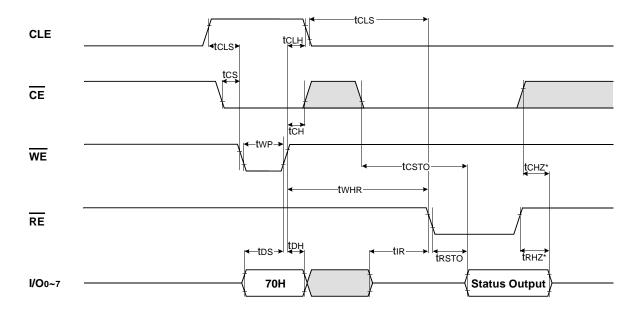


READ1 OPERATION(READ ONE PAGE)

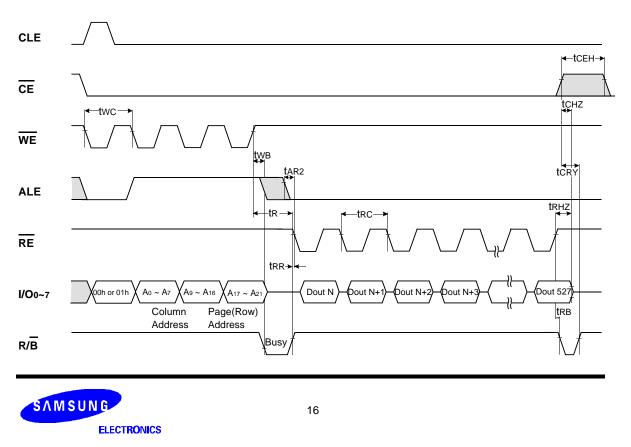


READ1 OPERATION(INTERCEPTED BY CE)

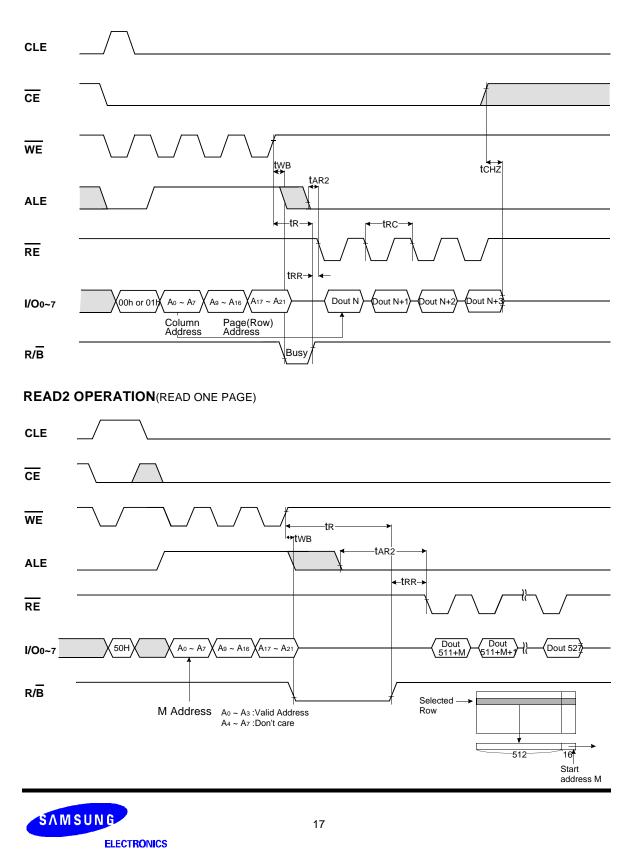


SEQUENTIAL ROW READ OPERATION

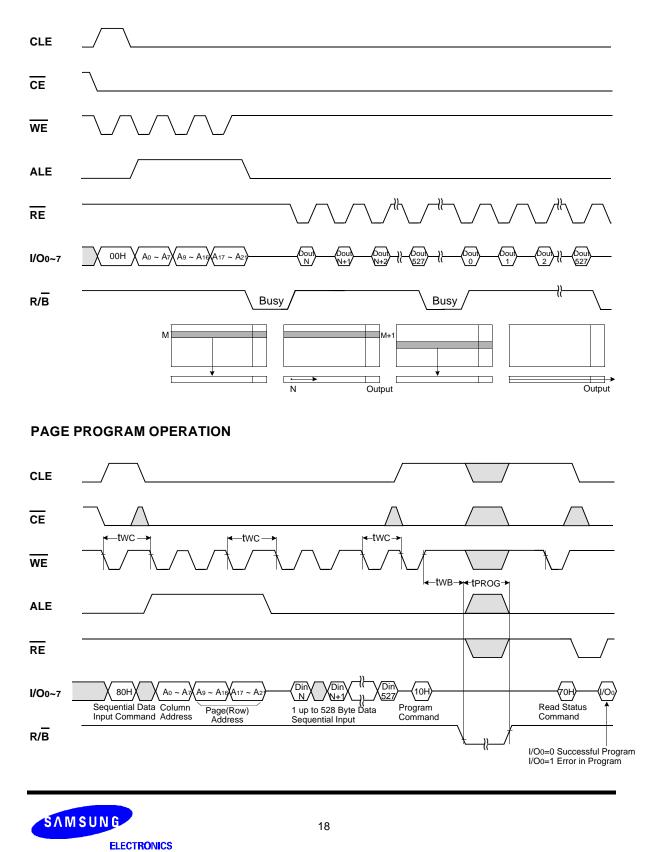


BLOCK ERASE OPERATION(ERASE ONE BLOCK)

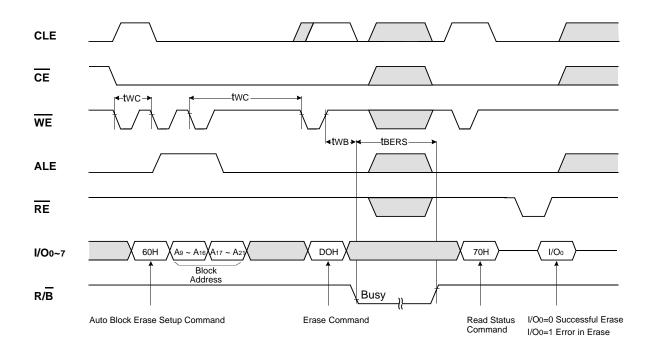

SUSPEND & RESUME OPERATION DURING BLOCK ERASE

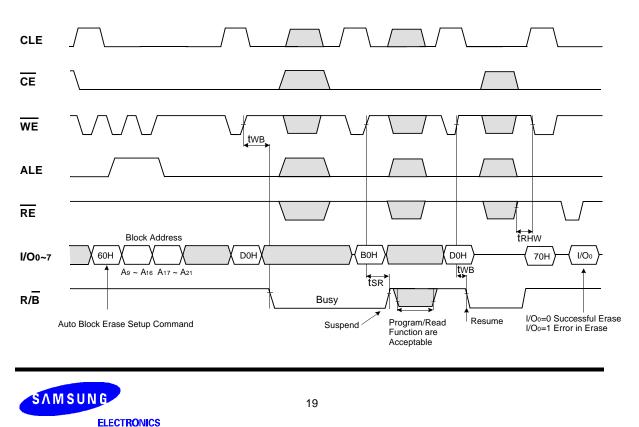

MANUFACTURE & DEVICE ID READ OPERATION

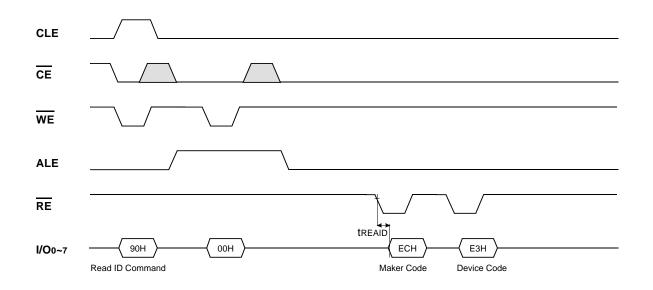



DEVICE OPERATION

PAGE READ

Upon initial device power up, the device defaults to Read1 mode. This operation is also initiated by writing 00H to the command register along with three address cycles. Once the command is latched, it does not need to be written for the following page read operation. Three types of operations are available : random read, serial page read and sequential read.

The random read mode is enabled when the page address is changed. The 528 bytes of data within the selected page are transferred to the data registers in less than $10\mu s(tR)$. The CPU can detect the completion of this data transfer(tR) by analyzing the output of R/B pin. Once the data in a page is loaded into the registers, they may be read out in 50ns cycle time by sequentially pulsing RE with CE staying low. High to low transitions of the RE clock output the data starting from the selected column address up to the last column address (column 511 or 527 depending on state of SE pin).

After the data of last column address is clocked out, the next page is automatically selected for sequential read.

Waiting 10µs again allows for reading of the selected page. The sequential read operation is terminated by bringing \overline{CE} high. The way the Read1 and Read2 commands work is like a pointer set to either the main area or the spare area. The spare area of bytes 512 to 527 may be selectively accessed by writing the Read2 command with \overline{SE} pin low. Addresses Ao to A3 set the starting address of the spare area while addresses A4 to A7 are ignored. Unless the operation is aborted, the page address is automatically incremented for sequential read as in Read1 operation and spare sixteen bytes of each page may be sequentially read. The Read1 command(00H/01H) is needed to move the pointer back to the main area. Figures 3 thru 6 show typical sequence and timings for each read operation.


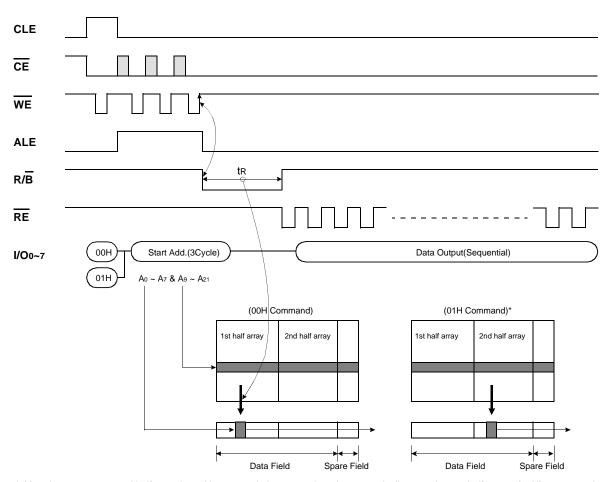


Figure 3. Read1 Operation

* After data access on 2nd half array by 01H command, the start pointer is automatically moved to 1st half array (00H) at next cycle.

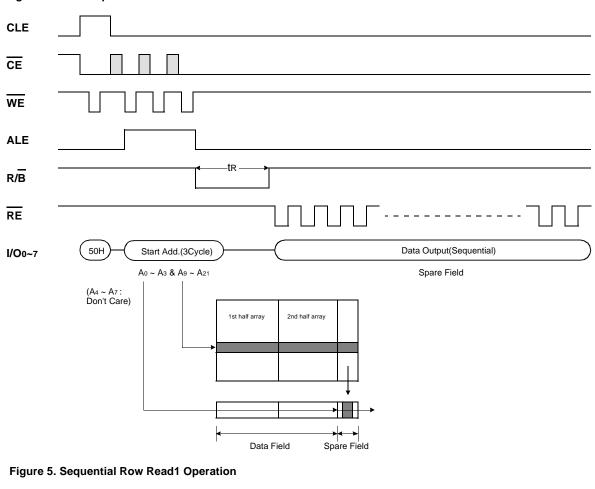

FLASH MEMORY



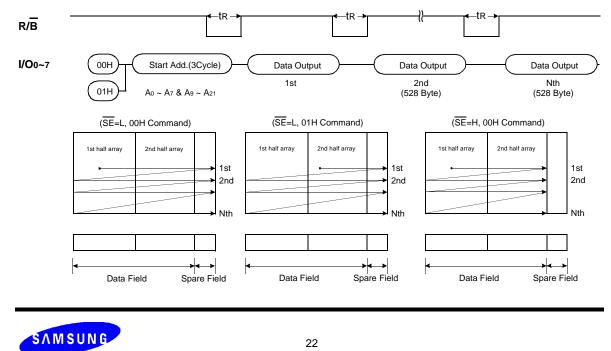


Figure 4. Read2 Operation

ELECTRONICS

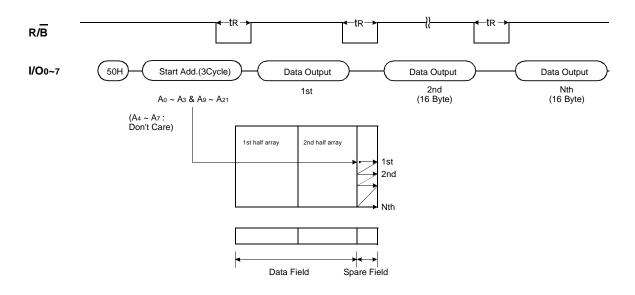



Figure 6. Sequential Read2 Operation(SE=fixed low)

PAGE PROGRAM

The device is programmed basically on a page basis, but it does allow multiple partial page programming of a byte or consecutive bytes up to 528, in a single page program cycle. The number of consecutive partial page programming operation within the same page without an intervening erase operation must not exceed ten. The addressing may be done in any random order in a block. A page program cycle consists of a serial data loading period in which up to 528 bytes of data may be loaded into the page register, followed by a nonvolatile programming period where the loaded data is programmed into the appropriate cell. Serial data loading can be started from 2nd half array. About the pointer operation, please refer to the attached technical notes. The serial data loading period begins by inputting the Serial Data Input command(80H), followed by the three cycle address input and then serial data loading. The bytes other than those to be programmed do not need to be loaded.

The Page Program confirm command(10H) initiates the programming process. Writing 10H alone without perviously entering the serial data will not initiate the programming process. The internal write controller automatically executes the algorithms and timings necessary for program and verify, thereby freeing the CPU for other tasks. Once the program process starts, the Read Status Register command may be entered, with \overline{RE} and \overline{CE} low, to read the status register. The CPU can detect the completion of a program cycle by monitoring the $\overline{R/B}$ output, or the Status bit(I/O6) of the Status Register. Only the Read Status command and Reset command are valid while programming is in progress. When the Page Program is complete, the Write Status Bit(I/O0) may be checked(Figure 7). The internal write verify detects only errors for "1"s that are not successfully programmed to "0"s. The command register remains in Read Status command mode until another valid command is written to the command register.



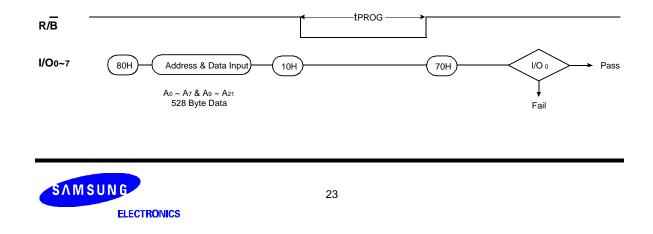


FLASH MEMORY

BLOCK ERASE

The Erase operation can erase on a block (8K Byte) basis. Block address loading is accomplished in two cycles initiated by an Erase Setup command (60H). Only address A₁₃ to A₂₁ is valid while A₉ to A₁₂ is ignored. The addresses of the block to be erased to FFH. The Erase Confirm command (D0H) following the block address loading initiates the internal erasing process. This two-step sequence of setup followed by execution ensures that memory contents are not accidentally erased due to external noise conditions. At the rising edge of \overline{WE} after the erase confirm command input, the internal write controller handles erase, erase-verify and pulse repetition where required. If an erase operation error is detected, the internal verify is halted and erase operation is terminated. When the erase operation is completed, the Write Status Bit(I/O₀) may be checked. Figure 8 details the sequence.


Figure 8. Block Erase Operation



ERASE SUSPEND/ERASE RESUME

The Erase Suspend allows interruption during any erase operation in order to read or program data to or from another block of memory. Once an erase process begins, writing the Erase Suspend command (BOH) to the command register suspends the internal erase process, and the R/B signal return to "1". Erase Suspend Status bit will be also set to "1" when the Status Register is read. At this time, blocks other than the suspended block can be read or programmed. The Status Register and R/B operation will function as usual. After the Erase Resume command is written to it, the erase process is restarted from the beginning of the erasing period. The Erase Suspend Status bit and R/B will return to "0". Refer to Figure 9 for operation sequence.

Figure 9. Erase Suspend & Erase Resume Operation

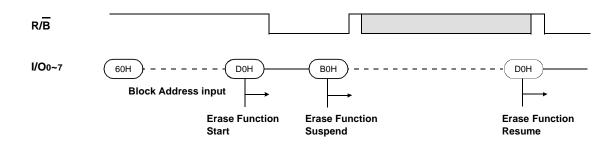



READ STATUS

The device contains a Status Register which may be read to find out whether program or erase operation is complete, and whether the program or erase operation completed successfully. After writing 70H command to the command register, a read cycle outputs the contents of the Status Register to the I/O pins on the falling edge of CE or RE, whichever occurs last. This two line control allows the system to poll the progress of each device in multiple memory connections even when R/B pins are common-wired. RE or CE does not need to be toggled for updated status. Refer to table 2 for specific Status Register definitions. The command register remains in Status Read mode until further commands are issued to it. Therefore, if the status register is read during a random read cycle, a read command(00H or 50H) should be given before sequential page read cycle.

Table2. Status Register Definition

SR	Status	Definition	
I/Oo	Program / Erase	"0" : Successful Program / Erase	
1700		"1" : Error in Program / Erase	
I/O1	"0"		
I/O2	Reserved for Future Use	e "0"	
I/O3		"0"	
I/O4		"0"	
I/Os	Erase Suspend	"0" : Erase in Progress / Completed	
		"1" : Suspended	
I/O6	Device Operation	"0" : Busy "1" : Ready	
Ι/Ο7	Write Protect	"0" : Protected "1" : Not Protected	

READ ID

The device contains a product identification mode, initiated by writing 90H to the command register, followed by an address input of 00H. Two read cycles sequentially output the manufacture code(ECH), and the device code (E3H) respectively. The command register remains in Read ID mode until further commands are issued to it. Figure 9 shows the operation sequence.

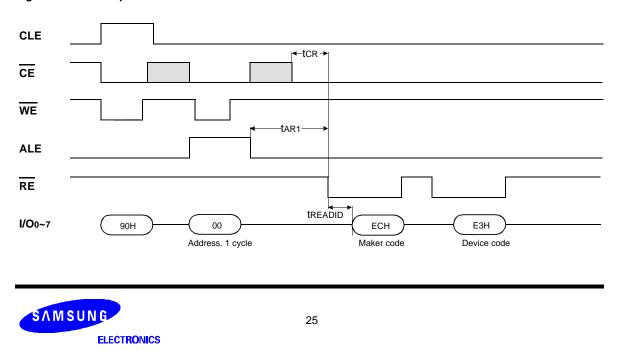


Figure 9. Read ID Operation

FLASH MEMORY

RESET

The device offers a reset feature, executed by writing FFH to the command register. When the device is in Busy state during random read, program or erase modes, the reset operation will abort these operation. The contents of memory cells being altered are no longer valid, as the data will be partially programmed or erased. Internal address registers are cleared to "0"s and data registers to "1"s. The command register is cleared to wait for the next command, and the Status Register is cleared to value COH when \overline{WP} is high. Refer to table 3 for device status after reset operation. If the device is already in reset state a new reset command will not be accepted to by the command register. The R/\overline{B} pin transitions to low for tRST after the Reset command is written. Reset command is not necessary for normal operation. Refer to Figure 10 below.

Figure 10. RESET Operation

R/B		← tRST →	
I/Oo~7	(FFH)		


Table3. Device Status

	After Power-up	After Reset
Operation Mode	Read 1	Waiting for next command

DATA PROTECTION

The device is designed to offer protection from any involuntary program/erase during power-transitions. An internal voltage detector disables all functions whenever Vcc is below about 2V. WP pin provides hardware protection and is recommended to be kept at VIL during power-up and power-down as shown in Figure 8. The two step command sequence for program/erase provides additional software protection.


Figure 8. AC Waveforms for Power Transition

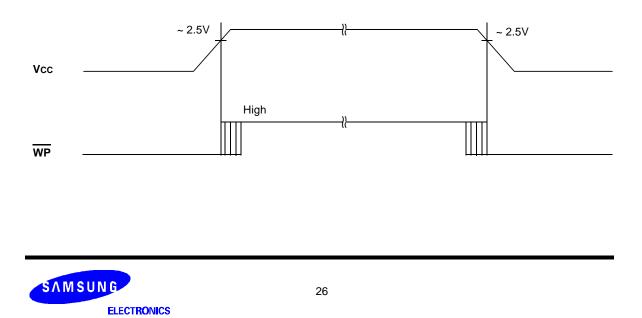

FLASH MEMORY

READY/BUSY

The device has a R/B output that provides a hardware method of indicating the completion of a page program, erase and random read completion. The R/B pin is normally high but transitions to low after program or erase command is written to the command register or random read is begin after address loading. It returns to high when the internal controller has finished the operation. The pin is an open-drain driver thereby allowing two or more R/B outputs to be Or-tied. An appropriate pull-up resister is required for proper operation and the value may be calculated by following equation.

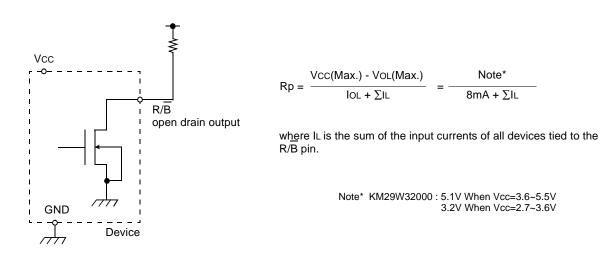



FLASH MEMORY

PACKAGE DIMENSIONS

44(40) LEAD PLASTIC THIN SMALL OUT-LINE PACKAGE TYPE(II)

