

## **Document Title**

# 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash Memory

# **Revision History**

No.		History	Draft Date	Remark
0.0	1) Initial Draft		Nov. 28. 2003	Preliminary
0.1	1) Add 1.8V Opera	tion Product to Data sheet	Mar. 11. 2004	Preliminary
0.2	1) Change AC Chan - tWP(25ns->40ns - tRP(30ns->40ns - tREADID(35ns->	Apr. 29. 2004	Preliminary	
0.3	Specification Relaxed value  2) Add Application Reset command another 512Mb. 3) Modify the desc - /CE Don't Care (Enabled) (Pag 4) Add the descript	May. 14. 2004	Preliminary	
0.4	1) Delete Errata 2) Change Charact  Before  After  3) Delete Cache Pr	tCRY tREA@ID Read  60 + tr 35  70 + tr 45  ogram	Jun. 01. 2004	Preliminary
0.5	1) Change TSOP1, 2) Edit TSOP1, WS 3) Change FBGA p	Oct. 20. 2004		

This document is a general product description and is subject to change without notice. Hynix does not assume any responsibility for use of circuits described. No patent licenses are implied.



## HY27UA(08/16)1G1M Series HY27SA(08/16)1G1M Series 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash

## **FEATURES SUMMARY**

## **HIGH DENSITY NAND FLASH MEMORIES**

- Cost effective solutions for mass storage applications

#### NAND INTERFACE

- x8 or x16 bus width.
- Multiplexed Address/ Data
- Pinout compatibility for all densities

#### **SUPPLY VOLTAGE**

- 3.3V device: VCC = 2.7 to 3.6V : HY27UAXX1G1M

- 1.8V device: VCC = 1.7 to 1.95V : HY27SAXX1G1M 1.8V Operation Product : TBD

## **Memory Cell Array**

- 1056Mbit = 528 Bytes x 32 Pages x 8,192 Blocks

#### **PAGE SIZE**

- x8 device: (512 + 16 spare) Bytes

: HY27(U/S)A081G1M

- x16 device: (256 + 8 spare) Words

: HY27(U/S)A161G1M

### **BLOCK SIZE**

- x8 device: (16K + 512 spare) Bytes

: HY27(U/S)A081G1M

- x16 device: (8K + 256 spare) Words

: HY27(U/S)A161G1M

## **PAGE READ / PROGRAM**

- Random access: 12us (max)

- Sequential access: 50ns (min)

- Page program time: 200us (typ)

## **COPY BACK PROGRAM MODE**

- Fast page copy without external buffering

#### **FAST BLOCK ERASE**

- Block erase time: 2ms (Typ)

#### **STATUS REGISTER**

#### **ELECTRONIC SIGNATURE**

## **Sequential Row Read Option**

# AUTOMATIC PAGE 0 READ AT POWER-UP OPTION

- Boot from NAND support
- Automatic Memory Download

#### **SERIAL NUMBER OPTION**

#### HARDWARE DATA PROTECTION

- Program/Erase locked during Power transitions

## **DATA INTEGRITY**

- 100,000 Program/Erase cycles
- 10 years Data Retention

## **PACKAGE**

- HY27(U/S)A(08/16)1G1M-T(P)
  - : 48-Pin TSOP1 (12 x 20 x 1.2 mm)
  - HY27(U/S)A(08/16)1G1M-T (Lead)
  - HY27(U/S)A(08/16)1G1M-TP (Lead Free)
- HY27(U/S)A08121A-V(P)
  - : 48-Pin WSOP1 (12 x 17 x 0.7 mm)
  - HY27(U/S)A081G1M-V (Lead)
  - HY27(U/S)A081G1M-VP (Lead Free)
- HY27(U/S)A(08/16)121M-F(P)
  - : 63-Ball FBGA (8.5 x 15 x 1.2 mm)
  - HY27(U/S)A(08/16)1G1M-F (Lead)
  - HY27(U/S)A(08/16)1G1M-FP (Lead Free)

This document is a general product description and is subject to change without notice. Hynix does not assume any responsibility for use of circuits described. No patent licenses are implied.



#### **DESCRIPTION**

The HYNIX HY27(U/S)A(08/16)1G1M series is a family of non-volatile Flash memories that use NAND cell technology. The devices operate 3.3V and 1.8V voltage supply. The size of a Page is either 528 Bytes (512 + 16 spare) or 264 Words (256 + 8 spare) depending on whether the device has a x8 or x16 bus width.

The address lines are multiplexed with the Data Input/ Output signals on a multiplexed x8 or x16 Input/ Output bus. This interface reduces the pin count and makes it possible to migrate to other densities without changing the footprint.

Each block can be programmed and erased over 100,000 cycles. To extend the lifetime of NAND Flash devices it is strongly recommended to implement an Error Correction Code (ECC). A Write Protect pin is available to give a hardware protection against program and erase operations.

The devices feature an open-drain Ready/Busy output that can be used to identify if the Program/ Erase/Read (PER) Controller is currently active. The use of an open-drain output allows the Ready/ Busy pins from several memories to be connected to a single pull-up resistor.

A Copy Back command is available to optimize the management of defective blocks. When a Page Program operation fails, the data can be programmed in another page without having to resend the data to be programmed.

The devices are available in the following packages:


- **48-TSOP1** (12 x 20 x 1.2 mm)
- 48-WSOP1 (12 x 17 x 0.7 mm)
- **63-FBGA** (8.5 x 15 x 1.2 mm, 6 x 8 ball array, 0.8mm pitch)

Three options are available for the NAND Flash family:

- Automatic Page 0 Read after Power-up, which allows the microcontroller to directly download the boot code from page 0.
- Chip Enable Dont Care, which allows code to be directly downloaded by a microcontroller, as Chip Enable transitions during the latency time do not stop the read operation.
- A Serial Number, which allows each device to be uniquely identified. The Serial Number options is subject to an NDA (Non Disclosure Agreement) and so not described in the datasheet. For more details of this option contact your nearest HYNIX Sales office.

Devices are shipped from the factory with Block 0 always valid and the memory content bits, in valid blocks, erased to '1'.



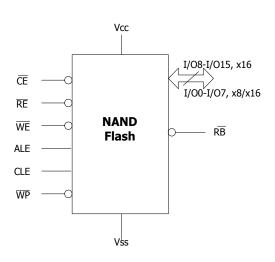

I/O <sub>8-15</sub>	Data Input/Outputs for x16 Device
I/O <sub>0-7</sub>	Data Input/Output, Address Inputs, or Command Inputs for x8 and x16 device
ALE	Address Latch Enable
CLE	Command Latch Enable
CE	Chip Enable
RE	Read Enable
RB	Read/Busy (open-drain output)
WE	Write Enable
WP	Write Protect
VCC	Supply Voltage
VSS	Ground
NC	Not Connected Internally
DU	Do Not Use

Figure 1: Logic Diagram

**Table 1: Signal Name** 

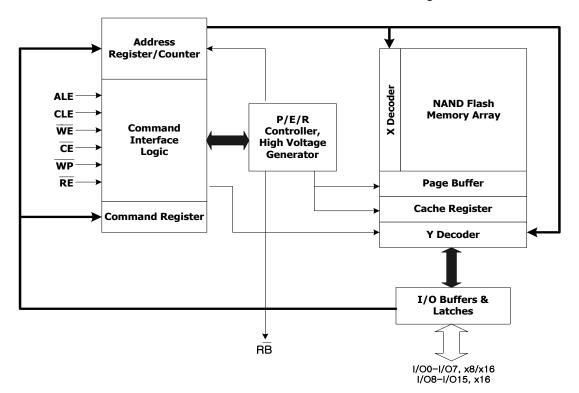


Figure 2. LOGIC BLOCK DIAGRAM



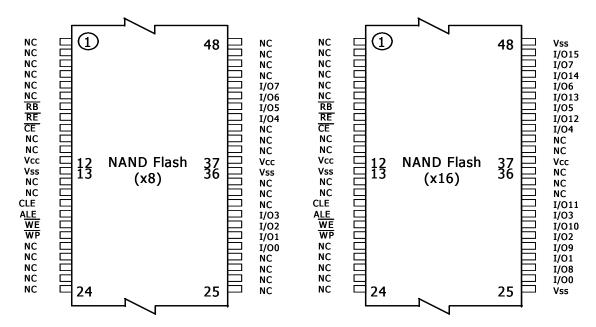


Figure 3. 48-TSOP1 Contactions, x8(x16) Device

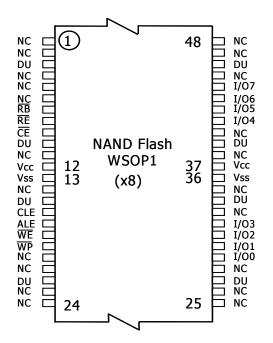


Figure 4. 48-WSOP1 Contactions, x8 Device



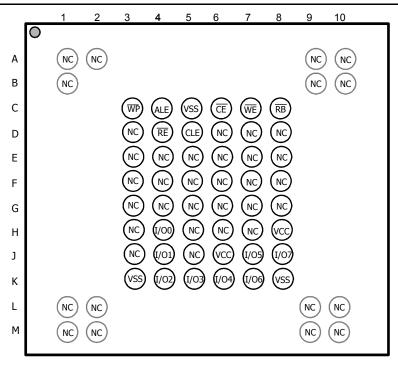


Figure 5. 63-FBGA Contactions, x8 Device (Top view through package)

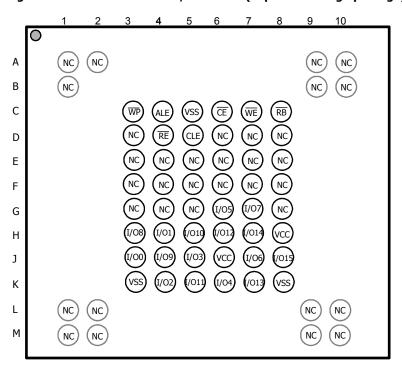


Figure 6. 63-FBGA Contactions, x16 Device (Top view through package)



#### **MEMORY ARRAY ORGANIZATION**

The memory array is made up of NAND structures where 16 cells are connected in series.

The memory array is organized in blocks where each block contains 32 pages. The array is split into two areas, the main area and the spare area. The main area of the array is used to store data whereas the spare area is typically used to store Error Correction Codes, software flags or Bad Block identification.

In x8 devices the pages are split into a main area with two half pages of 256 Bytes each and a spare area of 16 Bytes. In the x16 devices the pages are split into a 256 Word main area and an 8 Word spare area. Refer to Figure 8, Memory Array Organization.

#### **Bad Blocks**

The NAND Flash 528 Byte/ 264 Word Page devices may contain Bad Blocks, that is blocks that contain one or more invalid bits whose reliability is not guaranteed. Additional Bad Blocks may develop during the lifetime of the device. The Bad Block Information is written prior to shipping (refer to Bad Block Management section for more details). The values shown include both the Bad Blocks that are present when the device is shipped and the Bad Blocks that could develop later on.

These blocks need to be managed using Bad Blocks Management, Block Replacement or Error Correction Codes.

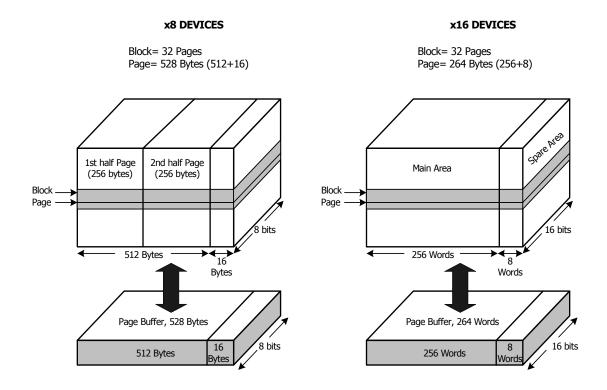


Figure 7. Memory Array Organization



#### SIGNAL DESCRIPTIONS

See Figure 1, Logic Diagram and Table 1, Signal Names, for a brief overview of the signals connected to this device.

#### Inputs/Outputs $(I/O_0-I/O_7)$

Input/Outputs 0 to 7 are used to input the selected address, output the data during a Read operation or input a command or data during a Write operation. The inputs are latched on the rising edge of Write Enable.  $I/O_0$ - $I/O_7$  can be left floating when the device is deselected or the outputs are disabled.

## Inputs/Outputs (I/O<sub>8</sub>-I/O<sub>15</sub>)

Input/Outputs 8 to 15 are only available in x16 devices. They are used to output the data during a Read operation or input data during a Write operation. Command and Address Inputs only require  $I/O_0$  to  $I/O_7$ .

The inputs are latched on the rising edge of Write Enable.  $I/O_8$ - $I/O_{15}$  can be left floating when the device is deselected or the outputs are disabled.

## **Address Latch Enable (ALE)**

The Address Latch Enable activates the latching of the Address inputs in the Command Interface. When ALE is high, the inputs are latched on the rising edge of Write Enable.

#### **Command Latch Enable (CLE)**

The Command Latch Enable activates the latching of the Command inputs in the Command Interface. When CLE is high, the inputs are latched on the rising edge of Write Enable.

## Chip Enable (CE)

The Chip Enable input activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is low,  $V_{IL}$ , the device is selected. If Chip Enable goes high,  $V_{IH}$ , while the device is busy, the device remains selected and does not go into standby mode.

When the device is executing a Sequential Row Read operation, Chip Enable must be held low (from the second page read onwards) during the time that the device is busy ( $t_{BLBH1}$ ). If Chip Enable goes high during  $t_{BLBH1}$  the operation is aborted.

## Read Enable (RE)

The Read Enable, RE, controls the sequential data output during Read operations. Data is valid  $t_{RLQV}$  after the falling edge of  $\overline{RE}$ . The falling edge of  $\overline{RE}$  also increments the internal column address counter by one.

**Write Enable (\overline{WE}).** The Write Enable input,  $\overline{WE}$ , controls writing to the Command Interface, Input Address and Data latches. Both addresses and data are latched on the rising edge of Write Enable.

During power-up and power-down a recovery time of 1us (min) is required before the Command Interface is ready to accept a command. It is recommended to keep Write Enable high during the recovery time.

## Write Protect (WP).

The Write Protect pin is an input that gives a hardware protection against unwanted program or erase operations. When Write Protect is Low,  $V_{IL}$ , the device does not accept any program or erase operations.

It is recommended to keep the Write Protect pin Low, V<sub>IL</sub>, during power-up and power-down.



# HY27UA(08/16)1G1M Series HY27SA(08/16)1G1M Series 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash

## Ready/Busy (RB)

The Ready/Busy output,  $R\overline{B}$ , is an open-drain output that can be used to identify if the Program/ Erase/ Read (PER) Controller is currently active.

When Ready/Busy is Low,  $V_{OL}$ , a read, program or erase operation is in progress. When the operation completes Ready/Busy goes High,  $V_{OH}$ .

The use of an open-drain output allows the Ready/ Busy pins from several memories to be connected to a single pull-up resistor. A Low will then indicate that one, or more, of the memories is busy.

Refer to the Ready/Busy Signal Electrical Characteristics section for details on how to calculate the value of the pull-up resistor.

## **V<sub>CC</sub> Supply Voltage**

V<sub>CC</sub> provides the power supply to the internal core of the memory device. It is the main power supply for all operations (read,program and erase).

An internal voltage detector disables all functions whenever  $V_{CC}$  is below 2.5V (for 3V devices) or 1.5V (for 1.8V devices) to protect the device from any involuntary program/erase during power-transitions.

Each device in a system should have  $V_{CC}$  decoupled with a 0.1uF capacitor. The PCB track widths should be sufficient to carry the required program and erase currents

## V<sub>SS</sub> Ground

Ground, V<sub>SS</sub>, is the reference for the power supply. It must be connected to the system ground.

#### **BUS OPERATIONS**

There are six standard bus operations that control the memory. Each of these is described in this section, see Tables 2, Bus Operations, for a summary.

#### **Command Input**

Command Input bus operations are used to give commands to the memory. Command are accepted when Chip Enable is Low, Command Latch Enable is High, Address Latch Enable is Low and Read Enable is High. They are latched on the rising edge of the Write Enable signal.

Only  $I/O_0$  to  $I/O_7$  are used to input commands. See Figure 21 and Table 14 for details of the timings requirements.

#### **Address Input**

Address Input bus operations are used to input the memory address. Four bus cycles are required to input the addresses for the 512Mb devices (refer to Tables 3 and 4, Address Insertion). The addresses are accepted when Chip Enable is Low, Address Latch Enable is High, Command Latch Enable is Low and Read Enable is High. They are latched on the rising edge of the Write Enable signal. Only  $I/O_0$  to  $I/O_7$  are used to input addresses.

See Figure 22 and Table 14 for details of the timings requirements.

#### **Data Input**

Data Input bus operations are used to input the data to be programmed.

Data is accepted only when Chip Enable is Low, Address Latch Enable is Low, Command Latch Enable is Low and Read Enable is High. The data is latched on the rising edge of the Write Enable signal. The data is input sequentially using the Write Enable signal.

See Figure 23 and Tables 14 and 15 for details of the timings requirements.



# HY27UA(08/16)1G1M Series HY27SA(08/16)1G1M Series 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash

#### **Data Output**

Data Output bus operations are used to read: the data in the memory array, the Status Register, the Electronic Signature and the Serial Number. Data is output when Chip Enable is Low, Write Enable is High, Address Latch Enable is Low, and Command Latch Enable is Low. The data is output sequentially using the Read Enable signal. See Figure 24 and Table 15 for details of the timings requirements.

#### **Write Protect**

Write Protect bus operations are used to protect the memory against program or erase operations. When the Write Protect signal is Low the device will not accept program or erase operations and so the contents of the memory array cannot be altered. The Write Protect signal is not latched by Write Enable to ensure protection even during power-up.

#### Standby

When Chip Enable is High the memory enters Standby mode, the device is deselected, outputs are disabled and power consumption is reduced.

## Table 2. Bus Operation

BUS Operation	CE	ALE	CLE	RE	WE	WP	I/O <sub>0</sub> - I/O <sub>7</sub>	I/O <sub>8</sub> - I/O <sub>15</sub> <sup>(1)</sup>
Command Input	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IH}}$	$V_{\mathrm{IH}}$	Rising	X <sup>(2)</sup>	Command	Х
Address Input	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IL</sub>	V <sub>IH</sub>	Rising	Х	Address	Х
Data Input	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IH</sub>	Rising	Х	Data Input	Data Input
Data Output	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IL</sub>	Falling	V <sub>IH</sub>	Х	Data Output	Data Output
Write Protect	Х	Х	Х	Х	Х	V <sub>IL</sub>	Х	Х
Standby	V <sub>IH</sub>	Х	Х	Х	Х	Х	Х	Х

Note: (1) Only for x16 devices.

(2)  $\overline{\text{WP}}$  must be  $V_{\text{IH}}$  when issuing a program or erase command.

**Table 3: Address Insertion, x8 Devices** 

Bus Cycle	I/O <sub>7</sub>	I/O <sub>6</sub>	I/O <sub>5</sub>	I/O <sub>4</sub>	I/O <sub>3</sub>	I/O <sub>2</sub>	I/O <sub>1</sub>	I/O <sub>0</sub>
1st Cycle	A7	A6	A5	A4	A3	A2	A1	A0
2nd Cycle	A16	A15	A14	A13	A12	A11	A10	A9
3rd Cycle	A24	A23	A22	A21	A20	A19	A18	A17
4th Cycle	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	A26	A25

Note: (1). A8 is set Low or High by the 00h or 01h Command, see Pointer Operations section.

(2). Any additional address input cycles will be ignored with tALS > 0ns.

Table4: Address Insertion, x16 Devices

Bus Cycle	I/O <sub>8</sub> -I/ O <sub>15</sub>	I/O <sub>7</sub>	I/O <sub>6</sub>	I/O <sub>5</sub>	I/O <sub>4</sub>	I/O <sub>3</sub>	I/O <sub>2</sub>	I/O <sub>1</sub>	I/O <sub>0</sub>
1st Cycle	Х	A7	A6	A5	A4	A3	A2	A1	A0
2nd Cycle	Х	A16	A15	A14	A13	A12	A11	A10	A9
3rd Cycle	Х	A24	A23	A22	A21	A20	A19	A18	A17
4th Cycle	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	$V_{\mathrm{IL}}$	A26	A25

Note: (1). A8 is Don't Care in x16 devices.

- (2). Any additional address input cycles will be ignored with tALS > 0ns.
- (3). A1 is the Least Significant Address for x16 devices.

(4). The 01h Command is not used in x16 devices.



#### **COMMAND SET**

All bus write operations to the device are interpreted by the Command Interface. The Commands are input on  $I/O_0-I/O_7$  and are latched on the rising edge of Write Enable when the Command Latch Enable signal is high. Device operations are selected by writing specific commands to the Command Register. The two-step command sequences for program and erase operations are imposed to maximize data security.

The Commands are summarized in Table 5, Commands.

**Table 5: Command Set** 

FUNCTION	1st CYCLE	2nd CYCLE	3rd CYCLE	Command accepted during busy
READ A	00h	-	-	
READ B	01h	-	-	
READ C	50h	-	-	
READ ELECTRINIC SIGNATURE	90h	-	-	
READ STATUS REGISTER	70h	-	-	Yes
PAGE PROGRAM	80h	10h	-	
COPY BACK PROGRAM	00h	8Ah	10h	
BLOCK ERASE	60h	D0h	-	
RESET	FFh	-	-	Yes

Note: (1). Any undefined command sequence will be ignored by the device.

(2). Bus Write Operation(1<sup>st</sup>, 2<sup>nd</sup> and 3<sup>rd</sup> Cycle): The bus cycles are only shown for issuing the codes. The cycles required to input the addresses or input/output data are not shown.

## **DEVICE OPERATIONS**

#### **Pointer Operations**

As the NAND Flash memories contain two different areas for x16 devices and three different areas for x8 devices (see Figure 8) the read command codes (00h, 01h, 50h) are used to act as pointers to the different areas of the memory array (they select the most significant column address).

The Read A and Read B commands act as pointers to the main memory area. Their use depends on the bus width of the device.

- In x16 devices the Read A command (00h) sets the pointer to Area A (the whole of the main area) that is Words 0 to 255.
- In x8 devices the Read A command (00h) sets the pointer to Area A (the first half of the main area) that is Bytes 0 to 255, and the Read B command (01h) sets the pointer to Area B (the second half of the main area) that is Bytes 256 to 511.

In both the x8 and x16 devices the Read C command (50h), acts as a pointer to Area C (the spare memory area) that is Bytes 512 to 527 or Words 256 to 263.

# HY27UA(08/16)1G1M Series HY27SA(08/16)1G1M Series 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash

Once the Read A and Read C commands have been issued the pointer remains in the respective areas until another pointer code is issued. However, the Read B command is effective for only one operation, once an operation has been executed in Area B the pointer returns automatically to Area A.

The pointer operations can also be used before a program operation, that is the appropriate code (00h, 01h or 50h) can be issued before the program command 80h is issued (see Figure 9).


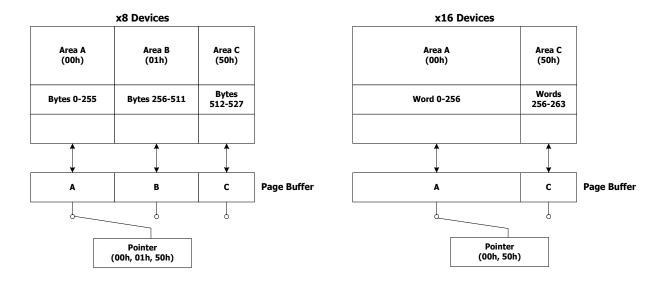


Figure 8. Pointer Operation



**Figure 9. Pointer Operations for Programming** 

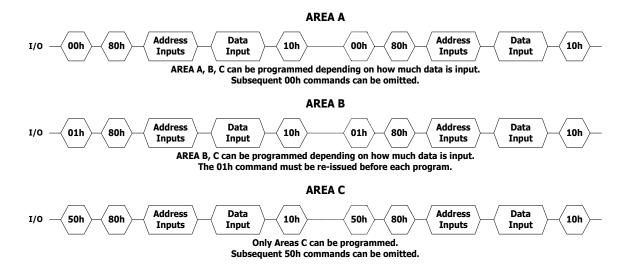

# HY27UA(08/16)1G1M Series HY27SA(08/16)1G1M Series 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash

#### **Read Memory Array**

Each operation to read the memory area starts with a pointer operation as shown in the Pointer Operations section. Once the area (main or spare) has been selected using the Read A, Read B or Read C commands four bus cycles. The device defaults to Read A mode after powerup or a Reset operation. Devices, where page0 is read automatically at power-up, are available on request.

When reading the spare area addresses:

- A0 to A3 (x8 devices)
- A0 to A2 (x16 devices)

are used to set the start address of the spare area while addresses:

- A4 to A7 (x8 devices)
- A3 to A7 (x16 devices)

are ignored.

Once the Read A or Read C commands have been issued they do not need to be reissued for subsequent read operations as the pointer remains in the respective area. However, the Read B command is effective for only one operation, once an operation has been executed in Area B the pointer returns automatically to Area A and so another Read B command is required to start another read operation in Area B.

Once a read command is issued three types of operations are available: Random Read, Page Read and Sequential Row Read.

#### **Random Read**

Each time the command is issued the first read is Random Read.

#### Page Read

After the Random Read access the page data is transferred to the Page Buffer in a time of  $t_{WHBH}$  (refer to Table 15 for value). Once the transfer is complete the Ready/Busy signal goes High. The data can then be read out sequentially (from selected column address to last column address) by pulsing the Read Enable signal.

## **Sequential Row Read**

After the data in last column of the page is output, if the Read Enable signal is pulsed and Chip Enable remains Low then the next page is automatically loaded into the Page Buffer and the read operation continues. A Sequential Row Read operation can only be used to read within a block. If the block changes a new read command must be issued. Refer to Figures 12 and 13 for details of Sequential Row Read operations. To terminate a Sequential Row Read operation set the Chip Enable signal to High for more than  $t_{\text{EHEL}}$ . Sequential Row Read is not available when the Chip Enable Don't Care option is enabled.



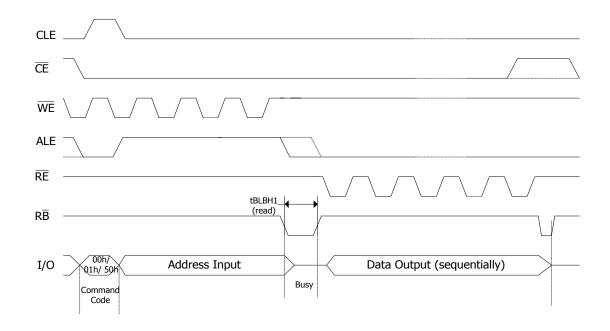


Figure 10. Read (A, B, C) Operation

**Note:** 1. If  $t_{\text{ELWL}}$  is less than 10ns,  $t_{\text{WLWH}}$  must be minimum 35ns, otherwise,  $t_{\text{WLWH}}$  may be minimum 25ns.

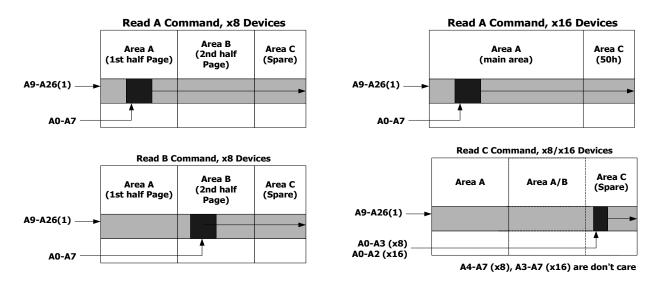


Figure 11. Read Block Diagrams

Note: 1. Highest address depends on device density.



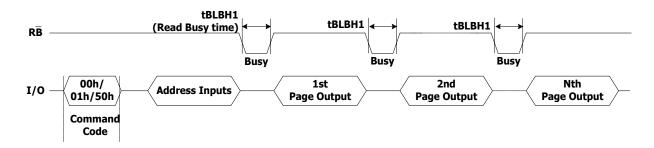


Figure 12. Sequential Row Read Operation

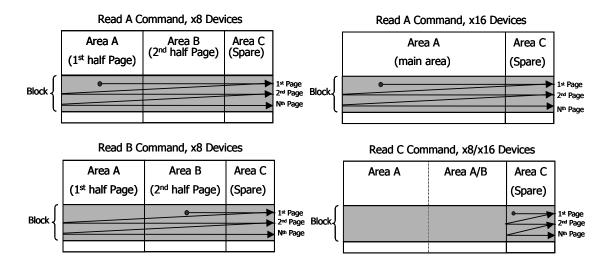


Figure 13. Sequential Row Read Block Diagrams



## **Page Program**

The Page Program operation is the standard operation to program data to the memory array. The main area of the memory array is programmed by page, however partial page programming is allowed where any number of bytes (1 to 528) or words (1 to 264) can be programmed.

The max number of consecutive partial page program operations allowed in the same page is one in the main area and two in the spare area. After exceeding this a Block Erase command must be issued before any further program operations can take place in that page.

Before starting a Page Program operation a Pointer operation can be performed to point to the area to be programmed. Refer to the Pointer Operations section and Figure 9 for details.

Each Page Program operation consists of five steps (see Figure 14):

- 1. one bus cycle is required to setup the Page Program command
- 2. four bus cycles are then required to input the program address (refer to Table 3)
- 3. the data is then input (up to 528 Bytes/ 264 Words) and loaded into the Page Buffer
- 4. one bus cycle is required to issue the confirm command to start the Program/ Erase/Read Controller.
- 5. The Program/ Erase/Read Controller then programs the data into the array.

Once the program operation has started the Status Register can be read using the Read Status Register command. During program operations the Status Register will only flag errors for bits set to '1' that have not been successfully programmed to '0'.

During the program operation, only the Read Status Register and Reset commands will be accepted, all other commands will be ignored.

Once the program operation has completed the Program/ Erase/Read Controller bit SR6 is set to '1' and the Ready/ Busy signal goes High.

The device remains in Read Status Register mode until another valid command is written to the Command Interface.

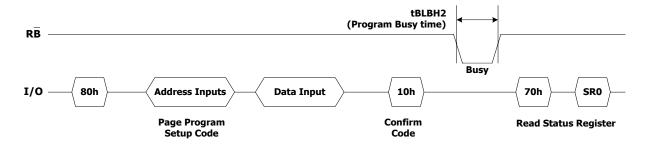


Figure 14. Page Program Operation

Note: Before starting a Page Program operation a Pointer operation can be performed. Refer to Pointer section for details.



#### **Copy Back Program**

The Copy Back Program operation is used to copy the data stored in one page and reprogram it in another page. The Copy Back Program operation does not require external memory and so the operation is faster and more efficient because the reading and loading cycles are not required. The operation is particularly useful when a portion of a block is updated and the rest of the block needs to be copied to the newly assigned block.

If the Copy Back Program operation fails an error is signalled in the Status Register. However as the standard external ECC cannot be used with the Copy Back operation bit error due to charge loss cannot be detected. For this reason it is recommended to limit the number of Copy Back operations on the same data and/or to improve the performance of the ECC.

The Copy Back Program operation requires three steps:

- 1. The source page must be read using the Read A command (one bus write cycle to setup the command and then 4 bus write cycles to input the source page address). This operation copies all 264 Words/ 528 Bytes from the page into the Page Buffer.
- 2. When the device returns to the ready state (Ready/Busy High), the second bus write cycle of the command is given with the 4 bus cycles to input the target page address. *A25 & A26* must be the same for the Source and Target Pages.
- 3. Then the confirm command is issued to start the P/E/R Controller.

After a Copy Back Program operation, a partial page program is not allowed in the target page until the block has been erased.

See Figure 15 for an example of the Copy Back operation.

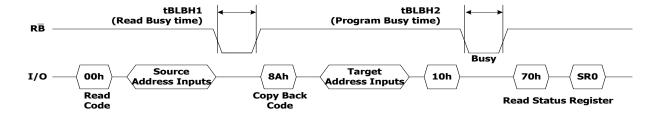


Figure 15. Copy Back Operation

## **Block Erase**

Erase operations are done one block at a time. An erase operation sets all of the bits in the addressed block to '1'. All previous data in the block is lost. An erase operation consists of three steps (refer to Figure 17):

- 1. One bus cycle is required to setup the Block Erase command.
- 2. Only three bus cycles for the devices are required to input the block address. The first cycle (A0 to A7) is not required as only addresses A14 to A26 (highest address depends on device density) are valid, A9 to A13 are ignored. In the last address cycle  $I/O_0$  to  $I/O_7$  must be set to  $V_{II}$ .
- 3. One bus cycle is required to issue the confirm command to start the P/E/R Controller.



Once the erase operation has completed the Status Register can be checked for errors.

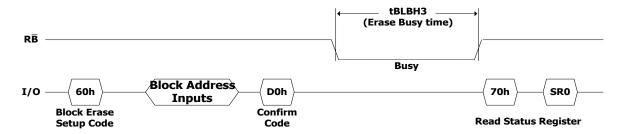


Figure 17. Block Erase Operation

#### Reset

The Reset command is used to reset the Command Interface and Status Register. If the Reset command is issued during any operation, the operation will be aborted. If it was a program or erase operation that was aborted, the contents of the memory locations being modified will no longer be valid as the data will be partially programmed or erased. If the device has already been reset then the new Reset command will not be accepted. The Ready/Busy signal goes Low for  $t_{BLBH4}$  after the Reset command is issued. The value of  $t_{BLBH4}$  depends on the operation that the device was performing when the command was issued, refer to Table 15 for the values.

## **Read Status Register**

The device contains a Status Register which provides information on the current or previous Program or Erase operation. The various bits in the Status Register convey information and errors on the operation.

The Status Register is read by issuing the Read Status Register command. The Status Register information is present on the output data bus  $(I/O_0^- I/O_7)$  on the falling edge of Chip Enable or Read Enable, whichever occurs last. When several memories are connected in a system, the use of Chip Enable and Read Enable signals allows the system to poll each device separately, even when the Ready/Busy pins are common-wired. It is not necessary to toggle the Chip Enable or Read Enable signals to update the contents of the Status Register.

After the Read Status Register command has been issued, the device remains in Read Status Register mode until another command is issued. Therefore if a Read Status Register command is issued during a Random Read cycle a new read command must be issued to continue with a Page Read or Sequential Row Read operation.

The Status Register bits are summarized in Table 6, Status Register Bits. Refer to Table 6 in conjunction with the following text descriptions.

## **Write Protection Bit (SR7)**

The Write Protection bit can be used to identify if the device is protected or not. If the Write Protection bit is set to '1' the device is not protected and program or erase operations are allowed. If the Write Protection bit is set to '0' the device is protected and program or erase operations are not allowed.



# HY27UA(08/16)1G1M Series HY27SA(08/16)1G1M Series 1Gbit (128Mx8bit / 64Mx16bit) NAND Flash

#### P/E/R Controller

Status Register bit SR6 has two different functions depending on the current operation.

During all other operations SR6 acts as a P/E/R Controller bit, which indicates whether the P/E/R Controller is active or inactive. When the P/E/R Controller bit is set to '0', the P/E/R Controller is active (device is busy); when the bit is set to '1', the P/E/R Controller is inactive (device is ready).

#### P/E/R Controller Bit (SR5)

The Program/Erase/Read Controller bit indicates whether the P/E/R Controller is active or inactive. When the P/E/R Controller bit is set to '0', the P/E/R Controller is active (device is busy); when the bit is set to '1', the P/E/R Controller is inactive (device is ready).

## Error Bit (SR0)

The Error bit is used to identify if any errors have been detected by the P/E/R Controller. The Error Bit is set to '1' when a program or erase operation has failed to write the correct data to the memory. If the Error Bit is set to '0' the operation has completed successfully.

SR4, SR3 and SR2 are Reserved

#### **Table 6: Status Register Bit**

Bit	NAME	Logic Level	Definition
SR7	Write Protection	'1'	Not Protected
JK/	write Protection	'0'	Protected
SR6	Program/Erase/Read	'1'	P/E/R C Inactive, device ready
SKO	Controller	'0'	P/E/R C active, device busy
SR5	Program/ Erase/ Read	'1'	P/E/R C inactive, device ready
383	Controller	'0'	P/E/R C active, device busy
SR4, SR3, SR2	Reserved	Don't Care	
SR0	Generic Error	'1'	Error - Operation failed
SKU	Generic Little	'0'	No Error - Operation successful

## **Read Electronic Signature**

The device contains a Manufacturer Code and Device Code. To read these codes two steps are required:

- 1. first use one Bus Write cycle to issue the Read Electronic Signature command (90h)
- 2. then subsequent Bus Read operations will read the Manufacturer Code and the Device Code until another command is issued.

Refer to Table, Read Electronic Signature for information on the addresses.

Part Number	Manufacture Code	Device Code	Bus Width
HY27(U/S)A081G1M	ADh	79h	x8
HY27(U/S)A161G1M	00ADh	0074h	x16

## Automatic Page 0 Read at Power-Up

Automatic Page 0 Read at Power-Up is an option available on all devices belonging to the NAND Flash 528 Byte/264 Word Page family. It allows the microcontroller to directly download boot code from page 0, without requiring any command or address input sequence. The Automatic Page 0 Read option is particularly suited for applications that boot from the NAND.

Devices delivered with Automatic Page 0 Read at Power-Up can have the Sequential Row Read option either enabled or disabled.



## Automatic Page 0 Read Description.

At powerup, once the supply voltage has reached the threshold level, V<sub>CCth</sub>, all digital outputs revert to their reset state and the internal NAND device functions (reading, writing, erasing) are enabled.

The device then automatically switches to read mode where, as in any read operation, the device is busy for a time  $t_{BLBH1}$  during the data is transferred to the Page Buffer. Once the data transfer is complete the Ready/Busy signal goes High. The data can then be read out sequentially on the I/O bus by pulsing the Read Enable,  $\overline{RE}$ , signal. Figures 18 and 19 show the power-up waveforms for devices featuring the Automatic Page 0 Read option.

## **Sequential Row Read Disabled**

If the device is delivered with Sequential row read disabled Automatic Read Page 0 at Power-up, only the first page (Page 0) will be automatically read after the power-on sequence. Refer to Figure 18.

## **Sequential Row Read Enabled**

If the device is delivered with the Automatic Page 0 Read option only (Sequential Row Read Enable), the device will automatically enter Sequential Row Read mode after the power-up sequence, and start reading Page 0, Page 1, etc., until the last memory location is reached, each new page being accessed after a time  $t_{BLBH1}$ .

The Sequential Row Read operation can be inhibited or interrupted by de-asserting E (set to  $V_{IH}$ ) or by issuing a comand. Refer to Figure 19.


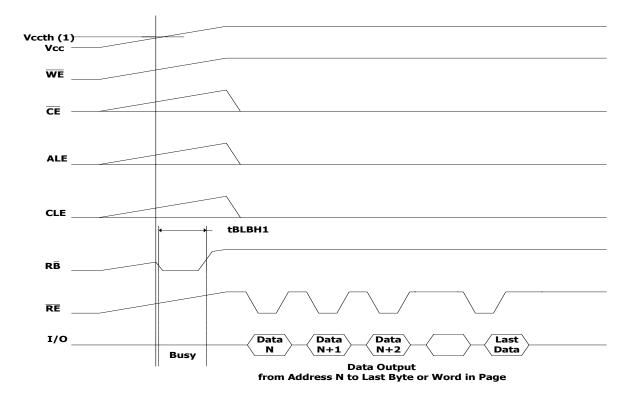


Figure 18. Sequential Row Read Disabled and Automatic Page 0 Read at power-up Note: (1). V<sub>CCth</sub> is equal to 2.5V for 3V Power Supply devices.



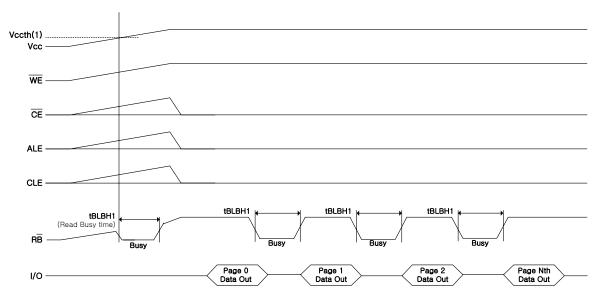

Note: (1). V<sub>CCth</sub> is equal to 2.5V for 3V Power Supply devices.

Figure 19. Automatic Page 0 Read at power-up (Sequential Row Read Enable)

#### **Bad Block Management**

Devices with Bad Blocks have the same quality level and the same AC and DC characteristics as devices where all the blocks are valid. A Bad Block does not affect the performance of valid blocks because it is isolated from the bit line and common source line by a select transistor.

The devices are supplied with all the locations inside valid blocks erased (FFh). The Bad Block Information is written prior to shipping. Any block where the 6th Byte/ 1st Word in the spare area of the 1st or 2nd page (if the 1st page is Bad) does not contain FFh is a Bad Block.

The Bad Block Information must be read before any erase is attempted as the Bad Block Information may be erased. For the system to be able to recognize the Bad Blocks based on the original information it is recommended to create a Bad Block table following the flowchart shown in Figure 20.

## **Block Replacement**

Over the lifetime of the device additional Bad Blocks may develop. In this case the block has to be replaced by copying the data to a valid block.

These additional Bad Blocks can be identified as attempts to program or erase them will give errors in the Status Register

As the failure of a page program operation does not affect the data in other pages in the same block, the block can be replaced by re-programming the current data and copying the rest of the replaced block to an available valid block.

The Copy Back Program command can be used to copy the data to a valid block.

See the "Copy Back Program" section for more details.

Refer to Table 7 for the recommended procedure to follow if an error occurs during an operation.

**Table 7: Block Failure** 

Operation	Recommended Procedure		
Erase	Block Replacement		
Program	Block Replacement or ECC		
Read	ECC		



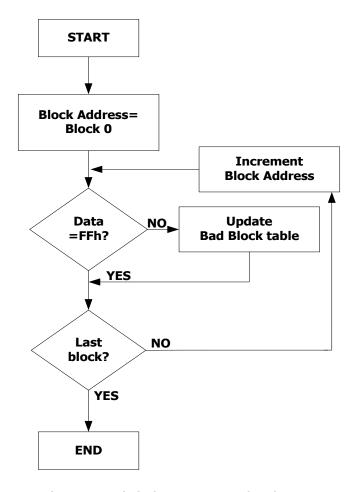


Figure 20. Bad Block Management Flowchart

**Table 8: Valid Block** 

Symbol	Para.	Min	Max	Unit
N <sub>VB</sub>	# of Valid Block	8052	8192	Blocks

## PROGRAM AND ERASE TIMES AND ENDURANCE CYCLES

The Program and Erase times and the number of Program/ Erase cycles per block are shown in Table 9.



**Table 9: Program, Erase Time and Program Erase Endurance Cycles** 

Parameters		Unit			
raiameters	Min	Тур	Max	Onic	
Page Program Time		200	500	us	
Block Erase Time		2	3	ms	
Program/Erase Cycles (per block)	100,000			cycles	
Data Retention	10			years	

## **MAXIMUM RATING**

Stressing the device above the ratings listed in Table 10, Absolute Maximum Ratings, may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the Operating sections of this specification is not implied. Exposure to Absolute Maximum Rating conditions for extended periods may affect device reliability.

**Table 10: Absolution Maximum Rating** 

Symbol	Parameter	NAND	Unit		
Symbol	raidilletei	Min	Max	Oilic	
T <sub>BIAS</sub>	Temperature Unde	-50	125	°C	
T <sub>STG</sub>	Storage Tempera	-65	150	°C	
V <sub>IO</sub> <sup>(1)</sup>	Input or Output Voltage	1.8V devices	-0.6	2.7	V
AIO.		3.3 V devices	-0.6	4.6	V
Vec	Supply Voltage	1.8V devices	-0.6	2.7	V
V <sub>CC</sub>		3.3 V devices	-0.6	4.6	V

Note: (1). Minimum Voltage may undershoot to -2V for less than 20ns during transitions on input and I/O pins. Maximum voltage may overshoot to  $V_{CC}$  + 2V for less than 20ns during transitions on I/O pins.

## **DC AND AC PARAMETERS**

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics Tables that follow, are derived from tests performed under the Measurement Conditions summarized in Table 11, Operating and AC Measurement Conditions. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.



**Table 11: Operating and AC Measurement Conditions** 

Parameter	NAND	NAND Flash		
		Min	Max	Unit
	1.8V devices <sup>(1)</sup>	1.7	1.95	V
Supply Voltage (V <sub>CC</sub> )	2.6V devices <sup>(1)</sup>	2.4	2.8	V
	3.3V devices	2.7	3.6	V
Ambient Temperature (T.)	Commercial Temp.	0	70	°C
Ambient Temperature (T <sub>A</sub> )	Indurstrial Temp.	-40	85	°C
	1.8V devices <sup>(1)</sup>	30	30	
Load Capacitance ( $C_L$ ) (1 TTL GATE and $C_L$ )	2.6V devices <sup>(1)</sup>	30	30	
	3.3V devices	10	100	
	1.8V devices <sup>(1)</sup>	0	V <sub>CC</sub>	V
Input Pulses Voltages	2.6V devices <sup>(1)</sup>	0	V <sub>CC</sub>	V
	3.3V devices	0.4	2.4	V
	1.8V devices <sup>(1)</sup>		V <sub>CC</sub> /2	
Input and Output Timing Ref. Voltages	2.6V devices <sup>(1)</sup>	Vcc		
	3.3V devices	1.5		V
Input Rise and Fall	Times	5		ns

Note: (1). TBD

**Table 12: Capacitance** 

Symbol	Parameter	Test Condition	Тур	Max	Unit
$C_{IN}$	Input Capacitance	$V_{IN} = 0V$		10	pF
C <sub>I/O</sub>	Input/Output Capacitance	$V_{IL} = 0V$		10	pF

Note:  $T_{A}$  = 25°C, f = 1 MHz.  $C_{IN}$  and  $C_{I/O}$  are not 100% tested.



## Table 13: DC Characteristics, 3.3V Device and 1.8V Device

Symbol	Parameter		Test Condition	3.3V		1	1.8V			Unit
Зушьог	Га	irameter	rest Condition	Min	Тур	Max	Min	Тур	Max	Oilic
I <sub>CC1</sub>	Operating	Sequential Read	$\frac{t_{RLRL}}{CE=V_{IL}}$ minimum $\frac{t_{RLRL}}{CE=V_{IL}}$ I <sub>OUT</sub> = 0 mA	-	15	30	-	10	20	mA
I <sub>CC2</sub>	Current	Program	-	-	15	30	-	10	20	mA
I <sub>CC3</sub>		Erase	-	-	15	30	-	10	20	mA
I <sub>CC4</sub>	Stand-by Current (TTL)		CE=V <sub>IH</sub> , WP=0V/ V <sub>CC</sub>	-	-	1	-	-	1	mA
I <sub>CC5</sub>	Stand-By Current (CMOS)		CE=V <sub>CC</sub> -0.2, WP=0/ V <sub>CC</sub>	-	20	100	-	20	100	uA
I <sub>LI</sub>	Input Leakage Current		V <sub>IN</sub> = 0 to V <sub>CC</sub> max	-	-	± 20	-	-	± 20	uA
I <sub>LO</sub>	Output Leakage Current		V <sub>OUT</sub> = 0 to V <sub>CC</sub> max	-	-	± 20	-	-	± 20	uA
V <sub>IH</sub>	Input High	Voltage	-	2.0	-	V <sub>CC</sub> +0.3	V <sub>CC</sub> +0.4		V <sub>CC</sub> +0.3	V
V <sub>IL</sub>	Input Low	Voltage	-	-0.3	-	0.8	-0.3		0.4	V
V <sub>OH</sub>	Output High Voltage Level		I <sub>OH</sub> = -400uA	2.4	-	-	V <sub>CC</sub> -0.1	-	-	V
V <sub>OL</sub>	Output Low Voltage Level		I <sub>OL</sub> = 2.1mA	-	-	0.4	-	-	0.1	V
$I_{OL}(R\overline{B})$	Output Low Current (RB)		V <sub>OL</sub> = 0.1V	8	10	-	3	4	-	mA
V <sub>LKO</sub>	V <sub>DD</sub> Suppl <sup>o</sup> (Erase and	y Voltage I Program lockout)	-	-	-	2.5	-	-	1.5	V



Table 14: AC Characteristics for Command, Address, Data Input (3.3V Device and 1.8V Device)

Symbol	Alt. Symbol	Parameter			3.3V Device	1.8V Device	Unit
t <sub>ALLWL</sub>	t <sub>ALS</sub>	Address Latch Low to Write Enable Low	ALE Setup time Min		Min 0		ns
t <sub>ALHWL</sub>	ALS	Address Latch Hith to Write Enable Low	ALL Scrup time	1-1111	,	,	113
t <sub>CLHWL</sub>	t	Command Latch High to Write Enable Low	CL Setup time	Min	Min (		ns
t <sub>CLLWL</sub>	t <sub>CLS</sub>	Command Latch Low to Write Enable Low	CL Setup time	Pilli	,	,	115
t <sub>DVWH</sub>	t <sub>DS</sub>	Data Valid to Write Enable High	Data Setup time	Min	Min 20		ns
t <sub>ELWL</sub>	t <sub>CS</sub>	Chip Enable Low to Write Enable Low	CE Setup time	Min	0		ns
t <sub>WHALH</sub>	+	Write Enable High to Address Latch High	ALE Hold time	Min	10		ns
t <sub>WHALL</sub>	t <sub>ALH</sub>	Write Enable High to Address Latch Low	ALE HOIG UITIE	IMIIII			
t <sub>WHCLH</sub>	+	Write Enable High to Command Latch High	CLE hold time	Min	10		ns
t <sub>WHCLL</sub>	t <sub>CLH</sub>	Write Enable High to Command Latch Low	CLE HOIG GITTE	IMIIII			
t <sub>WHDX</sub>	t <sub>DH</sub>	Write Enable High to Data Transition	Data Hold time	Min	1	0	ns
t <sub>WHEH</sub>	t <sub>CH</sub>	Write Enable High to Chip Enable High	CE Hold time	Min	Min 10		ns
t <sub>WHWH</sub>	t <sub>WH</sub>	Write Enable High to Write Enable Low	WE High Hold time	Min	15	20	ns
t <sub>WLWH</sub>	t <sub>WP</sub>	Write Enable Low to Write Enable High	WE Pulse Width	Min	40	60	ns
t <sub>WLWL</sub>	t <sub>WC</sub>	Write Enable Low to Write Enable Low	Write Cycle time	Min	60	80	ns

Note 1: If tELWL is less than 10ns, tWLWH must be minimum 35ns, otherwise, tWLWH may be minimum 25ns.




## Table 15: AC Characteristics for Operation (3.3V Device and 1.8V Device)

Alt. Symbol	Symbol		Parameter		3.3V Device	1.8V Device	Unit
t <sub>ALLRL1</sub>	t <sub>AR1</sub>	Address Latch Low to	Read Electronic Signature	Min	10	25	ns
t <sub>ALLRL2</sub>	t <sub>AR2</sub>	Read Enable Low	Read cycle	Min	50	80	ns
t <sub>BHRL</sub>	t <sub>RR</sub>	Ready/Busy High to Read	d Enable Low	Min	2	20	ns
t <sub>BLBH1</sub>	t <sub>R</sub>		1Gb : Dual Die	Max	12	15	us
t <sub>BLBH2</sub>	t <sub>PROG</sub>		Program Busy time	Max	50	00	us
t <sub>BLBH3</sub>	t <sub>BERS</sub>	-	Erase Busy time	Max	:	3	ms
		Ready/Busy Low to Ready/Busy High	Reset Busy time, during ready	Max	!	5	us
			Reset Busy time, during read	Max	!	5	us
t <sub>BLBH4</sub>	t <sub>RST</sub>		Reset Busy time, during program	Max	1	.0	us
			Reset Busy time, during erase	Max	50	00	us
t <sub>CLLRL</sub>	t <sub>CLR</sub>	Command Latch Low to	Command Latch Low to Read Enable Low			10	
t <sub>DZRL</sub>	t <sub>IR</sub>	Data Hi-Z to Read Enable	Data Hi-Z to Read Enable Low			0	
t <sub>EHBH</sub>	t <sub>CRY</sub>	Chip Enable High to Read	Chip Enable High to Ready/Busy High (CE intercepted read)			-tr <sup>(1)</sup>	ns
t <sub>EHEL</sub>	t <sub>CEH</sub>	Chip Enable High to Chip	Enable Low <sup>(2)</sup>	Min	10	00	ns
t <sub>EHQZ</sub>	t <sub>CHZ</sub>	Chip Enable High to Outp	out Hi-Z	Max	20		ns
t <sub>ELQV</sub>	t <sub>CEA</sub>	Chip Enable Low to Outp	ut Valid	Max	45	75	ns
t <sub>RHBL</sub>	t <sub>RB</sub>	Read Enable High to Ready/Busy Low		Max	10	00	ns
t <sub>RHRL</sub>	t <sub>REH</sub>	Read Enable High to Read Enable Low	Read Enable High Hold time	Min	15	20	ns
t <sub>RHQZ</sub>	t <sub>RHZ</sub>	Read Enable High to		Min		.5	ns
чкнүг	KHZ	Output Hi-Z	Output Hi-Z		3	10	
t <sub>RLRH</sub>	t <sub>RP</sub>	Read Enable Low to Read Enable High	Read Enable Pulse Width	Min	40	60	ns
t <sub>RLRL</sub>	t <sub>RC</sub>	Read Enable Low to Read Enable Low	Read Cycle time	Min	60	80	ns
+	t <sub>REA</sub>	Read Enable Low to	Read Enable Access time	Max	35	60	
t <sub>RLQV</sub>	t <sub>READID</sub>	Output Valid	Read ES <sup>(3)</sup> Access time	i-iax	45	60	ns
t <sub>WHBH</sub>	t <sub>R</sub>	Write Enable High to Rea	ndy/Busy High	Max	12	15	us

Alt. Symbol	Symbol	Parameter			3.3V Device	1.8V Device	Unit
t <sub>WHBL</sub>	t <sub>WB</sub>	Write Enable High to Ready/Busy Low		Max	10	00	ns
t <sub>WHRL</sub>	t <sub>WHR</sub>	Write Enable High to Read Enable Low		Min	6	0	ns
t <sub>WLWL</sub>	t <sub>WC</sub>	Write Enable Low to Write Enable Low Write Enable Low		Min	60	80	ns

Note: (1). The time to Ready depends on the value of the pull-up resistor tied to the Ready/Busy pin. See Figures 32, 33 and 34.

- (2). To break the sequential read cycle,  $\overline{\text{CE}}$  must be held High for longer than  $t_{\text{EHEL}}$ .
- (3). ES = Electronic Signature.

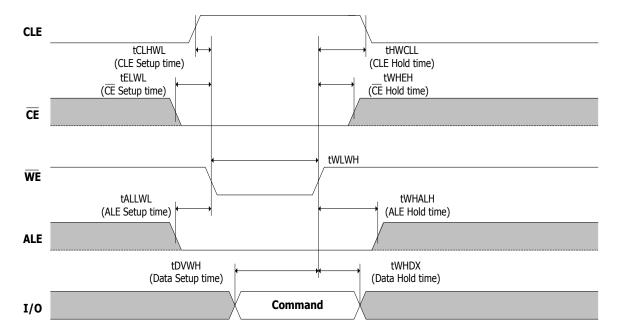

**Figure 21. Command Latch AC Waveforms** 



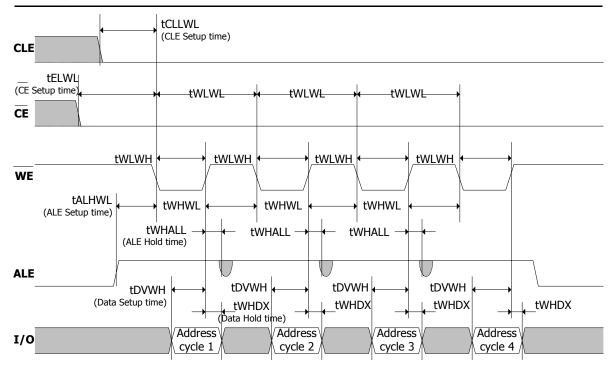


Figure 22. Address Latch AC Waveforms

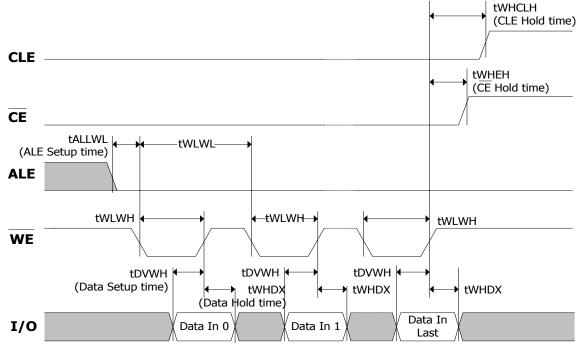


Figure 23. Data Input Latch AC Waveforms



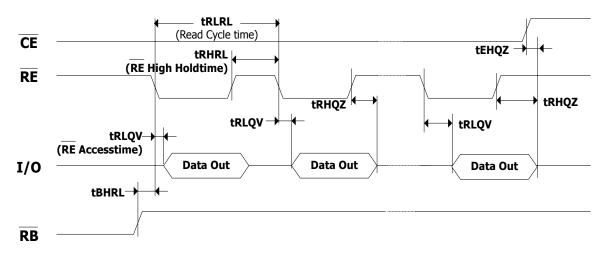


Figure 24. Sequential Data Output after Read AC Waveforms

Note:1. CLE = Low, ALE = Low,  $\overline{\text{WE}}$  = High.

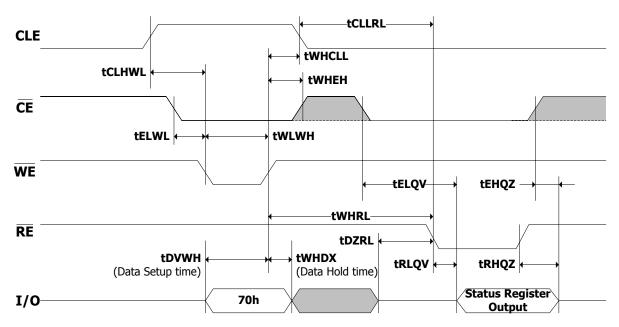


Figure 25. Read Status Register AC Waveform



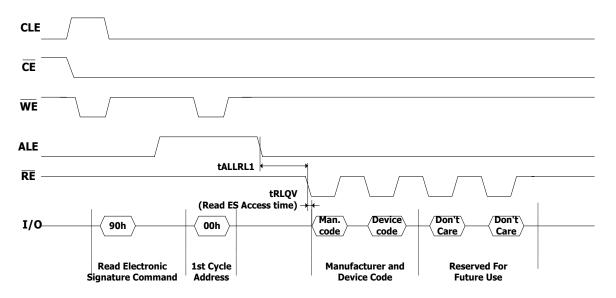


Figure 26. Read Electronic Signature AC Waveform

Note: Refer to table(To see Page 21) for the values of the manufacture and device codes.

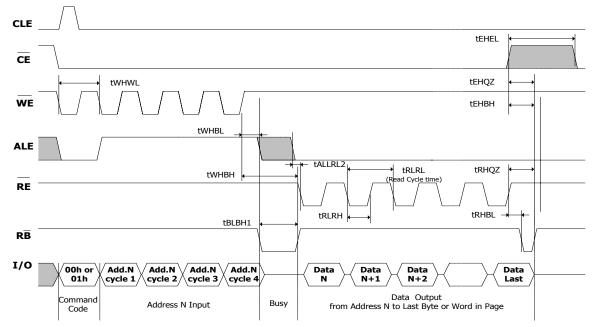


Figure 27. Read Read A/ Read B Operation AC Waveform



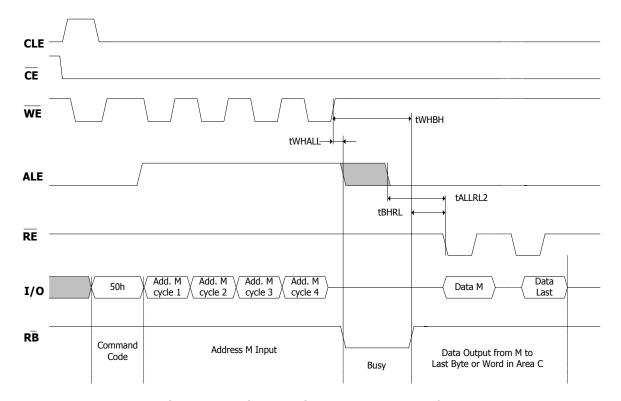


Figure 28. Read C Operation, One Page AC Waveform

Note: 1. A0-A7 is the address in the Spare Memory area, where A0-A3 are valid and A4-A7 are don't care.

2. Only address cycle 4 is required.

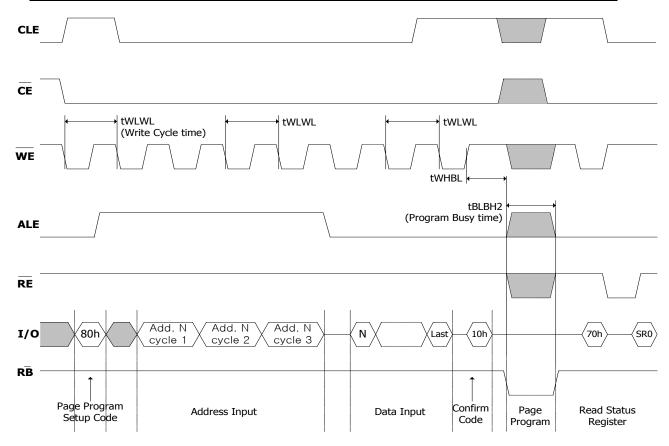


Figure 29. Page Program AC Waveform



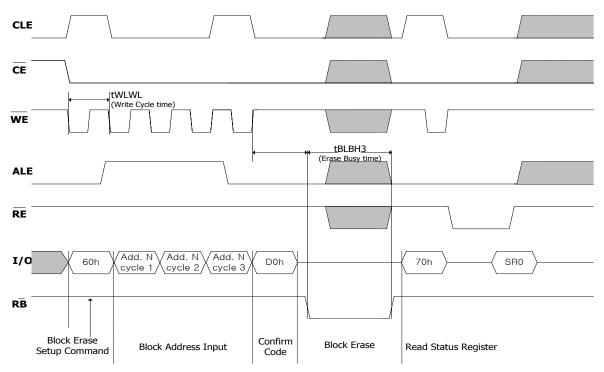


Figure 30. Block Erase AC Waveform

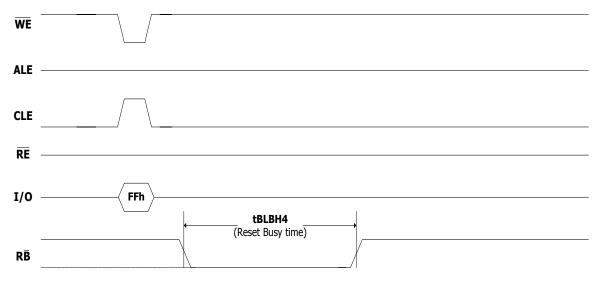


Figure 31. Reset AC Waveform



## System Interface Using CE don't care

To simplify system interface,  $\overline{\text{CE}}$  may be deasserted during data loading or sequential data-reading as shown below. So, it is possible to connect NAND Flash to a microprocessor. The only function that was removed from standard NAND Flash to make  $\overline{\text{CE}}$  don't care read operation was disabling of the automatic sequential read function.

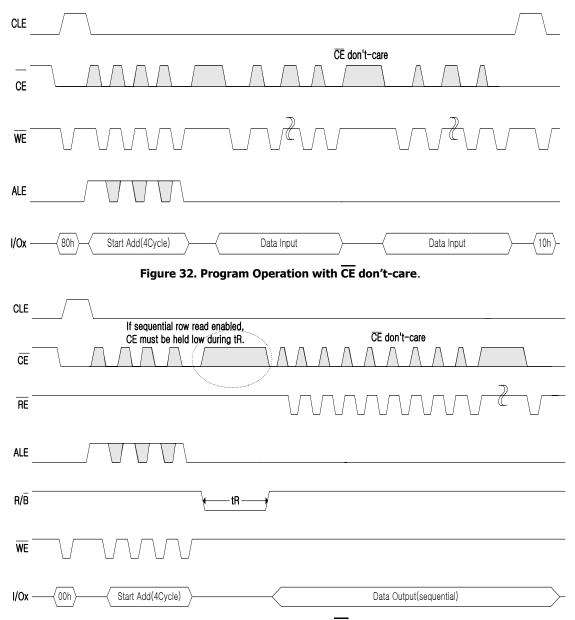


Figure 33. Read Operation with  $\overline{CE}$  don't-care.



## **Ready/Busy Signal Electrical Characteristics**

Figures 32, 33 and 34 show the electrical characteristics for the Ready/Busy signal. The value required for the resistor  $R_P$  can be calculated using the following equation:

$$R_{p}min = \frac{(V_{CCmax} - V_{OLmax})}{I_{OL} + I_{L}}$$
So,
$$R_{p}min(1.8V) = \frac{1.85V}{3mA + I_{L}}$$

$$R_{p}min(3V) = \frac{3.2V}{8mA + I_{L}}$$

where  $I_L$  is the sum of the input currents of all the devices tied to the Ready/Busy signal.  $R_P$  max is determined by the maximum value of tr.

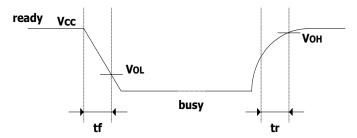


Figure 32. Ready/Busy AC Waveform

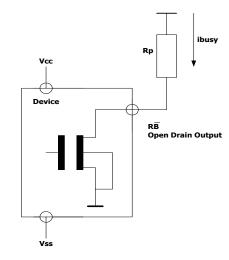


Figure 33. Ready/Busy Load Circuit



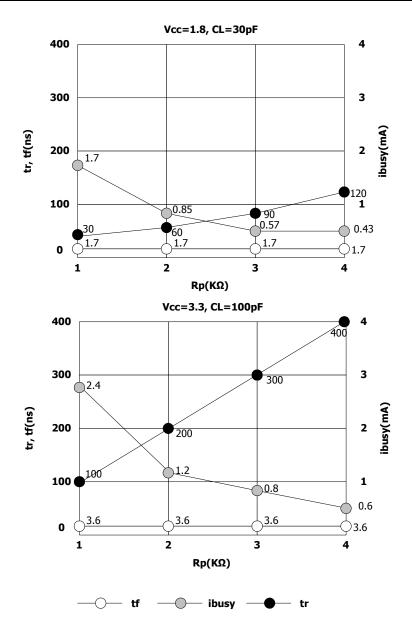


Figure 34. Resistor Value Waveform Timings for Ready/Busy Signal

## \* Application Note

Reset command must be issued when the controller writes data to another 512Mb.(i.e. When A26 is changed during program.)



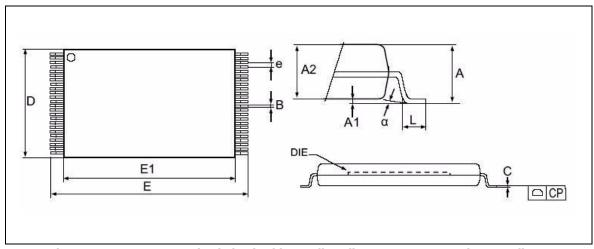


Figure 35. 48-TSOP1 - 48-lead Plastic Thin Small Outline, 12 x 20mm, Package Outline

Table 16: 48-TSOP1 - 48-lead Plastic Thin Small Outline, 12 x 20mm, Package Mechanical Data

Symbol	millimeters				
Зупівої	Min	Тур	Max		
A			1.200		
A1	0.050		0.150		
A2	0.980		1.030		
В	0.170		0.250		
С	0.100		0.200		
СР			0.050		
D	11.910	12.000	12.120		
E	19.900	20.000	20.100		
E1	18.300	18.400	18.500		
e		0.500			
L	0.500		0.680		
alpha	0		5		



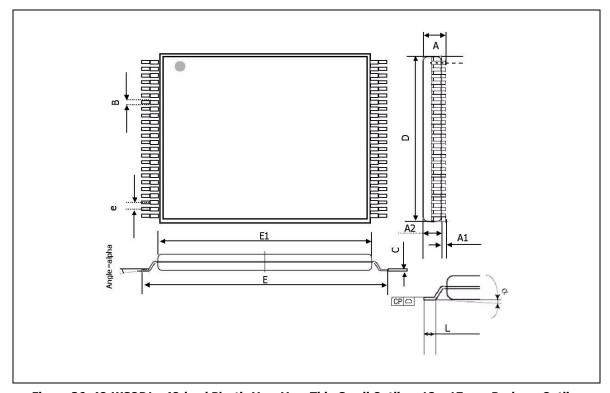


Figure 36. 48-WSOP1 - 48-lead Plastic Very Very Thin Small Outline, 12 x 17mm, Package Outline

Table 17: 48-WSOP1- 48-lead Plastic Thin Small Outline, 12 x 17mm, Package Mechanical Data

Symbol	millimeters				
Symbol	Min	Тур	Max		
А			0.700		
A1	0		0.080		
A2	0.540		0.620		
В	0.130		0.230		
С	0.065		0.175		
СР			0.050		
D	11.910	12.000	12.120		
E	16.900	17.000	17.100		
E1	15.300	15.400	15.500		
е		0.500			
L	0.450		0.750		
alpha	0		8		



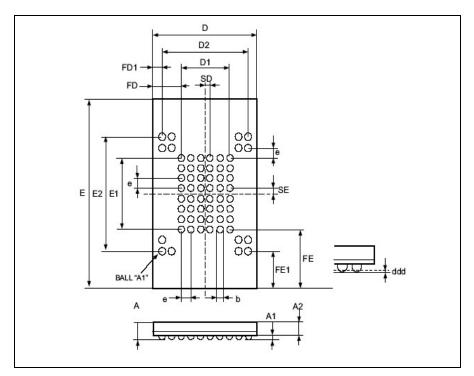


Figure 39. 63-FBGA - 8.5 x 15mm, 6x8 ball array 0.8mm pitch, Pakage Outline

Note: Drawing is not to scale.

Table 17: 48-WSOP1 - 48-lead Plastic Thin Small Outline, 12 x 17mm, Package Mechanical Data

Symbol		millimeters	
Symbol	Min	Тур	Max
A	1.00	1.10	1.20
A1	0.21	0.26	0.31
A2	0.79	0.84	0.89
b	0.40	0.45	0.50
D	8.40	8.50	8.60
D1		4.00	
D2		7.20	
E	14.90	15.00	15.10
E1		5.60	
E2		8.80	
е		0.80	
FD		2.25	
FD1		0.65	
FE		4.70	
FE1		3.10	
SD		0.40	
SE		0.40	



## MARKING INFORMATION

