OPTO 22

(WITH AUXILIARY TERMINAL STRIP)

page 1/10

RACKS

DATA SHEET

Form 778-091203

Description


Opto 22 SNAP "D Series" racks are designed for discrete control applications and can accommodate 4, 6, 8, or 12 SNAP 4-channel digital modules. These racks use an industry-standard 50-pin header connector, which allows them to be used in a variety of applications. The logic side of the I/O circuitry can be controlled directly, or by using an ISA bus or PCI bus computer with an Opto 22 adapter card. Use G4AC5 with an ISA bus computer or use PCI-AC5 with a PCI bus computer. In addition, the 4-module position SNAP-D4M can be used with Opto 22's Classic brain boards. These boards use one of Opto 22's industrystandard protocols (Mistic[®], Optomux[®], or Pamux[®]) to control the I/O, and communicate either serially or in parallel.

The MC and MC-P model racks provide an auxiliary screwtype terminal strip for additional wiring requirements. The MC racks use a fixed terminal strip while the MC-P uses removable connectors for easy maintenance (see enlarged view below).

Field devices are wired directly to the top-mounted removable connectors on the SNAP I/O[®]modules. The module and rack design allows modules to simply "snap" on and off the mounting rack. SNAP racks use a retention rail locking system that holds modules securely to the rack. Normally, a hold-down screw is not required. However, for applications that require additional mounting security, SNAP racks have provisions for two 4-40 by ½-inch standard machine screws to hold each module in position. All SNAP racks offer panel mounting and the option of DIN-rail mounting. SNAP racks use a single 5 VDC power source.

Part Number	Ordering Guide	
SNAP-D4MC	SNAP I/O mounting rack: Digital 4-module rack with header connector. Common terminal block	
SNAP-D4MC-P	SNAP I/O mounting rack: Digital 4-module rack with header connector. Common terminal block pluggable	
SNAP-D6MC	SNAP I/O mounting rack: Digital 6-module rack with header connector. Common terminal block	
SNAP-D6MC-P	SNAP I/O mounting rack: Digital 6-module rack with header connector. Common terminal block pluggable	
SNAP-D8MC	SNAP I/O mounting rack: Digital 8-module rack with header connector. Common terminal block	
SNAP-D8MC-P	SNAP I/O mounting rack: Digital 8-module rack with header connector. Common terminal block pluggable	
SNAP-D12MC	SNAP I/O mounting rack: Digital 12-module rack with header connector. Common terminal block	
SNAP-D12MC-P	SNAP I/O mounting rack: Digital 12-module rack with header connector. Common terminal block pluggable	
SNAP-CDBBN	Classic digital brain board DIN-rail adapter	
SNAP-FUSE1A	SNAP 1-Amp fuse	
SNAP-TEX-DRC10	SNAP PAC rack DIN-rail adapter clip	

SNAP-D4M 4-Module Position I/O Mounting Rack

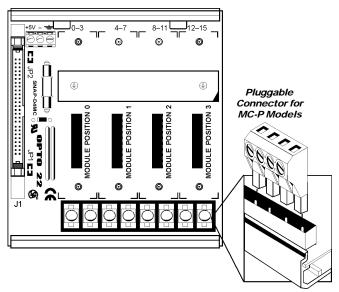

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com Inside Sales: (800 321-OPTO • Product Support: (800)TEK-OPTO • (951) 695-3080 • Fax: (951) 695-3017 • E-mail: sales@opto22.com




DATA SHEET Form 778-091203

page 2/10

Specifications

SNAP-D4MC/MC-P (4 Module Position)

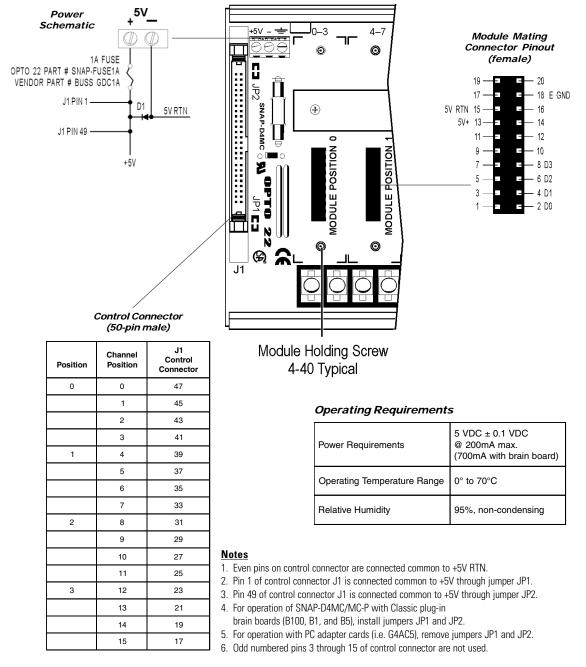

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com




DATA SHEET Form 778-091203

page 3/10

Specifications

SNAP-D6MC/MC-P (6 Module Position)

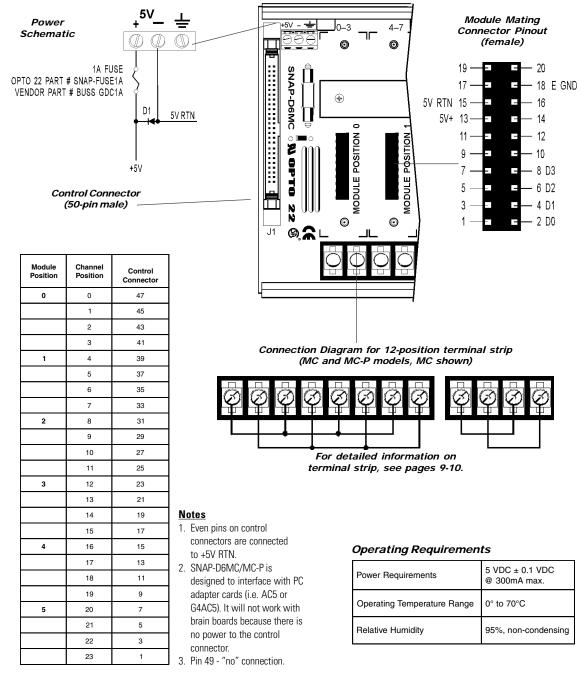

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com




DATA SHEET Form 778-091203

page 4/10

Specifications

SNAP-D8MC/MC-P (8 Module Position)

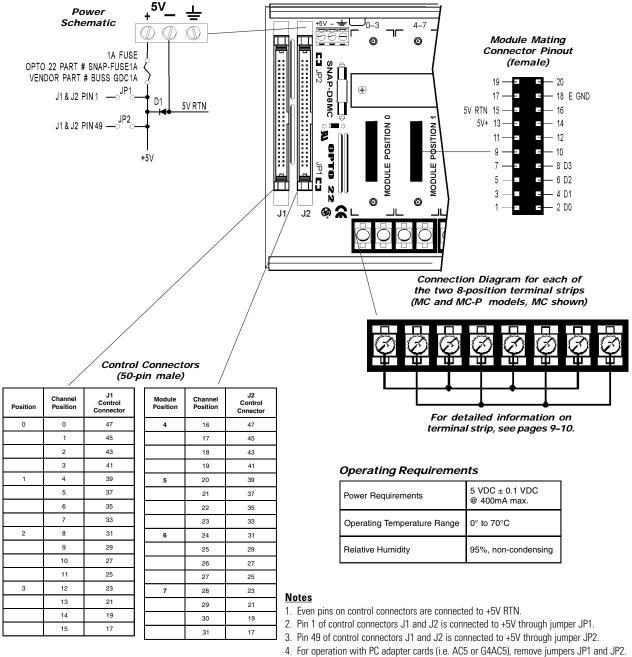

5. Odd numbered pins 3 through 15 of control connectors are not used.

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com




DATA SHEET Form 778-091203

page 5/10

Specifications

SNAP-D12MC/MC-P (12 Module Position)

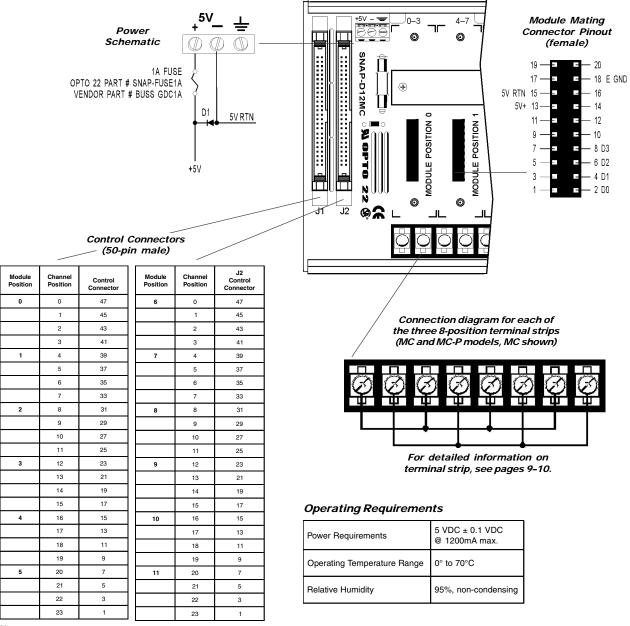

<u>Notes</u>

1. Even pins on control connectors are connected to +5V RTN.

2. SNAP-12MC/MC-P is designed to interface with PC adapter cards (i.e. AC5 or G4AC5).

It will not work with brain boards because there is no power to the control connector.


Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com



DATA SHEET Form 778-091203

Dimensional Drawing

All Models

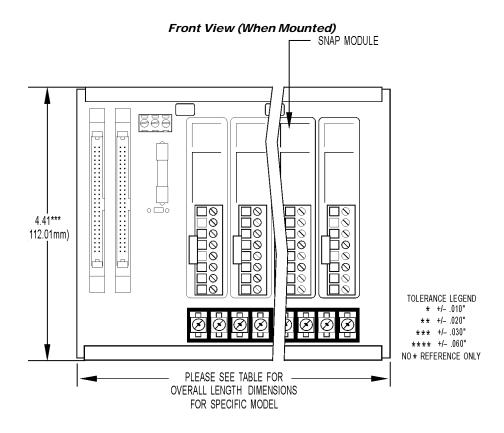

Overall Length Dimension (All Models)

Part Number	Description	Length (inches)	Length (mm)
SNAP-D4M	4-module rack	4.19	106.43
SNAP-D6M	6-module rack	5.74	145.8
SNAP-D8M	8-module rack	7.74	196.6
SNAP-D12M	12-module rack	10.74	272.8

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com

Inside Sales: (800 321-OPTO • Product Support: (800)TEK-OPTO • (951) 695-3080 • Fax: (951) 695-3017 • E-mail: sales@opto22.com


page 6/10



DATA SHEET Form 778-091203

page 7/10

Dimensional Drawing

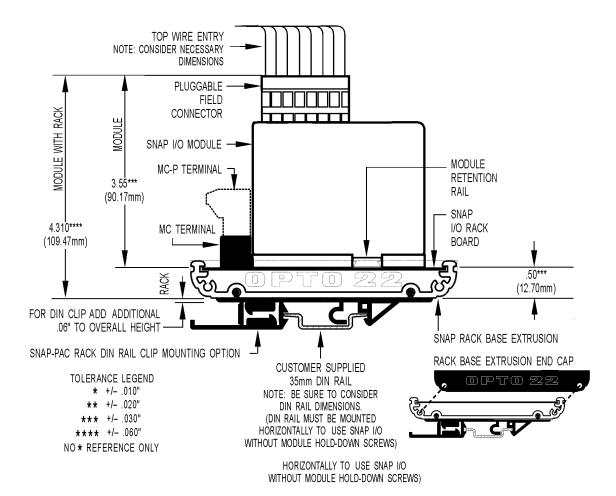

Right Side View (with DIN-Rail Option)

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com




DATA SHEET Form 778-091203

page 8/10

Dimensional Drawing

All Models

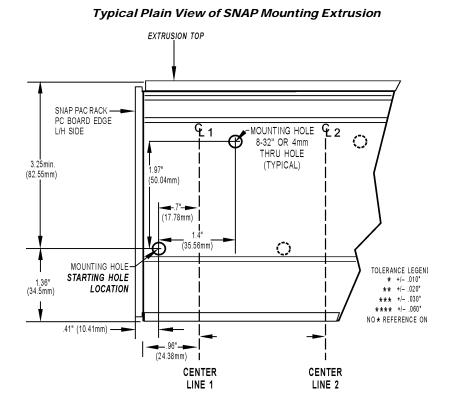

General

If not using module hold-down screws, the SNAP rack assembly should be mounted horizontally, as shown in diagram.

Preferred Method

Template (product on site)

- 1. Use SNAP rack mounting extrusion as template.
- 2. Be sure to use drawing to determine required product and option clearances.

Alternate Method

Prefabrication of Panels (no product on site)

- 1. Mounting holes are in sets of two located on lower left and upper right, with respect to a centerline (CL).
- Using the drawing, determine CL₁ mounting hole positions. (CL₁ is located on the left side of all SNAP rack mounting extrusions.)
- Use the center-to-center length specification table to determine offset between centerlines and number of centerline positions for each model.
- 4. Repeat process for each centerline position.
- 5. Dimensions shown in drawing apply to all models.

Center-to-Center Length (All Models)

Part Numbers	Description	Center to Center Length	# of Center Positions
SNAP-D4MC	4-module rack with extra terminal block for field wiring	1.98"	2
SNAP-D4MC-P	4-module rack with extra terminal block for field wiring, pluggable	1.98"	2
SNAP-D6MC	6-module rack with extra terminal block for field wiring	3.53"	2
SNAP-D6MC-P	6-module rack with extra terminal block for field wiring, pluggable	3.53"	2
SNAP-D8MC	8-module rack with extra terminal block for field wiring	5.53"	2
SNAP-D8MC-P	8-module rack with extra terminal block for field wiring, pluggable	5.53"	2
SNAP-D12MC	12-module rack with extra terminal block for field wiring	4.26"	3
SNAP-D12MC-P	12-module rack with extra terminal block for field wiring, pluggable	4.26"	3

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com




page 9/10

DATA SHEET Form 778-091203


Schematics

Terminal Strip Usage - Digital

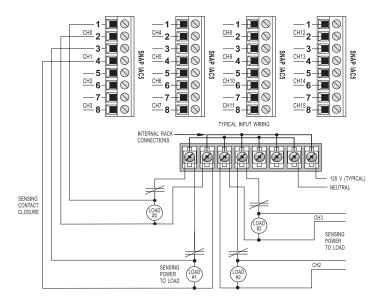

Typical Digital Input Using Terminal Strip



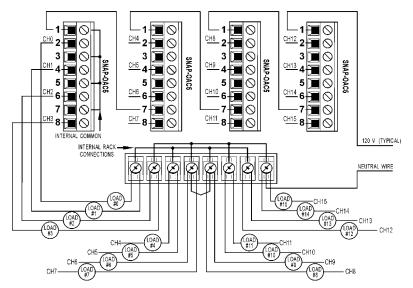

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com Inside Sales: (800 321-OPTO • Product Support: (800)TEK-OPTO • (951) 695-3080 • Fax: (951) 695-3017 • E-mail: sales@opto22.com




DATA SHEET Form 778-091203

page 10/10


Schematics

Terminal Strip Usage - Digital

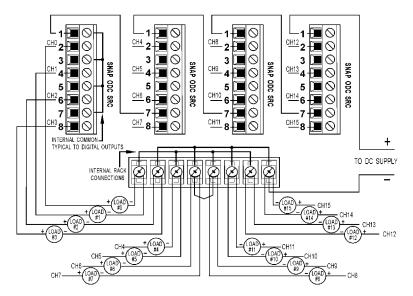

Typical Digital DC Output (Sourcing) Using Terminal Strip

Typical Digital DC Output (Sinking) Using Terminal Strip

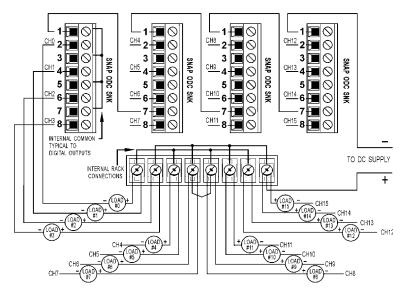

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Phone: (951) 695-3000 • (800) 321-OPTO • Fax: (951) 695-3095 • www.opto22.com Inside Sales: (800 321-OPTO • Product Support: (800)TEK-OPTO • (951) 695-3080 • Fax: (951) 695-3017 • E-mail: sales@opto22.com © 1996–2004 Opto 22. All rights reserved. All trademarks, trade names, logos, and service marks referenced herein belong to their respective companies.

Products

Opto 22 develops and manufactures reliable, flexible, easy-to-use hardware and software products for industrial automation, remote monitoring, and data acquisition applications.

SNAP PAC System

Designed to simplify the typically complex process of understanding, selecting, buying, and applying an automation

system, the SNAP PAC System consists of four integrated components:

- SNAP PAC controllers
- PAC Project[™] Software Suite
- SNAP PAC brains
- SNAP I/0[™]

SNAP PAC Controllers

Programmable automation controllers (PACs) are multifunctional, multidomain, modular controllers based on open standards and providing an integrated development environment.

Opto 22 has been manufacturing PACs for many years. The latest models include the standalone SNAP PAC S-series and the rack-mounted SNAP PAC R-series. Both handle a wide range of digital, analog, and serial functions and are equally suited to data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

SNAP PACs are based on open Ethernet and Internet Protocol (IP) standards, so you can build or extend a system without the expense and limitations of proprietary networks and protocols.

PAC Project Software Suite

Opto 22's PAC Project Software Suite provides full-featured and cost-effective control programming, HMI (human machine interface) development and runtime, OPC server, and database connectivity software to power your SNAP PAC System.

These fully integrated software applications share a single tagname database, so the data points you configure in PAC ControlTM are immediately available for use in PAC DisplayTM, OptoOPCServerTM, and OptoDataLinkTM. Commands are in plain English; variables and I/O point names are fully descriptive.

PAC Project Basic offers control and HMI tools and is free for download on our website, www.opto22.com. PAC Project Professional, available for separate purchase, adds OptoOPCServer, OptoDataLink, options for Ethernet link redundancy or segmented networking, and support for legacy Opto 22 serial *mistic*TM I/O units.

SNAP PAC Brains

While SNAP PAC controllers provide central control and data distribution, SNAP PAC brains provide distributed intelligence for I/O processing and communications. Brains offer analog, digital, and serial functions, including thermocouple linearization; PID loop control; and optional high-speed digital counting (up to 20 kHz), quadrature counting, TPO, and pulse generation and measurement.

SNAP I/O

I/O provides the local connection to sensors and equipment. Opto 22 SNAP I/O offers 1 to 32 points of reliable I/O per module,

depending on the type of module and your needs. Analog, digital, serial, and special-purpose modules are all mixed on the same mounting rack and controlled by the same processor (SNAP PAC brain or rack-mounted controller).

Quality

Founded in 1974 and with over 85 million devices sold, Opto 22 has established a worldwide reputation for highquality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California. Because we do no statistical testing and each part is tested twice before leaving our factory, we can guarantee most solid-state relays and optically

Free Product Support

isolated I/O modules for life.

Opto 22's Product Support Group offers free, comprehensive technical support for Opto 22 products. Our staff of support engineers represents decades of training and experience. Product support is available in English and Spanish, by phone or email, Monday through Friday, 7 a.m. to 5 p.m. PST.

Free Customer Training

Hands-on training classes for the SNAP PAC System are offered at our headquarters in Temecula, California. Each student has his or her own learning station; classes are limited to nine students. Registration for the free training class is on a first-come, first-served basis. See our website, www.opto22.com, for more information or email training@opto22.com.

Purchasing Opto 22 Products

Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at 800-321-6786 or 951-695-3000, or visit our website at www.opto22.com.

www.opto22.com

www.opto22.com • Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Form 1335-090113 SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2009 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.



۰

Ŋ

Y