

#### **Features**

- RoHS compliant (with F or G pin style)
- · EMI filtering
- Choice of 500 W or 750 W modules
- 96% efficiency
- · Autoranging 115/230 Vac input
- · Microprocessor controlled
- Inrush current limiting
- · Mini sized package
- · Power fail signal
- · Module enable

## **Product Highlights**

The FARM (Filter/Autoranging Rectifier Module) is an AC front-end module which provides EMI filtering, autoranging line rectification and inrush current limiting. The FARM is available in either 500/750 W or 750/1000 W models in a mini sized package measuring only 2.28" x 2.2" x 0.5".

The FARM interfaces directly with worldwide AC mains and may be used with Vicor 300 V input DC-DC converters to realize an autoranging, high density, low profile switching power supply. The FARM includes a microcontroller that continuously monitors the AC line to control bridge / doubler operation. The user need only provide external capacitance to satisfy system hold-up requirements.

Vicor 2nd Generation packaging technology offers flexible mounting options for various manufacturing processes. The FARM may be installed as a conventional leaded device for onboard applications, inboard for low profile, height restricted applications, socketed or surface mounted with optional ModuMate interconnect products.

# Data Sheet $FARM^{^{\mathrm{TM}}}$

Filter/Autoranging Rectifier Module Up to 1000 Watts





Shown actual size: 2.28 x 2.2 x 0.5 in 57.9 x 55.9 x 12.7 mm


## **Absolute Maximum Rating**

| Parameter                 | Rating             | Unit         | Notes               |  |
|---------------------------|--------------------|--------------|---------------------|--|
| L to N voltage            | 264                | Vac          | Continuous          |  |
| L to in voitage           | 280                | Vac          | 100 ms              |  |
| +Out to -Out voltage      | 400                | Vdc          |                     |  |
| B OK to -Out voltage      | 16                 | Vdc          |                     |  |
| EN to -Out voltage        | 16                 | Vdc          |                     |  |
| Mounting torque           | 4 – 6(0.45 – 0.68) | in-lbs (N-m) | 6 each, 4-40 screw  |  |
| Operating temperature     | -40 to 100         | °C           | H-Grade             |  |
| Storage temperature       | – 55 to 125        | °C           | H-Grade             |  |
| Din coldoring tomporature | 500 (260)          | °F (°C)      | <5 sec; wave solder |  |
| Pin soldering temperature | 750 (390)          | °F (°C)      | <7 sec; hand solder |  |
| Output current            | 3.5                | Α            |                     |  |
| Baseplate temperature     | 100                | °C           |                     |  |

## **Thermal Resistance and Capacity**

| Parameter                    | Min | Тур  | Max | Unit    |
|------------------------------|-----|------|-----|---------|
| Baseplate to sink            |     |      |     |         |
| flat, greased surface        |     | 0.16 |     | °C/Watt |
| with thermal pad (P/N 20264) |     | 0.14 |     | °C/Watt |
| Baseplate to ambient         |     |      |     |         |
| Free convection              |     | 8.0  |     | °C/Watt |
| 1000 LFM                     |     | 1.9  |     | °C/Watt |

## Part Numbering



\*Pin styles S, N, F & G are compatible with the ModuMate interconnect system for socketing and surface mounting.

Vicor Corp. Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 1 of 11

## **ELECTRICAL CHARACTERISTICS**

Electrical characteristics apply over the full operating range of input voltage, output power and baseplate temperature, unless otherwise specified. All temperatures refer to the operating temperature at the center of the baseplate. Specifications apply for AC mains having up to 5% total harmonic distortion.

#### ■ INPUT SPECIFICATIONS (FARM1xxx, FARM2xxx)

| Parameter               | Min  | Тур | Max  | Unit | Notes                              |
|-------------------------|------|-----|------|------|------------------------------------|
| Operating input voltage |      |     |      |      |                                    |
| low range               | 90   |     | 132  | Vac  | Autoranging (doubler mode)         |
| high range              | 180  |     | 264  | Vac  | Autoranging (bridge mode)          |
| Input undervoltage      |      |     | 90   | Vac  | No damage                          |
| AC line from one        | 47   |     | 63   | Hz   | C-Grade                            |
| AC line frequency       | 47   |     | 880  | Hz   | T-Grade, H-Grade                   |
| Power factor            | 0.60 |     | 0.65 |      | Dependent on line source impedance |
| Inrush current          |      |     | 30   | Amps | 264 Vac peak line                  |

#### **■ OUTPUT SPECIFICATIONS**

|                              | FARM1xxx |     | FARM2xxx |     |     |       |       |                                   |
|------------------------------|----------|-----|----------|-----|-----|-------|-------|-----------------------------------|
| Parameter                    | Min      | Тур | Max      | Min | Тур | Max   | Unit  | Notes                             |
| Output nouse                 | 0        |     | 500      | 0   |     | 750   | Watts | 90 – 132 Vac                      |
| Output power                 | 0        |     | 750      | 0   |     | 1000  | Watts | 180 – 264 Vac                     |
| Efficiency                   | 94       | 96  |          | 94  | 96  |       | %     | 120/240 Vac                       |
| Output voltage               | 250      |     | 370      | 250 |     | 370   | Vdc   | 90 – 264 Vac                      |
| External hold-up capacitance |          |     |          |     |     | 1,750 | μF    | 2 - 3,300 μF in series; HUB3300-S |
| External hold-up capacitance |          |     | 1,100    |     |     |       | μF    | 2 - 2,200 μF in series; HUB2200-S |

#### **■ CONTROL PIN SPECIFICATIONS**

| Parameter                       | Min             | Тур  | Max  | Unit | Notes  |
|---------------------------------|-----------------|------|------|------|--|
| AC Bus OK (B OK)                |                 |      |      |      |  |
| Low state resistance            |                 |      | 15   | Ω    | To negative output – Bus normal                            |
| Low state voltage               |                 |      | 0.1  | Vdc  | Bus normal 50 mA max.                                      |
| High state voltage              | 14.0            | 15.0 | 15.4 | Vdc  | Bus abnormal, 27 K internal pull up to 15 Vdc (see Fig.11) |
| B OK true threshold             | 235             | 240  | 245  | Vdc  | Output Bus voltage (see Fig. 8)                            |
| B OK false threshold            | 200             | 205  | 210  | Vdc  | Output Bus voltage   |
| Module Enable (EN)              |                 |      |      |      |  |
| Low state resistance            |                 |      | 15   | Ω    | To negative output – Converters disabled                   |
| Low state voltage               |                 |      | 0.1  | Vdc  | 50 mA max.   |
| High state voltage              | 14.0            | 15.0 | 15.4 | Vdc  | 150 K internal pull up to 15 Vdc (see Fig. 10)             |
| Enable threshold                | 235             | 240  | 245  | Vdc  | Output bus voltage (see Fig. 8)                            |
| Disable threshold               | 185             | 190  | 195  | Vdc  | Output bus voltage   |
| AC Bus OK - Module Enable, diff | erential error* | 15   | 17   | 20   | Vdc AC Bus OK and Module Enable thresholds trac            |

 $<sup>^{\</sup>star}$  Tracking error between BUS OK and Enable thresholds

#### **■ ELECTROMAGNETIC COMPATIBILITY**

| Parameter                   | Standard     | Notes                               |
|-----------------------------|--------------|-------------------------------------|
| Transient / surge immunity  | EN61000-4-5  | 2 kV-50 μs Line or neutral to earth |
|                             | EN01000-4-5  | 1 kV-50 μs Line to neutral          |
| Line disturbance / immunity | EN61000-4-11 | Interruptions and brownouts         |
| Flicker / inrush            | EN61000-3-3  |                                     |

Vicor Corp. Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 2 of 11

# ELECTRICAL CHARACTERISTICS (CONT.)

## ■ SAFETY SPECIFICATIONS (FARM1xxx, FARM2xxx)

| Parameter                               | Min   | Тур  | Max | Unit | Notes                                    |
|---|-------|------|-----|------|--|
| Isolation voltage (in to out)           |       | None |     |      | Isolation provided by DC-DC converter(s) |
| Dielectric withstand (I/O to baseplate) | 2,121 |      |     | Vdc  | Baseplate earthed                        |
| Leakage current                         |       | 1.5  |     | mA   | 264 Vac                                  |

#### **■ AGENCY APPROVALS**

| Safety Standards            | Agency Markings | Notes                                     |
|-----------------------------|-----------------|---|
| FARM1 xxx                   |                 |   |
| UL60950, EN60950, CSA 60950 | cTÜVus          | Baseplate earthed, fast acting line fuse, |
|                             | CTUVUS          | Bussman ABC10 or Wickman 10 A 194 series  |
|                             | CE Marked       | Low voltage directive                     |
| FARM2 xxx                   |                 |   |
| UL60950, EN60950, CSA 60950 | -T"\/           | Baseplate earthed, fast acting line fuse, |
|                             | cTÜVus          | Bussman ABC15 or Wickman 16 A 194 Series  |
|                             | CE Marked       | Low voltage directive                     |

## **■** GENERAL SPECIFICATIONS

| Parameter                          | Min | Тур                                    | Max | Unit           | Notes                                     |
|------------------------------------|-----|--|-----|----------------|---|
| MTBF                               |     | >1,000,000                             |     | Hours          | 25°C, Ground Benign, Mil, HDBK, 2 17 F    |
| Baseplate material                 |     |  |     |                | Aluminum                                  |
|                                    |     |  |     |                | Ends: Zenite <sup>®</sup> 6130            |
| Cover                              |     |  |     |                | Center section: Kapton insulated aluminum |
| Pin Material                       |     |  |     |                |   |
| Style 1 & 2                        |     |  |     |                | Copper, Tin / Lead plated                 |
| Styles S & N (ModuMate compatible) |     |  |     |                | Copper, Nickel / Gold plated              |
| Styles F & G (RoHS compliant)      |     |  |     |                | Copper, Nickel / Gold plated              |
| W-i-l-                             |     | 3.1                                    |     | Ounces         |   |
| Weight                             |     | (88)                                   |     | (grams)        |   |
| Size                               | (:  | 2.28 x 2.2 x 0.5<br>57,9 x 55,9 x 12,7 | 7)  | Inches<br>(mm) |   |

*Vicor Corp.* Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 3 of 11

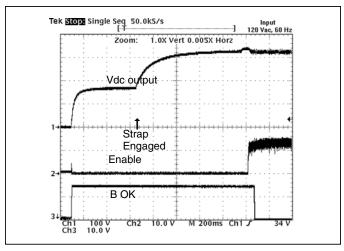


Figure 1 — Start up at 120 Vac input

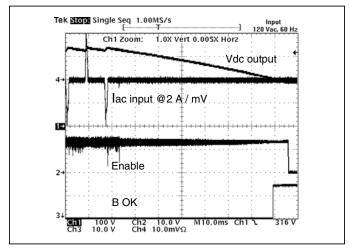


Figure 3 — Power down, from 120 Vac

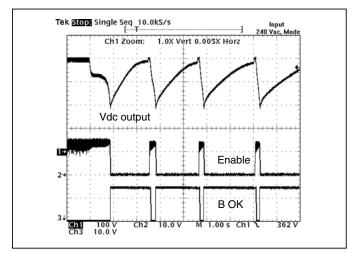


Figure 5 — Output overvoltage protection 240 Vac range

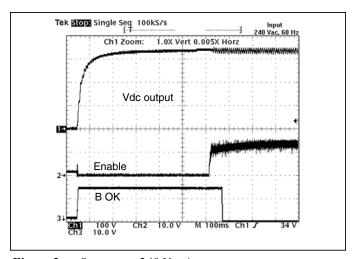


Figure 2 — Start up at 240 Vac input

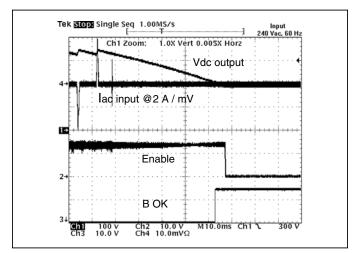


Figure 4 — Power down, from 240 Vac

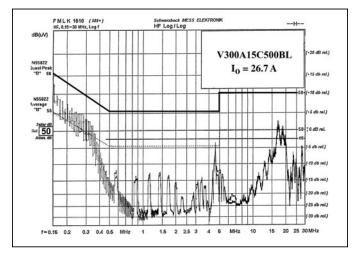


Figure 6 — Typical Conducted Emissions

*Vicor Corp.* Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 4 of 11

The Filtered, Autoranging Rectifier Module (FARM) provides an effective solution for the AC frontend of a power supply built with Vicor DC-DC converters. This high-performance power system building block satisfies a broad spectrum of requirements and agency standards.

In addition to providing transient/surge immunity and EMI filtering, the FARM contains all of the power switching and control circuitry necessary for autoranging rectification, inrush current limiting, and overvoltage protection. This module also provides converter enable and status functions for orderly power up/down control or sequencing. To complete the AC front-end configuration, the user only needs to add hold-up capacitors, and a few discrete components.

#### **Functional Description**

#### **Initial Condition**

The switch that bypasses the inrush limiting PTC (positive temperature coefficient) thermistor is open when power is applied, as is the switch that engages the strap for voltage doubling. (see Fig. 7). In addition, the converter modules are disabled via the Enable (EN) line, and Bus-OK (BOK) is high.

#### **Power Up Sequence.** (see Fig. 8):

Upon application of input power, the output bus capacitors begin to charge. The thermistor limits the charge current, and the exponential time constant is determined by the hold-up capacitor value and the thermistor cold resistance. The slope (dv/dt) of the capacitor voltage versus time approaches zero as the capacitors become charged to the peak of the AC line voltage.

- **2.1** If the bus voltage is greater than 200 V, the doubler is not activated.
- **3.1** If the bus voltage is greater than 235 V as the slope approaches zero, the inrush limiting thermistor is bypassed. Below 235 V, it is not bypassed.
- **4.1** The converters are enabled ~150 milliseconds after the thermistor bypass switch is closed.
- **5.1** Bus-OK is asserted after an additional ~150 millisecond delay to allow the converter outputs to settle within specification.

**Power Down Sequence.** (see Fig. 8) When input power is turned off or fails, the following sequence occurs as the bus voltage decays:

- **1.2** Bus-OK is de-asserted when the bus voltage falls below 205 Vdc (Typical).
- 2.2 The converters are disabled when the bus voltage falls below 190 Vdc. If power is reapplied after the converters are disabled, the entire power-up sequence is repeated. If a momentary power interruption occurs and power is re-established before the bus reaches the disable threshold, the power up sequence is not repeated, i.e., the power conversion system "rides through" the momentary interruption.

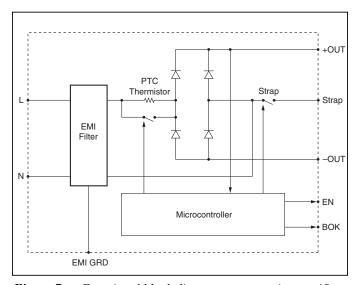


Figure 7 — Functional block diagram: autoranging rectifier

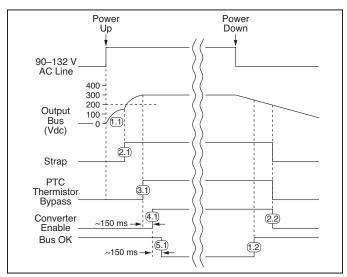


Figure 8 — Timing diagram: power up/down sequence

Vicor Corp. Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 5 of 11

## **OffLine Power Supply Configuration**

The FARM maintains the DC output bus voltage between 250 and 370 Vdc over the entire input voltage range, which is compatible with Vicor 300 V input converters. The FARM automatically switches to the proper bridge or doubler mode depending on the input voltage, eliminating the possibility of damage due to improper line connection. The FARM1xxx is rated at 500 W in the low range (90-132 Vac input), and 750 W in the high range (180-264 Vac input). The FARM2xxx is rated for 750 W and 1000 W for the low and high input ranges respectively. Either of these modules can serve as the AC front end for any number and combination of compatible converters as long as the maximum power rating is not exceeded.

**Strap (ST) Pin.** In addition to input and output power pin connections, it is necessary to connect the Strap pin to the center junction of the series hold-up capacitors (*C1*, *C2*, *see Fig. 9*) for proper (autoranging) operation. Metal oxide varistors, V1 and V2 provide capacitor protection. The bleeder resistors (*R1*, *R2*, *see Fig. 9*) discharge the hold-up capacitors when power is switched off. Capacitors C7 and C8 are recommended if the hold-up capacitors are located more than 3 inches (75 mm) from the FARM output pins.

**Enable (EN) Pin.** (see Fig. 10) The Enable pin must be connected to the PC or Gate-In pin of all converter modules to disable the converters during power up. Otherwise, the

converters would attempt to start while the hold-up capacitors were being charged through an unbypassed current limiting thermistor, preventing the bus voltage from reaching the thermistor bypass threshold, thus disabling the power supply. The Enable output (the drain of an N channel MOSFET) is internally pulled up to 15 V through a 150 k $\Omega$  resistor.

A signal diode should be placed close to and in series with the PC or (Gate-In) pin of each converter to eliminate the possibility of control interference between converters. The Enable pin switches to the high state (15 V) with respect to the negative output power pin to turn on the converters after the power up inrush is over. The Enable function also provides input overvoltage protection for the converters by turning off the converters if the DC bus voltage exceeds 400 Vdc. The thermistor bypass switch opens if this condition occurs, placing the thermistor in series with the input voltage, which reduces the bus voltage to a safe level while limiting input current in case the varistors conduct. The thermistor bypass switch also opens if a fault or overload reduces the bus voltage to less than 180 Vdc.

<u>CAUTION</u>: There is no input to output isolation in the FARM, hence the –Out of the FARM and thus the –In of the downstream DC-DC converter(s) are at a high potential. If it is necessary to provide an external enable / disable function by controlling the DC-DC converter's PC pin (referenced to the –In) of the converter an opto-isolator or isolated relay should be employed.

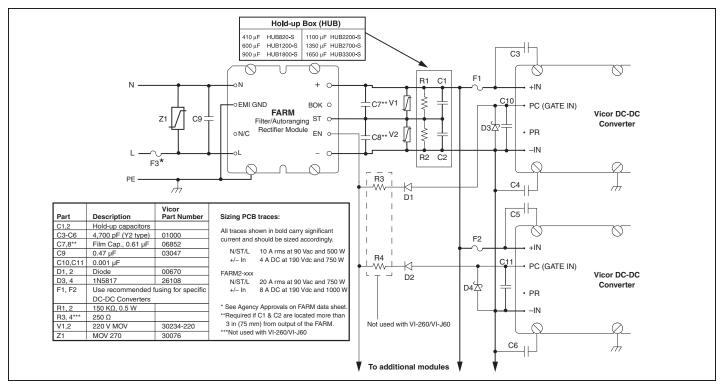


Figure 9 — Offline Power Supply Configuration

Vicor Corp. Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 6 of 11

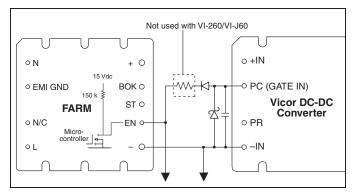


Figure 10 — Enable (EN) function

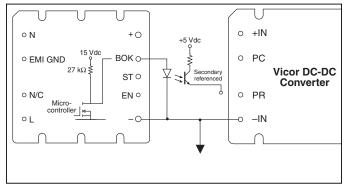


Figure 11 — Bus OK (BOK) isolated power status indicator

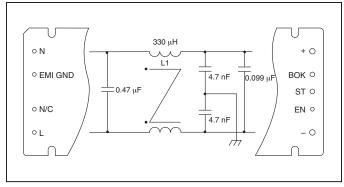


Figure 12 — Internal filter

**Bus-OK (BOK) Pin.** (see Fig. 11) The Bus-OK pin is intended to provide early-warning power fail information and is also referenced to the negative output pin.

<u>CAUTION</u>: There is no input-to-output isolation in the FARM. It is necessary to monitor Bus OK via an optoisolator if it is to be used on the secondary (output) side of the converters. A line-isolation transformer should be used when performing scope measurements. Scope probes should never be applied simultaneously to the input and output as this will damage the module.

**Filter.** (see Fig. 12) An integral input filter consists of a common mode choke and Y rated capacitors (line-ground) plus two X rated capacitors (line-line). This filter configuration provides common mode and differential mode insertion loss in the frequency range between 100 kHz and 30 MHz as illustrated in Figure 6.

Hold-up Capacitors. Hold-up capacitor values should be determined according to output bus voltage ripple, power fail hold-up time, and ride-through time (see Fig. 13). Many applications require the power supply to maintain output regulation during a momentary power failure of specified duration, i.e., the converters must hold-up or ride-through such an event while maintaining undisturbed output voltage regulation. Similarly, many of these same systems require notification of an impending power failure in order to allow time to perform an orderly shut down.

The energy stored on a capacitor which has been charged to voltage V is:

$$\mathcal{E} = 1/2(CV^2) \tag{1}$$

Where:  $\varepsilon = \text{stored energy}$ 

C = capacitance

V = voltage across the capacitor

Energy is given up by the capacitors as they are discharged by the converters. The energy expended (the power-time product) is:

$$\varepsilon = P\Delta t = C(V_1^2 - V_2^2) / 2$$
 (2)

Where: P =operating power

 $\Delta t$  = discharge interval

 $V_1$  = capacitor voltage at the beginning

of ∆t

 $V_2$  = capacitor voltage at the end of  $\Delta t$ 

Rearranging Equation 2 to solve for the required capacitance:

$$C = 2P\Delta t / (V_1^2 - V_2^2)$$
 (3)

Vicor Corp. Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 7 of 11

#### **APPLICATION NOTE (CONT.)**

The power fail warning time ( $\Delta t$ ) is defined as the interval between B OK and converter shut down (EN) as illustrated in Fig. 13. The Bus-OK and Enable thresholds are 205 V and 190 V, respectively. A simplified relationship between power fail warning time, operating power, and bus capacitance is obtained by inserting these constants:

$$C = 2P\Delta t / (205^2 - 190^2)$$
  
 $C = 2P\Delta t / (5,925)$ 

It should be noted that the series combination (C1, C2, see Fig. 9) requires each capacitor to be twice the calculated value, but the required voltage rating of each capacitor is reduced to 200 V. Allowable ripple voltage on the bus (or ripple current in the capacitors) may define the capacitance requirement. Consideration should be given to converter ripple rejection and resulting output ripple voltage.

For example, a converter whose output is 15 V and nominal input is 300 V will provide approximately 56 dB ripple rejection, i.e., 10 V p-p of input ripple will produce 15 mV p-p of output ripple (see Fig. 17). Equation 3 is again used to determine the required capacitance. In this case,  $V_1$  and  $V_2$  are the instantaneous values of bus voltage at the peaks and valleys (see Fig. 13) of the ripple, respectively. The capacitors must hold-up the bus voltage for the time interval  $(\Delta t)$  between peaks of the rectified line as given by:

$$\Delta t = (\pi - \theta) / 2\pi f \tag{4}$$

Where: f = line frequency

 $\theta$  = rectifier conduction angle

The approximate conduction angle is given by:

$$\theta = \cos^{-1}(V_2/V_1) \tag{5}$$

Another consideration in hold-up capacitor selection is their ripple current rating. The capacitors' rating must be higher than the maximum operating ripple current. The approximate operating ripple current (rms) is given by:

$$Irms = 2P/Vac$$
 (6)

Where: P = total output power

Vac = operating line voltage

Calculated values of bus capacitance for various hold-up time, ride-through time, and ripple voltage requirements are given as a function of operating power level in Figures 14, 15, and 16, respectively.

## Example

In this example, the output required from the DC-DC converter at the point of load is 12 Vdc at 320 W. Therefore, the output power from the FARM would be 375 W (assuming a converter efficiency of 85%). The desired hold-up time is 9 ms over an input range of 90 to 264 Vac.

#### **Determining Required Capacitance for Power Fail**

**Warning.** Figure 14 is used to determine capacitance for a given power fail warning time and power level, and shows that the total bus capacitance must be at least  $820 \,\mu\text{F}$ . Since two capacitors are used in series, each capacitor must be at least  $1,640 \,\mu\text{F}$ . Note that warning time is not dependent on line voltage. A hold-up capacitor calculator is available on the Vicor website, at vicorpower.com/hubcalc.

**Determining Ride-through Time.** Figure 15 illustrates ride-through time as a function of line voltage and output power, and shows that at a nominal line of 90 Vac, ride-through would be 68 ms. Ride-through time is a function of line voltage.

**Determining Ripple Voltage on the Hold-up Capacitors.** Figure 16 is used to determine ripple voltage as a function of operating power and bus capacitance, and shows that the ripple voltage across the hold-up capacitors will be 12 V p-p.

#### Determining the Ripple on the Output of the DC-DC

Converter. Figure 17 is used to determine the approximate ripple rejection of the DC-DC converter and indicates a ripple rejection of approximately 60 dB for a 12 V output. Since the ripple on the bus voltage is 12 Vac and the ripple rejection of the converter is 60 dB, the output ripple of the converter due to ripple on its input (primarily 120 Hz) will be 12 mV p-p.

For more information about designing an autoranging AC input power supply using the FARM and Vicor DC-DC converter modules, contact Vicor Applications Engineering at the nearest Vicor Technical Support Center, or send email to apps@vicorpower.com.

• • •

Vicor Corp. Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 8 of 11

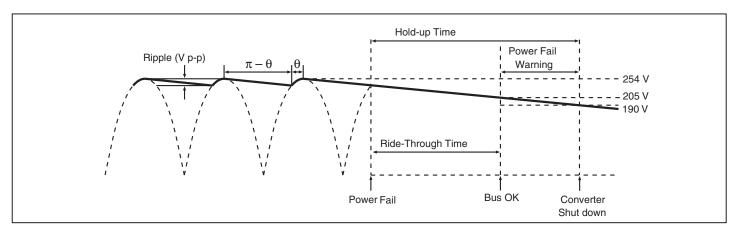
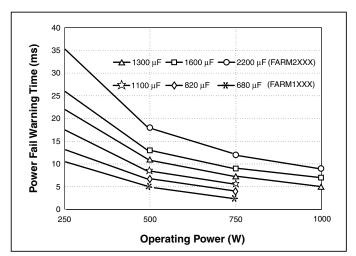


Figure 13 — Hold-up time



**Figure 14** — Power fail warning time vs. operating power and total bus capacitance, series combination of C1, C2 (see Fig. 9)

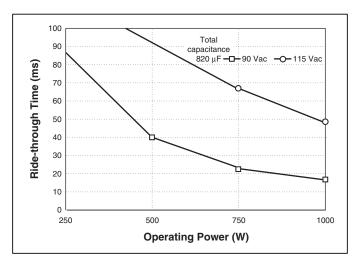


Figure 15 — Ride-through time vs. operating power

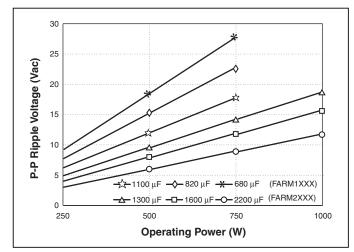


Figure 16 — Ripple voltage vs. operating power and bus capacitance, series combination of C1, C2 (see Fig. 9)

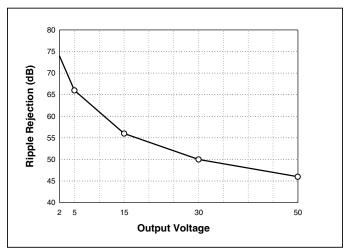


Figure 17 — Converter ripple rejection vs. output voltage (typical)


*Vicor Corp.* Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module


Rev. 6.0

Page 9 of 11

## **Mechanical Diagram**

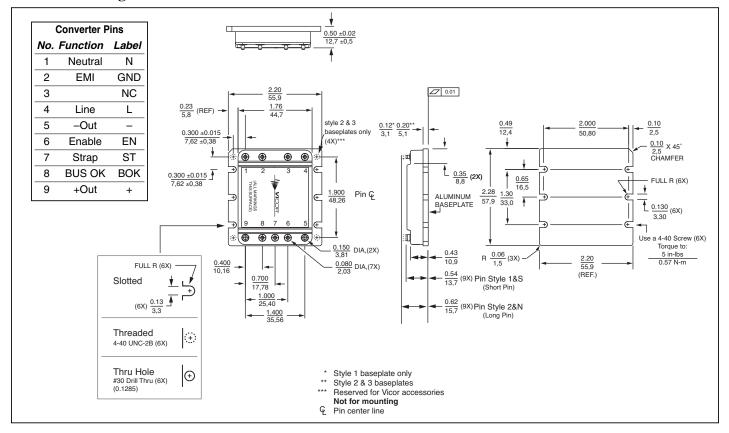

## **PCB Mounting Specifications**

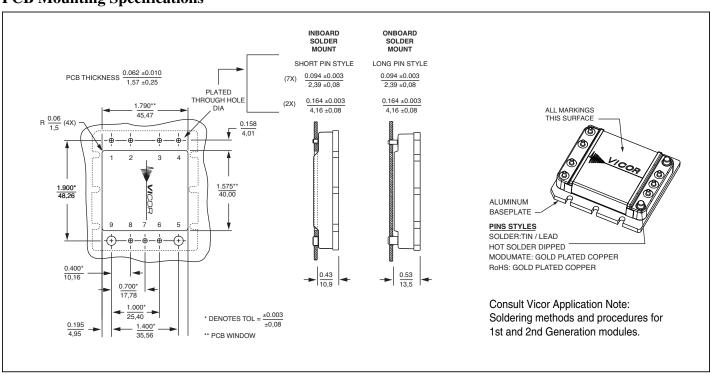

*Vicor Corp.* Tel: 800-735-6200, 978-470-2900 Fax: 978-475-6715

FARM, Filter/Autoranging Rectifier Module

Rev. 6.0

Page 10 of 11

#### Warranty

Vicor products are guaranteed for two years from date of shipment against defects in material or workmanship when in normal use and service. This warranty does not extend to products subjected to misuse, accident, or improper application or maintenance. Vicor shall not be liable for collateral or consequential damage. This warranty is extended to the original purchaser only.

EXCEPT FOR THE FOREGOING EXPRESS WARRANTY, VICOR MAKES NO WARRANTY, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Vicor will repair or replace defective products in accordance with its own best judgement. For service under this warranty, the buyer must contact Vicor to obtain a Return Material Authorization (RMA) number and shipping instructions. Products returned without prior authorization will be returned to the buyer. The buyer will pay all charges incurred in returning the product to the factory. Vicor will pay all reshipment charges if the product was defective within the terms of this warranty.

Information published by Vicor has been carefully checked and is believed to be accurate; however, no responsibility is assumed for inaccuracies. Vicor reserves the right to make changes to any products without further notice to improve reliability, function, or design. Vicor does not assume any liability arising out of the application or use of any product or circuit; neither does it convey any license under its patent rights nor the rights of others. Vicor general policy does not recommend the use of its components in life support applications wherein a failure or malfunction may directly threaten life or injury. Per Vicor Terms and Conditions of Sale, the user of Vicor components in life support applications assumes all risks of such use and indemnifies Vicor against all damages.

Vicor's comprehensive line of power solutions includes high density AC-DC and DC-DC modules and accessory components, fully configurable AC-DC and DC-DC power supplies, and complete custom power systems.

Information furnished by Vicor is believed to be accurate and reliable. However, no responsibility is assumed by Vicor for its use. Vicor components are not designed to be used in applications, such as life support systems, wherein a failure or malfunction could result in injury or death. All sales are subject to Vicor's Terms and Conditions of Sale, which are available upon request.

Specifications are subject to change without notice.

#### **Intellectual Property Notice**

Vicor and its subsidiaries own Intellectual Property (including issued U.S. and Foreign Patents and pending patent applications) relating to the products described in this data sheet. Interested parties should contact Vicor's Intellectual Property Department.

**Vicor Corporation** 

25 Frontage Road Andover, MA, USA 01810 Tel: 800-735-6200

Fax: 978-475-6715

#### email

Customer Service: custserv@vicorpower.com Technical Support: apps@vicorpower.com