

AT76C651 Evaluation Kit

USER MANUAL



Table of Contents

Section 1

Introduction	1-1
1.1 Scope	1-1
1.2 Deliverables	1-1
1.3 System Requirements	1-1

Section 2

Setting Up the EBC651 Evaluation Board	2-1
2.1 Board Functionality	2-1
2.2 Board Interfaces	2-1
2.3 EBC651 Board and Layout	2-1
2.4 External Access	2-2
2.4.1 Power Supply	2-2
2.4.2 RF Input	2-2
2.4.3 PC Control Data	2-2
2.4.4 MPEG2 Data Output	2-3
2.4.5 Timing Waveforms	2-5
2.5 Test	2-5
2.6 Board Configuration	2-7
2.6.1 AT76C651 I ² C Address Configuration	2-7
2.6.2 PLL Control Bits Configuration	2-7

Section 3

Software Installation	3-1
3.1 Main Window	3-2
3.2 Configuration Menu	3-3
3.3 Parameters Menu	3-4
3.3.1 General Configuration Window	3-5
3.3.2 Output Mode Configuration Window	3-6
3.3.3 AGC1 Control Window	3-8
3.3.4 Timing Recovery Configuration Window	3-9

Table of Contents

3.3.5 Carrier Recovery Configuration Window3-10
3.3.6 AGC2 Configuration Window.....3-10
3.3.7 Equalizer Window.....3-11
3.3.8 Forward Error Correction Window3-12
3.3.9 PID Filtering Window3-13
3.4 View Menu3-13

Section 4

Appendix - Glossary and Schematics 4-1
4.1 Abbreviations4-1
4.2 Schematics4-2





Section 1

Introduction

-
- 1.1 Scope** The AT76C651 Evaluation Kit is designed to show the performance of the AT76C651 DVB/DAVIC QAM Demodulator and to give an example of its implementation. The principal application is the digital demodulation of QAM signals used for digital TV over cable networks. The AT76C651 device can also be used in a number of other applications, e.g. MMDS, radio transmission, satellite transmission.
- This manual is structured as follows:
1. Section 1 provides an overview.
 2. Section 2 contains set-up information for the evaluation board.
 3. Section 3 describes the software installation.
 4. An appendix contains a glossary and schematics of the device and board.
-
- 1.2 Deliverables** The AT76C651 Evaluation Kit contains:
- An Atmel evaluation board EBC651 containing the AT76C651 circuit
 - Microsoft Windows® 95/98-compatible software on CD-ROM to configure and monitor the AT76C651 device. The CD-ROM contains all documentation for the AT76C651 device and the EBC651 evaluation board.
 - A cable to connect the evaluation board between the PC CONTROL Connector to a PC parallel port
-
- 1.3 System Requirements** The pre-requisites for use of the AT76C651 Evaluation Kit are:
- Three DC power supplies
 - A QAM signal source (e.g. QAM modulator, Digital CATV Network, etc.)
 - A PC with:
 - Windows 95/98 installed (Windows NT® is **not** supported)
 - A CD-ROM drive(to install software)
 - An SVGA display
 - An available parallel port (LPT1 or LPT2)





Section 2

Setting Up the EBC651 Evaluation Board

-
- 2.1 Board Functionality**
- The RF input signal is downconverted to an IF signal by a tuner integrating an AGC. The analog signal goes through a SAW filter to attenuate adjacent channels. A fixed-gain amplifier is used to compensate the SAW filter attenuation. The analog signal is sent to the AT76C651 device via an external 10-bit analog-to-digital converter to be processed (see AT76C651 datasheet, Literature Number 1293). At the output, the digital MPEG2 frame and synchronization signals are available.
-
- 2.2 Board Interfaces**
- The EBC651 evaluation board consists of three interfaces:
- CATV Tuner: Analog input ready to receive UHF - VHF frequencies in compliance with European or US regulations.
 - MPEG2 Data: MPEG2 frame and several synchronization signals are available:
 - to be sent to an MPEG2 device (e.g. Demux, Decoder, etc.)
 - to effect measurement (bit error rate, channel distortion, constellation, ...)
 - I²C Interface: Controlled by a PC parallel port, used to configure the AT76C651 demodulator and the DAT702X tuner
- Note:** It is possible to observe some signals to evaluate the transmission quality and other information by using test connectors and LEDs.
-
- 2.3 EBC651 Board and Layout**
- Storage temperature: -25°C to +75°C
Operating Temperature: 0°C to +55°C
Board dimensions: 100 x 100 mm (without connectors) - Height: 50 mm
ESD protection: The PCB is not sensitive if standard EMC rules are followed.
PCB Design: Is provided as a reference design for Atmel customers.

2.4 External Access

2.4.1 Power Supply Three power supplies are required:

Table 1. Power Supply Requirements

Name	Voltage	Current	Devices
V _{CC}	+5V ± 5%	96 mA max	Tuner
		20 mA max	PC Buffers
		40 mA max	MPEG2-DATA Buffers
		600 mA max	+3.3V AT76C651
		63 mA max	+3.3V External ADC (if used)
		80 mA max	LEDs
	Total	900 mA max	
V _{EE}	+12V ± 5%	1.5 mA max	Op Amplifier (if used)
		20 mA max	IF Amplifier
	Total	22 mA max	
V _{GG}	+32V ± 1V	1.5 mA max	Tuner Varicap (very sensitive)

2.4.2 RF Input

Table 2. RF Input

Characteristics	Tuner Type	
	DAT7021 (European Version)	DAT7025 (US Version)
Input Impedance	75Ω ± 5Ω unbalanced	75Ω ± 5Ω unbalanced
Input Frequency Range (RF)	48.25 MHz to 863.25 MHz	55.25 MHz to 801.25 MHz
Band Width	8 MHz	6 MHz
Connector Type	RCA Jack	Type F (3/8 UNEF 2A)
Level Input (Range for Digital Signals)	-61 dBm to -41 dBm	-63 dBm to -37 dBm
Output Frequency (IF)	36 MHz	44 MHz

2.4.3 PC Control Data

Connector Type

Mechanical: female SUB-D 25 pins

PCB Reference: J6 - PC CONTROL

DC Characteristics

Technology: 74LS05 (Low Shottky)

Output low level current: 8 mA max (open collector)

High Level Input Voltage: 2.00V min

Low Level Input Voltage: 0.80V max

Low Level Output Voltage: 0.50V max (8 mA load)

High Level Output Voltage: V_{CC} supply on board (+5.50V max)

AC Characteristics

Frequency Input: 10 MHz max



Table 3. Connection Table

Pin	Signal Name ⁽¹⁾	Description
1	No Connect	
2	PC_CTRL0	Bit 0 for AT76C651 PLL Control
3	PC_CTRL1	Bit 1 for AT76C651 PLL Control
4	No Connect	
5	RESET_PC	Hardware Reset
6	No Connect	
7	No Connect	
8	No Connect	
9	No Connect	
10	No Connect	
11	SDA_IN	I ² C data from AT76C651 to PC ⁽²⁾
12	No Connect	
13	No Connect	
14	SDA_OUT	I ² C data from PC to AT76C651 ⁽²⁾
15	No Connect	
16	No Connect	
17	SCL_OUT	I ² C clock from PC to AT76C651 ⁽²⁾
18	GND	
19	GND	
20	GND	
21	GND	
22	GND	
23	GND	
24	GND	
25	GND	

Notes: 1. All signals are inverted by buffers 74LS05 mounted on the board.
 2. These signals are also inverted by the PC parallel port.

2.4.4 MPEG2 Data Output

Connector Type

Mechanical: female SUB-D 25 pins

PCB Reference: J7 - DATA OUTPUT

DC Characteristics

Technology: 74HCT541 (high-speed CMOS, TTL logic)

Output Max Current: 20 mA


Low-Level Output Voltage: 0.33V max (6 mA load)

High-Level Output Voltage: 4.00V min (6 mA load), 5.00V Max

Table 4. Connection Table

Pin	Signal Name	Description
1	CORBYTE	Corrected Byte Indicator
2	FVALID	Valid MPEG2-TS Frame
3	FSTART	Start of MPEG2-TS Frame
4	DVALID	Byte Clock - MPEG2-TS Byte Output Enable
5	D0	DATAOUT: MPEG2-TS Parallel Byte
6	D1	
7	D2	
8	D3	
9	D4	
10	D5	
11	D6	
12	D7	
13	CORFAIL	RS Packet Not Corrected
14	GND	
15	GND	
16	GND	
17	GND	
18	GND	
19	GND	
20	GND	
21	GND	
22	GND	
23	GND	
24	GND	
25	GND	

2.4.5 Timing Waveforms

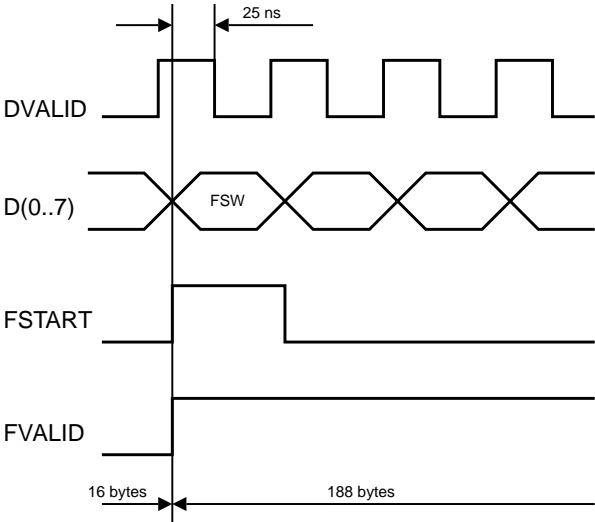

2.5 Test

Table 5. General-purpose Connectors

Reference	Pin	Signal Name	Function	Level
TP2 FLAG	1	IRQ	Interrupt Request Generated by AT76C651	3.3V
	2	PID0	PID Filtering Indicator Bit 0	3.3V
	3	PID1	PID Filtering Indicator Bit 1	3.3V
	4	CLKO	Auxiliary Clock (for tuner or other specific usage)	3.3V
TP5 I ² C	1	T_SDA	I ² C Bus Data Line SDA between Tuner and AT76C651 (bi-directional)	5.0V
	2	T_SCL	I ² C Bus Clock SCL from AT76C651 to Tuner	5.0V
	3	SDA	SDA Line of I ² C Bus (bi-directional)	5.0V
	4	SCL	SCL line of I ² C Bus	5.0V
	5	GND	GND	
TP7 MPEG2 DATA	1	GND	GND	
	2	FVALID	FRAMVALID: Valid MPEG2-TS Frame (in // mode)	3.3V
	3	FSTART	FRAMSTART: Start of MPEG2-TS Frame	3.3V
	4	DVALID	DATAVALID: MPEG2-TS Byte Output Enable (active low)	3.3V
	5	D7	DATAOUT: MPEG2-TS Parallel Byte	3.3V
	6	D6		
	7	D5		
	8	D4		
	9	D3		
	10	D2		
11	D1			
12	D0	LSB		



Table 5. General-purpose Connectors (Continued)

Reference	Pin	Signal Name	Function	Level
TP8 FAULT	1	CORBYTE	Corrected Byte Indicator	3.3V
	2	CORFAIL	RS Packet Not Corrected	3.3V
	3	LOCK2	Maskable Lock Signal 2 (configured by software)	3.3V
	4	LOCK1	Maskable Lock Signal 1 (configured by software)	3.3V

Table 6. Specific-purpose Connectors

Reference	Pin	Signal Name	Function	Level
TP1 JTAG	1	TDO	JTAG i.e. IEEE 1149.1	3.3V
	2	TRST		3.3V
	3	TCK		3.3V
	4	TMS		3.3V
	5	TDI		3.3V
TP3 PC I ² C TEST	1	-> SDA_N	I ² C DATA from AT76C651 to PC	5.0V
	2	<- SDA_N	I ² C DATA from PC to AT76C651	5.0V
	3	<- SCL_N	I ² C CLOCK from PC to AT76C651	5.0V
	4	GND	GND	0V
TP4 TEST	1	REF2CLK	Test Pins	3.3V
	2	PHASYM		3.3V
	3	ENSYM		3.3V
TP6 PC_CTRL	1	CTRL0_PC	Bit 0 for AT76C651 PLL Control (inverted)	5.0V
	2	CTRL1_PC	Bit 1 for AT76C651 PLL Control (inverted)	5.0V
	3	RESET_PC	Hardware Reset (inverted - active high)	5.0V

Table 7. LED Indicators

Reference	PCB Name	Function	Origin
CR1	OR	ADC Analog Input level Out of Range	From AD9051BRS Device (if used)
CR2	CORBYTE	Corrected Byte Indicator	From AT76C651 Device
CR3	CORFAIL	RS Packet not Corrected	From AT76C651 Device
CR4	LOCK2	Maskable Lock Signal 2	From AT76C651 Device
CR5	LOCK1	Maskable Lock Signal 1	From AT76C651 Device
CR6	RESET	Reset of the AT76C651 Device	Push Button or Software via PC Connector

2.6 Board Configuration

The cells shaded gray in the following table indicate the default configuration on the EBC651 evaluation board. Other configurations are available by modifying resistances as shown in Table 8.

Table 8. Pin Description Table

Signal Name	Designation	Logic	Configuration	
I2CADDR 0 (A)	Selection of AT76C651 I ² C address bit 0	I ² C address bit 0 = 1	R48 = 0Ω	R50 = NC ⁽¹⁾
		I ² C address bit 0 = 0	R48 = NC	R50 = 0Ω
I2CADDR 1 (A)	Selection of AT76C651 I ² C address bit 1	I ² C address bit 1 = 1	R34 = 0Ω	R49 = NC
		I ² C address bit 1 = 0	R34 = NC	R49 = 0Ω
PLLCTRL 0 (B)	Selection of bit 0 for AT76C651 PLL control	Selection by PC CONTROL	R10 = 0Ω	
		PLLCTRL0 = 0	R10 = NC	R37 = 0Ω
		PLLCTRL0 = 1	R10 = NC	R37 = NC
PLLCTRL 1 (B)	Selection of bit 1 for AT76C651 PLL control	Selection by PC CONTROL	R11 = 0Ω	
		PLLCTRL1 = 0	R11 = NC	R38 = 0Ω
		PLLCTRL1 = 1	R11 = NC	R38 = NC
PLLCTRL 2 (B)	Selection of bit 2 for AT76C651 PLL control	PLLCTRL2 = 0	R6 = 0Ω	R27 = NC
		PLLCTRL2 = 1	R6 = NC	R27 = 0Ω

Note: 1. NC = No Connect

2.6.1 AT76C651 I²C Address Configuration

By default on the board
 ■ I²C AT76C651 address = 0001101 bin
 ■ I²C Tuner address = 11000010 bin

Bit	MSB							LSB
Contents	0	0	0	1	1	I2CADDR1	I2CADDR0	-
Read/write	-	-	-	-	-	-	-	R/W

2.6.2 PLL Control Bits Configuration

$$F_{ref} = \frac{n}{2} \times F_{xtal}$$

where:

F_{ref} = AT76C651 Reference Frequency ≤ 80 MHz

F_{xtal} = Oscillator Frequency (Quartz or XO)

Table 9.

n	PLLCTRL2	PLLCTRL1	PLLCTRL0	Note
2	1	0	0	Bypass the PLL When using XTAL oscillator by default, PC drives PLLCTRL1 & 0
4	0	0	0	
5	0	0	1	
6	0	1	0	
7	0	1	1	

Note: Results of other configurations cannot be assured.





Section 3

Software Installation

The AT76C651 Evaluation Kit software is provided for performance evaluation of the AT76C651 circuit.


The software simplifies the configuration and transmission monitoring. By default, the software is configured to be used with this evaluation board in DVB mode, however it is possible to configure some parameters to effect specific test and measurement operations.

To install the software, execute SETUP.EXE and follow the instructions given. When the software starts, the PC printer ports are scanned to find a powered evaluation board. If no board is found, a special DEMO MODE is enabled. In this mode the software can be tested without the evaluation board.

Note: To prevent damage on your PC printer port, connect the board only when the PC is turned off. The following screen images can differ slightly depending on user software version.

3.1 Main Window

Figure 3-1. Main Window

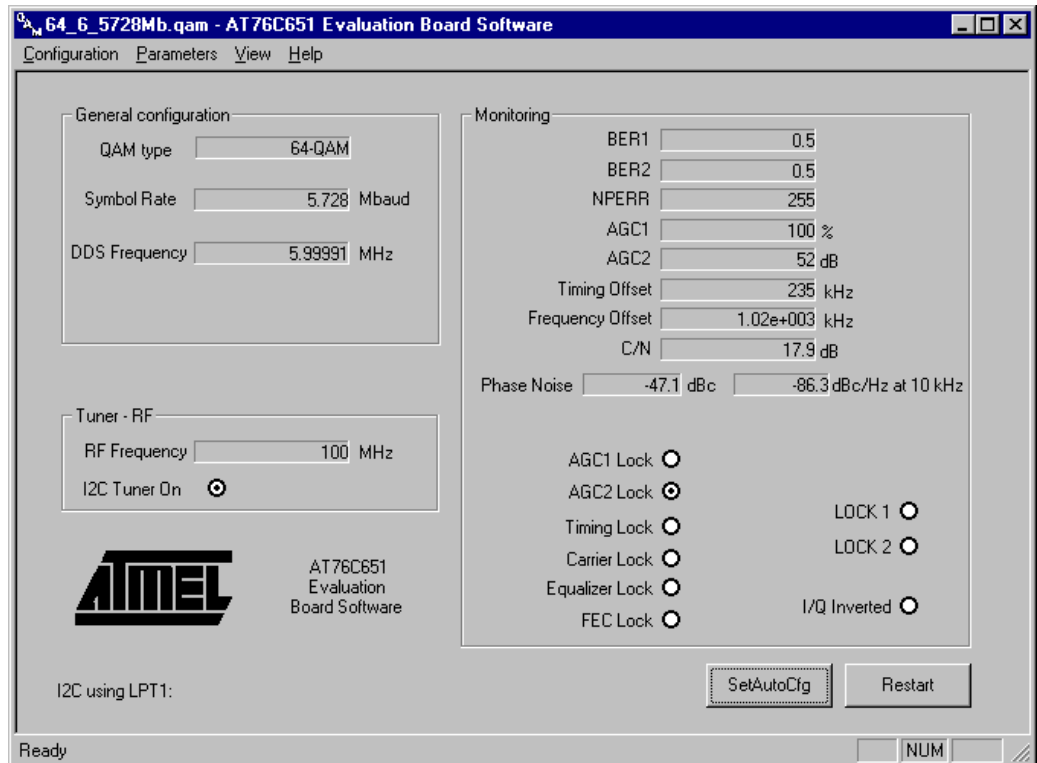


- **MONITORING** indicates data registers read on chip:
 - BER1: Indicates a BER estimate over the last 10E8 bits
 - BER2: Indicates an alternate BER estimate (only informative for highly degraded signal)
 - NPERR: Indicates the number of uncorrected frames on the last 108 bits
 - AGC1: Output level for AGC pin, value in percent between max. and min. AGC values
 - AGC2: Value of AGC2 indicated in dB
 - Timing Offset: Offset on Symbol Rate recovered
 - Frequency Offset: Offset on Intermediate Frequency recovered
 - C/N: Carrier to Noise Ratio estimation
 - Phase Noise: Indicates Phase Noise in dBc integrated in the signal BandWidth
Indicates estimated Phase Noise at 10 kHz offset from the carrier
 - XXX Lock: A point appears when signal is activated
 - I/Q Inverted: Indicates whether or not I and Q channels are inverted
- **GENERAL CONFIGURATION** indicates configuration of main registers:
 - Modulation Type
 - Symbol Rate
 - DDS Downconverting Frequency
 - Coherent Modulation (Visible only if QPSK modulation is selected)
- **TUNER - RF** indicates tuner data registers
 - RF Frequency (Input)

I²C Tuner switch activation (On/Off)

- SETAUTOCFG enables automatic configuration (see AT76C651 Datasheet, Lit. No. 1293).
- RESTART performs a Software Reset to initialize device datapath (the configuration registers are not modified).

3.2 Configuration Menu

Figure 3-2. Configuration Menu

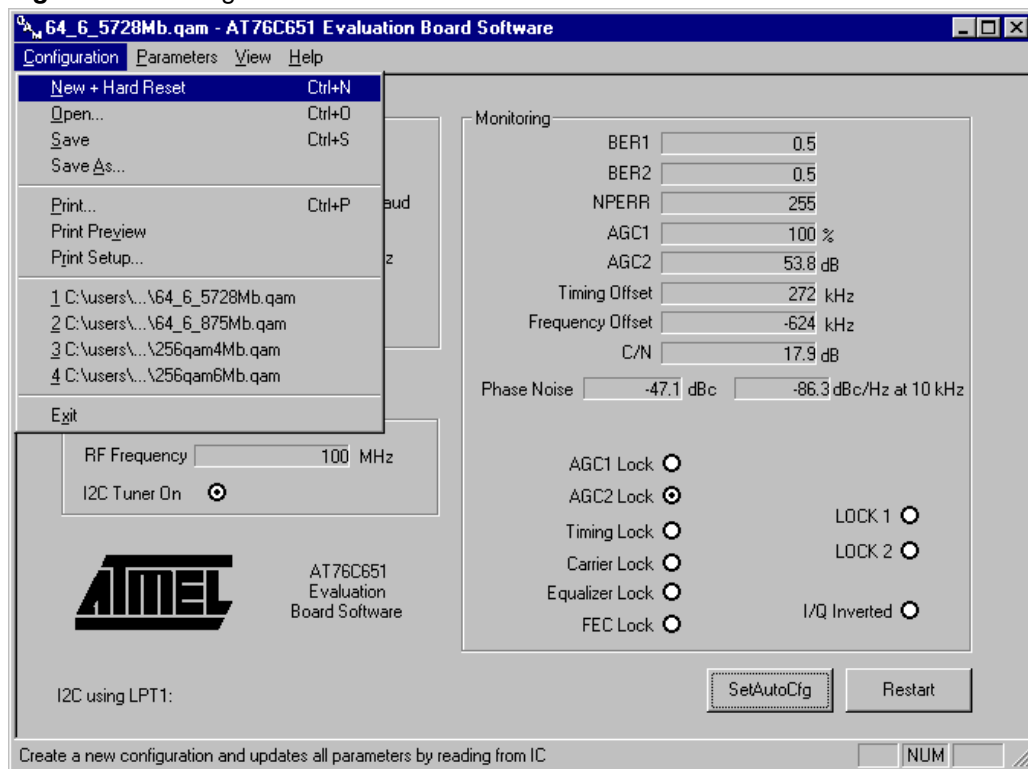


This menu allows standard operations on files:

- Creates a new configuration and executes a hardware reset.
- Opens a configuration file.
- Saves a configuration file.
- Prints I²C registers list.
- Print Preview displays saved I²C parameters and Monitoring registers.

3.3 Parameters Menu

The Parameters Menu opens a series of windows for configuring the AT76C651.

Figure 3-3. Parameters Menu

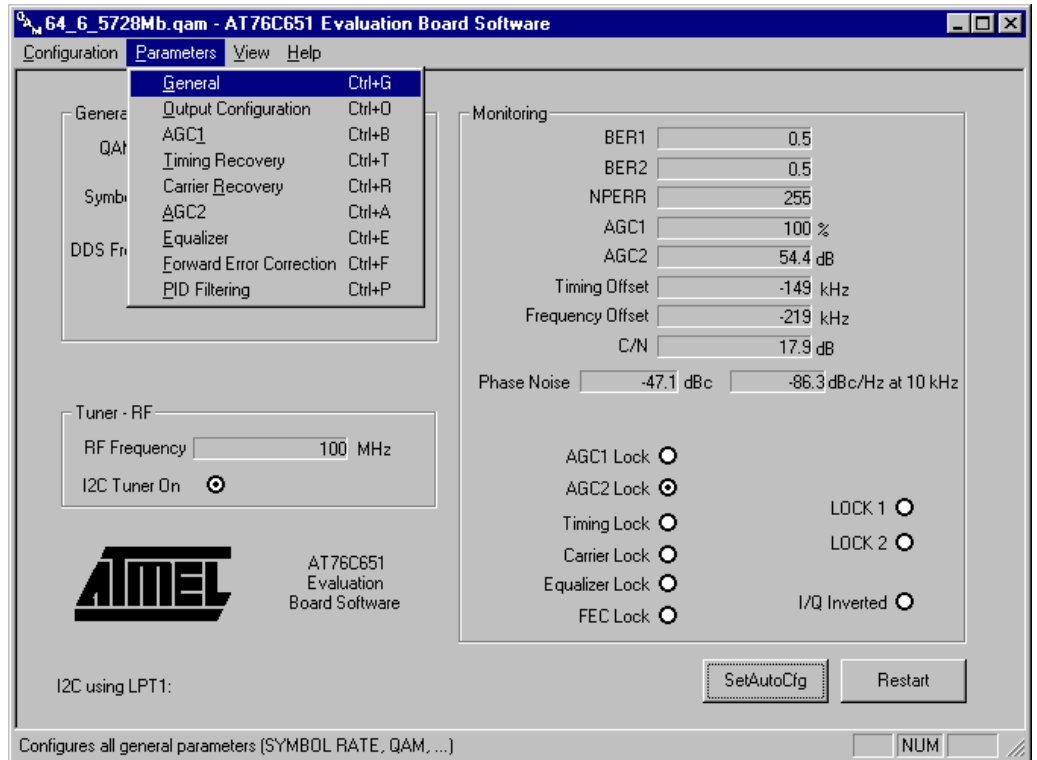

3.3.1 General Configuration Window

Figure 3-4. General Configuration Window

Note: If one of the General Registers (except Tuner Configuration) has been modified, a SetAutoCfg must be carried out so that other registers are reconfigured coherently. Some registers may then be modified to match specific needs. A software restart in the Main Window is recommended after a configuration change.

■ QAM MODULATION

Select demodulation type : QPSK - 16 - 32 - 64 - 128 - 256 - 512 - 1024 QAM.

Note: Demodulation Type is indicated in main window if QPSK is selected.

■ SYMBOL RATE

Indicate in Mbaud $D_{symbol} \leq \frac{F_{ref}}{8}$ if 32-taps equalizer.

$$D_{symbol} \leq \frac{F_{xtal}}{2(1 + \alpha)}$$

if 16-taps equalizer (α = roll-off).

■ DDS FREQUENCY

Indicate the internal Downconverted Frequency, according to subsampling frequency used by the ADC.

Note: Correct value is automatically computed.

■ MAPPING TYPE

Select DVB or DAVIC mapping.

■ DEMODULATION TYPE FOR QPSK ONLY

Select coherent demodulation or non-coherent demodulation.

■ TUNER CONFIGURATION

Indicate RF Frequency Input (62.50 kHz step size).

Indicate I²C TUNER address (Fixed on this evaluation board).

I²C Tuner On [on]

Select type of board and tuner recognizable by a sticker on the tuner unit:

USA version (DAT7025): 48.25 MHz ≤ RF ≤ 863.25 MHz

European version (DAT7021): 55.25 MHz ≤ RF ≤ 801.25 MHz

Note: It is generally recommended to switch off the tuner I²C bus as soon as the tuner frequency is configured in order to reduce the phase noise introduced by the tuner (see AT76C651 datasheet, Literature Number 1293).

■ BOARD PARAMETERS

Indicate parameter values configured on the board:

Quartz or XO frequency: Enter the value of the component (F_{xtal})

IC Reference Frequency: Enter value of n in the following formula (see Table 9)


$$F_{ref} = \frac{n}{2} \times F_{xtal}$$

Table 9. DVB Application using a Quartz: 32-taps Equalizer

Board	BW	IF Tuner	F _{xtal} = F _{sample}	DDS Frequency	n	Reference Frequency	D _{symbol} max
USA	6 MHz	44 MHz	25 MHz	2x25 - 44 = 6 MHz	n = 4	2x25 = 50 MHz	50/8 = 6.25 Mbaud
EUROPE	8 MHz	36 MHz	28.9 MHz	36 - 28.9 = 7.1 MHz	n = 4	2x28.9 = 57.8 MHz	57.8/8 = 7.225 Mbaud

3.3.2 Output Mode Configuration Window

Figure 3-5. Output Mode Configuration Window

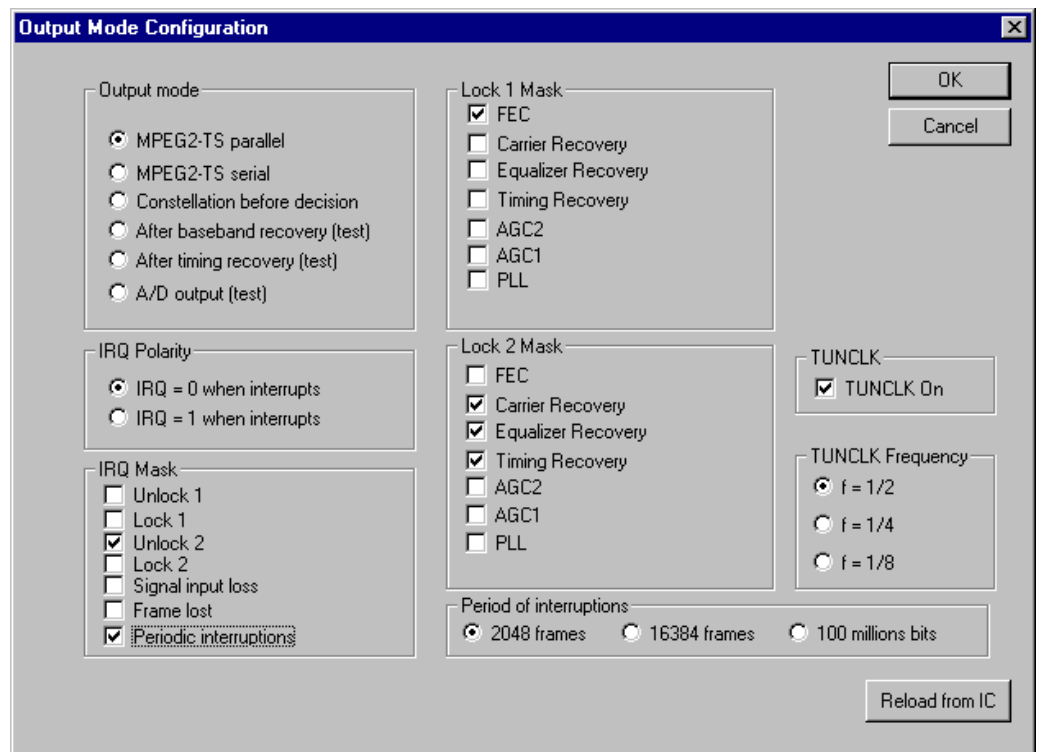

This window allows the configuration of AT76C651 output pin:

■ OUTPUT MODE

Select format and type of the Data Output.

■ LOCK 1 and LOCK 2 MASK

Select one or more lock signals for MASKLOCK output pin:

FEC : Forward Error Correction

Carrier Recovery

Equalizer Recovery

Timing Recovery: Symbol Rate Recovery

AGC2

AGC1

PLL

■ TUNCLK

Enable the TUNCLK output (also called CLKO on TP2 pin 4) with the selected rate of F_{xtal} (Oscillator Frequency).

■ IRQ POLARITY

Select the activation level for IRQ output (tri-state when released).

■ IRQ MASK

Select the event which activates the IRQ:

Unlock 1: IRQ activated when LOCK 1 signal goes low

Lock 1: IRQ activated when LOCK 1 signal goes high

Unlock 2: IRQ activated when LOCK 2 signal goes low

Lock 2: IRQ activated when LOCK 2 signal goes high

Signal Input Loss: IRQ activated when there is no input signal to AT76C651

Frame Lost: IRQ activated when a frame is uncorrected by the RS Decoder

Periodic Interruptions: Generate a periodic interruption with the selected period.


$$T = \frac{(\text{Periodic_Interruptions}) \times 204 \times 8}{D_{symbol} \times (\text{Nbits/Symbol})}$$

Example:

Periodic interruptions	2048 frames	16384 frames	100 million bits
T ($D_{symbol} = 6$ Mbaud, 64 QAM)	0.09 s	0.74 s	2.77 s

3.3.3 AGC1 Control Window

Figure 3-6. AGC1 Control Window

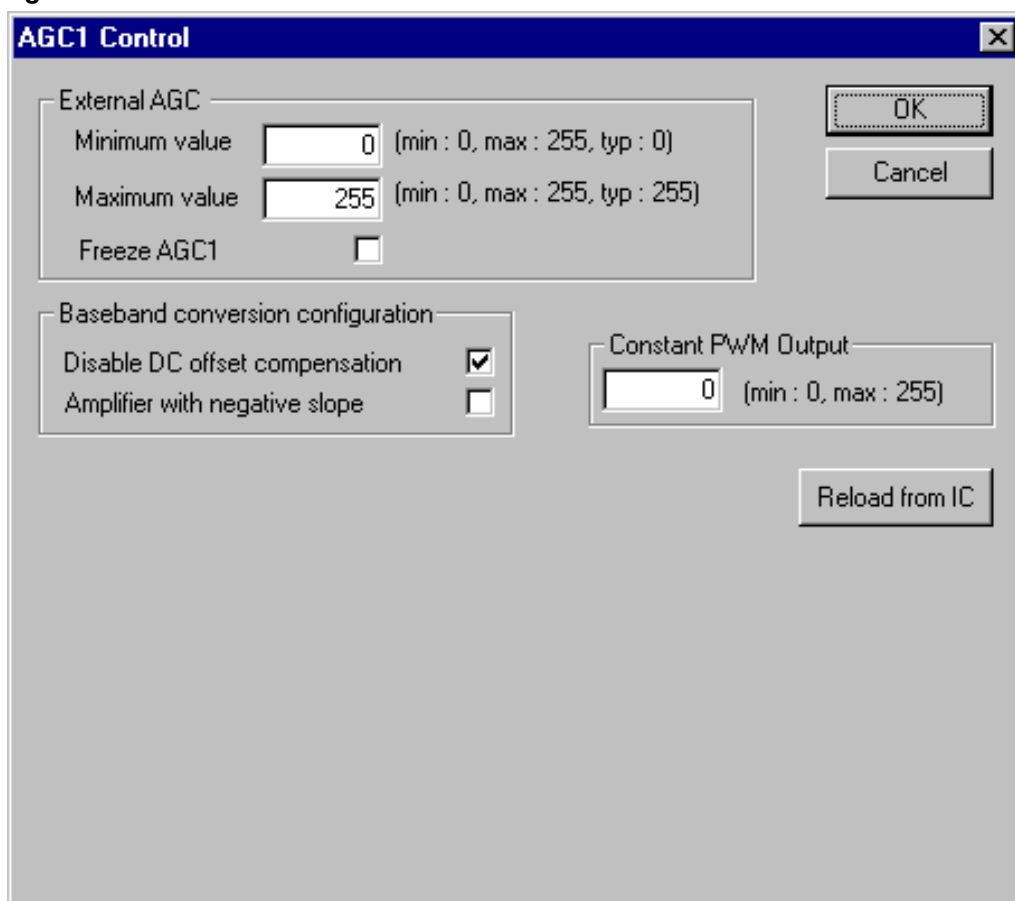

This dialog window allows the configuration of the external Analog AGC (AGC1) and PWM output:

- External AGC

Minimum Value: Define the minimum limit of the AGC1 Output Level (1V for this tuner, so 51 dec).

Maximum Value: Define the maximum limit of the AGC1 Output Level (3V for this tuner, so 153 dec).

Freeze AGC1: Freeze the current value of AGC1.

- Baseband conversion configuration:

Disable DC Offset Compensation: Disable the DC Offset correction.


Amplifier with negative slope: Change sign of slope for AGC Output (positive for this TUNER) Slope negative: Activated when the control voltage increases and the amplifier gain decreases.

- Constant PWM Output

Define CSTPWM Level Output if used (optional).

3.3.4 Timing Recovery Configuration Window

Figure 3-7. Timing Recovery Configuration Window

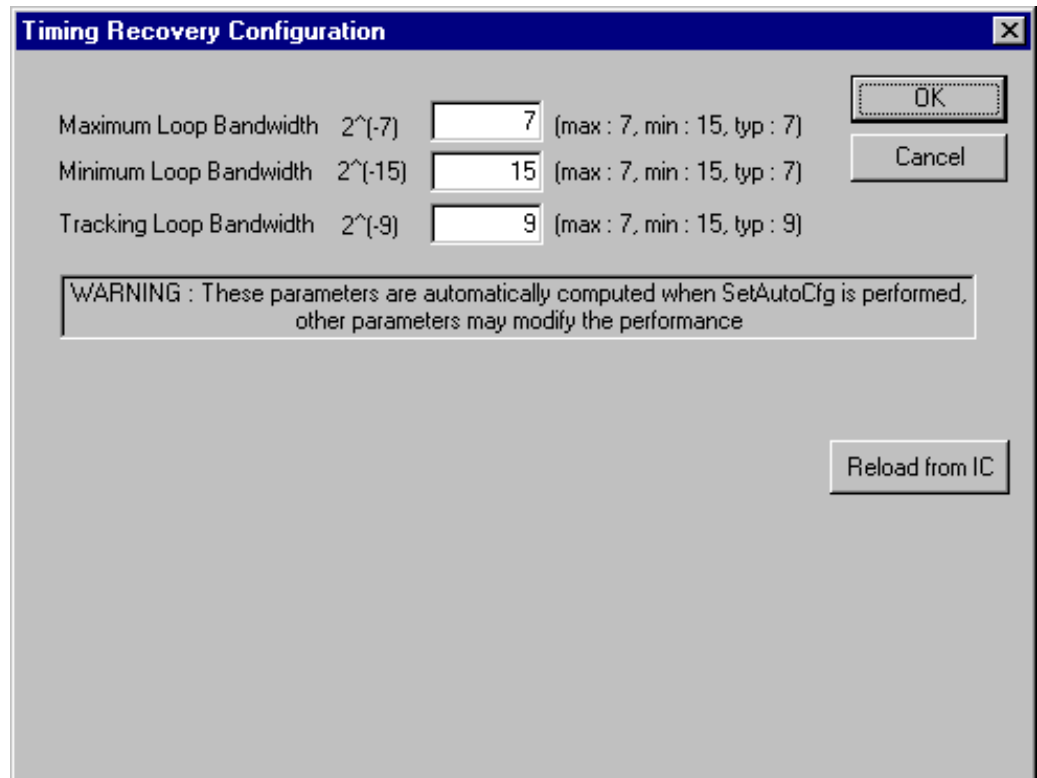


This window allows the configuration of Timing Recovery Parameters.

These parameters are automatically configured by the SetAutoCfg button in the Main Window.

3.3.5 Carrier Recovery Configuration Window

Figure 3-8. Carrier Recovery Configuration Window

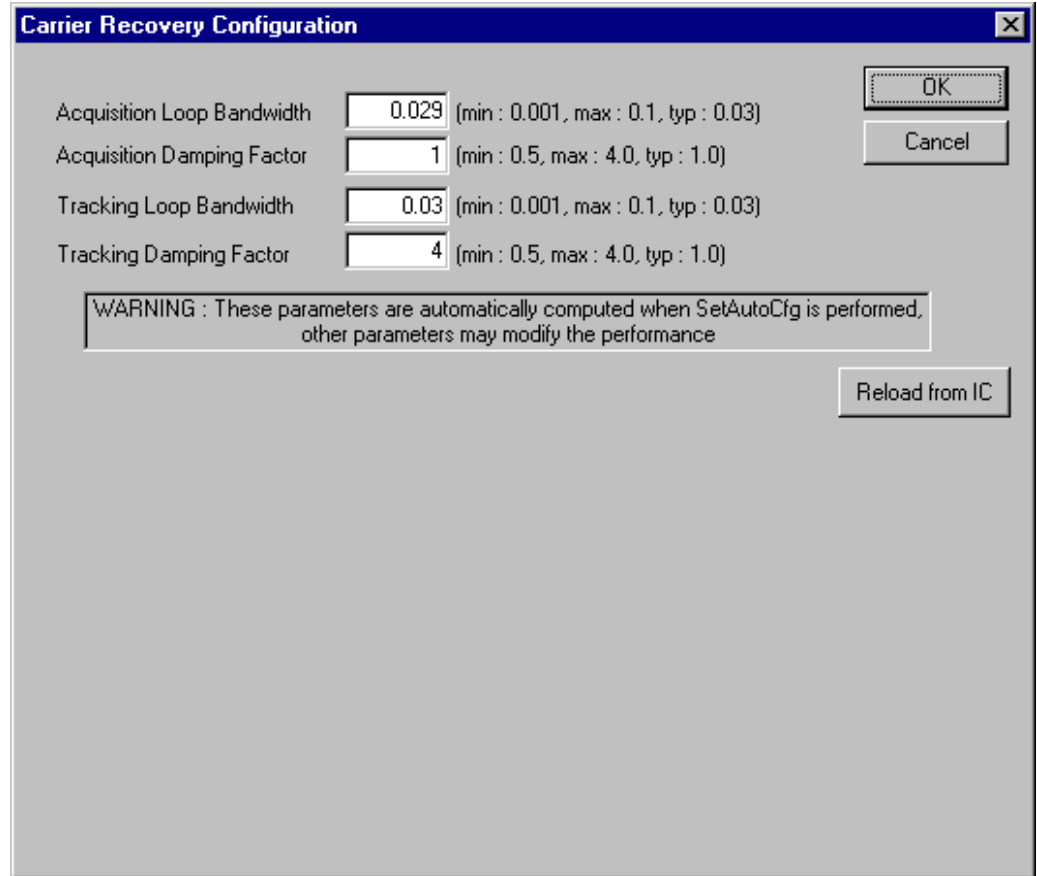


This window allows the configuration of Carrier Recovery Parameters.

These parameters are automatically configured by the SetAutoCfg button in the Main Window.

3.3.6 AGC2 Configuration Window

Figure 3-9. AGC2 Configuration Window

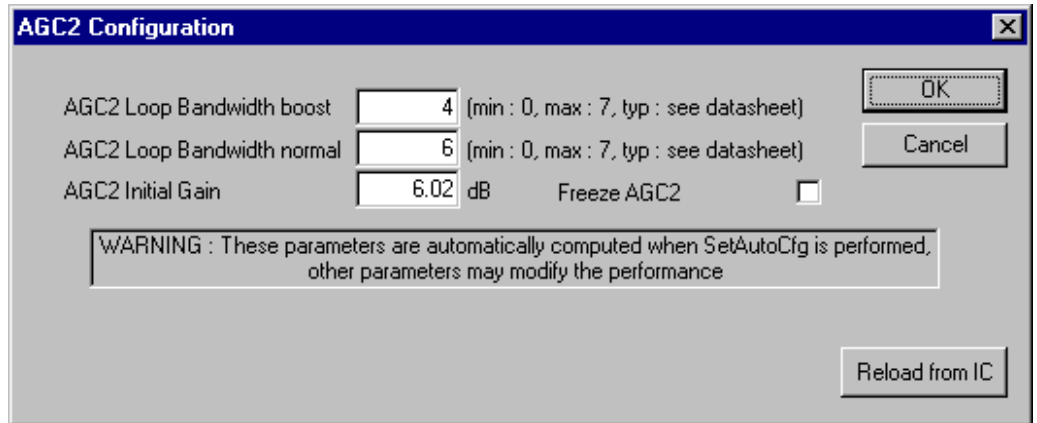


This window allows the configuration of AGC2 parameters.

These parameters are automatically configured by the SetAutoCfg button in the Main Window.

3.3.7 Equalizer Window


Figure 3-10. Equalizer Window

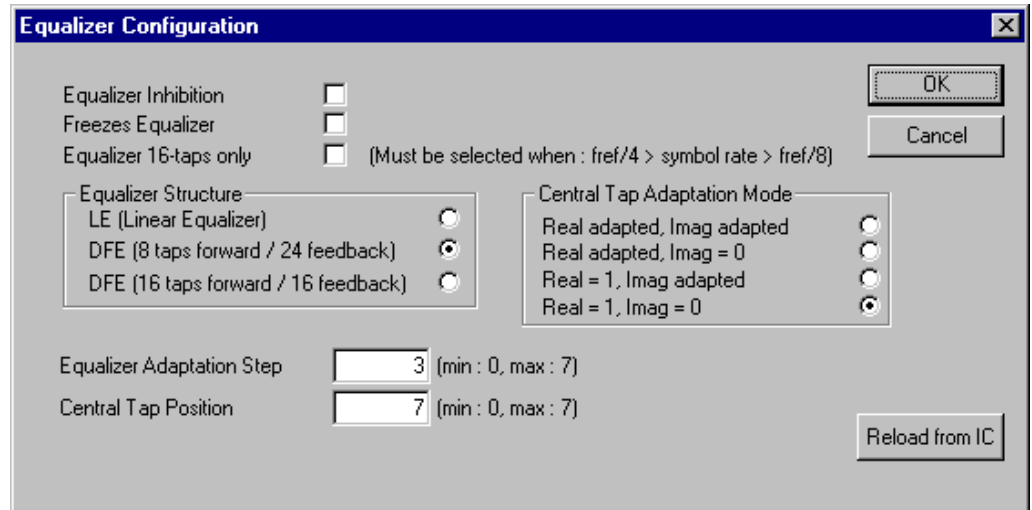

- **Equalizer Inhibition**
Make the Equalizer transparent.
- **Freeze Equalizer**
Freeze the coefficients in the Equalizer Filter.
- **Equalizer 16-taps only**
Select 16-taps equalizer (enable Symbol Rate < $F_{REF}/4$) else equalizer will have 32 taps.
- **Equalizer Structure**
LE: Linear Equalizer (mandatory if 16-taps equalizer is chosen)
DFE: Decision Feedback Equalizer with central tap between 0..7 or 8..15
- **Central Tap Adaptation Mode**
This parameter enables (or inhibits) the adaptation of the equalizer central tap. It controls both the real part and the imaginary part.
- **Equalizer Adaptation Step**
The adaptation speed of the equalizer is proportional to this parameter. A small value slows the adaptation of the equalizer taps and reduces the noise influence on the equalizer transfer function.
- **Central Tap Position**
0..15 for 16-taps LE structure
0..31 for 32-taps LE structure
0..7 or 8..15 for DFE structure

3.3.8 Forward Error Correction Window

Figure 3-11. Forward Error Correction Window

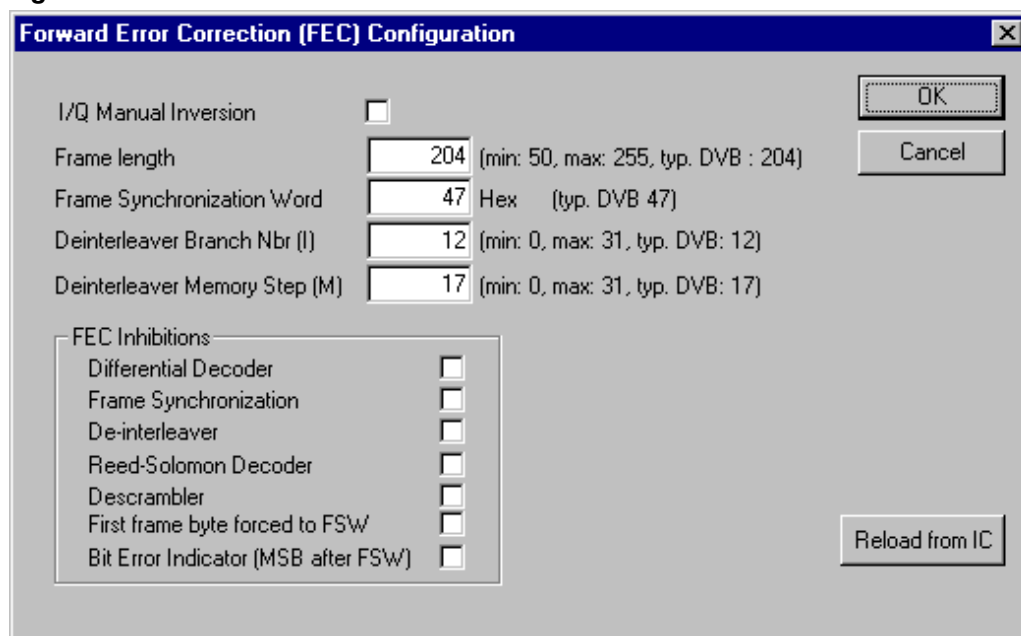

This window allows the configuration of FEC Parameters.

These parameters are automatically configured by the SetAutoCfg button in the Main Window.

- I/Q Manual Inversion

Select manual inversion, otherwise the setting is automatic.

- Frame Length

Length of frame ($L = I \times M$ Deinterleaver).

- Frame Synchronization Word

First byte of MPEG2 Frame.

- Deinterleaver Branch Number (I)

Deinterleaver configuration.

- Deinterleaver Memory Step (M)


Deinterleaver configuration.

- FEC Inhibitions

Disable the specified functions.

3.3.9 PID Filtering Window

Figure 3-12. PID Filtering Window

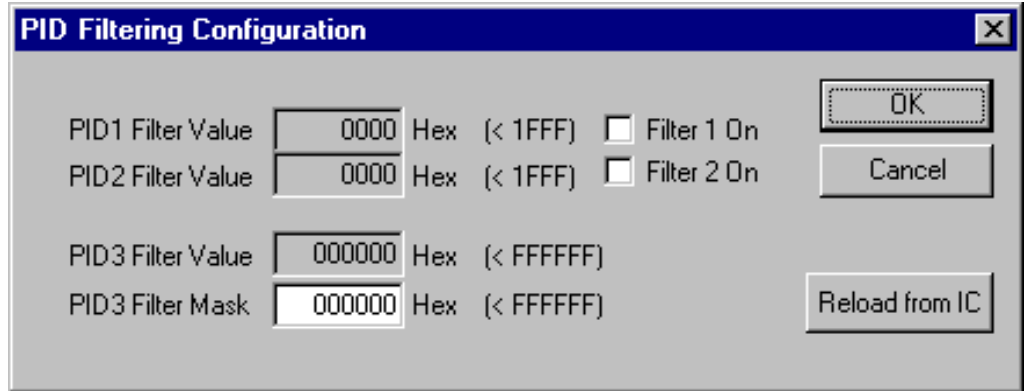

The dialog box titled "PID Filtering Configuration" contains the following fields and controls:

- PID1 Filter Value: 0000 Hex (< 1FFF) Filter 1 On
- PID2 Filter Value: 0000 Hex (< 1FFF) Filter 2 On
- PID3 Filter Value: 000000 Hex (< FFFFFFFF)
- PID3 Filter Mask: 000000 Hex (< FFFFFFFF)


Buttons: OK, Cancel, Reload from IC

This menu specifies the PID of MPEG frames which must be flagged by FLAGPID0 & FLAGPID1 pin output.

PID values can be configured only if the filter is on (PID1/PID2) and the mask is not null (PID3).

3.4 View Menu

Figure 3-13. View Menu

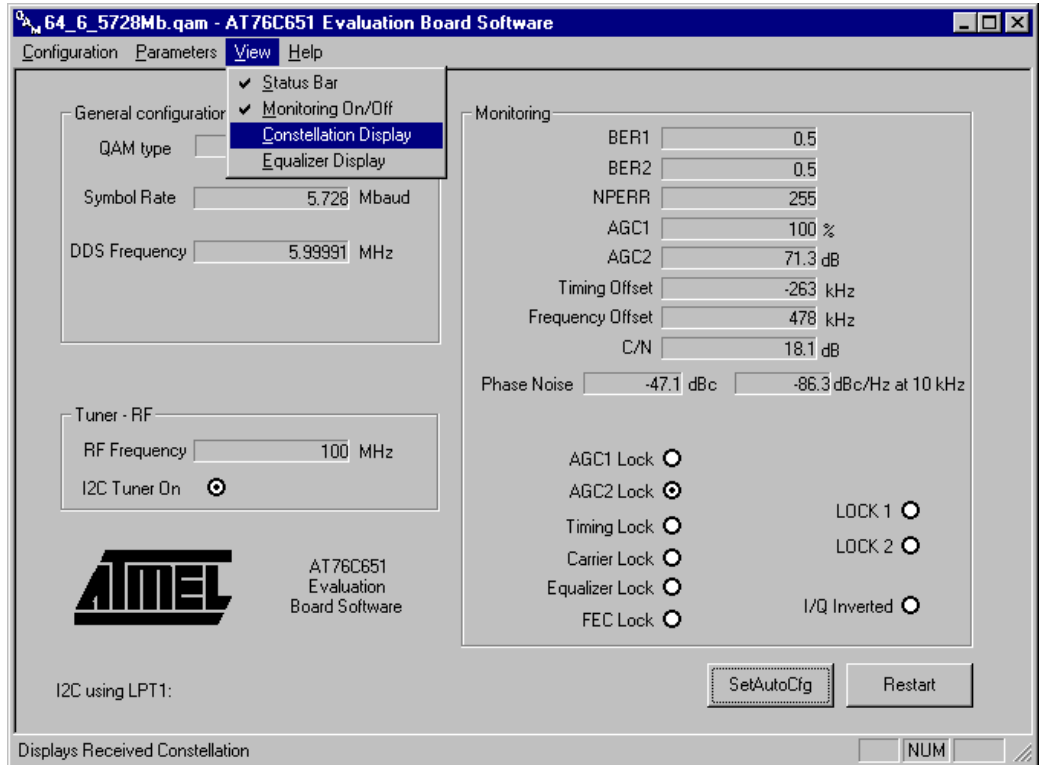

The "View Menu" dialog box, titled "64_6_5728Mb.qam - AT76C651 Evaluation Board Software", has a menu bar with Configuration, Parameters, View, and Help. The View menu is open, showing options: Status Bar (checked), Monitoring On/Off (checked), Constellation Display (selected), and Equalizer Display.

The dialog is divided into several sections:

- General configuration:** QAM type, Symbol Rate (5.728 Mbaud), DDS Frequency (5.99991 MHz).
- Tuner - RF:** RF Frequency (100 MHz), I2C Tuner On (checked).
- Monitoring:** BER1 (0.5), BER2 (0.5), NPERR (255), AGC1 (100 %), AGC2 (71.3 dB), Timing Offset (-263 kHz), Frequency Offset (478 kHz), C/N (18.1 dB), Phase Noise (-47.1 dBc, -86.3 dBc/Hz at 10 kHz).
- Locks:** AGC1 Lock, AGC2 Lock (checked), Timing Lock, Carrier Lock, Equalizer Lock, FEC Lock, LOCK 1, LOCK 2, I/Q Inverted.

Buttons: SetAutoCfg, Restart. Bottom status: Displays Received Constellation, NUM.

This menu enables the user to configure the screen display, and view the QAM constellation and equalizer.

- STATUS BAR

- Enable/Disable the status bar at the bottom of the Main Window.


- MONITORING On/Off

- Enable/Disable the automatic update of monitoring information.

■ CONSTELLATION DISPLAY

Opens a window displaying the QAM constellation


Note: As data are collected by a slow I²C interface, all points cannot be displayed. In Demo Mode, all points are random data.

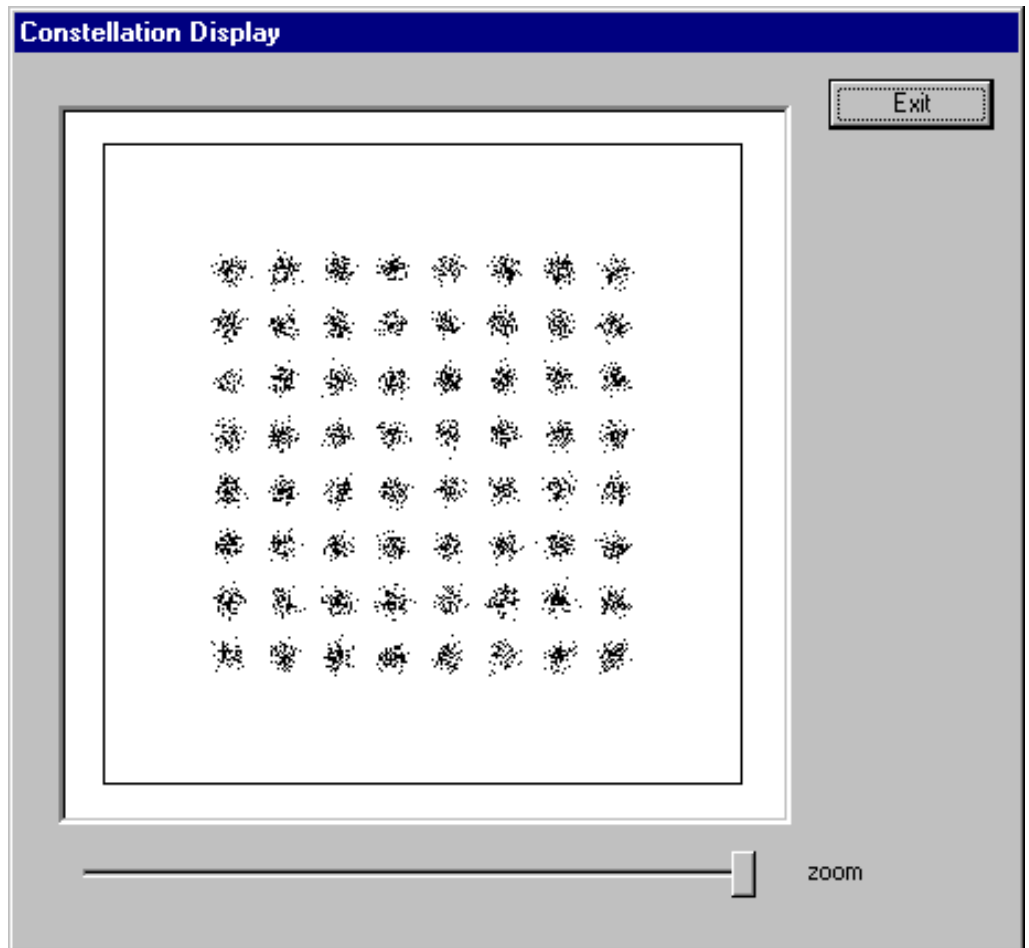

The cursor allows the user to choose the zoom level (no effect on the device).

■ EQUALIZER DISPLAY

Opens a window monitoring the equalizer, coefficients and the spectrum compensation.

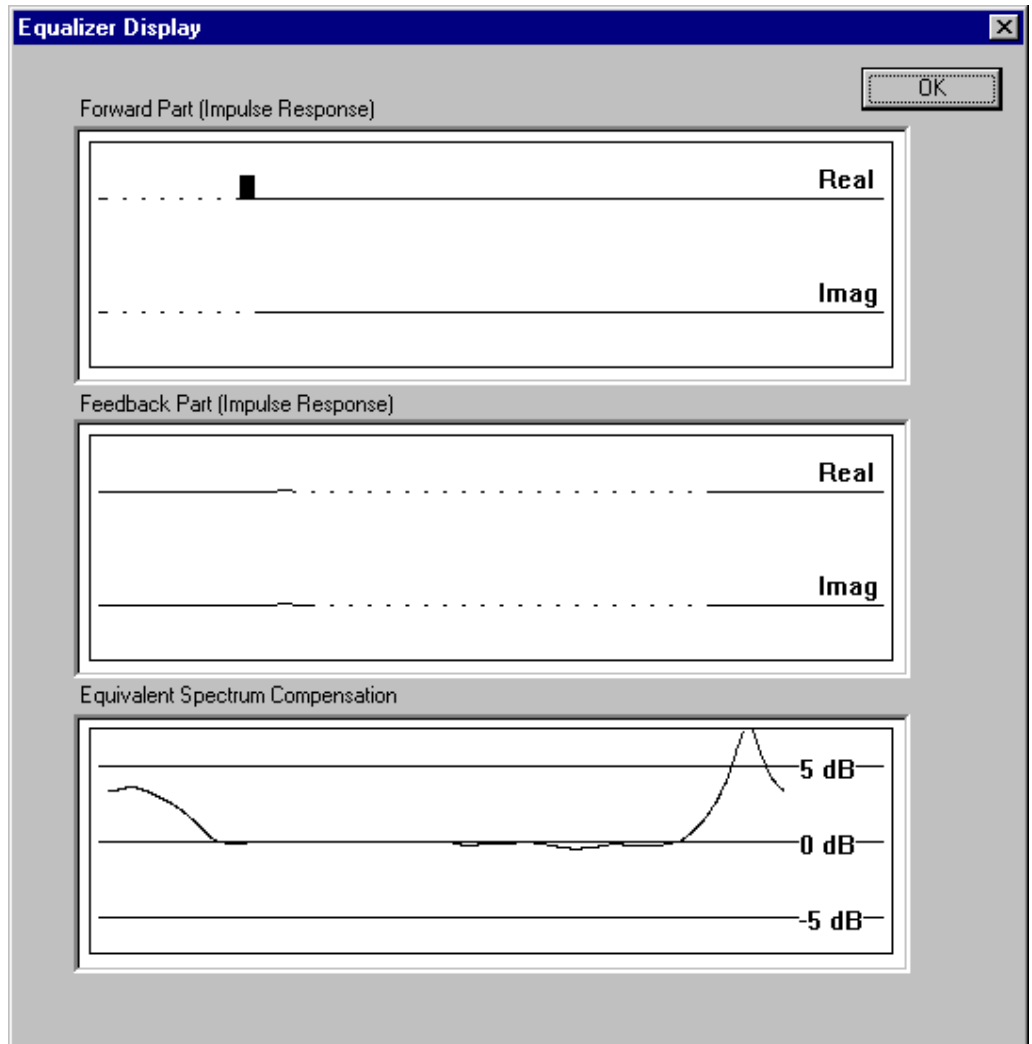



Section 4

Appendix - Glossary and Schematics

4.1 Abbreviations

The following abbreviations are used in this document:

ADC	Analog to Digital Converter
AGC	Automatic Gain Control
CATV	Cable Television
DVB	Digital Video Broadcasting
EMC	Electromagnetic Compatibility
ESD	Electromagnetic Discharge
ETS	European Telecommunication Standards
FEC	Forward Error Correction
IF	Intermediate Frequency
I ² C	Standard I ² C bus described by "The I ² C bus and how to use it - Philips Semiconductor - April 1995"
IRQ	Interrupt Request
ITU -T	International Transmission Union - Telecommunication
MPEG	Moving Picture Expert Group
PID	Program Identifier of MPEG2 frame
PLL	Phase Locked Loop
PWM	Pulse Width Modulation
QAM	Quadrature Amplitude Modulation
QPSK	Quadrature Phase Shift Keying
RF	Radio Frequency
RS	Reed Solomon - to Correct DATA on MPEG2 frame
SAW	Surface Acoustic Wave (filters type)
TS	Transport Stream
XO	Crystal Oscillator unit
XTAL	Crystal unit

4.2 Schematics **Figure 4-1. EBC651 Evaluation Board Schematic**



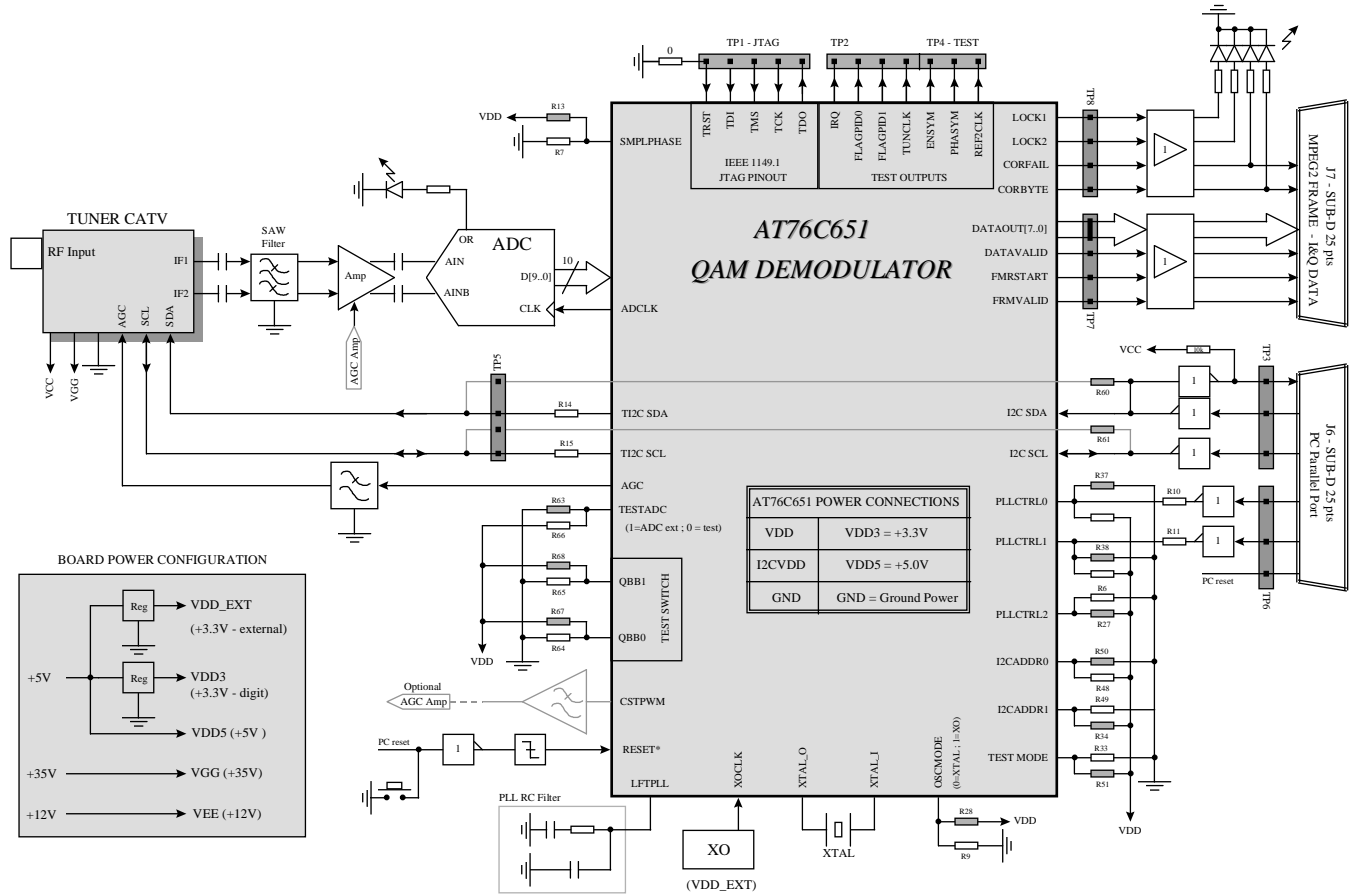


Figure 4-2. EBC651 Evaluation Board Top View

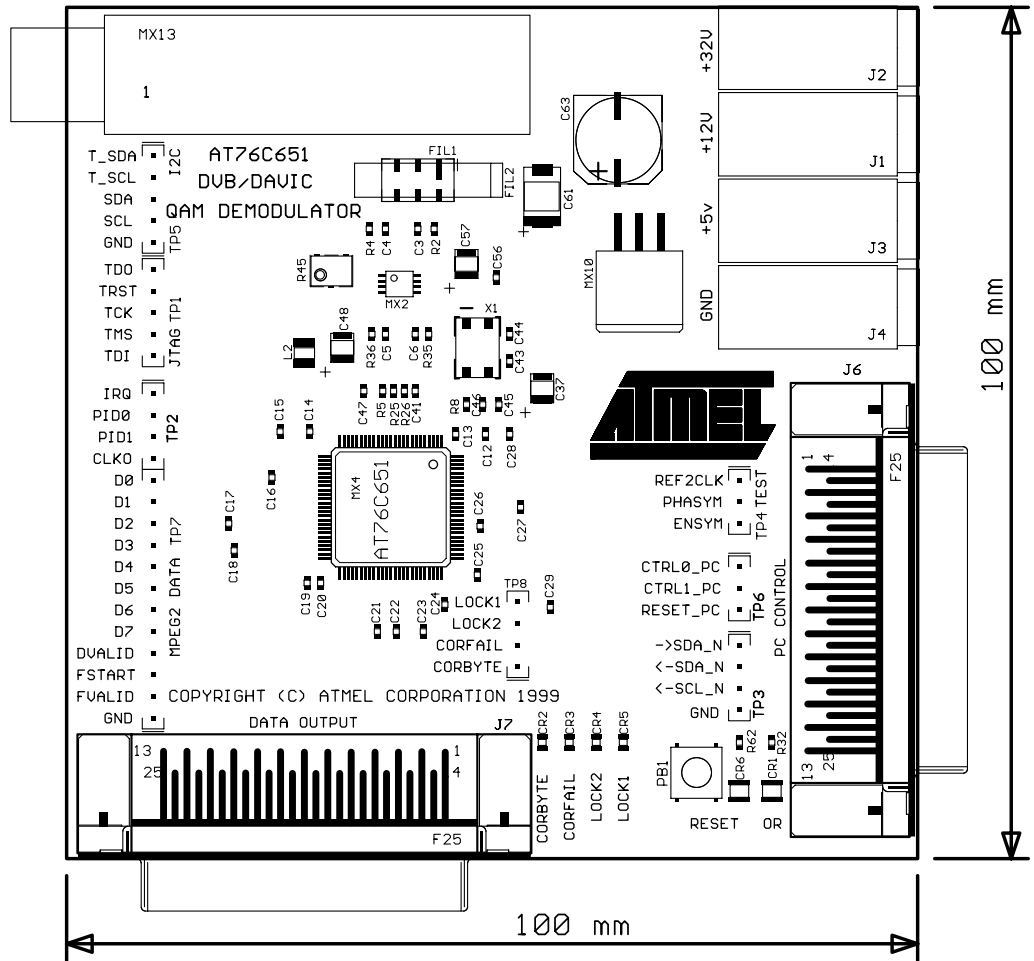


Note: This drawing is not to scale.

Figure 4-3. EBC651 Evaluation Board Bottom View

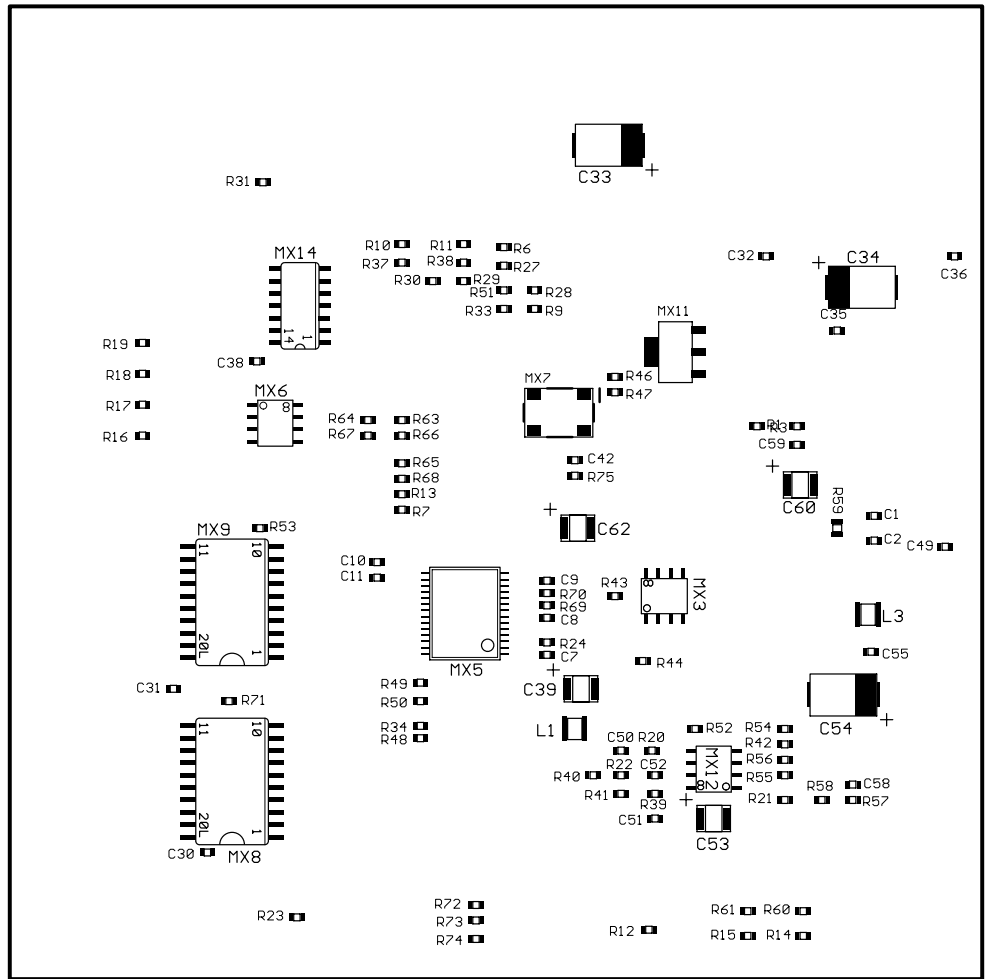

Note: This drawing is not to scale.

Figure 4-14. EBC651 Evaluation Board Connection

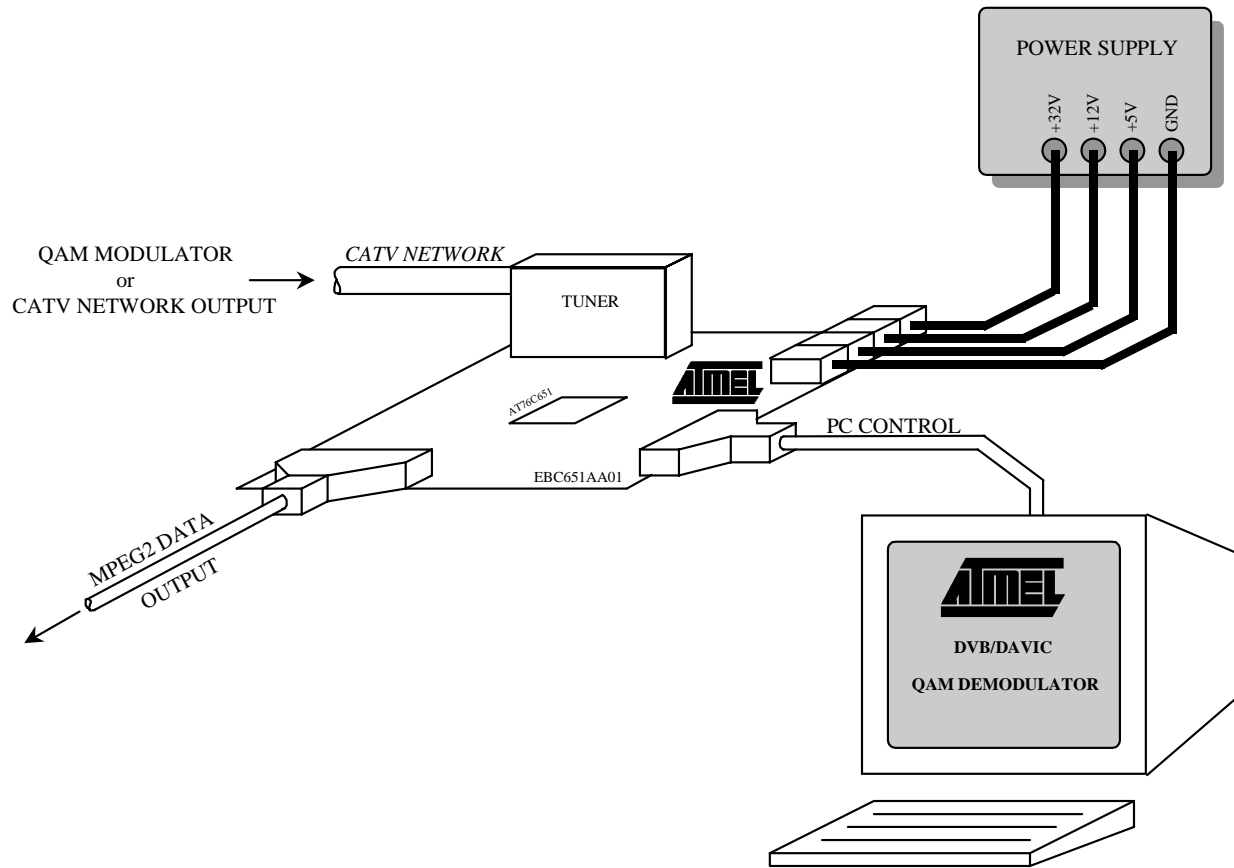

Document Details

Title: AT76C651 Evaluation Kit User Manual
Literature Number: 1320A
Date: October 1999

Revision History

Revision A: October 1999

Important Notice

Because the program is licensed free of charge, there is no warranty for the program, to the extent permitted by applicable law. Except when otherwise stated in writing the copyright holders and/or other parties provide the program "as is" without warranty of any kind, either expressed or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. The entire risk as to the quality and performance of the program is with you. Should the program prove defective, you assume the cost of all necessary servicing, repair or correction.

In no event unless required by applicable law or agreed to in writing will any copyright holder, or any other party who may modify and/or redistribute the program as permitted above, be liable to you for damages, including any general, special, incidental or consequential damages arising out of the use or inability to use the program (including but not limited to loss of data or data being rendered inaccurate or losses sustained by you or third parties or a failure of the program to operate with any other programs), even if such holder or other party has been advised of the possibility of such damages.

Due to software upgrades, slight differences may exist between the version described in this manual and the version delivered to customer.

This design can vary slightly depending on the version of the board used.

The user must assume the entire risk of using this evaluation kit.

For all questions regarding the information in this document, please contact:

Atmel Corporation
Digital TV Development Center
Orlytech Bat. 526
2 allée Maryse Bastié
91781 Wissous Cedex
France

Tel.: (+33) (0)1 70 03 30 05

Fax (+33) (0)1 70 03 30 13

e-mail address: ylevy@es2.fr





Atmel Headquarters

Corporate Headquarters

2325 Orchard Parkway
San Jose, CA 95131
TEL (408) 441-0311
FAX (408) 487-2600

Europe

Atmel U.K., Ltd.
Coliseum Business Centre
Riverside Way
Camberley, Surrey GU15 3YL
England
TEL (44) 1276-686677
FAX (44) 1276-686697

Asia

Atmel Asia, Ltd.
Room 1219
Chinachem Golden Plaza
77 Mody Road
Tsimshatsui East
Kowloon, Hong Kong
TEL (852) 27219778
FAX (852) 27221369

Japan

Atmel Japan K.K.
Tonetsu Shinkawa Bldg., 9F
1-24-8 Shinkawa
Chuo-ku, Tokyo 104-0033
Japan
TEL (81) 3-3523-3551
FAX (81) 3-3523-7581

Atmel Operations

Atmel Colorado Springs

1150 E. Cheyenne Mtn. Blvd.
Colorado Springs, CO 80906
TEL (719) 576-3300
FAX (719) 540-1759

Atmel Rousset

Zone Industrielle
13106 Rousset Cedex, France
TEL (33) 4 42 53 60 00
FAX (33) 4 42 53 60 01

Fax-on-Demand

North America:
1-(800) 292-8635
International:
1-(408) 441-0732

e-mail

literature@atmel.com

Web Site

<http://www.atmel.com>

BBS

1-(408) 436-4309



© Atmel Corporation 1999.

Atmel Corporation makes no warranty for the use of its products, other than those expressly contained in the Company's standard warranty which is detailed in Atmel's Terms and Conditions located on the Company's web site. The Company assumes no responsibility for any errors which may appear in this document, reserves the right to change devices or specifications detailed herein at any time without notice, and does not make any commitment to update the information contained herein. No licenses to patents or other intellectual property of Atmel are granted by the Company in connection with the sale of Atmel products, expressly or by implication. Atmel's products are not authorized for use as critical components in life support devices or systems.

Marks bearing ® and/or ™ are registered trademarks and trademarks of Atmel Corporation.

Terms and product names in this document may be trademarks of others.



Printed on recycled paper.

1320A-10/99/0M