




Application Tooling Specification Sheet

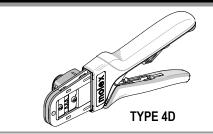

Order No. 63819-0000

FEATURES

- A full cycle ratcheting hand tool ensures complete crimps
- Ergonomic soft grip handles for comfortable crimping
- A precision user-friendly terminal locator wire stop holds terminals in the proper crimping position
- Right and Left handed applications
- This tool is IPC/WHMA A-620 Class 2 compliant
- This tool is RoHS compliant, however RoHS compliant is not required


SCOPE

<u>Products</u>: Micro-Fit 3.0™ Crimp Terminals, 20-30 AWG.

Terminal	Terminal Order No.					re Size	Insulation	Diameter	Strip Length	
Series No.	Loose	Piece	×F	AWG	mm²	mm	ln.	mm	ln.	
43030	43030-0007 43030-0008	43030-0009	43030-0001 43030-0002	43030-0003	20-24	0.50-0.20	1.42-1.85	.056073	2 54 2 02	.100115
43030	43030-0010 43030-0011	43030-0012	43030-0004 43030-0005	43030-0006	26-30	0.12-0.05	1.09-1.27	.043050	2.54-2.92	.100115
43031	43031-0007 43031-0008	43031-0009	43031-0001 43031-0002	43031-0003	20-24	0.50-0.20	1.42-1.85	.056073	2.54-2.92	.100115
	43031-0010 43031-0011	43031-0012	43031-0004 43031-0005	43031-0006	26-30	0.12-0.05	1.09-1.27	043050	2.34-2.32	.100113
44372			44372-0002	20-24 0.50-0.20 1.30-1.85 .05		.051073	2.54-2.92	.100115		
45773			45773-0001 45773-0002	45773-0003	20-24	0.50-0.20	1.42-1.85	.056073	2.54-2.92	.100115
			45773-0004 45773-0005	45773-0006	26-30	0.12-0.05	1.09-1.27	043050	2.04-2.92	
★Customer to cut off terminal from reel: 0.18mm (.007") maximum Cut-off Tab.										

The section of the section terminal norm root. Stromm (1887) maximum section real

Doc No: ATS-638190000 Release Date: 10-11-07 Revision: C Revision Date: 08-31-10

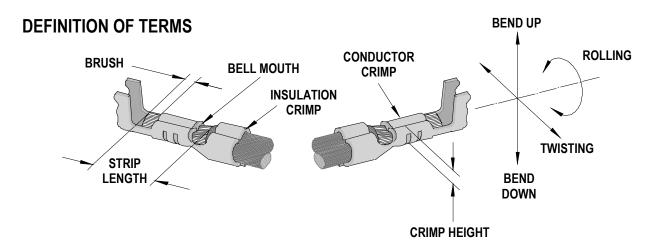

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope.

CONDITIONS:

After crimping, the conductor profiles should measure the following.

Terminal Series No	Wire Size		Conductor Crimp			Insulation Crimp			Pull Force		Drofile				
			Height (Ref.)		Width (Ref.)		Height (Ref.)		Width (Ref.)		Minimum		Profile		
	AWG	mm ²	mm	ln.	mm	ln.	mm	ln.	mm	ln.	N	Lb.	20	22-24	26-30
42020	20	0.50	0.89-0.99	.035040	1.40	.055	1.70	.067	1.83	.072	57.8	13.00	Χ		
	22	0.35	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	35.6	8.00		Χ	
	24	0.20	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	22.2	5.00		Χ	
43030	26	0.12	0.70-0.80	.028031	1.10	.043	1.38	.054	1.41	.056	13.3	3.00			Χ
	28	0.08	0.70-0.80	.028031	1.10	.043	1.38	.054	1.40	.055	8.9	2.00			Χ
	30	0.05	0.70-0.80	.028031	1.10	.043	1.38	.054	1.40	.055	6.7	1.50			Χ
	20	0.50	0.89-0.99	.035040	1.40	.055	1.70	.067	1.83	.072	57.8	13.00	Χ		
	22	0.35	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	35.6	8.00		Χ	
43031	24	0.20	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	22.2	5.00		Χ	
43031	26	0.12	0.70-0.80	.028031	1.10	.043	1.38	.054	1.41	.056	13.3	3.00			Χ
	28	0.08	0.70-0.80	.028031	1.10	.043	1.38	.054	1.40	.055	8.9	2.00			Χ
	30	0.05	0.70-0.80	.028031	1.10	.043	1.38	.054	1.40	.055	6.7	1.50			Χ
	20	0.50	0.89-0.99	.035040	1.40	.055	1.70	.067	1.83	.072	57.8	13.00	Χ		
44372	22	0.35	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	35.6	8.00		Χ	
	24	0.20	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	22.2	5.00		Χ	
45773	20	0.50	0.89-0.99	.035040	1.40	.055	1.70	.067	1.83	.072	57.8	13.00	Χ		
	22	0.35	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	35.6	8.00		Χ	
	24	0.20	0.83-0.93	.033037	1.40	.055	1.58	.062	1.72	.068	22.2	5.00		Χ	
	26	0.12	0.70-0.80	.028031	1.10	.043	1.38	.054	1.41	.056	13.3	3.00			Χ
	28	0.08	0.70-0.80	.028031	1.10	.043	1.38	.054	1.40	.055	8.9	2.00			Χ
	30	0.05	0.70-0.80	.028031	1.10	.043	1.38	.054	1.40	.055	6.7	1.50			Χ

OPERATION


CAUTION: Install only Molex terminals listed above with this tool. Do not crimp hardened objects as damage can occur to the tool or die.


Doc No: ATS-638190000 Release Date: 10-11-07 Revision: C Revision Date: 08-31-10


Open the tool by squeezing the handles together. At the end of the closing stroke, the ratchet mechanism will release the handles and the hand tool will spring open. See Figure 1.

Crimping Terminals


- 1. Select the desired terminal listed in the preceding charts.
- 2. Make sure the center of the locator is in the down position. With the locator attached, push the locator button on the back of the hand tool to bring the locator forward through the tooling. See Figure 2.



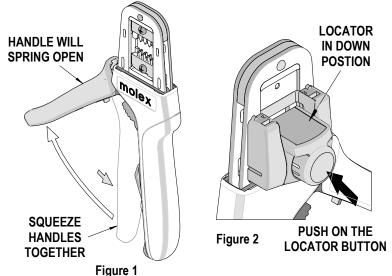

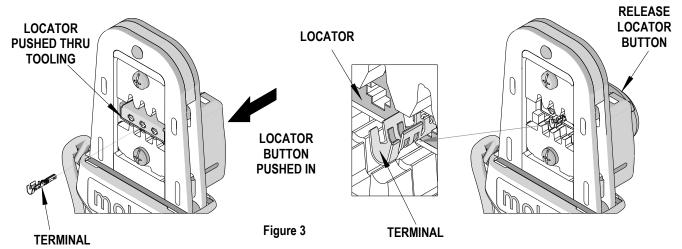


- 4. Release the locator button, allowing the locator to return to the crimping position.
- 5. Close the tool handle until the first ratchet position engages. See Figure 4.
- 6. Insert the properly stripped wire through the terminal and against the wire stop. See Figure 5.
- 7. Crimp the terminal by squeezing the tool handles until the ratchet mechanism cycle has been completed. Release the handles to open the jaws.

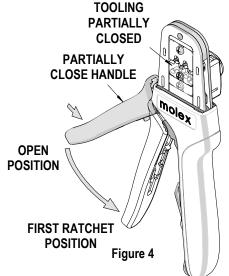


Doc No: ATS-638190000 Release Date: 10-11-07 Revision: C Revision Date: 08-31-10

UNCONTROLLED COPY

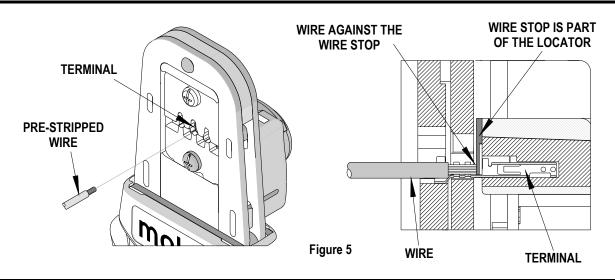

Note: The tamper proof ratchet action will not release the tool until it has been fully closed.

- 8. Remove the crimped terminal from the terminal locator by pulling on the wire.
- 9. Visually inspect the crimped terminal for proper crimp location.
- 10. On some large O.D. wires, it may not be possible to insert the wire with the tool partially closed. Those wires should be inserted with the hand tool in the open position. Insert the wire above the terminal in the punch and against the wire stop then close the tool. See Figure 6.

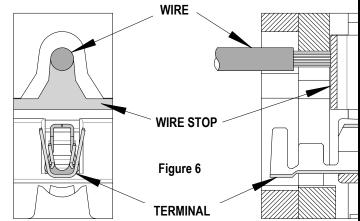


Note:

A crimp height chart is provided with this manual as Reference Only. Due to the wide range of wires, strands, insulation diameters, and durometers available, actual crimp height measurements may very slightly. An occasional, destructive, pull force test should be performed to check hand tool crimp. Pull Force value Must exceed the Minimum pull force specifications listed.

Locator Replacement


See the parts list on the last page of this document for the proper locator order number. Follow the steps below to replace the locator.

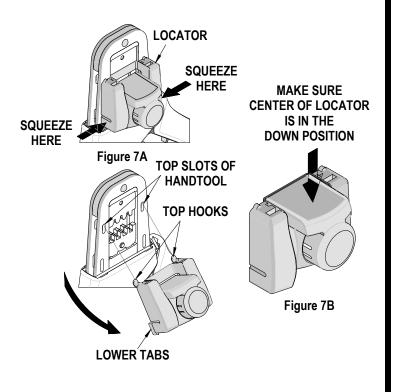

Doc No: ATS-638190000 Release Date: 10-11-07 Revision: C Revision Date: 08-31-10

UNCONTROLLED COPY

- 1. Open the crimp hand tool.
- 2. Squeeze gently on the lower area shown in Figure 7A with your thumb and index finger. The lower tabs of the locator should disengage from the hand tool.
- 3. Lift and pull away from the hand tool. The top locator hooks should slip out of the top slots easily. See Figure 7A.
- 4. To reinstall the new locator, make sure the hand tool is in the open position.
- 5. Press the red insert down as far as it will go as shown in Figure 7B.
- 6. Holding onto the lower part of the locator with your thumb and index finger, insert the locators top hooks (2) into the hand tool top slots.
- 7. Rotate the locator down and press the lower tabs into the two bottom slots of the hand tool. To secure the locator into place, the lower tabs must snap into place on the hand tool frame.

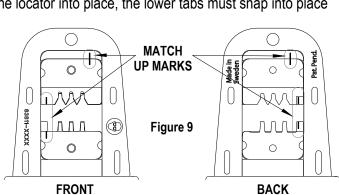

JAWS OPEN

Molex

TOOLING

PULL OPEN

Figure 8

PUSH ON

HANDLE

TOOLING

M3 BHCS

Right or Left Hand Operation


This hand tool has an added feature that can be converted from a right handed application to a left handed application. It is necessary to reverse the tooling if using the left handed application along with the locator. Follow the steps below:

- 1. The locator must be removed before reversing the tooling.
- 2. Remove the M3 BHCS which is holding the upper tooling.
- 3. Flip the upper tooling to the opposite side and replace the M3 BHCS. Make sure the small markings on the front and back of the hand tool frame match up and are on the outside of the hand tool frame. See Figure 8 and 9.
- 4. Do the same thing with the lower tooling and tighten the M3 screws. Be sure the small markings line up.
- 5. Reinstall the locator by following the Instructions in the locator replacement section.

Maintenance

It is recommended that each operator of the tool be made aware of, and responsible for, the following maintenance steps:

- 1. Remove dust, moisture, and other contaminants with a clean brush, or soft, lint free cloth.
- 2. Do not use any abrasive materials that could damage the tool.

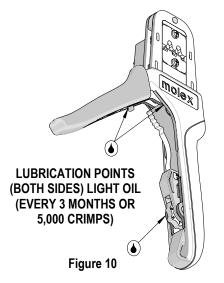


Doc No: ATS-638190000 Revision: C

Release Date: 10-11-07 Revision Date: 08-31-10 **UNCONTROLLED COPY**

- 3. Make certain all pins; pivot points and bearing surfaces are protected with a thin coat of high quality machine oil. Do not oil excessively. The tool was engineered for durability but like any other equipment it needs cleaning and lubrication for a maximum service life of trouble free crimping. Light oil (such as 30 weight automotive oil) used at the oil points, every 5,000 crimps or 3 months, will significantly enhance the tool life.
- 4. Wipe excess oil from hand tool, particularly from crimping area. Oil transferred from the crimping area onto certain terminations may affect the electrical characteristics of an application.
- 5. When tool is not in use, keep the handles closed to prevent objects from becoming lodged in the crimping dies, and store the tool in a clean, dry area.

Miscrimps or Jams

Should this tool ever become stuck or jammed in a partially closed position, **Do Not** force the handles open or closed. The tool will open easily by pressing up on the ratchet release lever in the movable handle. See Figure 11.

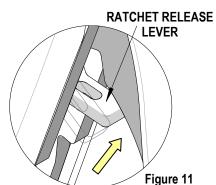


How to Adjust Tool Preload (See Figure 12)

This hand tool is factory preset to 25-45 LBS. preload. It may be necessary over the life of the tool to adjust tool handle preload force. Listed below are the steps required to adjust the crimping force of the hand tool to obtain proper crimp conditions:

- 1. Hold the hand tool in the palm of your hand as shown in Figure 10. Using the index finger squeeze the link towards the top of the hand tool frame. This will release the preload adjustment wheel.
- 2. Rotate the setting wheel counter-clockwise (CCW) to increase handle force. The numbers will display higher.

To decrease handle force rotate the setting wheel clockwise (CW).

- 3. Release the link to lock the setting wheel in place.
- Check the crimp specifications or conduct a pull test after tool handle preload force is adjusted.

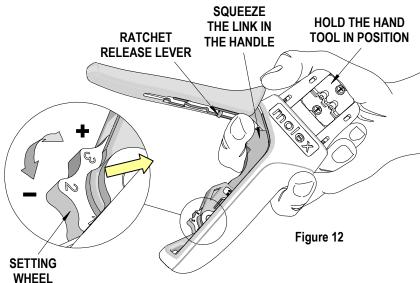

Warranty

This tool is for electrical terminal crimping purposes only. This tool is made of the best quality materials. All vital components are long life tested. All tools are warranted to be free of manufacturing defects for a period of 30 days. Should

such a defect occur, we will repair or exchange the tool free of charge. This repair or exchange will not be applicable to altered, misused, or damaged tools. This tool is designed for hand use only. Any clamping, fixturing, or use of handle extensions voids this warranty.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals and tooling.

Doc No: ATS-638190000 Release Date: 10-11-07 Revision: C Revision Date: 08-31-10

CAUTIONS:

- 1. Manually powered hand tools are intended for low volume or field repair. This tool is NOT intended for production use. Repetitive use of this tool should be avoided.
- 2. Insulated rubber handles are not protection against electrical shock.
- 3. Wear eye protection at all times.
- 4. Use only the Molex terminals specified for crimping with this tool.

Certification

Molex does not certify or re-certify hand tools but rather supplies the following guidelines for customers to re-certify hand tools.

- % This tool is qualified to pull force only. See the Molex web site for the Quality Crimp Handbook for more information on pull testing.
- % If the tool does not meet minimum pull force values, handle preload should be increased and the pull test rerun, (See How to Adjust Preload).
- When the hand tool is no longer capable of achieving minimum pull force, it should be taken out of service and replaced.


Doc No: ATS-638190000 Release Date: 10-11-07 UNCONTROLLED COPY Page 7 of 8

Revision Date: 08-31-10

Revision: C

PARTS LIST

Item Number	Order Number	Description	Quantity
REF	63819-0000	Hand Crimp Tool	Figure 13
1	63819-0075	Locator Assembly	1
2	63810-0104	Spring, Return	1
3	63810-0105	Spring, Ratchet	1

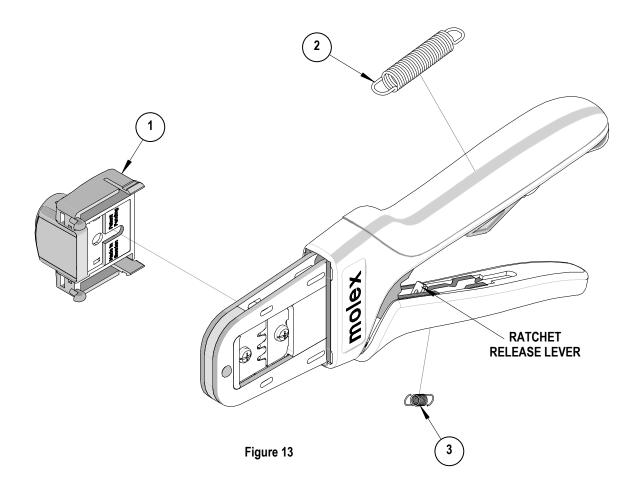

http://www.molex.com

Doc No: ATS-638190000 Revision: C

Release Date: 10-11-07 Revision Date: 08-31-10