GSM7 Medical 7 Watt Single Output Global Performance Switchers



SPECIFICATIONS: Ac Input

85-264 Vac, 47-63 Hz single phase.

Holdup Time

16 ms minimum from loss of ac.

Output Power

Normal continuous output power is 7 W, 9 W peak for 60 s maximum duration, 10% duty cycle. Factory set to begin power limiting at approximately 9 W.

Output Regulation

Regulation from initial setpoint measured by changing load from no-load to 50% load or 50% load to full load in either direction. Initial sepoint tolerance is measured at 50% load. No minimum load is required to maintain proper regulation.

Overload Protection

Fully protected against short circuit and output overload. Short circuit protection is cycling type power limit.

No Load Turn-on/Standby

Full regulation at no load.

Output Noise

0.5% rms, 1% pk-pk, 20 MHz bandwidth, differential mode. Measured with scope probe directly across output terminals of the power supply with load terminated with 0.1 uF capacitor.

Voltage Adjustment

Factory set with fixed resistors to maximize reliability.

Efficiency

72% minimum for the 5.0 V model at full rated load, nominal input voltage. Efficiency increases as output voltage increases.

Input Protection

Internal ac fuse provided on all units. Designed to open only if catastrophic failure occurs in the unit; fuse does not blow on overload or short circuit. Internal 320 Vac MOV included. Units will not be damaged when tested for input transients in accordance with the following standards:

ESD—IEC1000-4-2 Level III Fast Transient—IEC1000-4-4 Level III

FEATURES:

- · World's smallest medically approved 7 W supply
- 2.00" x 2.28" x 0.56"
- Wide-range ac input (85-264 Vac)
- Approved to UL2601 and IEC601-1
- EMI to CISPR11 Class B/IEC601-1-2
- · Ideal for ultra-compact applications
- (f marked to LVD

Environmental

Designed for 0 to 50°C operation at full rated output power; derate output current and total output power by 2.5% per °C above 50°C. See Environmental specification on next page.

Medical EMI/EMC Compliance

All models include built-in EMI filtering to meet the following emissions requirements:

EMI SPECIFICATIONS Conducted Emissions Static Discharge RF Field Susceptibility Fast Transients/Bursts Surge Susceptibility COMPLIANCE LEVEL EN55011 Class B; FCC Class B EN61000-4-2, 6 kV contact, 8 kV air EN61000-4-3, 3 V/meter EN61000-4-4, 2 kV, 5 kHz EN61000-4-5, 1 kV diff., 2 kV com.

Medical Safety

Condor D.C. Power Supplies, Inc. declares under our sole responsibility that all GSM models are in conformity with the applicable requirements of EN60601 following the provisions of the Low Voltage Directive 73/23/EEC.

All GSM models are certified to be in compliance with the applicable requirements of UL2601 Patient Care Equipment), CSA 22.2 No. 234 (with additional tests to C22.2 No 601.1-M90 per T.I.L. CA-08), IEC 601-1 (1988), EN 60601-1: 1990 (consult factory for approval status). Classification (in accordance with sub-clause 5 of IEC 601-1): (5.1) Protection against electric shock = class II (5.2) Degree of protection against electric shock = signal

(5.3) Protection against harmful ingress of water =

ordinary (no protection)

(5.5) Not suitable for use in the presence of flammable anesthetic mixture

(5.6) Mode of operation = continuous

Earth Leakage Current

Leakage current measured in ground wire connection to output common.


Model	Leakage Current*	Leakage Current**	Test Voltage	Test Method
GSM7	32 µA	50 µA	132 Vac/60 Hz	UL2601
GSM7	55 µA	85 µA	254 Vac/50 Hz	IEC601

* Normal operation **Adnormal/single fault condition

GSM7 Medical 7 Watt Single Output

Model	Output	Current	Load Regulation	Initial Setpoint Tolerance	OVP Setpoint	Ripple and Noise
GSM7-5	5.1 V	1.4 A	0.75%	2.5%	6.2 ± 0.6 V	1%
GSM7-12	12 V	0.6 A	0.75%	2.5%	14 ± 1.1 V	1%
GSM7-15	15 V	0.5 A	0.75%	2.5%	18.5 ± 1.5 V	1%
GSM7-24	24 V	0.3 A	0.75%	2.5%	28 ± 2.5 V	1%
GSM7-28	28 V	0.3 A	0.75%	2.5%	34 ± 2.8 V	1%

GSM7 MECHANICAL SPECIFICATIONS

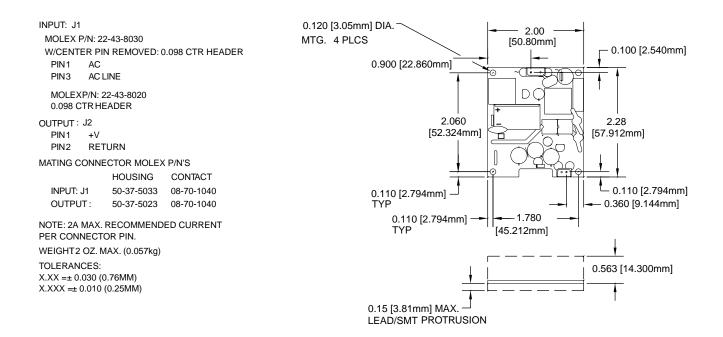

Operating	Non-operating
0 to 50°C	-40 to +85°C
0 to 95% RH	0 to 95% RH
20 g _{pk}	40 g _{pk}
-500 to 10,000 ft	-500 to 40,000 ft
1.5 g _{rms} , 0.003 g²/Hz	5 g _{rms} , 0.026 g²/Hz
	0 to 50°C 0 to 95% RH 20 g _{pk} -500 to 10,000 ft

A. Units should be allowed to warm up/operate under non-condensing conditions before application of power.

 B. Random vibration—10 to 2000Hz, 6dB/octave roll-off from 350 to 2000Hz, 3 orthogonal axes. Tested for 10 min./axis operating and 1 hr./axis non-operating. C. Shock testing—half-sinusoidal, 10 ± 3 ms duration, \pm direction, 3 orthogonal

axes, total 6 shocks.

CONDOR Condor D.C. Power Supplies, Inc./A subsidiary of SL Industries, Inc. 2311 Statham Parkway, Oxnard, CA 93033 • 800-235-5929 • 805-486-4565 • FAX 805-487-8911 • www.condorpower.com