Bulb & Capillary Thermostats CAP-MR Series - Manual Reset




SPECIFICATIONS

APPLICATIONSChillers


- Test systems
- Food service equipment


This non-recycling device trips at a predetermined, calibrated set point shutting down the thermal circuit until reactivated. The circuit will remain inactive until the thermostat is reactivated by manually depressing the reset button. Selco CAP-MR Series meets the requirement of U.L. trip-free device where the circuit remains open while the manual reset is held depressed.

Model Number	Set Point (°F)	Capillary Length (inches)	Bulb Length (inches)	Bulb Dia. (inches)	Terminals
CAP-MR-140-SS	140 ± 5.5	36	3.6	.24	.250 quick connects
CAP-MR-179	179 ± 5.5	36	3.3	.24	.250 quick connects
CAP-MR-200	200 ± 5.5	36	3.59	.24	.250 quick connects
CAP-MR-245	245 ± 7.2	12	3.3	.24	screw type
CAP-MR-284	284 ± 10.8	36	4.48	.19	.250 quick connects
CAP-MR-320	320 ± 10.8	36	3.0	.24	screw type
CAP-MR-392	392 ± 10.8	36	3.3	.24	.250 quick connects
CAP-MR-450	450 ± 16	36	4.7	.19	.250 quick connects
CAP-MR-500-1	500 ± 16	78	3.0	.19	.250 quick connects
CAP-MR-572-B	572 ± 18	36	3.0	.19	.250 quick connects
CAP-MR-700	700 ± 18	36	6.0	.12	.250 quick connects

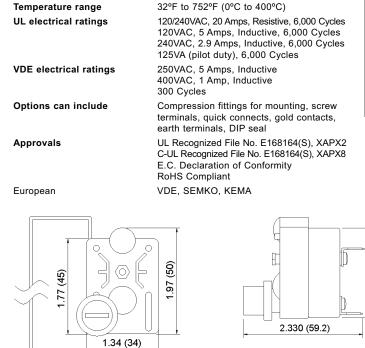

Bulb Length

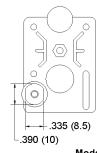

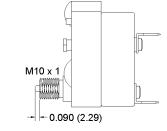



Model of spec pictured above

Terminal Options

- Capillary

Horizontal

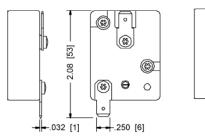


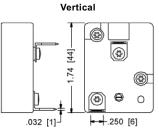

Bulb

Diameter

Screw (#8-32 or 4mm)

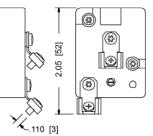

It is the customer's sole responsibility to specify and determine the suitability of a particular control or component based on their unique individual applications and requirements

(44)

.74