


## For Liquid/Gas Filter, Differential Pressure Pumping, Orifice for Mass Spectroscopy, Light/X-ray Collimator


### FEATURES

- Uniform capillary diameter
- Possible to make liquid laminar flow
- Possible to give charge particle or molecule directivity
- Good mechanical strength
- High heat resistance (430°C Max.)
- Possible to collimate light

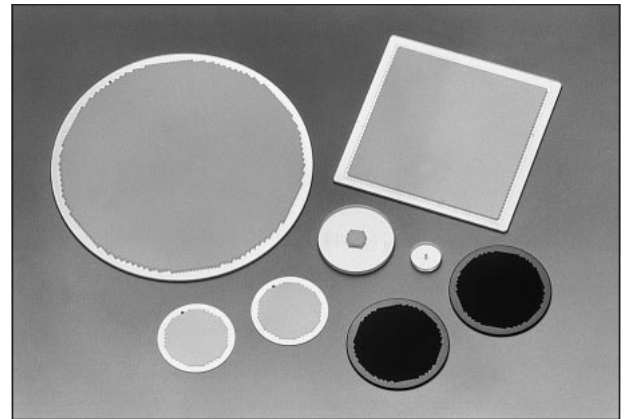

Capillary plate is a circular or rectangular plate where glass capillaries of channel diameter 6 to 25  $\mu\text{m}$  are regularly bundled in parallel. Depending on its channel diameter or thickness, capillary plate can control flow speed or flow quantity of gas or liquid and can be used as a gas filter or a window material for differential pressure pumping. Besides it can give directivity to charged particle and molecule, and can be also used as a light or X-ray collimator. Our capillary plate has as high as over 55 % open area ratio.

### DIMENSIONAL OUTLINES AND SPECIFICATIONS (Unit:mm)

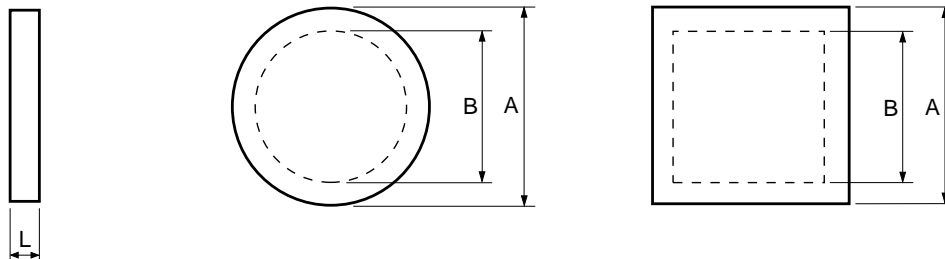

TMCPA0070EA

Type No.	Size A	Effective Area B (mm)	Channel Diameter D ( $\mu\text{m}$ )	Thickness L (mm)	L/D
J5022-01	$\phi 5$	$\phi 0.8$	12	1.0	83
J5022-09	$\phi 25$	$\phi 20$	6	1.0	167
J5022-11	$\phi 25$	$\phi 20$	10	0.4	40
J5022-16	$\phi 33$	$\phi 27$	10	1.0	100
J5022-21	$\phi 87$	$\phi 77$	25	1.0	40
J5022-19	60 × 60	53 × 53	20	1.0	50

# HAMAMATSU

HAMAMATSU PHOTONICS K.K., Electron Tube Center

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205, Telex: 4225-186HAMAHQ

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: Lough Point, 2 Gladbeck Way, Windmill Hill, Enfield, Middlesex EN2 7JA, United Kingdom, Telephone: (44)181-367-3560, Fax: (44)181-367-6384

North Europe: Hamamatsu Photonics Norden AB: Färögatan 7, S-164-40 Kista, Sweden, Telephone: (46)8-703-29-50, Fax: (46)8-750-58-95

Italy: Hamamatsu Photonics Italia S.R.L.: Via Della Moia, 1/E 20020 Arese, (Milano), Italy, Telephone: (39)2-935 81 733, Fax: (39)2-935 81 741

TMCP1017E01  
NOV. 97 CR  
Created in Japan