Silicon N-Channel Power MOS FET Module

HITACHI

Application


High Speed Power Switching

Features

- Equipped with Power MOS FET
- · Low on-resistance
- · High speed switching
- Low drive current
- · Wide area of safe operation
- Inherent parallel diode between source and drain
- Isolated base from Terminal
- Suitable for motor driver, switching regulator and etc.



Outline

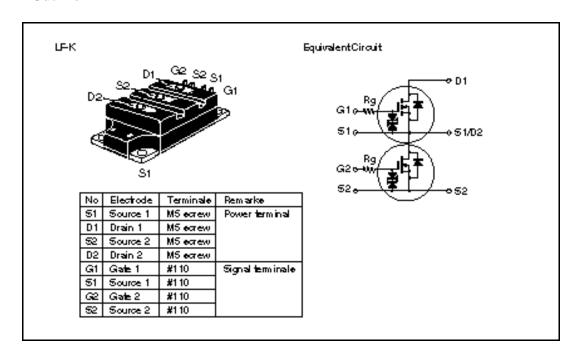

Absolute Maximum Ratings (Ta = 25°C) (Per FET chip)

Item	Symbol	Rating	Unit	
Drain source voltage	$V_{(BR)DSS}$	500	V	
Gate source voltage	$V_{(BR)GSS}$	±30	V	
Drain current	I _D	150	А	
Drain peak current	I _{D(peak)}	360	А	
Body to drain diode reverse drain current	I _{DR}	150	А	
Body to drain diode reverse peak current	I _{DR(peak)}	360	А	
Channel dissipation	Pch*1	500	W	
Channel temperature	Tch	150	°C	
Storage temperature	Tstg	-45 to +125	°C	
Insulation dielectric	Viso*2	2000	Vrms	

Notes: 1. Value at Ta = 25°C

2. Base to terminals AC minute


Electrical Characteristics (Ta = 25°C) (Per FET chip)


Item	Symbol	Min	Тур	Max	Unit	Test conditions
Drain to source breakdown voltage	$V_{(BR)DSS}$	500	_	_	V	$I_D = 10 \text{ mA}, V_{GS} = 0 \text{ V}$
Gate to source leak current	I _{GSS}	_	_	±10	μΑ	$V_{GS} = \pm 25 \text{ V}, V_{DS} = 0 \text{ V}$
Gate to source breakdown voltage	$V_{(BR)GSS}$	±30	_	_	V	$I_{G} = \pm 100 \ \mu A, \ V_{DS} = 0 \ V$
Drain leak current	I _{DSS}	_	_	1	mA	$V_{DS} = 400 \text{ V}, V_{GS} = 0 \text{ V}$
Gate to source threshold voltage	$V_{\text{GS(th)}}$	2.0	_	3.0	V	$I_D = 1 \text{ mA}, V_{DS} = 10 \text{ V}$
Drain to source saturation voltage	$V_{DS(on)}$	_	4.5	6.0	V	$I_D = 75 \text{ A}, V_{GS} = 10 \text{ V}^{*1}$
Static drain to source on state resistance	$R_{\mathrm{DS(on)}}$	_	0.06	0.08		$I_D = 75 \text{ A}, V_{GS} = 10 \text{ V}^{*1}$
Forward transfer admittance	y _{fs}	_	80	_	S	$I_D = 75 \text{ A}, V_{DS} = 10 \text{ V}^{*1}$
Input capacitance	Ciss	_	22600	_	pF	$V_{DS} = 10 \text{ V}, V_{GS} = 0 \text{ V}$
Output capacitance	Coss	_	4600	_	_	f = 1 MHz
Reverse transfer capacitance	Crss	_	580	_	_	
Turn-on delay time	$t_{d(on)}$	_	280	_	ns	$I_D = 75 \text{ A}, V_{GS} = 10 \text{ V}$
Rise time	t _r	_	820	_		Rg = 50
Turn-off delay time	$t_{\text{d(off)}}$	_	1190	_	_	$R_{L} = 0.4$
Fall time	t _f	_	400	_	_	
Body to drain diode forward voltage	V_{DF}		2.0		V	I _F = 150 A, V _{GS} = 0 V
Body to drain diode reverse recovery time	t _{rr}	_	140	_	ns	$I_F = 150 \text{ A}, V_{GS} = 0 \text{ V}$ di/dt = 100 A/ μ s


Note: 1. Pulse Test


Mechanical Characteristics


Item	Symbol	Condition	Rating	Unit
Fixing strength	_	Mounting into main-terminal with M4 screw	1.45 to 1.95	N-m
	_	Mounting into heat sink with M5 screw	1.95 to 2.9	N-m
Weight	_	Typical value	380	g

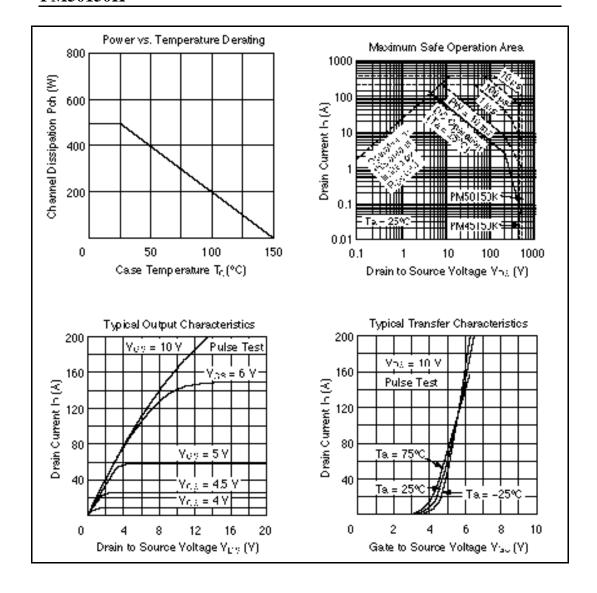

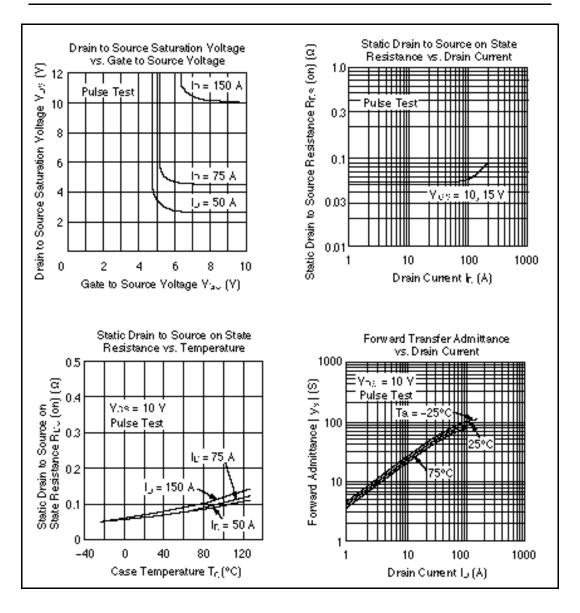

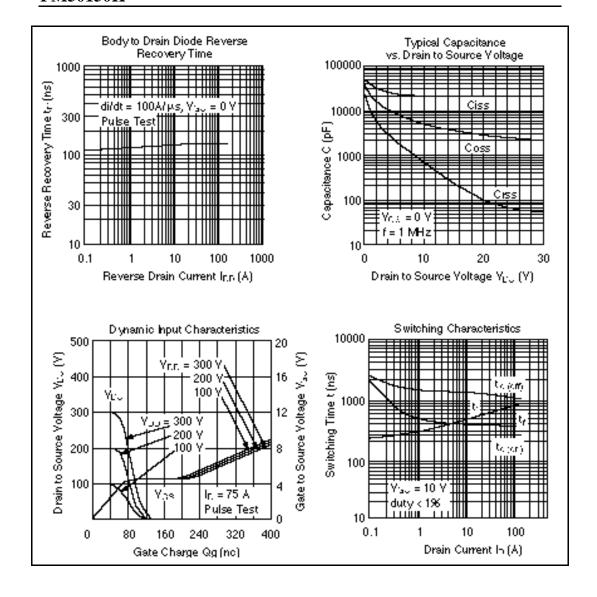


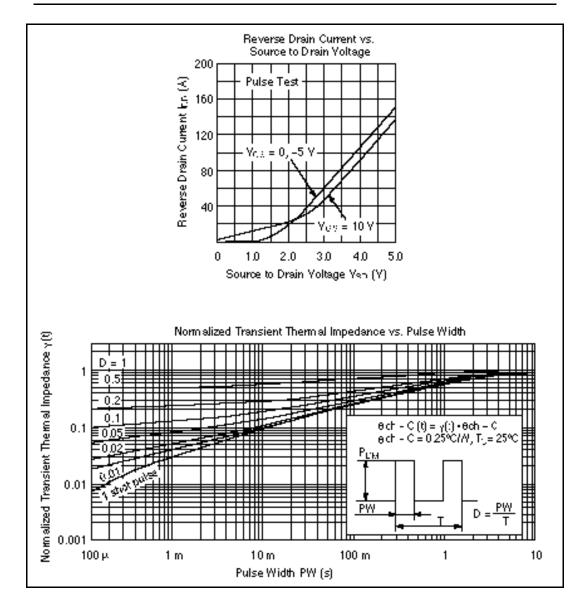

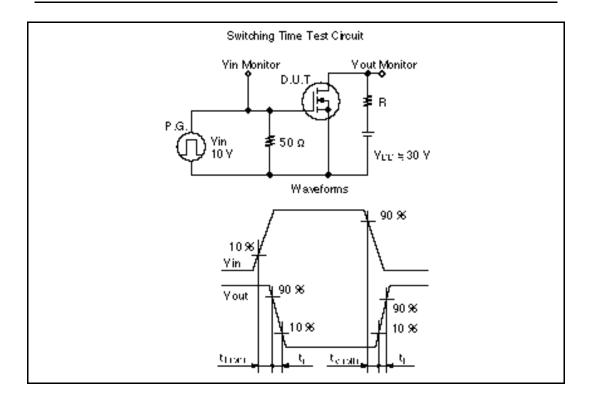

Package Dimensions

Unit: mm

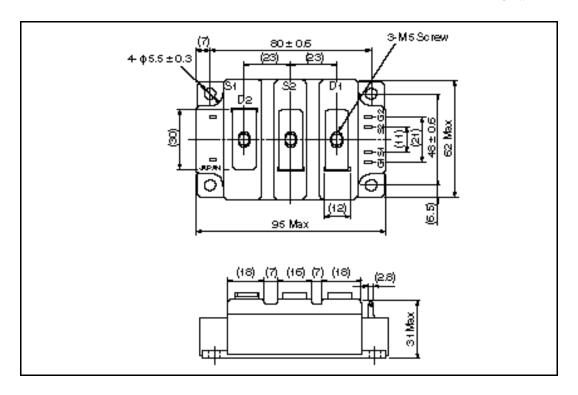

When using this document, keep the following in mind:

- 1. This document may, wholly or partially, be subject to change without notice.
- 2. All rights are reserved: No one is permitted to reproduce or duplicate, in any form, the whole or part of this document without Hitachi's permission.
- 3. Hitachi will not be held responsible for any damage to the user that may result from accidents or any other reasons during operation of the user's unit according to this document.
- 4. Circuitry and other examples described herein are meant merely to indicate the characteristics and performance of Hitachi's semiconductor products. Hitachi assumes no responsibility for any intellectual property claims or other problems that may result from applications based on the examples described herein.
- 5. No license is granted by implication or otherwise under any patents or other rights of any third party or Hitachi, Ltd.
- 6. MEDICAL APPLICATIONS: Hitachi's products are not authorized for use in MEDICAL APPLICATIONS without the written consent of the appropriate officer of Hitachi's sales company. Such use includes, but is not limited to, use in life support systems. Buyers of Hitachi's products are requested to notify the relevant Hitachi sales offices when planning to use the products in MEDICAL APPLICATIONS.

HITACHI

Hitachi, Ltd. Semiconductor & IC Dw. Nippon Bidg. 26-2, Ohte-medif, Chiyode-ku, Tokyo 100, Japan Tet Tokyo (03) 3270-2111 Fex: (03) 3270-5100

For further in forme I on write to:

Hitechi America, Ltd. Semiconductor & IC Div. 2000 Sierre Point Perlaway Brisbens, CA. 94005-4835 U.S.A. Tay Aus. 500,0000

Tet +15-589-8300 Fax: +15-583-4207 Hitachi Burope SmbH
Bedtonic Componente Group
Continental Burope
Darrecher Streise 3
D-89522 Feldkirchen
München
Tet 089-9 94 80-0
Fex: 089-9 20 30 00

Hitachi Burope Ltd.
Bedtronic Components Div.
Northern Burope Headquerters
Whitebrook Park
Lower Cook ham Road
Maidenhead
Berkshire SUSSYA
Urited Kingdon
Text 0628-585000
Fext 0628-778322

Hitachi Asia Pta, Ltd 45 Collyer Quay \$20-00 Hitachi Tower Snappore 0404 Tet 535-2400 Fex: 535-4533

Hitachi Asia (Hong Kong) Ltd. Unit 706, North Towar, World Firance Centre, Herbour City, Centon Road Taim She Taul, Kowloon Hong Kong Tet 27350218 Fax: 27306074