

# **Triple-Driver with Thermal Monitoring**

## **Description**

The triple-driver IC includes three non inverted and current limited output stages with an open collector. Common thermal shutdown protects outputs against critical junction temperature. Each output can sink

20 mA, parallel output operation is possible. The digital inputs have Schmitt-trigger function with pull-up current sources to 5 V.

### **Features**

- Three input comparators with Schmitt-trigger characteristic
- Input clamping current capability to  $\pm 10 \text{ mA}$
- Integrated protection cells (EMC, ESD, RF) dedicated to all input stages
- Common shutdown by junction temperature monitor
- Low voltage reset with hysteresis

- ESD protection to human body model:  $\pm 2000 \text{ V } (\text{C} = 100 \text{ pF}, \text{R} = 1.5 \text{ k}\Omega)$
- Output stages:
- Short circuit protected with diode
- Load-dump protected @ 1 k $\Omega$
- No crosstalk on adjacent channels
- Clamping current @ -2 mA
- Jump start possible

### **Ordering Information**

Extended Type Number	Package	Remarks
U6803B-FP	SO8	

# **Block Diagram / Applications**

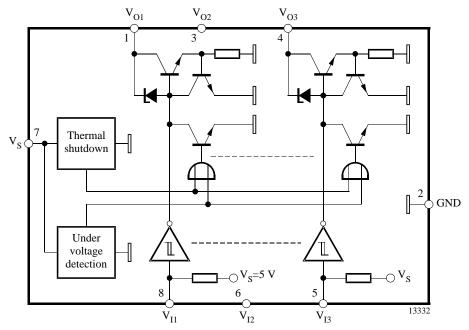


Figure 1.



## **Pin Configuration**

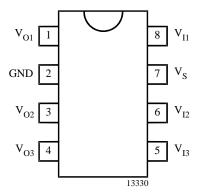


Figure 2. Pinning

## **Basic Circuitry**

Integrated circuit, U6803B, requires a stabilized supply voltage ( $V_S = 5~V \pm 5\%$ ) to comply with its electrical characteristics. An external buffer capacitor of C = 100~nF value is recommended. An integrated 14-V Zener-diode between  $V_S$  and ground protects the supply pin.

All input stages are provided with an integrated 250  $k\Omega$  pull-up resistor and can be directly connected to a microcontroller.

All output stages are open collectors each capable of sinking 20 mA. Recommended external components:

Pull-up resistor,  $R = 1 \text{ k}\Omega$ Capacitor to GND, C = 470 pF, see figure 2

# **Functional Description**

### General

ON state: Low level at the input stage activates the corresponding output stage.

OFF state: The internal pull-up resistor gives high level to the input comparator and deactivates the output stage

7-V Zener-diodes between each input pin and GND are capable of  $\pm 10$  mA clamping currents without crosstalk on adjacent input stages.

A total clamping current of  $\pm 30$  mA should be observed with respect to the power dissipation.

Pin	Symbol	Function
1	$V_{O1}$	Output 1
2	GND	Ground
3	$V_{O2}$	Output 2
4	$V_{O3}$	Output 3
5	$V_{I3}$	Input 3
6	$V_{I2}$	Input 2
7	$V_{S}$	Supply voltage 5 V
8	$V_{I1}$	Input 1

# **Current Limitation of the Output Stages** and **Overtemperature Shut-down**

A temperature dependent current limitation between 25 and 100 mA protects the stages during a short. Additionally the chip temperature is monitored. For  $T_{chip} > 148\,^{\circ}\text{C}$  all outputs are disabled and automatically enabled with a hysteresis of  $T_{Chip} > 5\,^{\circ}\text{C}$ .

#### **Transients and Load-Dump**

An integrated 28-V Zener-diode protects each output stage against transients and load-dump (Schaffner pulses). With the help of external 1  $k\Omega$  resistor , the output transistor is capable of the corresponding current which flows during each of these conditions. Apart from that, outputs are short circuit and overload protected.

### **Low Voltage Detection**

When supply voltage is switched on, a power-on reset pulse is generated internally, which disables all output stages until a defined supply voltage level is reached. The low voltage detection is provided with a hysteresis of  $V_{hyst} = 0.5\ V$  typically.

Downloaded from **Elcodis.com** electronic components distributor

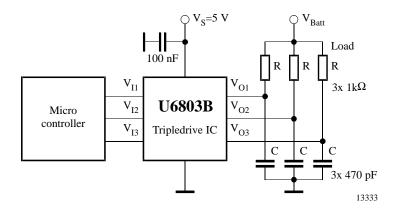


Figure 3. Application schematic

# **Absolute Maximum Ratings**

Parameters	Symbol	Value	Unit
Supply voltage	$V_{S}$	7.0	V
Ambient temperature range	T <sub>amb</sub>	-40 to +125	°C
Storage temperature range	$T_{stg}$	-50 to +150	°C
Maximum junction temperature	Tj	+150	°C

## **Thermal Resistance**

Parameters	Symbol	Value	Unit
Junction ambient	$R_{thJA}$	120	K/W



# **Electrical Characteristics**


 $V_S = 5~V \pm 5\%$ ,  $T_{amb} = 27^{\circ}C$ , reference point pin 2 (GND), unless otherwise specified, see figures 1 and 3.

Parameters	Test Conditions / Pins	Symbol	Min.	Тур.	Max.	Unit
Supply Pin 7						
Supply voltage		V <sub>S</sub>	4.75		5.25	V
Supply current	Inputs open Inputs closed to GND	I <sub>S</sub> I <sub>S</sub>	0.8 7		3.2 13	mA mA
Low voltage detection threshold:	ON OFF	$\begin{matrix} V_{TH(ON)} \\ V_{TH(OFF)} \end{matrix}$	3.7 3.0		4.6 3.8	V V
Low voltage hysteresis		V <sub>hyst</sub>	0.55		1.05	V
Temperature shut down		T <sub>Chip</sub>	140		149	°C
Temperature shut down hysteresis		T <sub>hyst</sub>	5			°C
Input Pins 5, 6, 8						
Zener-diode protection voltage		V <sub>I</sub>	6.7		8.5	V
Zener-diode clamping current		II			±10	mA
Pull-up resistor		R <sub>I</sub>	170	250	305	kΩ
Switching threshold	OFF ON	$egin{array}{c} V_{\mathrm{I}} \ V_{\mathrm{I}} \end{array}$		3.3 1.8		V V
Hysteresis		V <sub>hyst</sub>		1.5		V
Output Pins 1	, 3, 4					
Zener-diode protection voltage		Vo	26.5			V
Integrated capacitor				5		pF
Leakage current		I <sub>Leak</sub>			2.5	μA
Saturation voltage	(I = 20  mA)	V <sub>Sat</sub>			0.7	V
Current limitation		I <sub>limit</sub>	25			mA
Propagation delay	(470 pF, 1 kΩ, 20 V)	t <sub>d</sub>			5	μs



# **Package Information**

Package SO8
Dimensions in mm

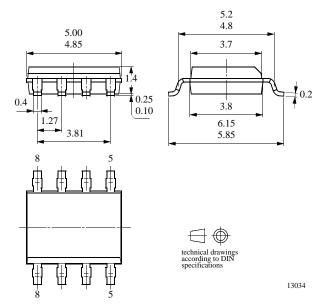



## **Ozone Depleting Substances Policy Statement**

It is the policy of TEMIC TELEFUNKEN microelectronic GmbH to

- 1. Meet all present and future national and international statutory requirements.
- Regularly and continuously improve the performance of our products, processes, distribution and operating systems with respect to their impact on the health and safety of our employees and the public, as well as their impact on the environment.

It is particular concern to control or eliminate releases of those substances into the atmosphere which are known as ozone depleting substances (ODSs).

The Montreal Protocol (1987) and its London Amendments (1990) intend to severely restrict the use of ODSs and forbid their use within the next ten years. Various national and international initiatives are pressing for an earlier ban on these substances.

**TEMIC TELEFUNKEN microelectronic GmbH** semiconductor division has been able to use its policy of continuous improvements to eliminate the use of ODSs listed in the following documents.

- 1. Annex A, B and list of transitional substances of the Montreal Protocol and the London Amendments respectively
- Class I and II ozone depleting substances in the Clean Air Act Amendments of 1990 by the Environmental Protection Agency (EPA) in the USA
- 3. Council Decision 88/540/EEC and 91/690/EEC Annex A, B and C (transitional substances) respectively.

**TEMIC** can certify that our semiconductors are not manufactured with ozone depleting substances and do not contain such substances.

We reserve the right to make changes to improve technical design and may do so without further notice. Parameters can vary in different applications. All operating parameters must be validated for each customer application by the customer. Should the buyer use TEMIC products for any unintended or unauthorized application, the buyer shall indemnify TEMIC against all claims, costs, damages, and expenses, arising out of, directly or indirectly, any claim of personal damage, injury or death associated with such unintended or unauthorized use.

TEMIC TELEFUNKEN microelectronic GmbH, P.O.B. 3535, D-74025 Heilbronn, Germany Telephone: 49 (0)7131 67 2831, Fax number: 49 (0)7131 67 2423

**TELEFUNKEN Semiconductors** Rev. A4, 28-Apr-97