

# QUANTA<sup>®</sup>



**QXXXXF TRUE-RMS VOLTAGE  
QXXXXG TRUE-RMS CURRENT  
DIGITAL PANEL METER**

Operator's Manual



**NEWPORT Electronics, Inc.**

<http://www.newportUS.com/manuals>

Additional products from  
**NEWPORT Electronics, Inc.**

Counters	Rate Meters
Frequency Meters	Timers
PID Controllers	Totalizers
Clock/Timers	Strain Gauge Meters
Printers	Voltmeters
Process Meters	Multimeters
On/Off Controllers	Soldering Iron Testers
Recorders	pH pens
Relative Humidity	pH Controllers
Transmitters	pH Electrodes
Thermocouples	RTDs
Thermistors	Thermowells
Wire	Flow Sensors

For Immediate Assistance  
In the U.S.A. and Canada: 1-800-NEWPORT®  
In Mexico: (95) 800-NEWPORT<sup>SM</sup>  
Or call your local NEWPORT Office.

**NEWPORTnet<sup>SM</sup> On-Line Service**  
<http://www.newportUS.com>

**Internet e-mail**  
[info@newportUS.com](mailto:info@newportUS.com)

It is the policy of NEWPORT to comply with all worldwide safety and EMC/EMI regulations that apply. NEWPORT is constantly pursuing certification of its products to the European New Approach Directives. NEWPORT will add the CE mark to every appropriate device upon certification.

The information contained in this document is believed to be correct but NEWPORT Electronics, Inc. accepts no liability for any errors it contains, and reserves the right to alter specifications without notice.

**WARNING:** These products are not designed for use in, and should not be used for, patient connected applications.



This device is marked with the international caution symbol. It is important to read the Setup Guide before installing or commissioning this device as it contains important information relating to safety and EMC.

**QUANTA**  
**Q2000F AC RMS VOLTAGE**  
**Q2000G AC RMS CURRENT**  
**PROCESS MONITORS**

TABLE OF CONTENTS

Q2000 MAIN ASSEMBLY

SAFETY CONSIDERATIONS . . . . .	.ii
1.0 Specifications . . . . .	.1
2.0 Mechanical Assembly and Installation . . . . .	.4
3.0 Power & Signal Input Connections . . . . .	.5
4.0 Configuration Procedure . . . . .	.6
5.0 Configuration Charts . . . . .	.6
6.0 Tests and Diagnostics . . . . .	.7
7.0 Main Board Connector Pin Assignments . . . . .	.8
8.0 Drawings . . . . .	.9

Q9000 MAIN ASSEMBLY

9.0 Specifications . . . . .	.14
10.0 Mechanical Assembly and Installation . . . . .	.17
11.0 Power & Signal Input Connections . . . . .	.18
12.0 Configuration Procedure . . . . .	.19
13.0 Configuration Charts . . . . .	.19
14.0 Tests and Diagnostics . . . . .	.22
15.0 Main Board Connector Pin Assignments . . . . .	.22
16.0 Drawings . . . . .	.23

SIGNAL CONDITIONER BSCF/G

17.0 Specifications . . . . .	.26
18.0 Signal Input Connections . . . . .	.31
19.0 Test and Diagnostics . . . . .	.32
20.0 Configuration Procedure . . . . .	.32
21.0 Configuration Charts . . . . .	.35
22.0 Calibration for Q2000 . . . . .	.37
23.0 Calibration for Q9000 . . . . .	.37
24.0 Drawings . . . . .	.38

INSTALLATION INSTRUCTIONS

25.0 Digital Panel Meter Installation Instructions . . . . .	.40
26.0 Power Requirements and Connections . . . . .	.43

# SAFETY CONSIDERATIONS



This device is marked with the international Caution symbol. It is important to read this manual before installing or commissioning this device as it contains important information relating to Safety and EMC (Electromagnetic Compatibility).

## Unpacking & Inspection



Unpack the instrument and inspect for obvious shipping damage. Do not attempt to operate the unit if damage is found.

This instrument is a panel mount device protected in accordance with Class I of EN 61010 (115/230 AC power connections). Installation of this instrument should be done by Qualified personnel. In order to ensure safe operation, the following instructions should be followed.

This instrument has no power-on switch. An external switch or circuit-breaker shall be included in the building installation as a disconnecting device. It shall be marked to indicate this function, and it shall be in close proximity to the equipment within easy reach of the operator. The switch or circuit-breaker shall not interrupt the Protective Conductor (Earth wire), and it shall meet the relevant requirements of IEC 947-1 and IEC 947-3 (International Electrotechnical Commission). The switch shall not be incorporated in the mains supply cord.

Furthermore, to provide protection against excessive energy being drawn from the mains supply in case of a fault in the equipment, an overcurrent protection device shall be installed.



- The **Protective Conductor** must be connected for safety reasons. Check that the power cable has the proper Earth wire, and it is properly connected. It is not safe to operate this unit without the Protective Conductor Terminal connected.



- Do not exceed voltage rating on the label located on the top of the instrument housing.
- Always disconnect power before changing signal and power connections.
- Do not use this instrument on a work bench without its case for safety reasons.
- Do not operate this instrument in flammable or explosive atmospheres.
- Do not expose this instrument to rain or moisture.
- Unit mounting should allow for adequate ventilation to ensure instrument does not exceed operating temperature rating.
- Use electrical wires with adequate size to handle mechanical strain and power requirements. Install without exposing bare wire outside the connector to minimize electrical shock hazards.

## EMC Considerations

- Whenever EMC is an issue, always use shielded cables.
- Never run signal and power wires in the same conduit.
- Use signal wire connections with twisted-pair cables.
- Install Ferrite Bead(s) on signal wires close to the instrument if EMC problems persist.

## 1.0 MAIN ASSEMBLY Q2000 SPECIFICATIONS

### 1.1 GENERAL

The Q2000 main assemblies are identified by an initial designator (BQ2) plus a power/display option numeral, zero thru nine (0-9).

The following table identifies the main assembly types:

Display Type	120 V ac	240 V ac	9-32 V dc	5 V ac	24 V ac
LED	BQ20	BQ22	BQ24	BQ26	BQ28
LCD	BQ21	BQ23	BQ25	BQ27	BQ29

The QUANTA Digital Panel Meter/Controller consists of a main assembly, signal conditioner and interface options (if ordered) all housed in a 1/8 DIN case.

The main assembly consists of a main board and a display board which is permanently attached to it at a 90 degree angle.

The main board provides mounting for the power supply, circuit components, and connectors for plugging in the signal conditioner, optional analog card, and optional controller/communications interface card (requires removal of a bypass push-on jumper).

The display board includes the analog-to-digital converter, the LED or LCD display and the push-on jumper for programming the decimal points. Decimal point programming may also be done from the main board connector (J1).

## 1.2 POWER

AC Models: 24/120/240 V +10/-15% 47-63 Hz  
Common Mode Voltage: 1500 Vp test (354 Vp per IEC spacing)  
DC Models: 5 V  $\pm$ 5% (5 V return common to signal LO)  
9-32 V (300 V isolation from 9-32 V return to signal LO)  
Source Impedance: 3 ohms  
Ripple: 250 mV maximum  
Power Consumption: 5 watts maximum

## 1.3 DISPLAY

LED: 14.2 mm (0.56 in), 7-segment light emitting diode  
Lens color: Red  
LCD: 12.7 mm (0.50 in), 7-segment liquid crystal  
Lens color: Clear  
Range: 0 to  $\pm$ 1999  
Overload Indication: Three least significant digits blanked, "1" or "-1" displayed

## 1.4 CONVERSION


Technique: auto-zero, dual slope, average value  
Signal  
Integration Period: 100 ms, nominal  
Reading Rate: 2.5/s, nominal

## 1.5 ENVIRONMENTAL

Operating Temperature (Ambient): 0-60°C  
Storage Temperature: -40 to 85°C  
Humidity: To 95% RH, non-condensing, 0-40°C

## 1.6 MECHANICAL

Case Material: UL-rated 94V-0, polycarbonate  
Weight: 0.57 kg (with interface board)

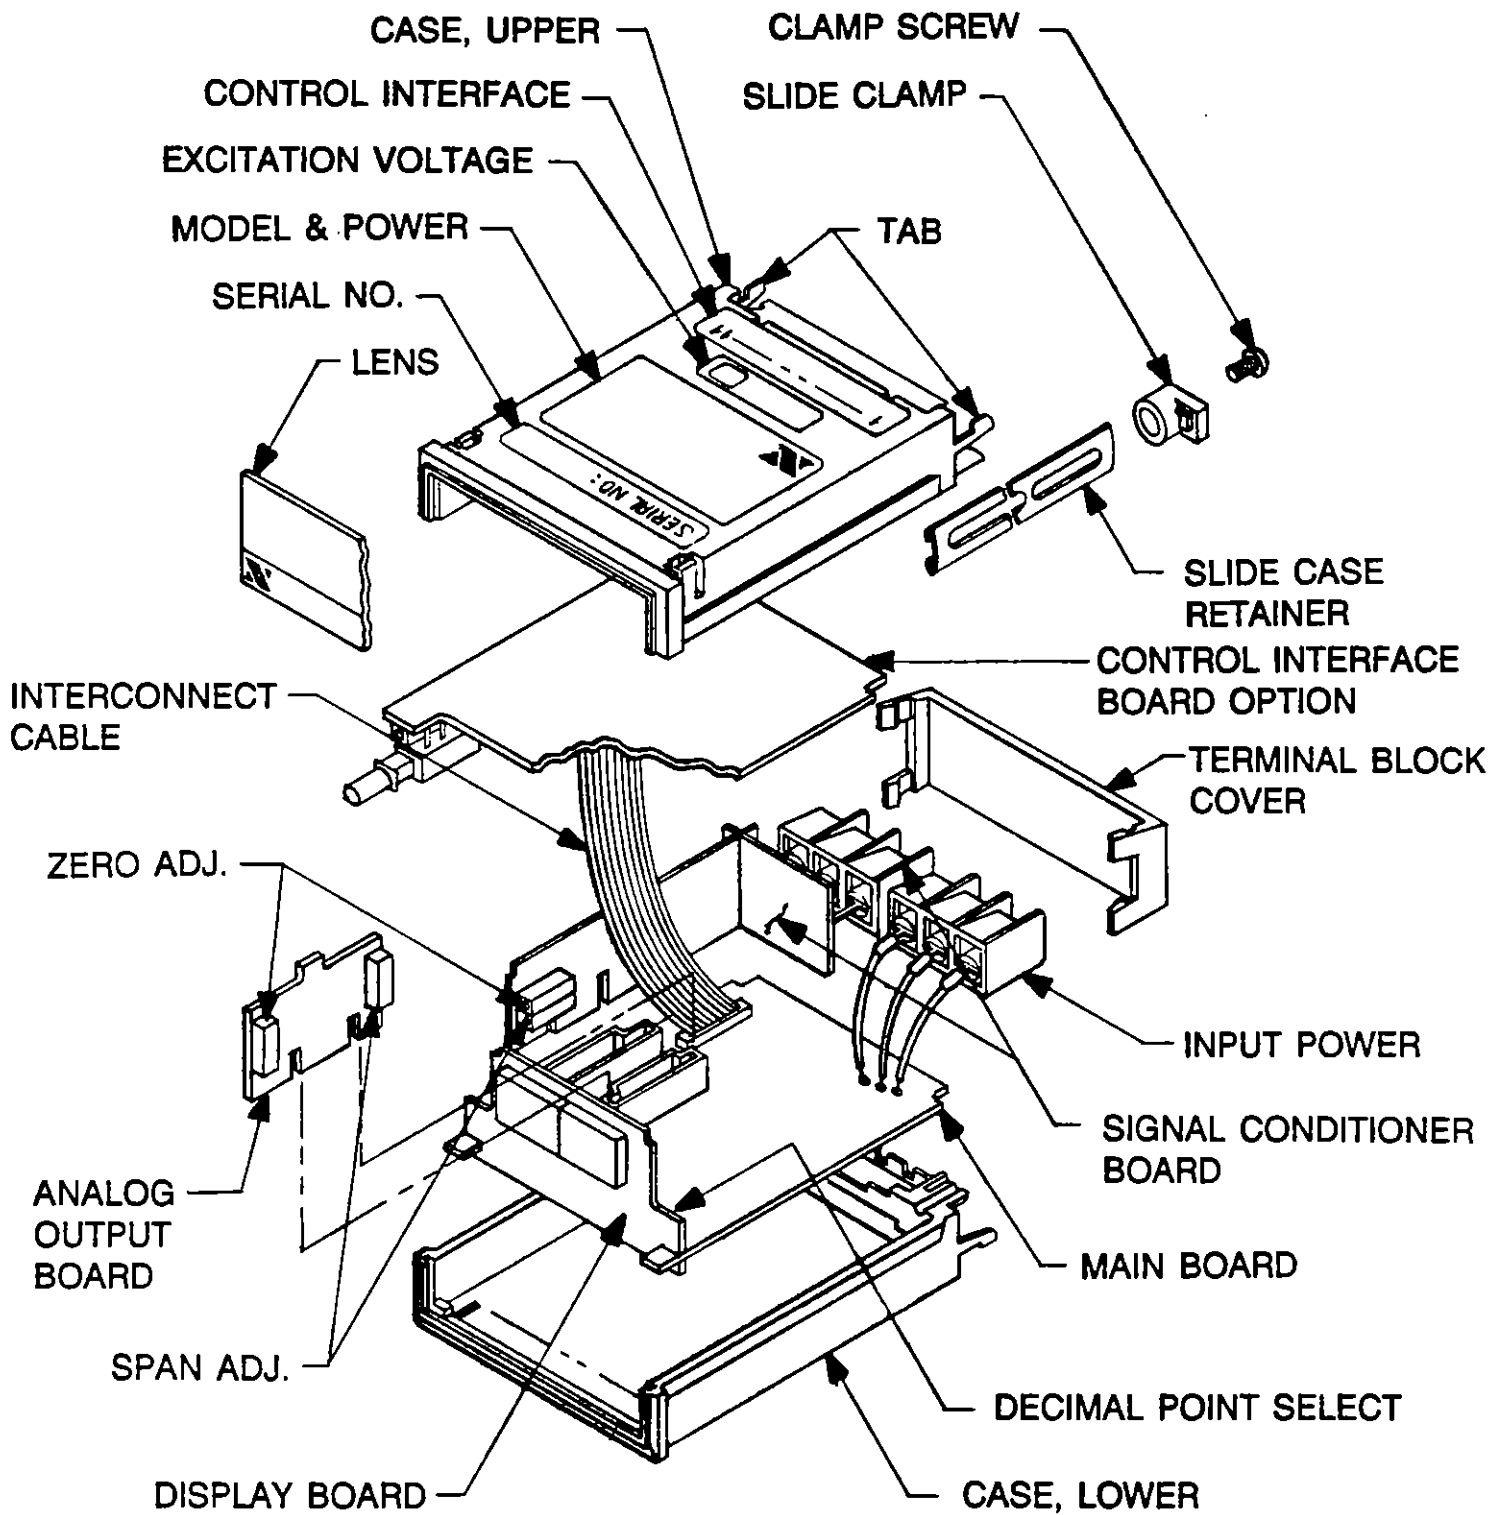


## 2.0 MECHANICAL ASSEMBLY & INSTALLATION

### 2.1 PANEL MOUNTING PROCEDURE (SEE FIGURE 1)

1. Remove the main board edge connector (J1), if installed.
2. Remove the interface board connector (J2), if installed.
3. Loosen two clamp screws on the rear of the case enough to rotate the two slide clamps.
4. Slide the two slide retainers toward the rear of the case and remove them.
5. From the front of the panel, insert the meter into the panel cutout.
6. Slide the slide retainers back onto the case and push up tightly against the rear of the panel.
7. Rotate the slide clamps back into their original position and tighten enough to hold the case in place. Overtightening can break the clamps.
8. Install any connectors removed.

### 2.2 LABELS (SEE FIGURE 2)

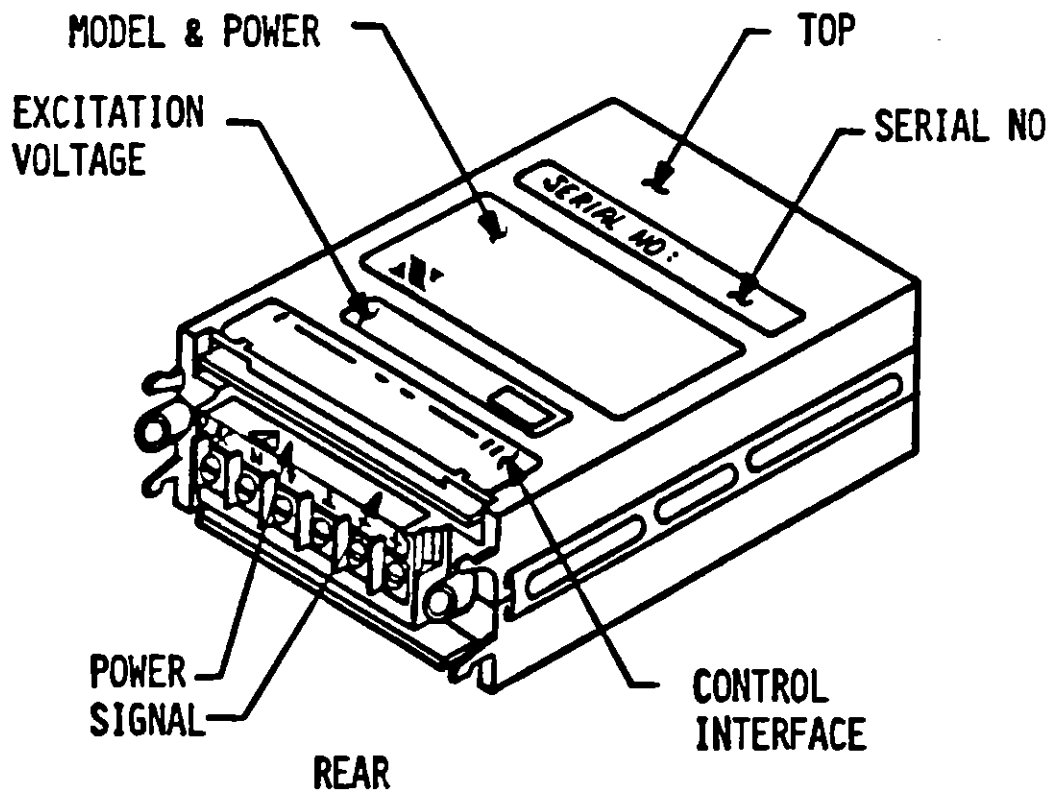

NOTE: READ LABELS FROM THE REAR


FIGURE 2. LABEL PLACEMENT



### 3.0 POWER & SIGNAL INPUT CONNECTIONS


**WARNING: Incorrect power input can damage your QUANTA PANEL METER**

#### 3.1 POWER CONNECTIONS

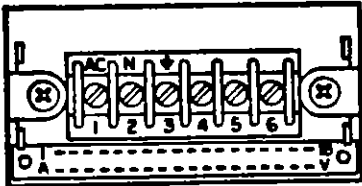


REAR TERMINAL VIEW

Terminal Connection	AC Versions	Wire Color
1	AC power HI	Black
2	AC power LO (neutral)	White
3	AC power GND	Green

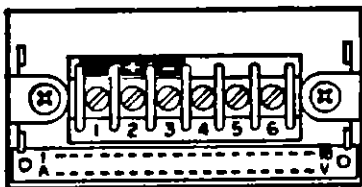


Terminal Connection	DC Versions
1	No connection
2	DC power +
3	DC power - (return)

#### 3.2 SIGNAL INPUT CONNECTIONS

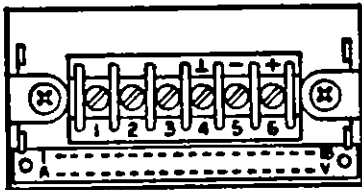

REAR TERMINAL VIEW

Terminal Connection	6 Terminal Versions Signal
4	Analog GND
5	Signal LO
6	Signal HI

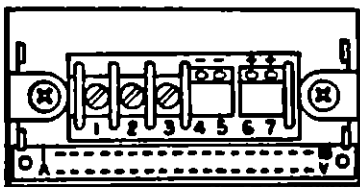

Terminal Connection	7 Terminal Versions Signal
4	-E (Excitation return)
5	-S (Signal LO input)
6	+S (Signal HI input)
7	+E (Excitation output)


#### 4.0 CONFIGURATION PROCEDURE

This procedure is used to set the decimal point of the display and interface board signal bypass selections for the configuration of the QUANTA Q2XXX Display and power options (BQ20 through BQ29).

The main assembly can be configured using the push-on jumpers provided or already positioned on the pin forests. Pin forest designations are shown at the top of every page of the configuration charts.


#### 5.0 CONFIGURATION CHARTS

##### 5.1 DECIMAL POINT SELECTION

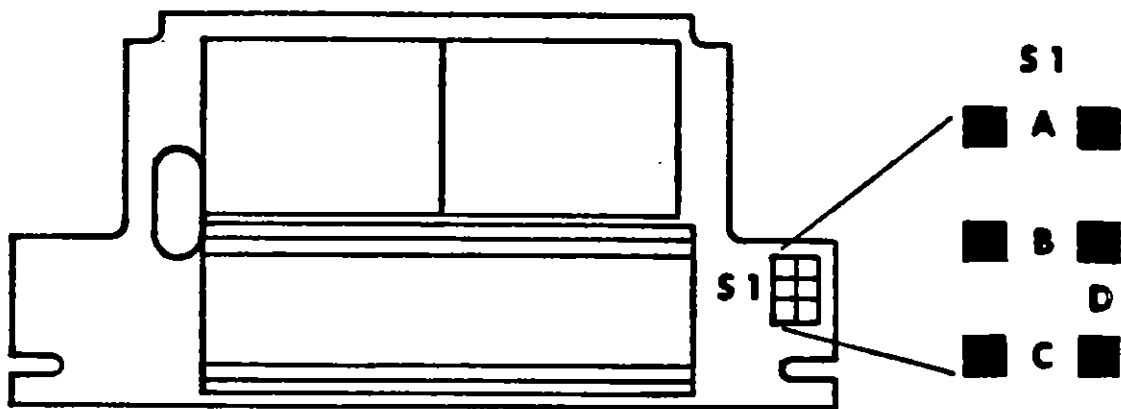

Step 1: Remove all push-on jumpers not used in the desired configuration(s).		
Step 2: Select the desired configuration from the chart below, then install the push-on jumpers indicated.		
Decimal Point Selection	S1	Alternate Decimal Point Selection Using Main Assembly Board (J1) Connector
Decimal Point (1.999)	A	Connect J1-K/9 to J1-6
Decimal Point (19.99)	B	Connect J1-J/8 to J1-6
Decimal Point (199.9)	C	Connect J1-H/7 to J1-6
Decimal Point (1999)	D	No Connection

## 5.2 INTERFACE BOARD SIGNAL BYPASS SELECTION

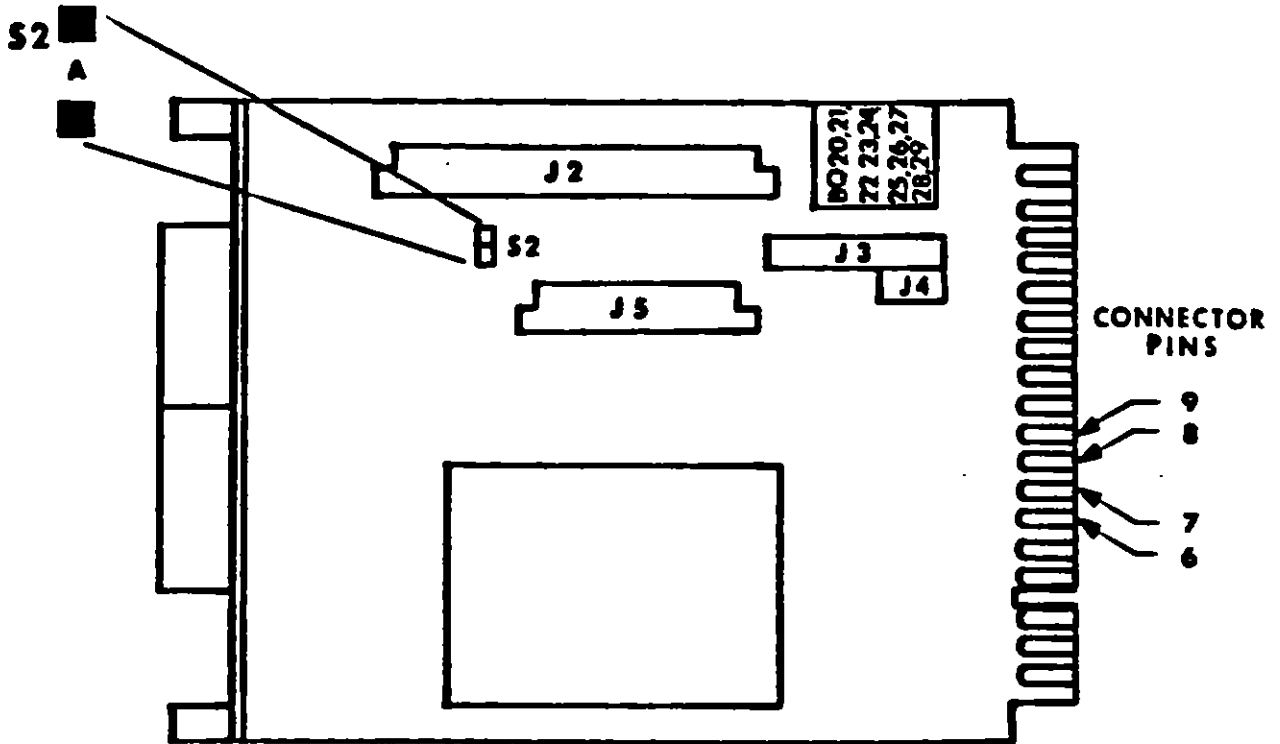

Step 1: Check your QUANTA part number for a zero (0) in the following position; Q2XX0X. If there is a zero (0) in that position, interface board signal bypass is required.	
Step 2: Remove all push-on jumpers not used in the desired configuration(s).	
Step 3: Select the desired configuration from the chart below, then install the push-on jumpers indicated.	
Interface Board Signal Configuration	S2
Interface Board Signal Bypass	A

## 6.0 TESTS & DIAGNOSTICS

### 6.1 TEST CONFIGURATION REQUIREMENTS


The QUANTA main assembly is designed to function with a signal conditioner board as a minimum configuration. There is no provision for testing a main assembly alone.

### 6.2 SIGNAL INPUT REQUIREMENTS

Signal input requirements for your configuration are identified in the signal conditioner section of this manual.

**7.0 MAIN BOARD CONNECTOR PINOUTS (J1)**  
 (Left to right, looking at rear of case)


<u>Connection</u>	<u>Function</u>	
A - 1	Spare	
B	Oscillator	40 kHz
2	-8.2 V dc	Analog power
C - 3	Spare	
D	+ Pol (sign)	+ Polarity sign
4	HOLD	LED version only
E - 5	Spare	
F	Buffer	Integrator output
6	Digital Ground	
H - 7	199.9 (Decimal point)	Use with pin 6
J - 8	19.99 (Decimal point)	Use with pin 6
K - 9	1.999 (Decimal point)	Use with pin 6
L - 10	Test (LED version only)	Use with pin M/11
M - 11	+5 V dc	Analog & digital power
N - 12	Analog output	Standard 1 mV/count
P - 13	Spare	
R - 14	Spare	Used with H & S options - Excitation sense
S - 15	Analog Ground	
T - 16	Analog Option - Return	Used with analog option
U	Analog Option - Out	Used with analog option
17	+30 V dc	Unregulated power
V - 18	Spare	Used with S option + Excitation sense
-	Indicates common pin.	
	50 mA maximum power available from all internal sources.	

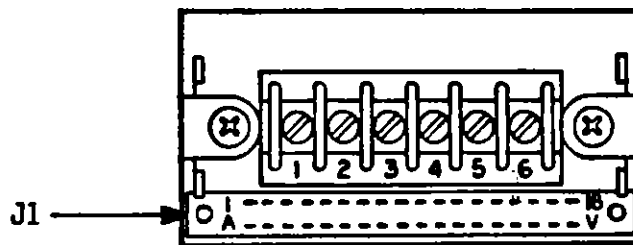



**REAR TERMINAL VIEW**

8.0 DRAWINGS


8.1 DIMENSIONS

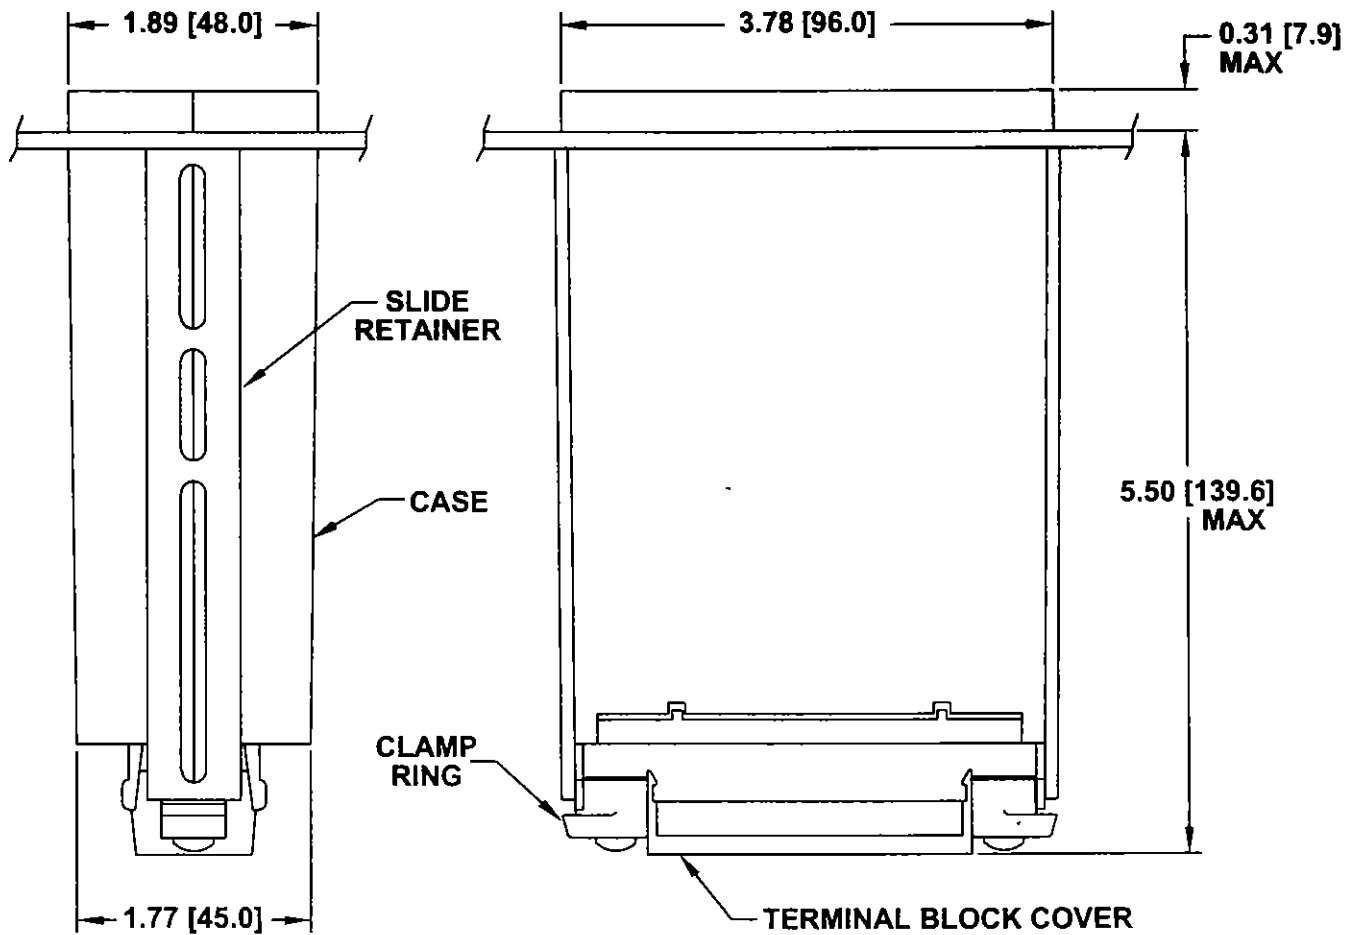

Notes: Dimensions are in inches  $\pm 0.01^*$  with millimeters in [ ]  $\pm 0.25$  mm.

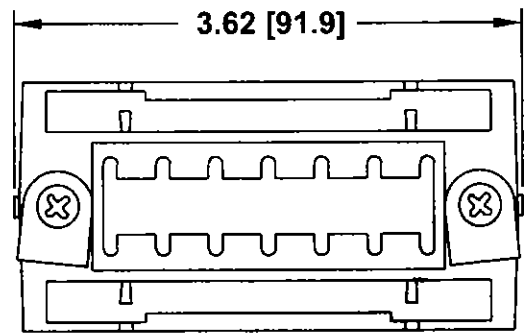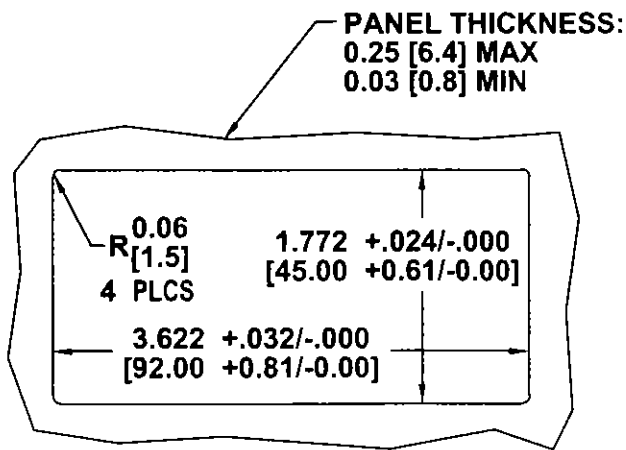


Terminal block cover and bezel not shown for clarity. Clamp rings rotated and slide retainers removed as shown for installation.

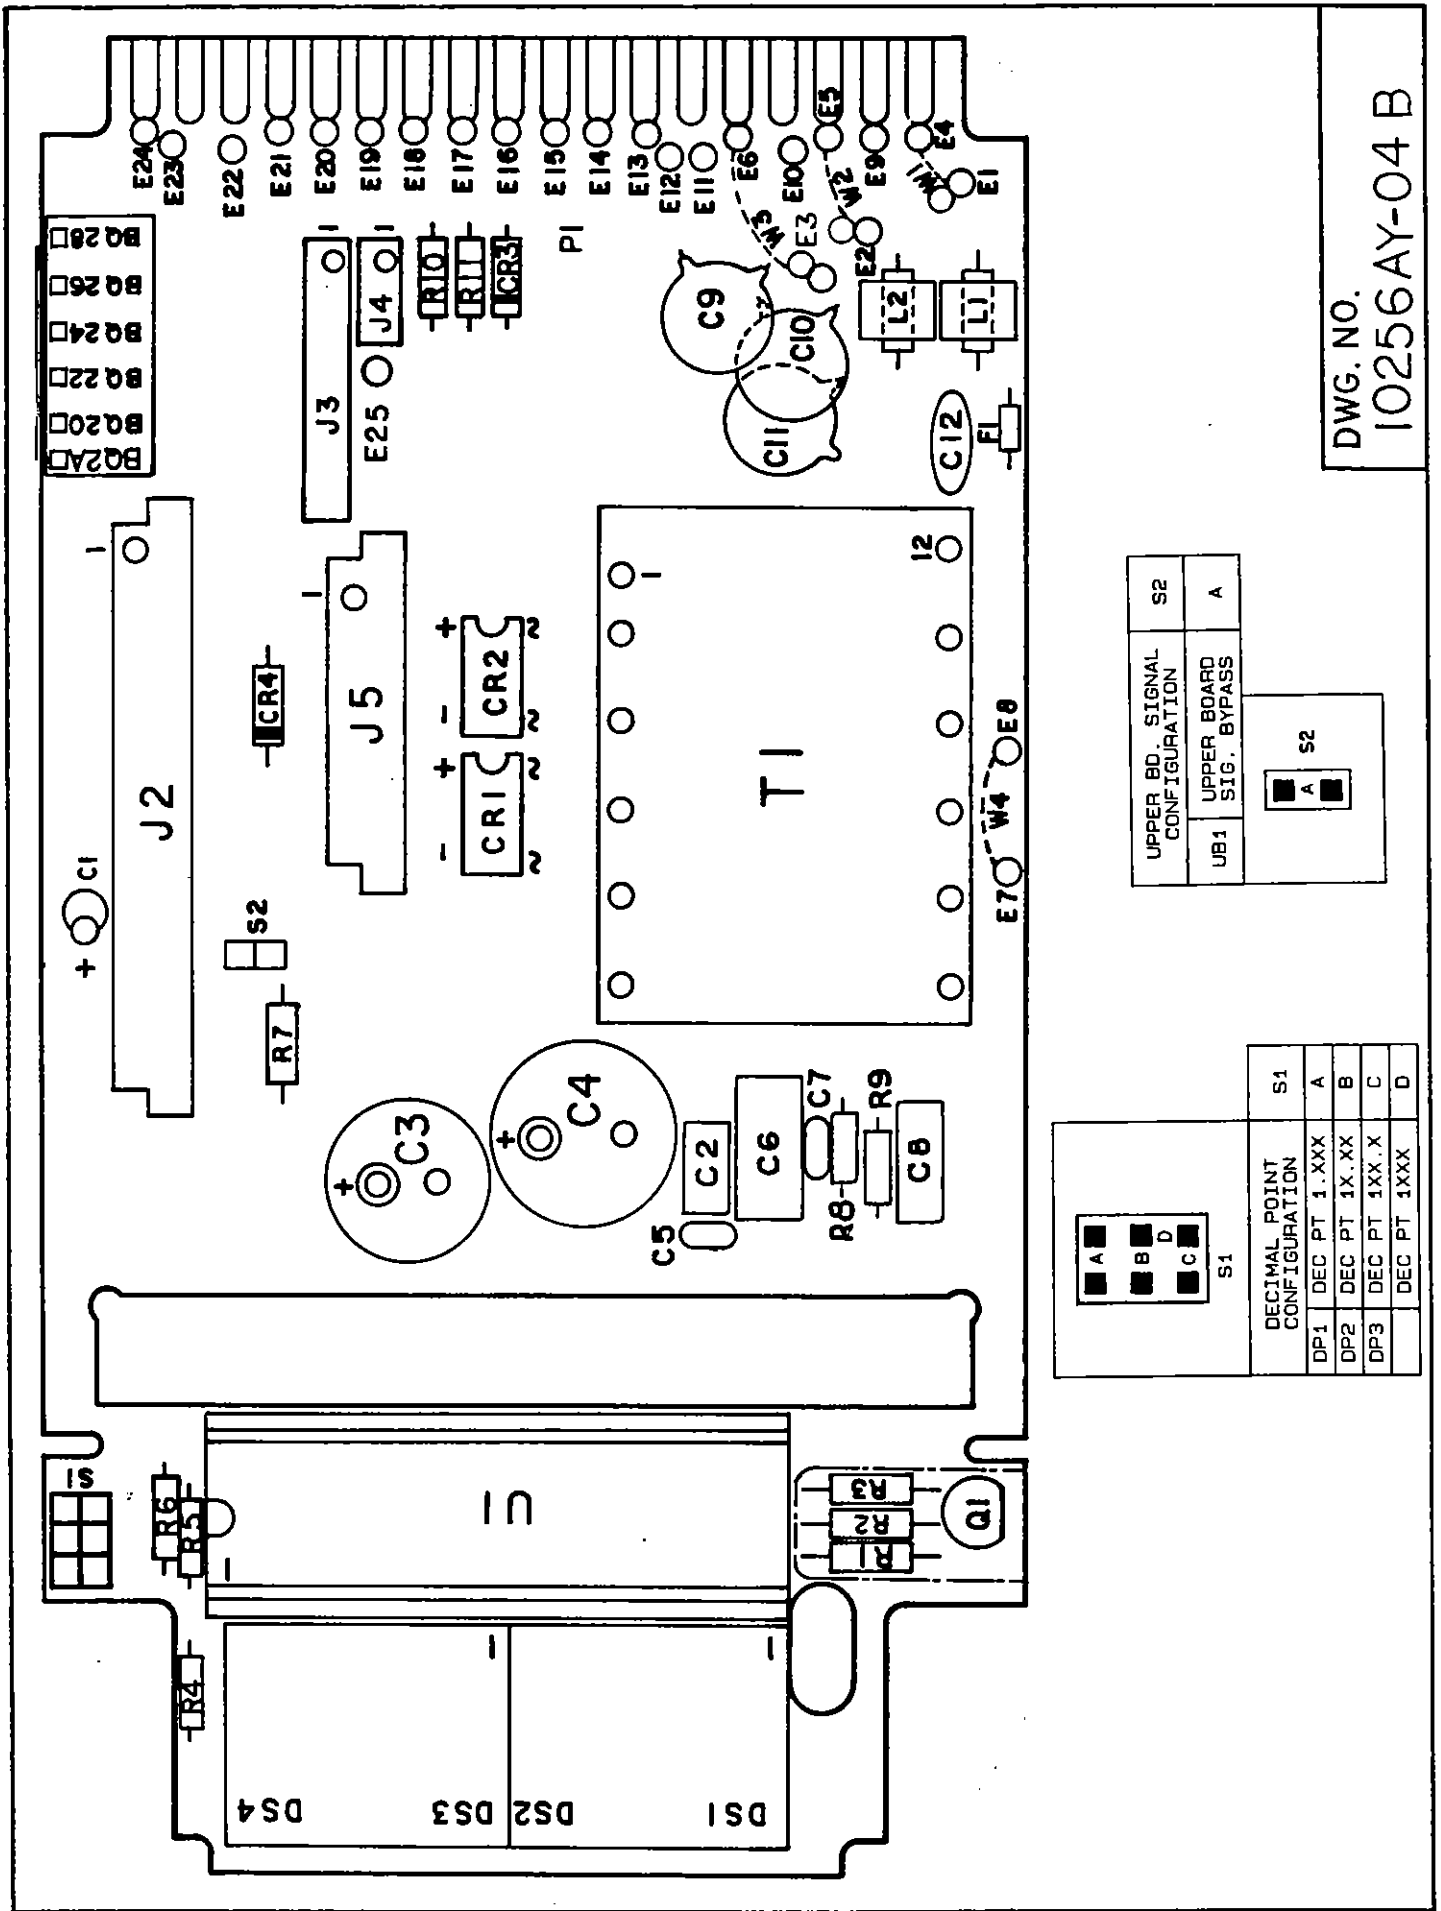


DWG. NO.  
10256AY-04 B

8.2 Q2000 LED MAIN ASSEMBLY

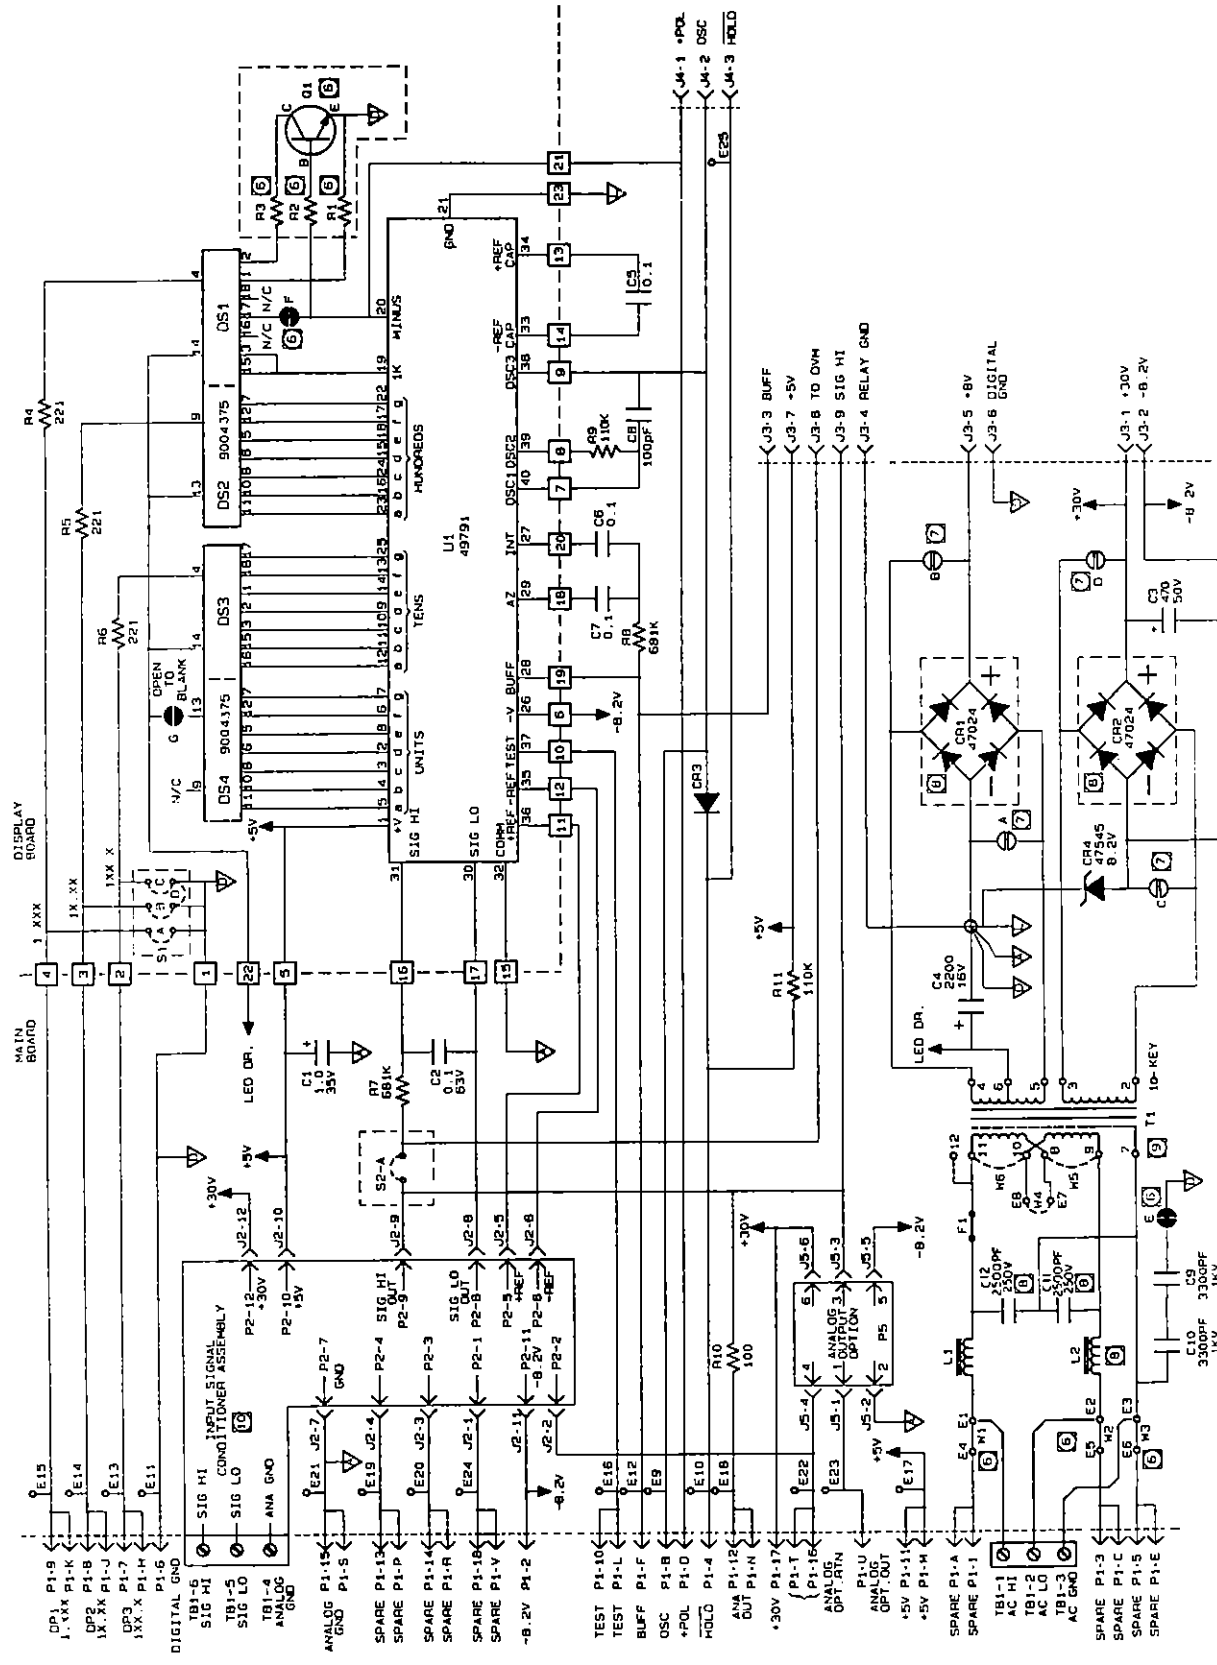


DWG. NO.  
10256SC-03 C

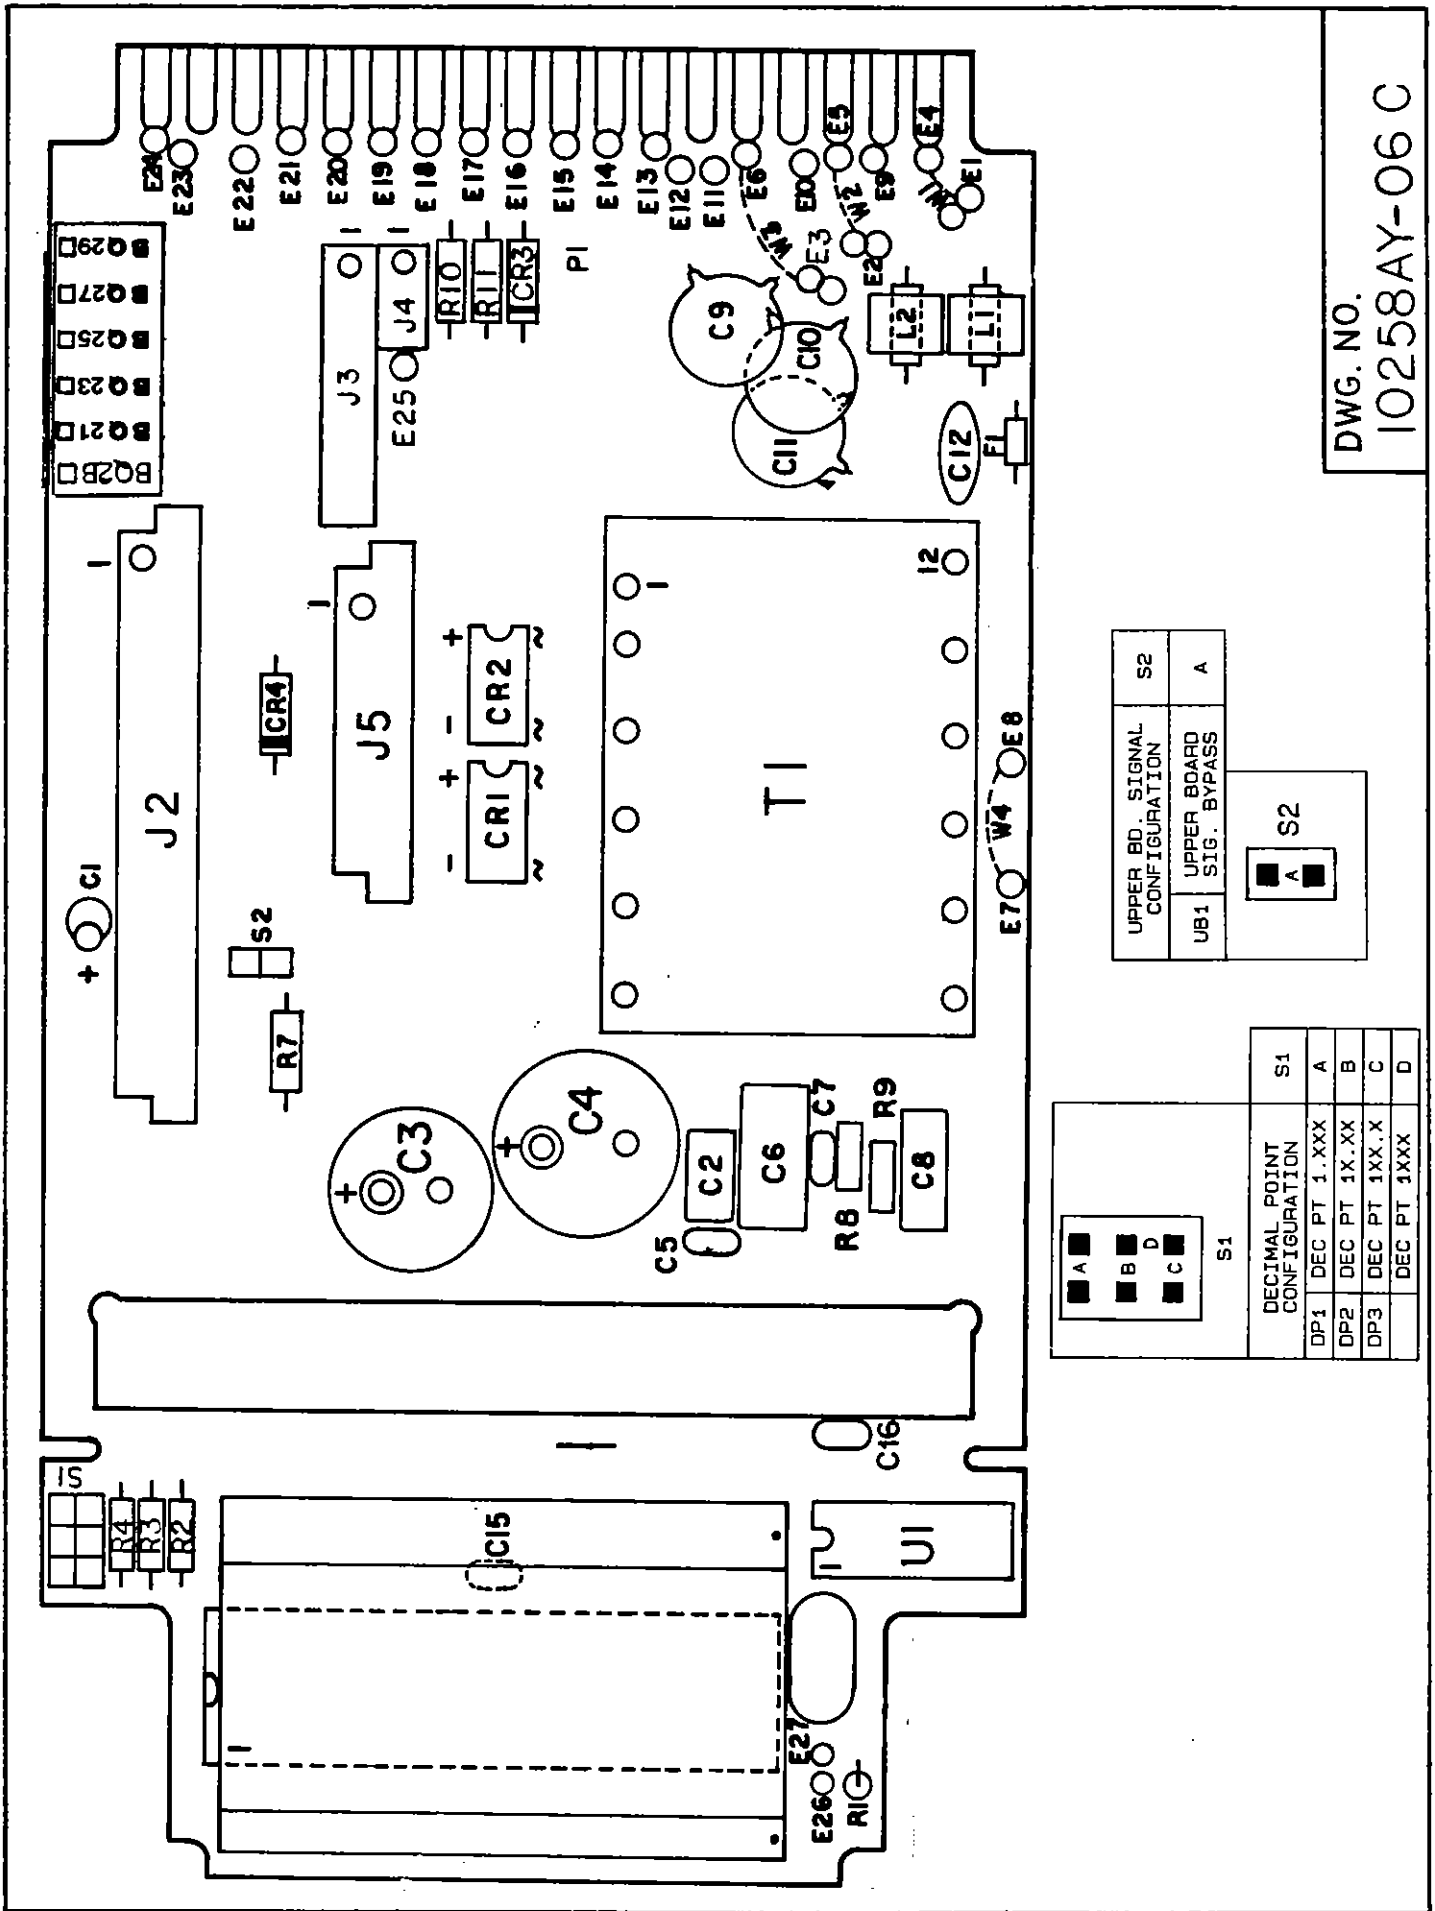

DWG. NO.  
10258AY-06 C

8.3 Q9000 LCD MAIN ASSEMBLY



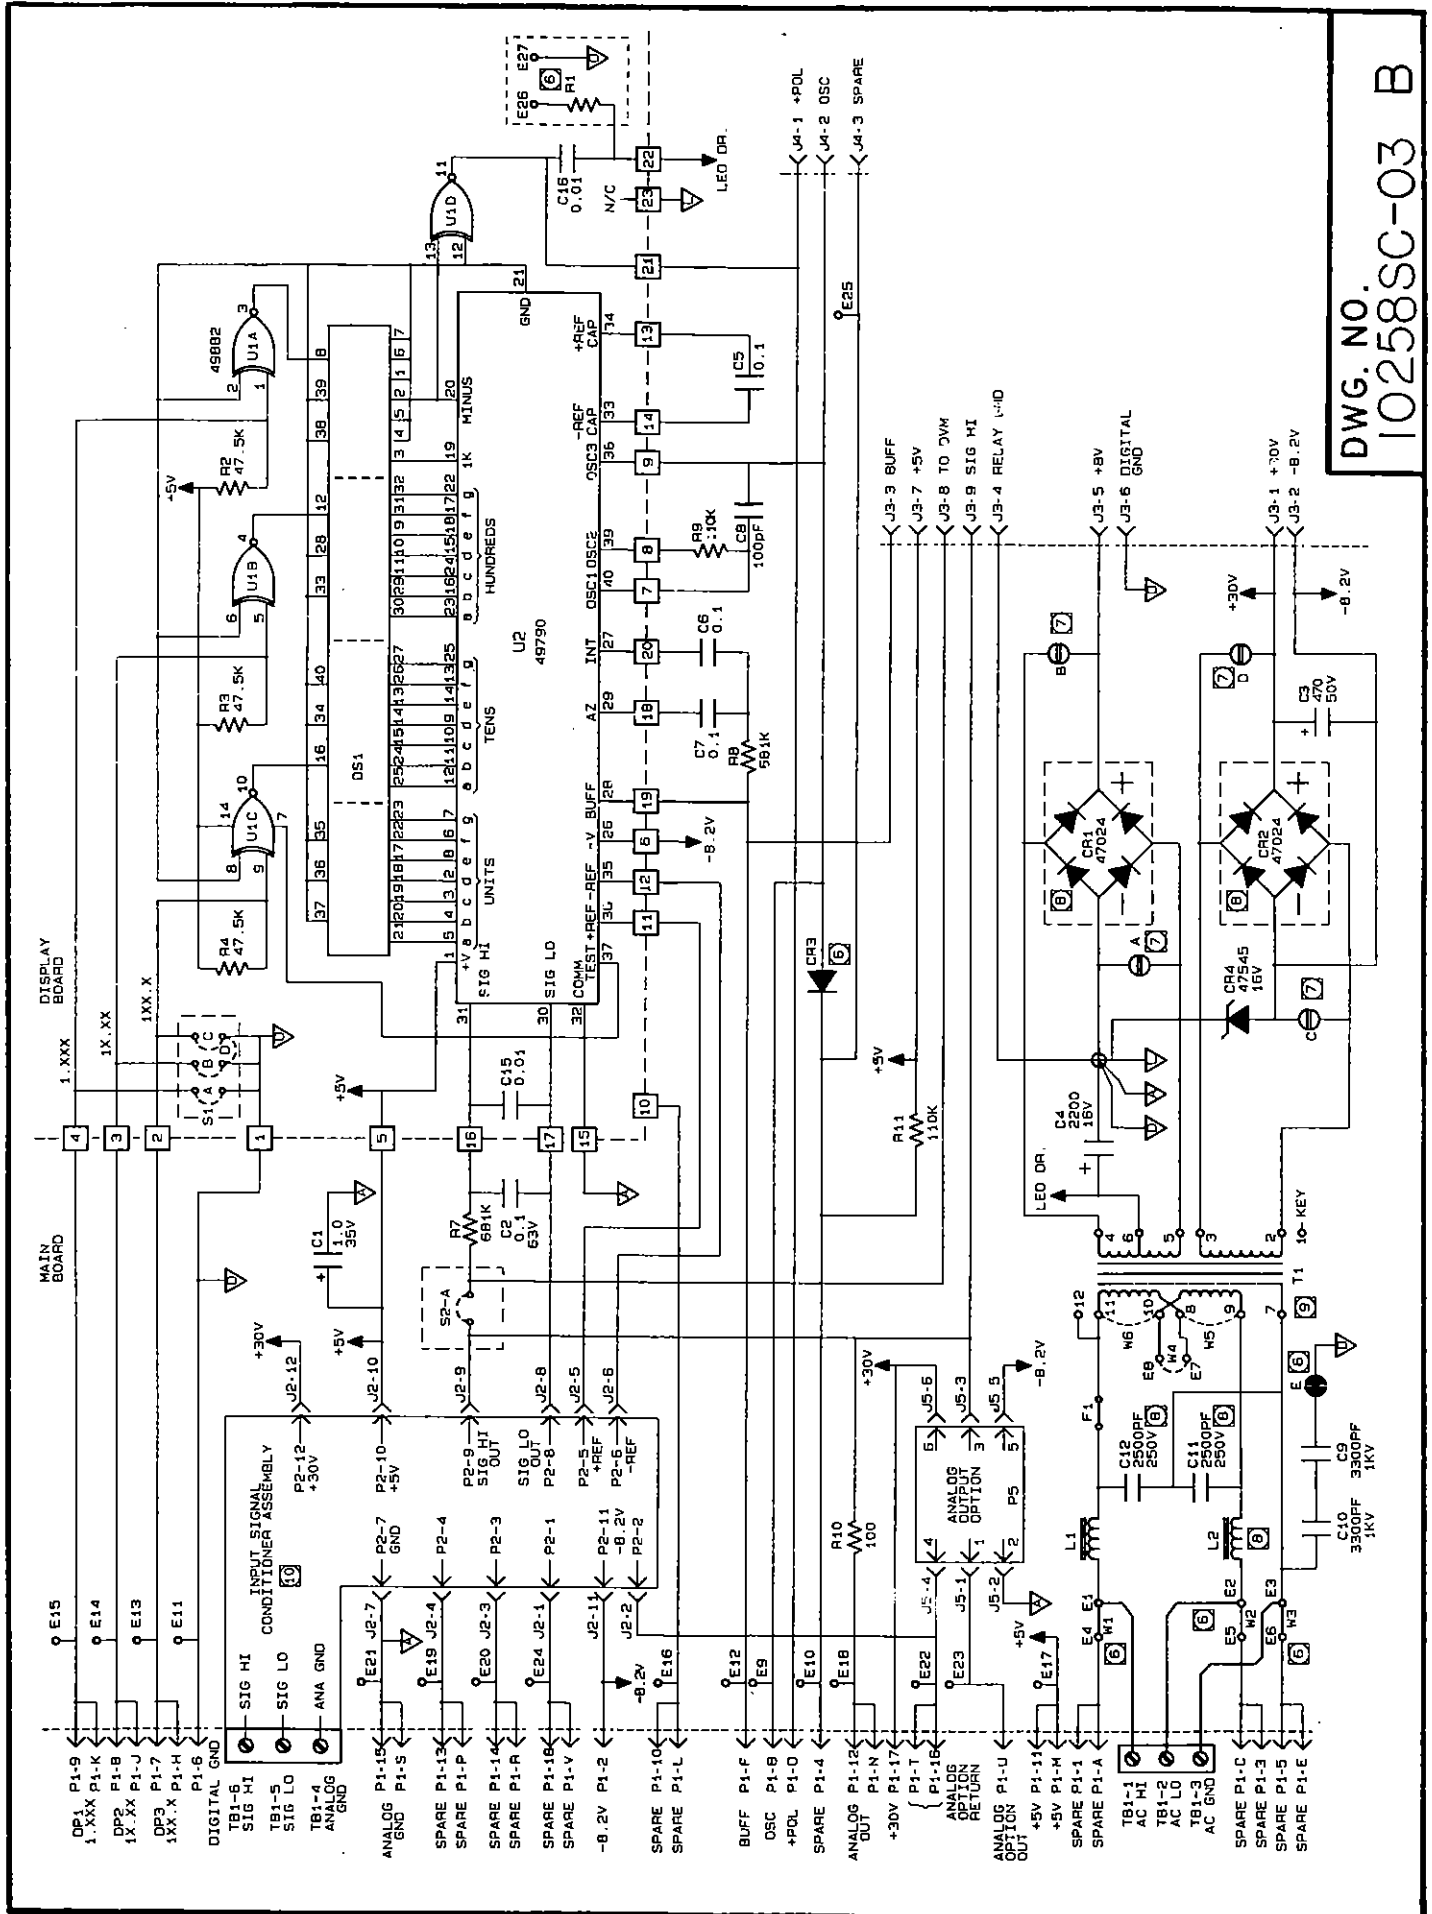

DWG. NO. 10258SC-03 B

## 9.0 MAIN ASSEMBLY Q9000 SPECIFICATIONS

### 9.1 GENERAL

QUANTA Q9000 main assemblies are identified by an initial designator (BQ9) plus a power/display option numeral: 0, 2, 4, 6 or 8.

The following table identifies the main assembly types:

Display Type	120 V ac	240 V ac	9-32 V dc	5 V ac	24 V ac
LED	BQ90	BQ92	BQ94	BQ96	BQ98

The QUANTA Digital Panel Meter/Controller consists of a main assembly, signal conditioner and interface options (if ordered) all housed in a 1/8 DIN case.

The main assembly consists of a main board and a display board which is permanently attached to it at a 90 degree angle.

The main board provides mounting for the power supply, circuit components, and connectors for plugging in the signal conditioner, optional analog card, and optional controller/communications interface card (requires removal of a bypass push-on jumper).

The display board includes the analog-to-digital converter, the LED display and the push-on jumper for programming the decimal points. Decimal point programming may also be done from the main board connector (J1).

## 9.2 POWER

AC Models: 24/120/240 V +10/-15% 47-63 Hz  
Common Mode Voltage: 1500 Vp test (354 Vp per IEC spacing)  
DC Models: 5 V  $\pm$ 5% (5 V return common to signal LO)  
9-32 V (300 V isolation from 9-32 V return to signal LO)  
Source Impedance: 3 ohms  
Ripple: 250 mV maximum  
Power Consumption: 5 watts maximum

## 9.3 DISPLAY

LED: 14.2 mm (0.56 in), 7-segment light emitting diode  
Lens color: Red  
Range: 0 to  $\pm$ 9999, digits flash form 10K-20K counts  
Overload Indication: Four digits flash zeros at 20K and above

## 9.4 CONVERSION


Technique: Auto-zero, dual slope, average value  
Signal  
Integration Period: 100 ms, nominal  
Reading Rate: 2.5/s, nominal

## 9.5 ENVIRONMENTAL

Operating Temp. (Ambient): 0 to 60°C  
Storage Temp.: -40 to 85°C  
Humidity: To 95% RH, non-condensing, 0-40°C

## 9.6 MECHANICAL

Case Material: UL-rated 94V-0, polycarbonate  
Weight: 0.57 kg (with interface board)

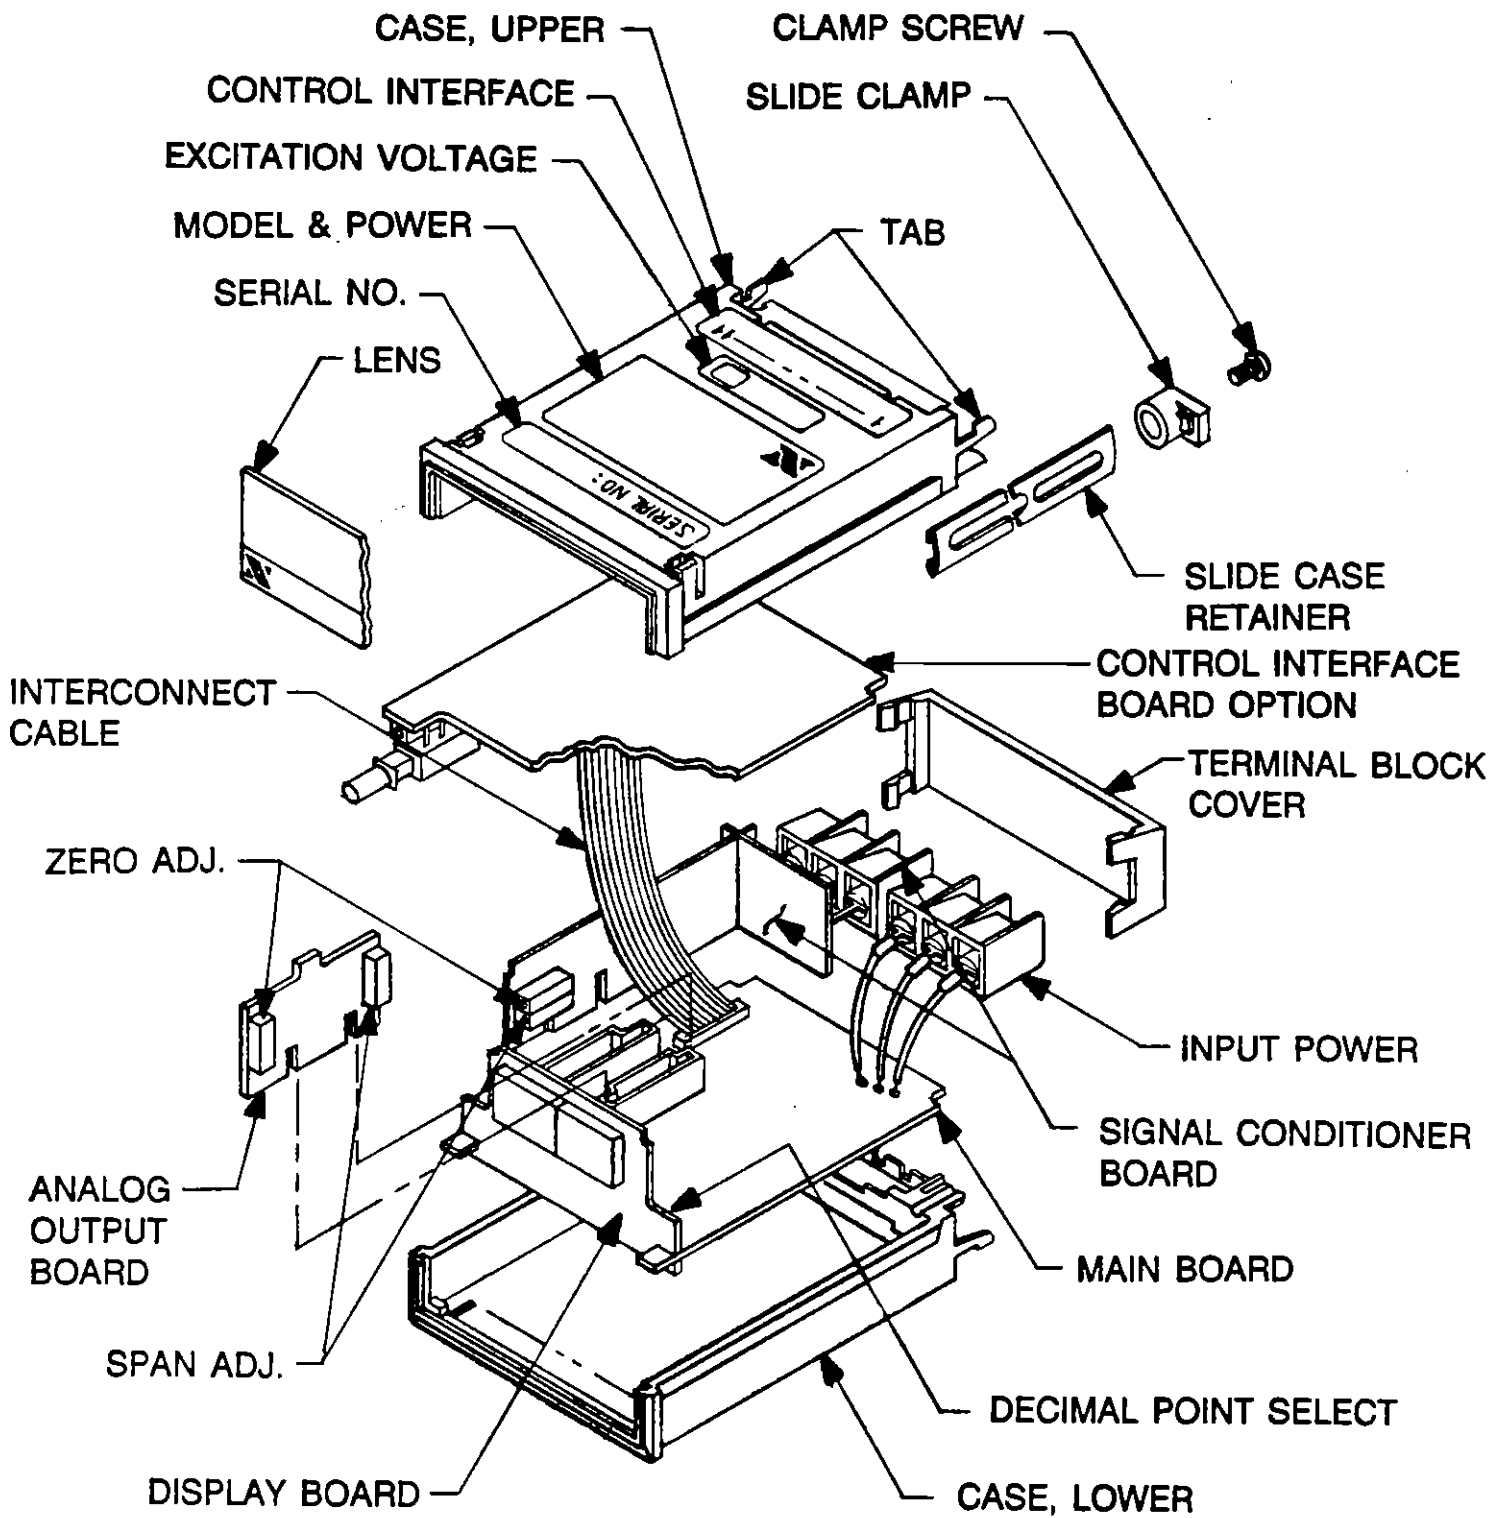


## 10.0 MECHANICAL ASSEMBLY & INSTALLATION

### 10.1 PANEL MOUNTING PROCEDURE (SEE FIGURE 3)

1. Remove the main board edge connector (J1), if installed.
2. Remove the interface board connector (J2), if installed.
3. Loosen two clamp screws on the rear of the case enough to rotate the two slide clamps.
4. Slide the two slide retainers toward the rear of the case and remove them.
5. From the front of the panel, insert the meter into the panel cutout.
6. Slide the slide retainers back onto the case and push up tightly against the rear of the panel.
7. Rotate the slide clamps back into their original position and tighten enough to hold the case in place. Overtightening can break the clamps.
8. Install any connectors removed.

### 10.2 LABELS (SEE FIGURE 4)

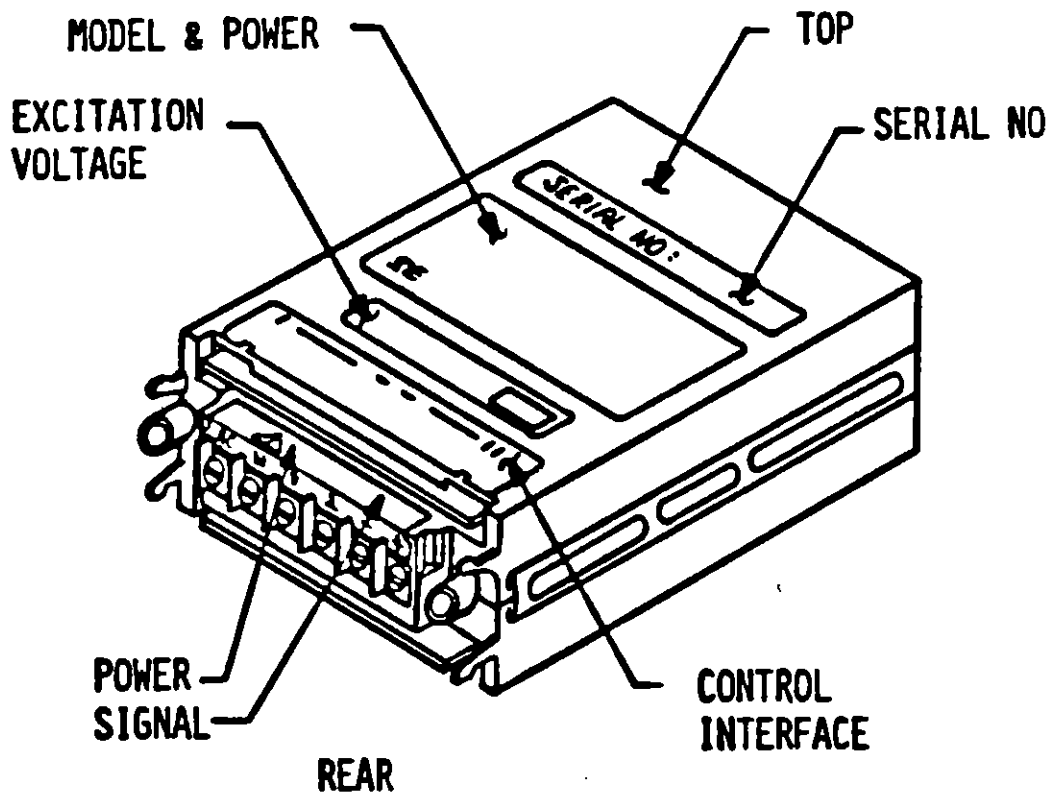


NOTE: READ LABELS FROM THE REAR

FIGURE 4. LABEL PLACEMENT

## 11.0 POWER & SIGNAL INPUT CONNECTIONS


**WARNING:** Incorrect power input can damage your QUANTA PANEL METER.

### 11.1 POWER CONNECTIONS

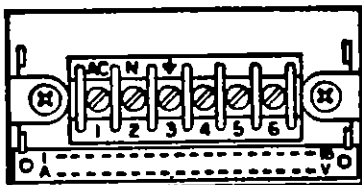


REAR TERMINAL VIEW

Terminal Connection	AC Versions	Wire Color
1	AC power HI	Black
2	AC power LO (neutral)	White
3	AC power GND	Green

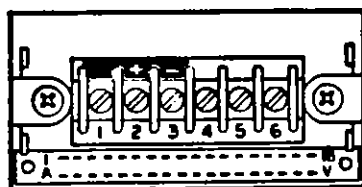


Terminal Connection	DC Versions
1	No connection
2	DC power +
3	DC power - (return)

### 11.2 SIGNAL INPUT CONNECTIONS

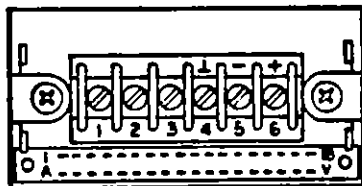

REAR TERMINAL VIEW

Terminal Connection	6 Terminal Versions Signal
4	Analog GND
5	Signal LO
6	Signal HI

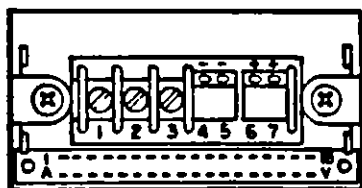

Terminal Connection	7 Terminal Versions Signal
4	-E (Excitation return)
5	-S (Signal LO input)
6	+S (Signal HI input)
7	+E (Excitation output)


## 12.0 CONFIGURATION PROCEDURE

This procedure is used to set the decimal point of the display and interface board signal bypass selections for the configuration of the QUANTA Q9XXXX display and power options (BQ90 through BQ98).

The main assembly can be configured using the push-on jumpers provided or already positioned on the pin forests. Pin forest designations are shown at the top of every page of the configuration charts.


## 13.0 CONFIGURATION CHARTS

### 13.1 DECIMAL POINT SELECTION

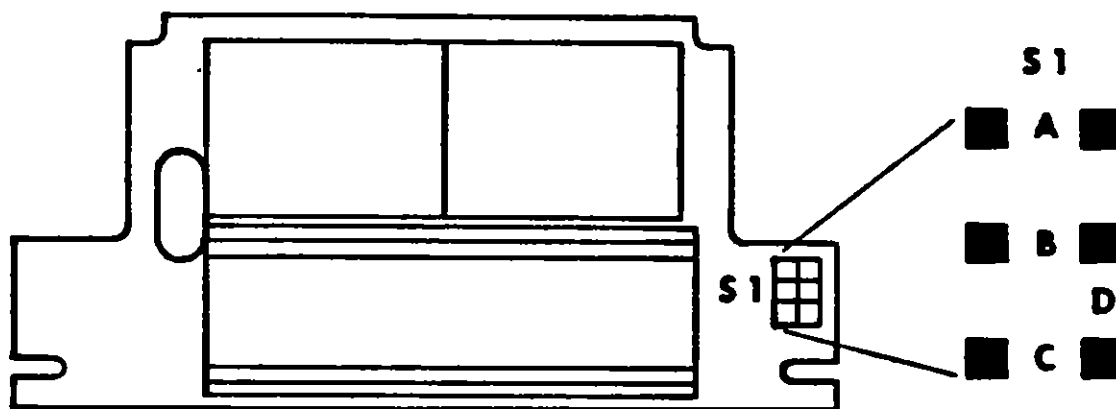

Step 1: Remove all push-on jumpers not used in the desired configuration(s).		
Step 2: Select the desired configuration from the chart below, then install the push-on jumpers indicated.		
Decimal Point Selection	S1	Alternate Decimal Point Selection Using Main Assembly Board (J1) Connector
Decimal Point (9.999)	A	Connect J1-K/9 to J1-6
Decimal Point (99.99)	B	Connect J1-J/8 to J1-6
Decimal Point (999.9)	C	Connect J1-H/7 to J1-6
No Decimal Point (9999)	D	No connection


### 13.2 INTERFACE BOARD SIGNAL BYPASS SELECTION

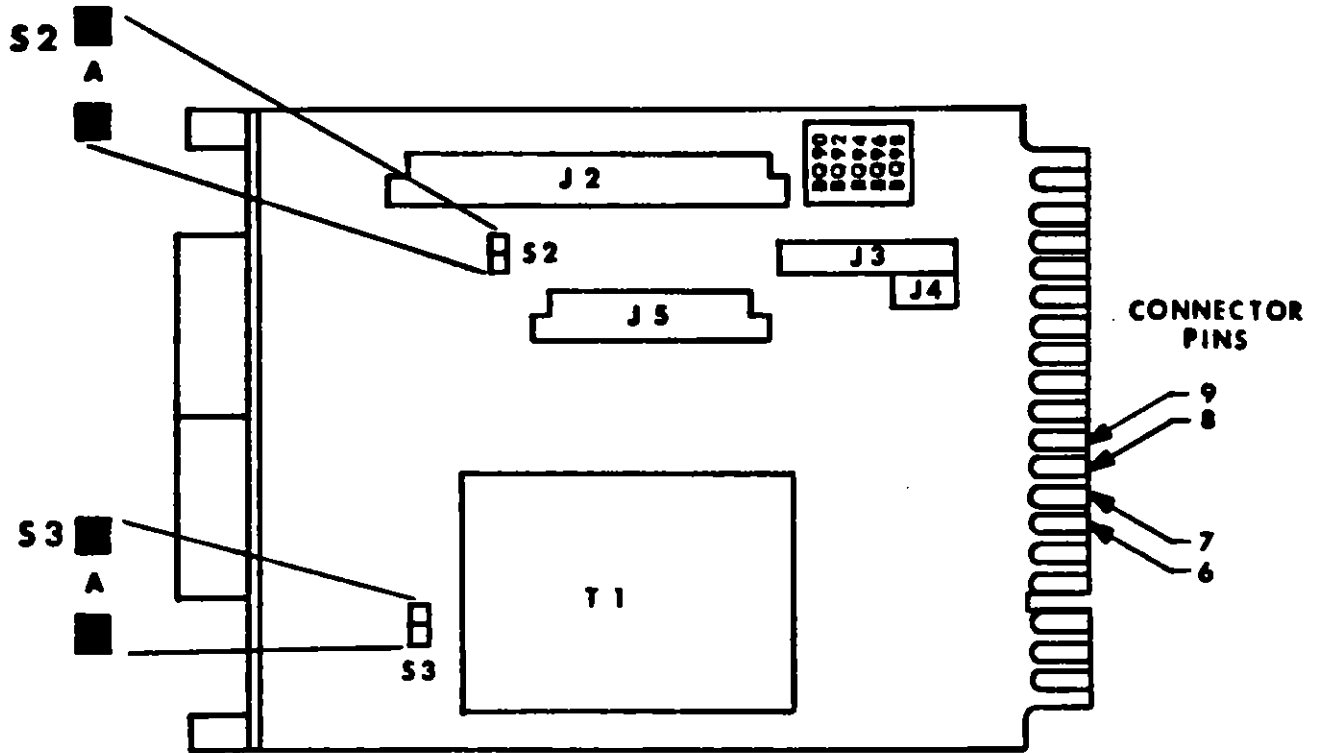

Step 1: Check your QUANTA part number for a zero (0) in the following position; Q9XX0X. If there is a zero (0) in that position, interface board signal bypass is required.	
Step 2: Remove all push-on jumpers not used in the desired configuration(s).	
Step 3: Select the desired configuration from the chart below, then install the push-on jumpers indicated.	
Interface Board Signal Configuration	S2
Interface Board Signal Bypass	A



### 13.3 REFERENCE VOLTAGE (RV1, RV2)

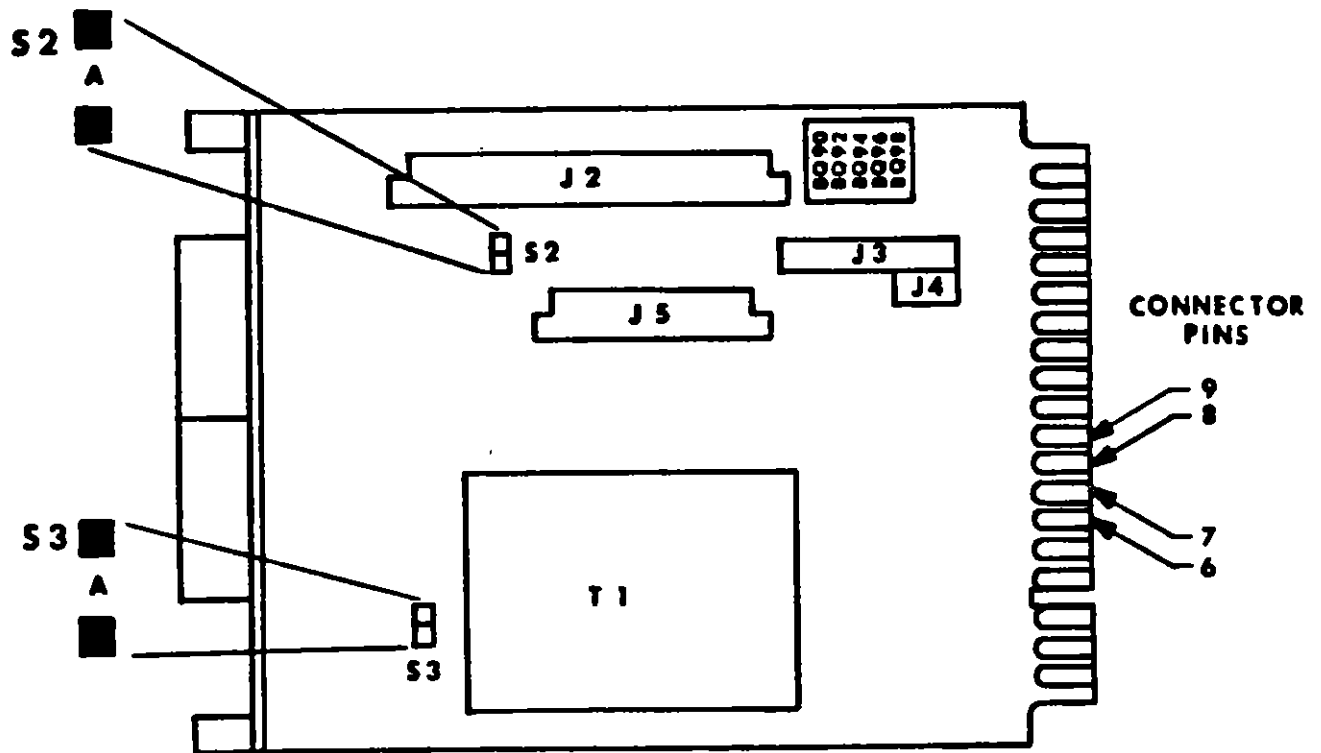

Step 1: Remove all push-on jumpers not used in the desired configuration(s).	
Step 2: Select the desired configuration from the chart below, then install the push-on jumpers indicated.	
Reference Voltage Configuration	
RV1	1 Volt
RV2	2 Volts
S3	
A	
-	

## 14.0 TESTS & DIAGNOSTICS

### 14.1 TEST CONFIGURATION REQUIREMENTS


The QUANTA main assembly is designed to function with a signal conditioner board as a minimum configuration. There is no provision for testing a main assembly alone.

### 14.2 SIGNAL INPUT REQUIREMENTS

Signal input requirements for your configuration are identified in the signal conditioner section of this manual.

## 15.0 MAIN BOARD CONNECTOR PINOUTS (J1) (Left to right, looking at rear of case)


<u>Connection</u>		<u>Function</u>
A - 1		Spare
B	Oscillator	100 kHz
2	-8.2 V dc	Analog power
C - 3	Spare	
D	+ Pol (sign)	+ Polarity sign
4	HOLD	LED version only
E 5	Spare	
F	Buffer	Integrator output
6	Digital Ground	
H - 7	XXX.X (Decimal point)	Use with pin 6
J - 8	XX.XX (Decimal point)	Use with pin 6
K - 9	X.XXX (Decimal point)	Use with pin 6
L - 10	TEST	Use with pin M/11
M - 11	+5 V dc	Analog & digital power
N - 12	Analog output	Standard 1 mV/count
P 13	Spare	
R	Spare	
14	Used with H & S options - Excitation sense	
S - 15	Analog Ground	
T - 16	Analog Option - Return	Used with analog option
U	Analog Option - Out	Used with analog option
17	+30 V dc	Unregulated power
V - 18	Spare	Used with S option
-	+ Excitation sense	
-	Indicates common pin	
	50 mA maximum power available from all internal sources.	

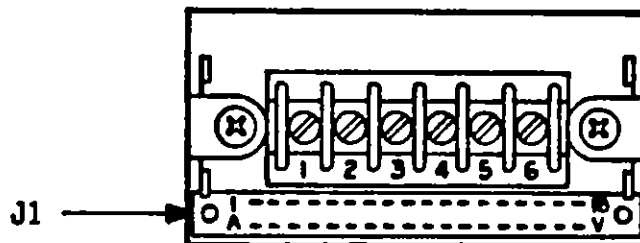



REAR TERMINAL VIEW

16.0 DRAWINGS


16.1 DIMENSIONS

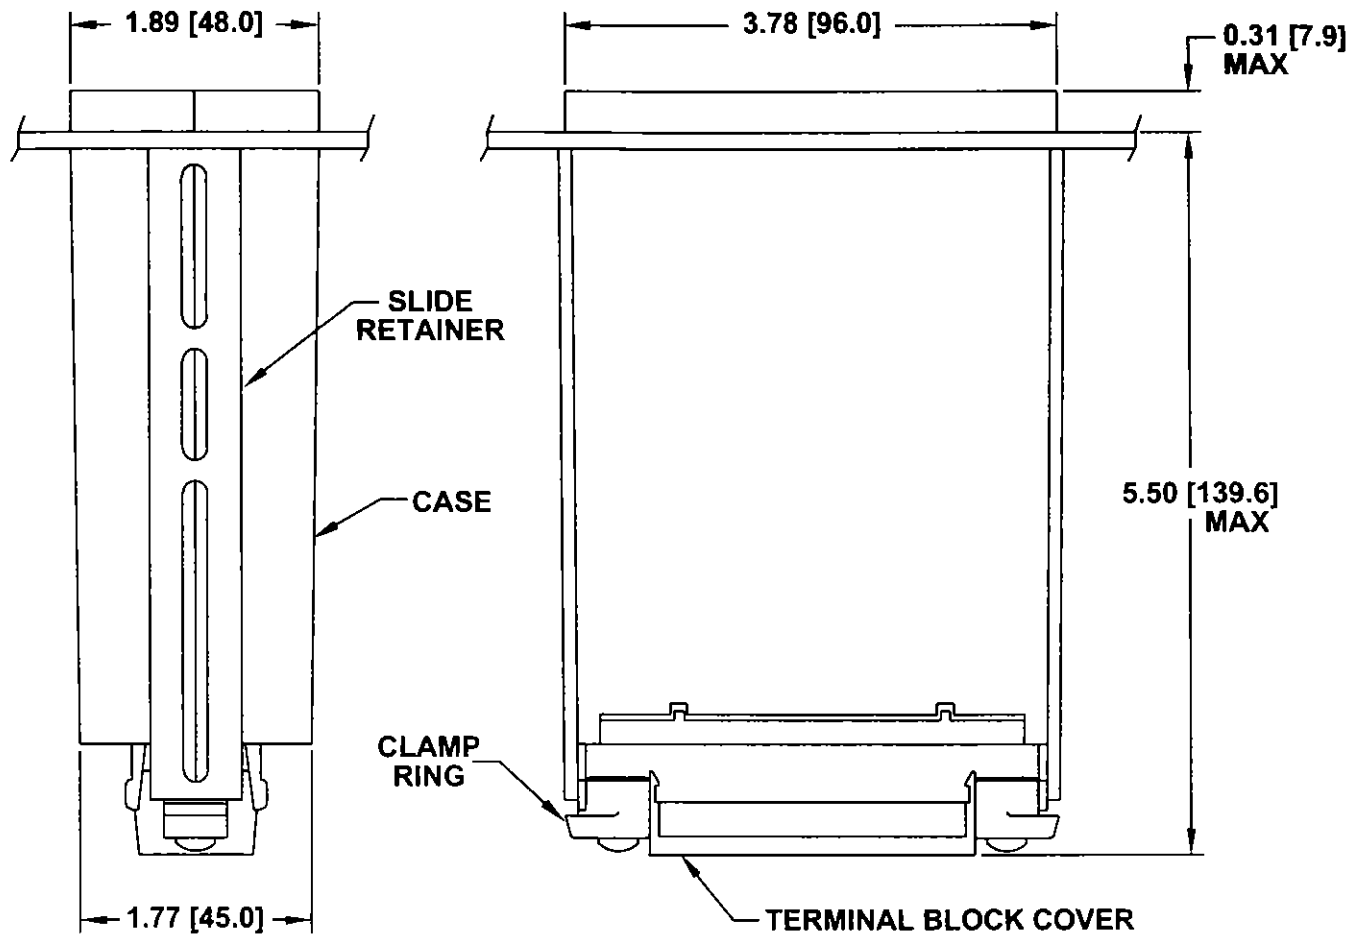

Notes: Dimensions are in inches  $\pm 0.01^*$  with millimeters in [ ]  $\pm 0.25$  mm.

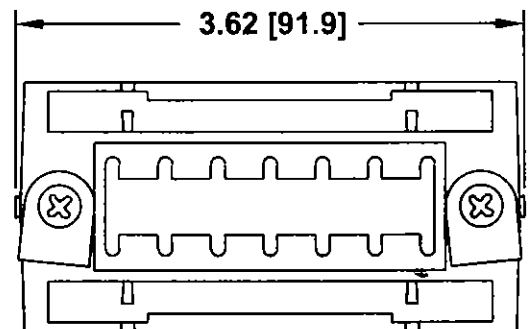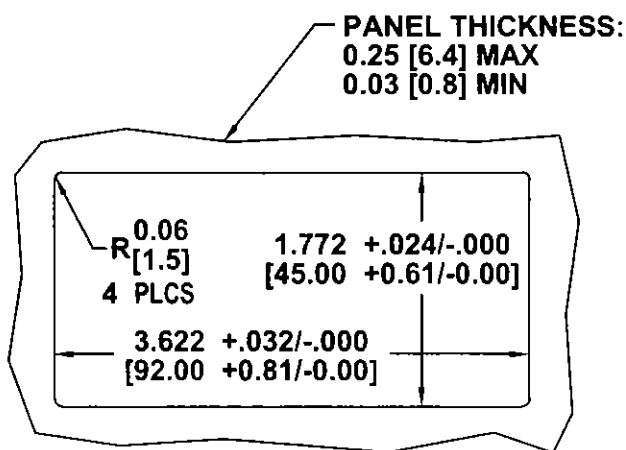


Terminal block cover and bezel not shown for clarity. Clamp rings rotated and slide retainers removed as shown for installation.

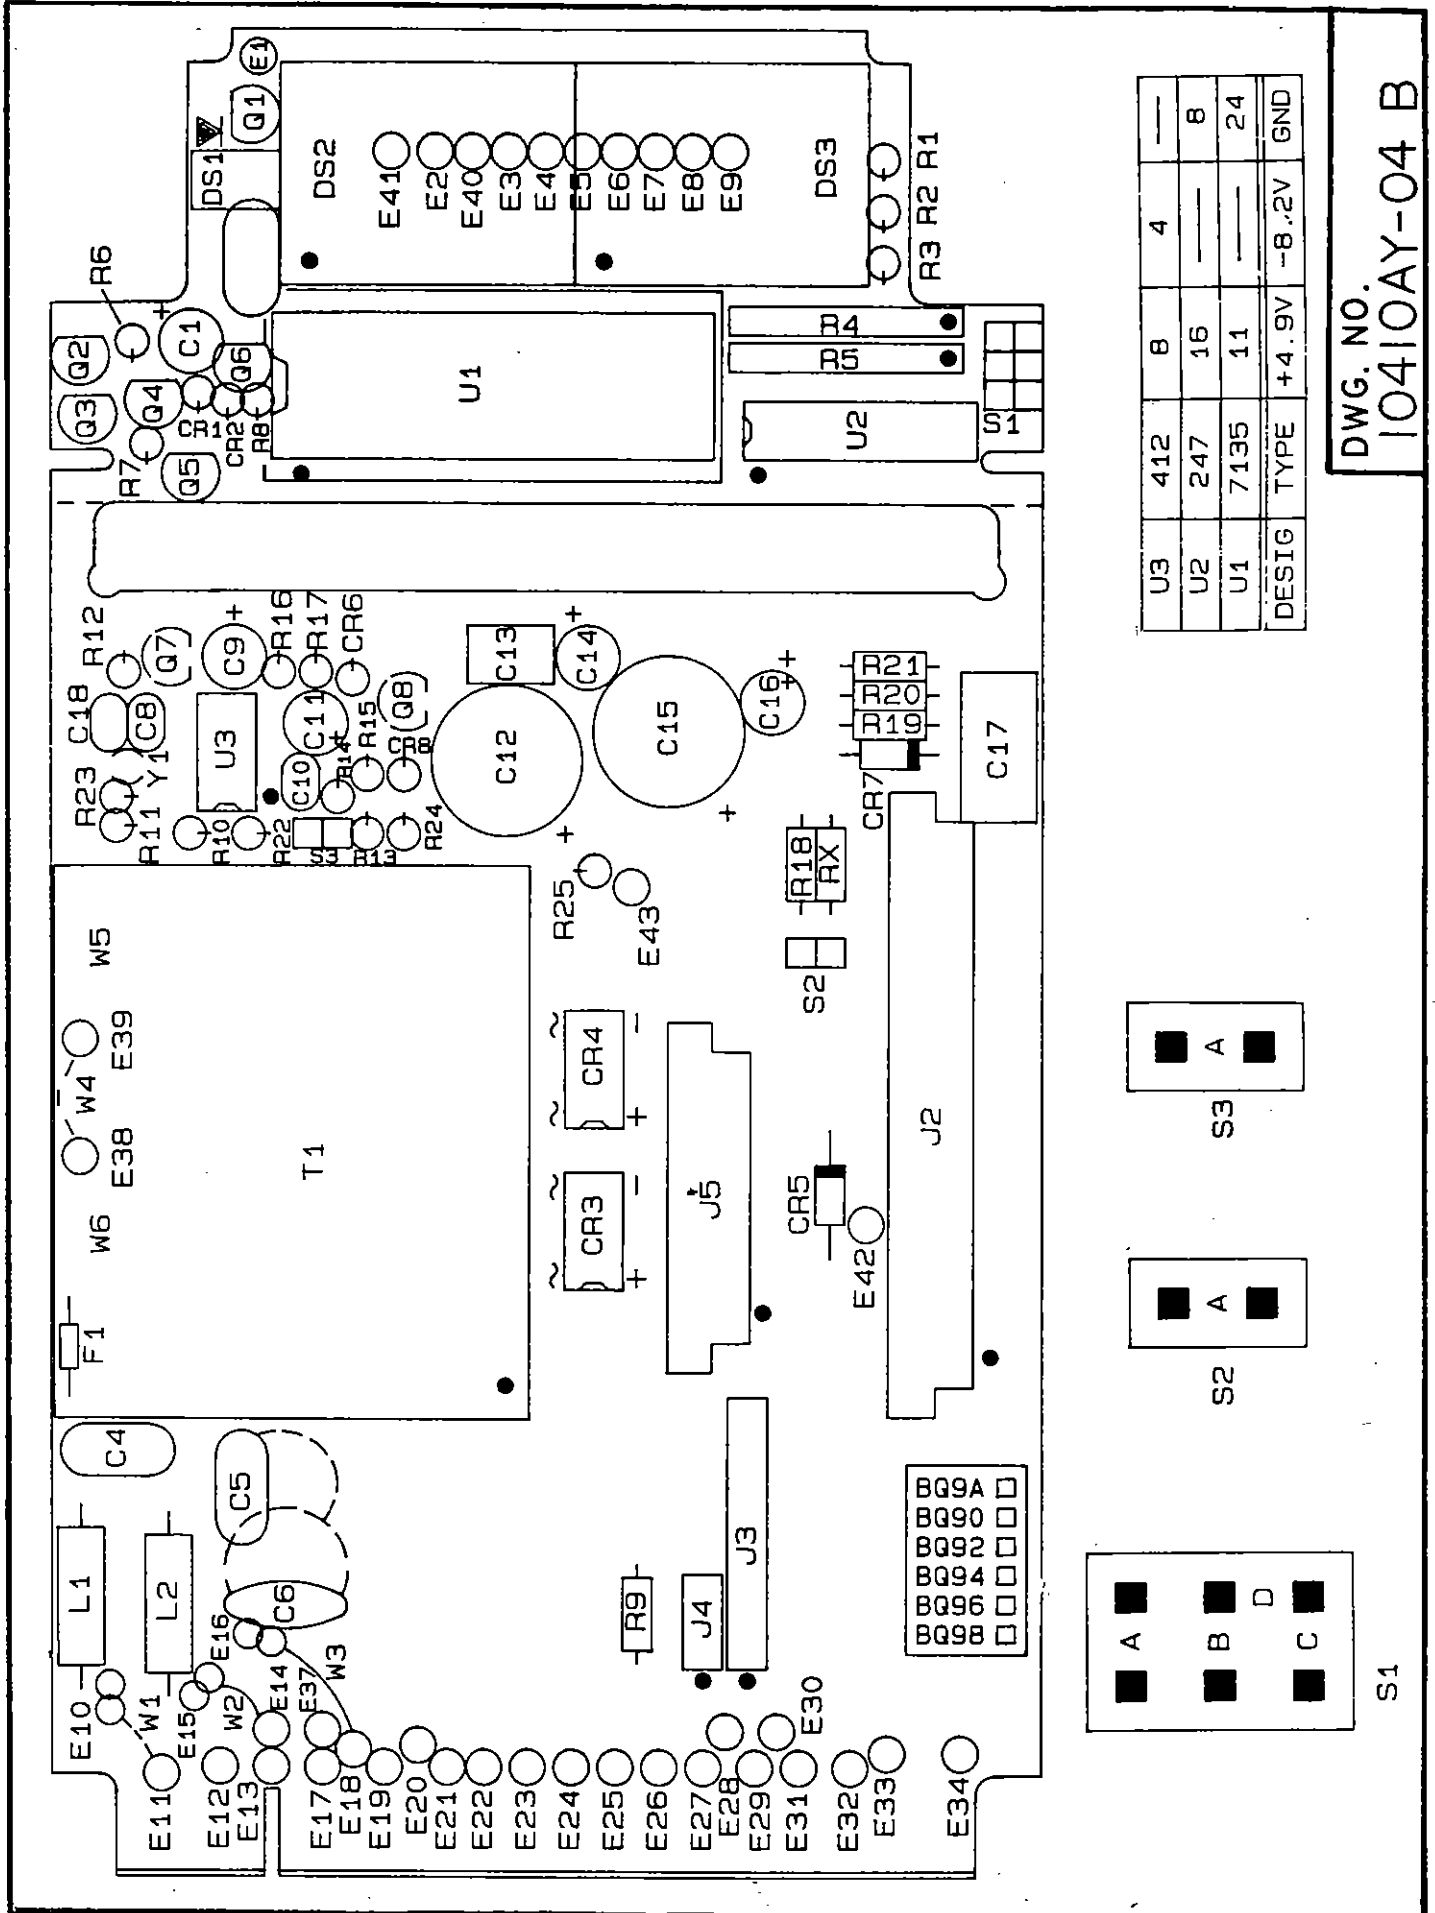


U3	412	8	4	—
U2	247	16	—	8
U1	7135	11	—	24
DESIG	TYPE	+4.9V	-8.2V	GND

DWG. NO.  
10410AY-04 B

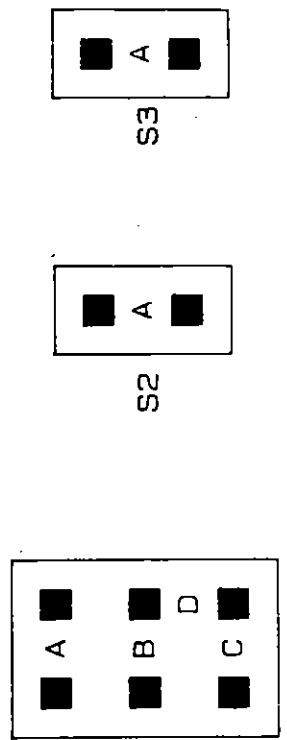

S1

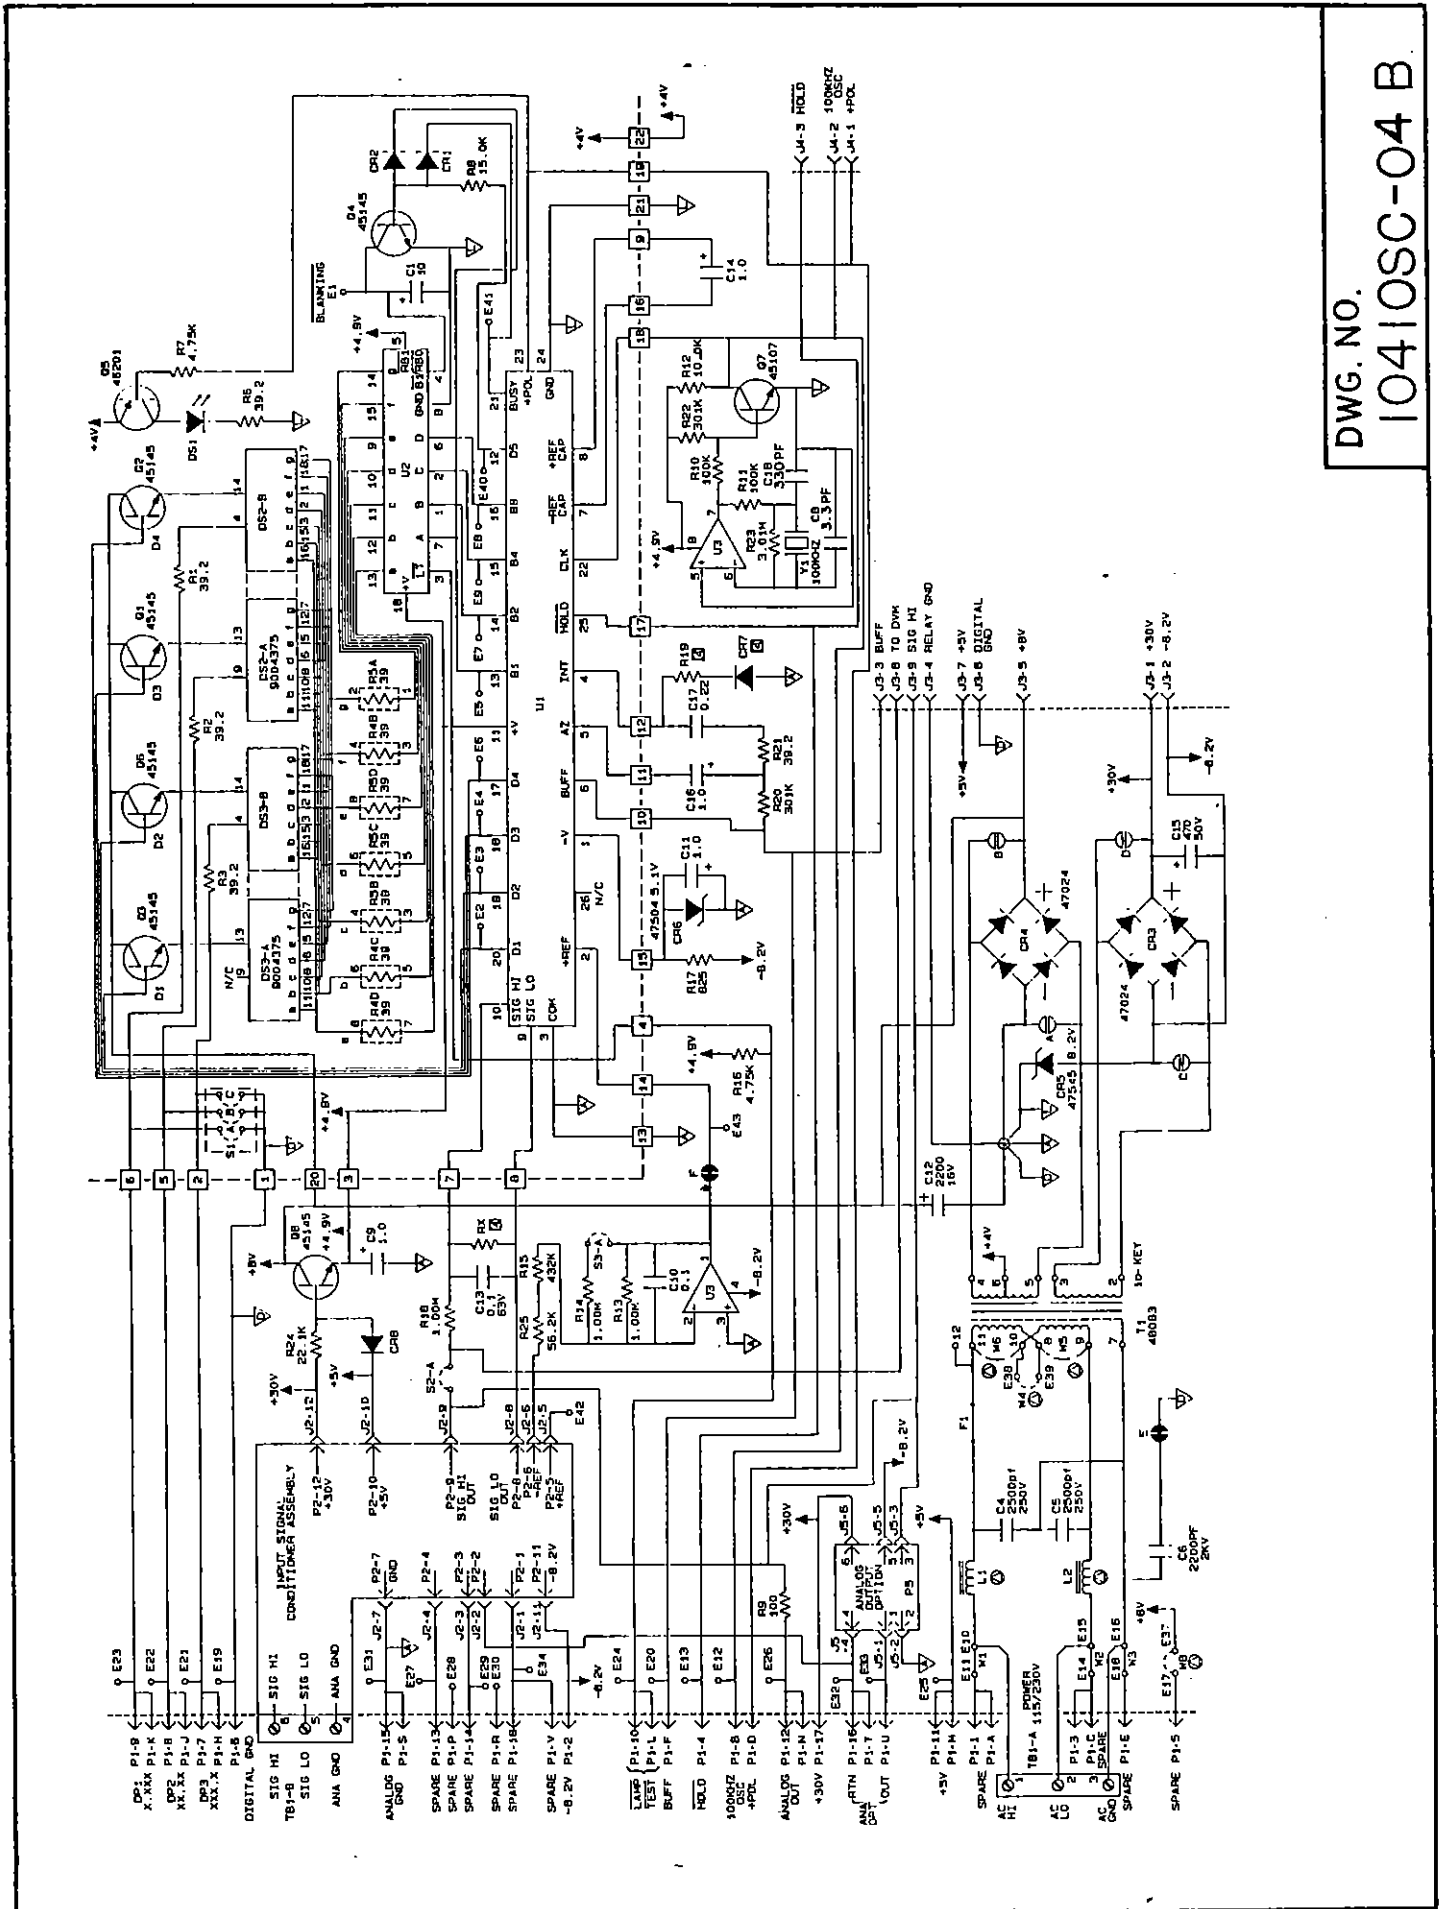

DWG. NO.  
10410SC-04 B

## 17.0 SPECIFICATIONS: BSCF TRUE-RMS VOLTAGE - BSCF/G TRUE-RMS CURRENT

### 17.1 GENERAL

The basic signal conditioner board is identified as a BSCF (Q2000F or Q9000F) for true-RMS voltage input. The Q2000 or Q9000 prefix is determined by the main assembly board used with the BSCF option board. When the BSCF board is configured differently, it is identified as a BSCF/G (Q2000G or Q9000G) board used for AC RMS current input.

### 17.2 BSCF: TRUE-RMS VOLTAGE SIGNAL CONDITIONER

Five full-scale ranges are provided in the Q2000F series and five full-scale ranges are provided in the Q9000F series. See TRUE-RMS VOLTAGE INPUT tables on pages 33 and 34.

The true RMS-to-DC converter is a monolithic integrated circuit which computes the true-RMS value of complex input signals containing both DC and AC components. It converts the true-RMS values to DC outputs or inputs with a crest factor of 2:1 or less.

### 17.3 BSCF/G: TRUE-RMS CURRENT SIGNAL CONDITIONER

Ten current ranges are provided in this series. Special full-scale (FS) ranges for other current transformers can be provided on special order. See TRUE-RMS CURRENT INPUT tables on pages 35 and 36.

The true RMS-to-DC converter is a monolithic integrated circuit, which computes the true-RMS value of complex input signals containing both DC and AC components. It converts the RMS values to DC outputs or inputs with a minimum crest factor of 2:1 at full scale input.

### 17.4 Q2000F & Q9000F: TRUE-RMS VOLTAGE INPUT SPECIFICATIONS

Configuration                      Single-ended, meter ground common to signal low  
Zero                                      Automatic

#### Q2000F TRUE-RMS VOLTAGE INPUTS

RANGE	INPUT IMPEDANCE	RESOLUTION	FREQUENCY RANGE
0.1999 V	1.1 MOhm	0.1 mV	47 Hz to 5 kHz
1.999 V	1.1 MOhm	1 mV	
19.99 V	1 MOhm	10 mV	
199.9 V	1 MOhm	100 mV	
650 V	10 MOhm	1 V	

Provides true-RMS accuracy for non-sinusoidal inputs with a crest factor of 2:1 or less.

### Q9000F TRUE-RMS VOLTAGE INPUTS

RANGE	INPUT IMPEDANCE	RESOLUTION	FREQUENCY RANGE
99.99 mV	1.1 MOhm	10 $\mu$ V	47 Hz to 5 kHz
999.9 mV	1.1 MOhm	100 $\mu$ V	
9.999 V	1 MOhm	1 mV	
99.99 V	1 MOhm	10 mV	
650 V	10 MOhm	100 mV	

Provides true-RMS accuracy for non-sinusoidal inputs with a crest factor of 4:1 or less at full scale.

#### Common Mode

Analog ground to AC power ground

CMR at DC to 60 Hz	120 dB
CMV at DC to 60 Hz	$\pm 1500$ Vp per HV test
	$\pm 354$ Vp per IEC spacing

#### Accuracy at 25°C

Maximum errors  
(1 to 100% FS)

Q2000F	$\pm 0.1\%$ R $\pm 1$ count
Q9000F	$\pm 0.1\%$ R $\pm 10$ counts

Reading Tempco	$\pm 0.01\%$ R/°C
Zero Tempco	$\pm 0.1$ count/°C
Warmup to rated accuracy	Less than 1 minute

### 17.5 Q2000G & Q9000G: TRUE-RMS CURRENT INPUT SPECIFICATIONS

Configuration	Single-ended, meter ground common to signal low
---------------	---

Zero	Automatic
------	-----------

## Q2000G TRUE RMS CURRENT INPUTS

RANGE	INPUT IMPEDANCE (200 mV SHUNT)	RESOLUTION	FREQUENCY RANGE
19.99 $\mu$ A	10 k $\Omega$ m	0.01 $\mu$ A	47 Hz- 5 KHz
199.9 $\mu$ A	1 k $\Omega$ m	0.1 $\mu$ A	
1.999 mA	100 $\Omega$ ms	1 $\mu$ A	
19.99 mA	10 $\Omega$ ms	10 $\mu$ A	
199.9 mA	1 $\Omega$ m	100 $\mu$ A	
1.999 A	0.1 $\Omega$ m	1 mA	
5.00 A *	0.01 $\Omega$ m	2.5 mA	
19.99 A	5 A CT	10 mA	
199.9 A	5 A CT	100 mA	
1999 A	5 A CT	1 A	

Provides true RMS accuracy for non-sinusoidal inputs with a crest factor of 2:1 or less.

\* 50 mV shunt for 5 A current transformer input.

## Q2000G SPECIAL FULL-SCALE COUNTS (50 mV or 5 A FULL-SCALE)

COUNT RANGE	R15 (1%)	COUNT RANGE	R15 (1%)
1900 to 2100	-	525 to 575	15.4 k $\Omega$ m
1720 to 1900	523 k $\Omega$ m	475 to 525	13.3 k $\Omega$ m
1560 to 1720	215 k $\Omega$ m	435 to 475	11.8 k $\Omega$ m
1415 to 1560	130 k $\Omega$ m	390 to 435	10.5 k $\Omega$ m
1285 to 1415	93.1 k $\Omega$ m	355 to 390	8.87 k $\Omega$ m
1165 to 1285	69.8 k $\Omega$ m	325 to 355	7.87 k $\Omega$ m
1055 to 1165	53.6 k $\Omega$ m	295 to 325	6.98 k $\Omega$ m
955 to 1055	47.5 k $\Omega$ m	270 to 295	6.04 k $\Omega$ m
860 to 955	38.3 k $\Omega$ m	250 to 270	5.49 k $\Omega$ m
775 to 860	29.4 k $\Omega$ m	230 to 250	4.87 k $\Omega$ m
700 to 775	24.3 k $\Omega$ m	210 to 230	4.42 k $\Omega$ m
635 to 700	20.5 k $\Omega$ m	190 to 210	3.83 k $\Omega$ m
575 to 635	18.2 k $\Omega$ m		



## Q9000G TRUE RMS CURRENT INPUTS

RANGE	INPUT IMPEDANCE (100 mV SHUNT)	RESOLUTION	FREQUENCY RANGE
9.999 $\mu$ A	10 k $\Omega$ m	1 nA	47 Hz-5 KHz
99.99 $\mu$ A	1 k $\Omega$ m	10 nA	
999.9 $\mu$ A	100 ohms	100 nA	
9.999 mA	10 ohms	1 $\mu$ A	
99.99 mA	1 ohm	10 $\mu$ A	
0.9999 A	0.1 ohm	100 $\mu$ A	
5.00 A *	0.01 ohm	500 $\mu$ A	
9.999 A	5 A CT	1 mA	
99.99 A	5 A CT	10 mA	
999.9 A	5 A CT	100 mA	

Provides true RMS accuracy for non-sinusoidal inputs with a crest factor of 4:1 or less.

\* 50 mV shunt for 5 A current transformer input with main board reference of 2V (from RV2 on main board).

## Q9000G SPECIAL FULL-SCALE COUNTS (5 A FULL-SCALE)

COUNT RANGE	R15 (1%)	COUNT RANGE	R15 (1%)
9500 to 10500	-	2875 to 3175	18.2 k $\Omega$ m
8600 to 9500	523 k $\Omega$ m	2625 to 2875	15.4 k $\Omega$ m
7800 to 8600	215 k $\Omega$ m	2375 to 2625	13.3 k $\Omega$ m
7075 to 7800	130 k $\Omega$ m	2175 to 2375	11.8 k $\Omega$ m
6425 to 7075	93.1 k $\Omega$ m	1950 to 2175	10.5 k $\Omega$ m
5825 to 6425	69.8 k $\Omega$ m	1775 to 1950	8.87 k $\Omega$ m
5275 to 5825	53.6 k $\Omega$ m	1625 to 1775	7.87 k $\Omega$ m
4775 to 5275	47.5 k $\Omega$ m	1475 to 1625	6.98 k $\Omega$ m
4300 to 4775	38.3 k $\Omega$ m	1350 to 1475	6.04 k $\Omega$ m
3875 to 4300	29.4 k $\Omega$ m	1250 to 1350	5.49 k $\Omega$ m
3500 to 3875	24.3 k $\Omega$ m	1150 to 1250	4.87 k $\Omega$ m
3175 to 3500	20.5 k $\Omega$ m	1050 to 1150	4.42 k $\Omega$ m
		950 to 1050	3.83 k $\Omega$ m

**Common Mode**

**Analog ground to ac power ground**

<b>CMR at dc to 60 Hz</b>	<b>120 dB</b>
<b>CMV at dc to 60 Hz</b>	<b>±1500 Vp per HV test ±354 Vp per IEC spacing</b>

**Accuracy at 25°C**

<b>Maximum Error (1 to 100% of FS)</b>	
<b>Q2000G</b>	<b>±0.1% R ±1 count</b>
<b>Q9000G</b>	<b>±0.1% R ±10 counts</b>
<b>Reading Tempco</b>	<b>±0.01% R/°C</b>
<b>Zero Tempco</b>	<b>±0.1 count/°C</b>
<b>Warmup to rated accuracy</b>	<b>Less than 1 minute</b>

**18.0 SIGNAL INPUT CONNECTIONS (TB1) (SEE FIGURE 5)**

18.1 The signal input connections for the Q2000F and Q9000F true RMS voltage signal conditioner are made at the standard 3-terminal barrier strip:

<u>Terminal Connection</u>	<u>Signal</u>	<u>Input</u>
4	Signal HI (dc coupled)	●
5	Signal LO	● ————— AC
6	Signal HI (ac coupled)	● ————— COUPLED


<u>Terminal Connection</u>	<u>Signal</u>	<u>Input</u>
4	Signal HI (dc coupled)	● ————— DC
5	Signal LO	● ————— COUPLED
6	Signal HI (ac coupled)	●

18.2 The signal input connections for the Q2000G and Q9000G true RMS current signal conditioner are made at the standard 3-terminal barrier strip:

<u>Terminal Connection</u>	<u>Signal</u>	<u>Input</u>
4	Signal HI (dc coupled)	●
5	Signal LO	● ————— AC
6	Signal HI (ac coupled)	● ————— COUPLED

<u>Terminal Connection</u>	<u>Signal</u>	<u>Input</u>
4	Signal HI (dc coupled)	● ————— DC *
5	Signal LO	● ————— COUPLED
6	Signal HI (ac coupled)	● —————

\* Terminals 4 and 6 must be connected. An alternate method is to replace R2 on the signal conditioner barrier board with a wire.

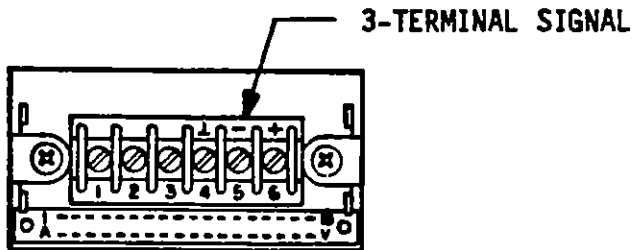

REAR TERMINAL VIEW

FIGURE 5. SIGNAL INPUT CONNECTIONS

## 19.0 TESTS AND DIAGNOSTICS

- The signal conditioner board BSCF is designed to function with a main assembly as a minimum configuration. There is no provision for testing a signal conditioner board alone.
- Signal input requirements for your configuration are identified in the specifications for the BSCF signal conditioner.
- Operating power and connections for your configuration are identified in the Main Assembly Sections of this manual.

NOTE: If using Main Assembly Q2000, refer to Section BQ20/BQ29.  
If using Main Assembly Q9000, refer to Section BQ90/BQ98.

- Inspect the QUANTA panel meter for physical damage. If damage is apparent, resolve the damage with the shipper or your supplier.

### 19.1 FUNCTIONAL ELECTRICAL TESTING

NOTE: Perform this test after your meter has been configured.

1. Short terminals 4, 5 and 6 on barrier strip (TB1).
2. Apply proper power for your configuration to terminals 1, 2 and 3 on barrier strip (TB1). Display will read approximately zero (0000).

## 20.0 CONFIGURATION PROCEDURE

### 20.1 GENERAL

Use this procedure to determine the configuration of the QUANTA true RMS voltage BSCF or true RMS current BSCF/G.

Configure the unit using the push-on jumpers provided separately or already positioned on the pin forests. Pin forest designations are shown with every configuration chart.

## 20.2 GLOSSARY

The chart below explains various terms which appear throughout the following procedure:

<u>Voltage Range Selection</u>	<u>RMS Input Range</u>
FVR1	0/50 mV (Q2000 only)
FVR2	0/200 mV
FVR3	0/2 V
FVR4	0/20 V
FVR5	0/200 V
FVR6	0/750 V

<u>Current Range Selection</u>	<u>RMS Input Range</u>
GCR1	0/20 $\mu$ A
GCR2	0/200 $\mu$ A
GCR3	0/2 mA
GCR4	0/20 mA
GCR5	0/200 mA
GCR6	0/2 A
GCR7	0/5 A

<u>Abbr</u>	<u>Definition</u>
V1	Largest Input Voltage
I1	Largest Input Current

## 20.3 SELECTION

If the Input is:

Voltage, proceed to Section 20.3.1

Current, proceed to Section 20.3.2

### 20.3.1 Input Voltage Range Selection (FVR1,2,3,4,5,6)

Specify the magnitude of the largest input voltage:

V1 = \_\_\_\_\_ Volts

Select the required range where V1 is equal to or less than the limit of that range.

FVR1 = 50 mV RMS  
FVR2 = 200 mV RMS  
FVR3 = 2 V RMS  
FVR4 = 20 V RMS  
FVR5 = 200 V RMS  
FVR6 = 750 V RMS

FVR = \_\_\_\_\_

Proceed to Installation (Section 20.4)

### 20.3.2 Input Current Range Selection (GCR1,2,3,4,5,6,7)

Specify the magnitude of the largest input current:

I1 = \_\_\_\_\_ mA

Select the required current range where I1 is equal to or less than the limit of that range.

GCR1 = 20 uA RMS

GCR2 = 200 uA RMS

GCR3 = 2 mA RMS

GCR4 = 20 mA RMS

GCR5 = 200 mA RMS

GCR6 = 2 A RMS

GCR7 = 5 A RMS

GCR = \_\_\_\_\_

Based on the current range selected pick a shunt resistor (R1) from the following:

GCR1 = 10 kOhm, 1%, 1/8W, MF (P/N 8211002)

GCR2 = 1 kOhm, 1%, 1/8W, MF (P/N 8211001)

GCR3 = 100 ohms, 1%, 1/8W, MF (P/N 8211009)

GCR4 = 10 ohms, 1%, 1/8W, MF (P/N 8211008)

GCR5 = 1.0 ohm, 1%, 1/8W, WW (P/N 8710006)

GCR6 = 0.1 ohm, 1%, 1/2W, WW (P/N 8910005)

GCR7 = 0.01 ohm, 1%, 2W, WW (P/N 8910004)

Proceed to Installation (Section 20.4)

## 20.4 INSTALLATION

### 20.4.1 General

Select the Voltage Range (FVR1-6), or Current Range (GCR1-7), required and install the push-on jumpers as per page 42 or 43.

### 20.4.2 Reference Voltage (Q9000F or Q9000G only)

Select reference RV1 by installing push-on jumper A as per Subsection 13.3 in Main Assembly Section BQ90/BQ98.

NOTE: Select the RV2 reference if using the GCR7 range. Remove any jumpers in the S3 position as per Subsection 13.3.

### 20.4.3 Current

If a Current Range (GCR1-7) is selected, you must install the shunt resistor (R1) chosen. Install the shunt resistor (R1) as per page 43.


### 20.4.4 Decimal Point

If a decimal point is required, refer to the appropriate Main Assembly Section for location and configuration procedure.

NOTE: If using Main Assembly Q2000, refer to Section BQ20/BQ29.  
If using Main Assembly Q9000, refer to Section BQ90/BQ98.

## 21.0 CONFIGURATION CHARTS

### 21.1 INPUT VOLTAGE (FVR1,2,3,4,5,6)

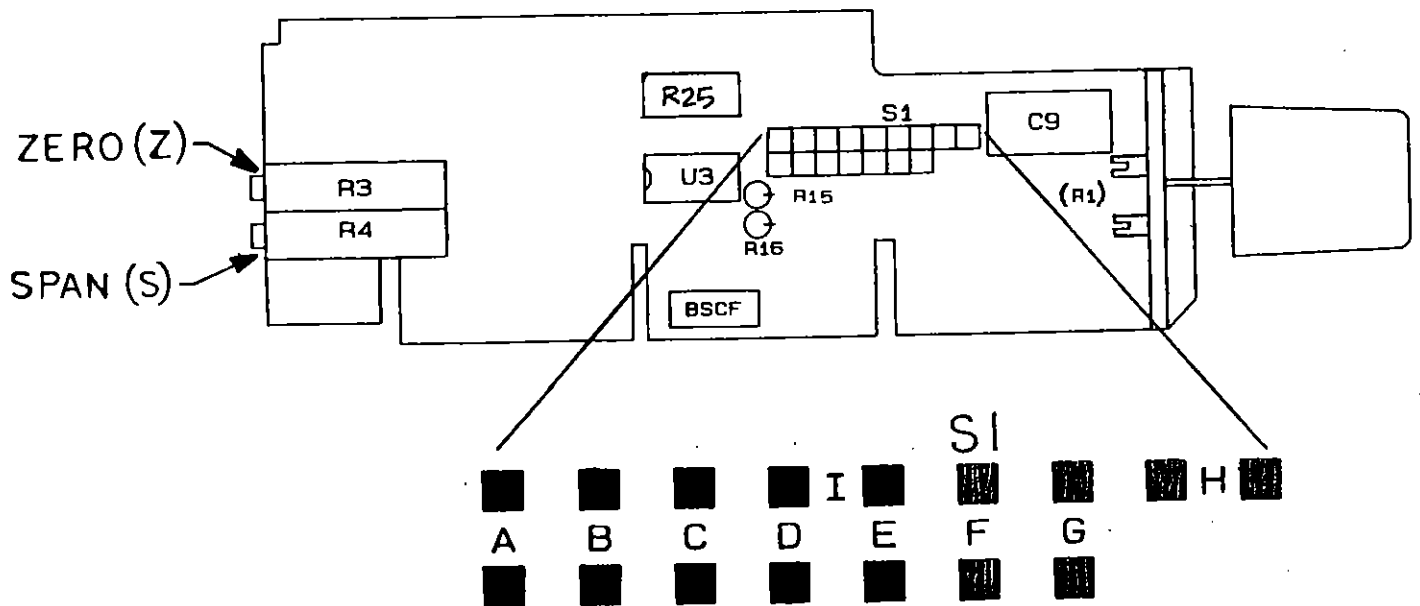


Step 1: Remove all push-on jumpers not used in the desired configuration(s).

Step 2: Select the desired configuration from the chart below, then install the push-on jumpers indicated.

Input Voltage Configuration *		S1				
FVR1	50 mV Input	F	G	H	I	-
FVR2	200 mV Input	A	B	F	H	G
FVR3	2 V Input	A	B	E	H	G
FVR4	20 V Input	A	B	C	H	G
FVR5	200 V Input	A	B	D	H	G
FVR6	750 V Input	A	B	D	-	-

\* Used on Q2000F or Q9000F

## 21.2 INPUT CURRENT (CR1,2,3,4,5,6,7)

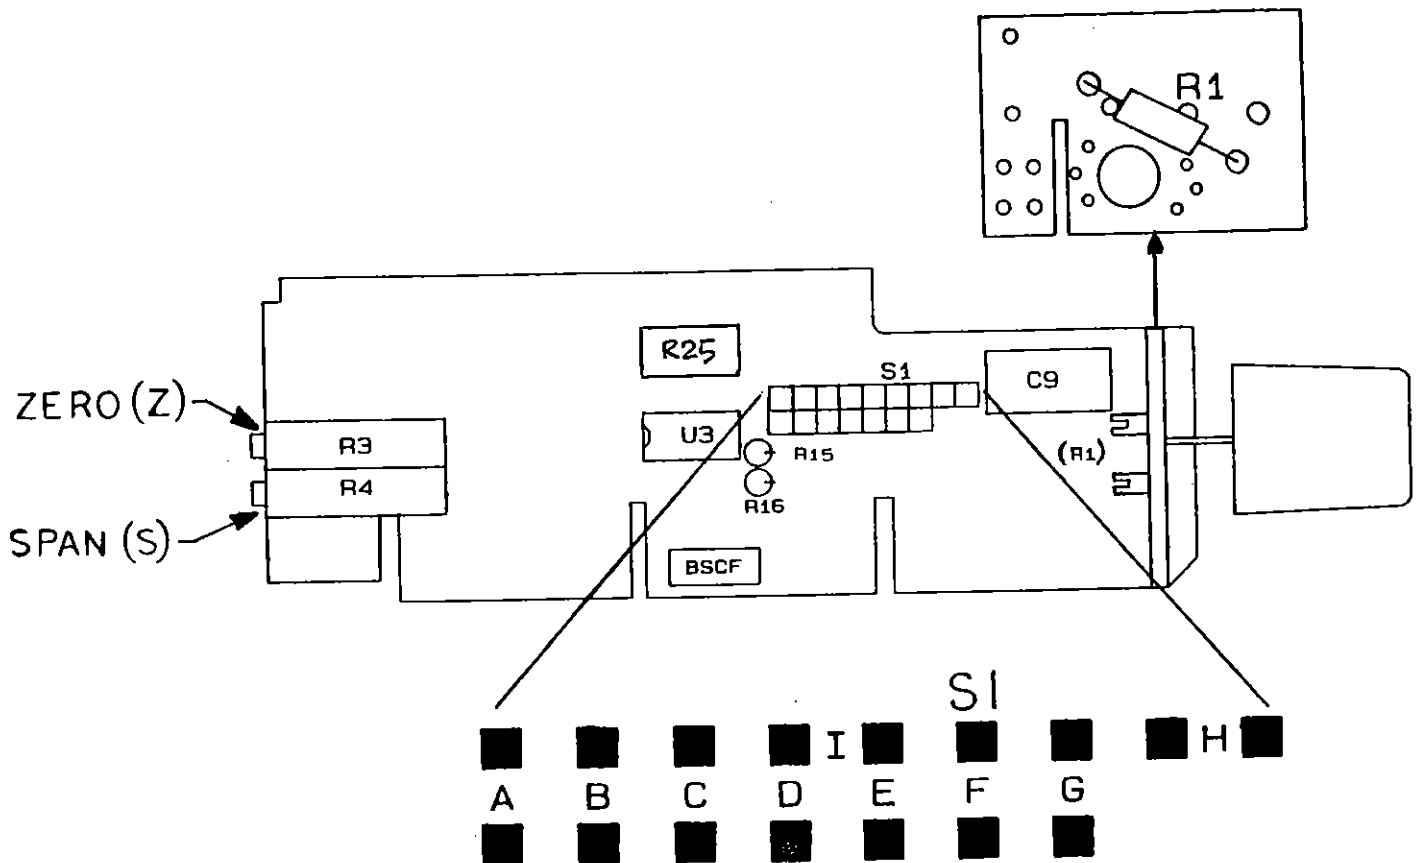

Step 1: Remove all push-on jumpers not used in the desired configuration(s).

Step 2: Select the desired configuration from the chart below, then install the push-on jumpers indicated.

Input Current Configuration *		S1					R1
GCR1	20 uA Input	A	B	F	H	G	10 kOhm
GCR2	200 uA Input	A	B	F	H	G	1 kOhm
GCR3	2 mA Input	A	B	F	H	G	100 ohms
GCR4	20 mA Input	A	B	F	H	G	10 ohms
GCR5	200 mA Input	A	B	F	H	G	1.0 ohm
GCR6	2 A Input	A	B	F	H	G	0.1 ohm
GCR7	5 A Input	-	F	H	G	I	0.01 ohm

\* Used on Q2000G or Q9000G



## 22.0 CALIBRATION FOR Q2000 F/G

Define the input for full scale (Span pot) and zero (Zero pot) and apply to the calibration procedures at the bottom of the page.

### 22.1 VOLTAGE RANGES (FVR1-6)

For FVR1-5: Full Scale = 2000 counts 1% FS = 20 counts

NOTE: Full Scale for FVR6 is 650 V. Adjust the S pot to display a reading of 650 and the Z pot to read 20.

### 22.2 CURRENT RANGES (GCR1-7)

Full Scale = 2000 counts 1% FS = 20 counts

## 23.0 CALIBRATION FOR Q9000 F/G

Define the input for full scale (Span pot) and zero (Zero pot) and apply to the calibration procedures at the bottom of the page.

### 23.1 VOLTAGE RANGES (FVR1-6)

Full Scale = 10000 counts 1% FS = 100 counts


NOTE: Full Scale for FVR6 is 650 V. Adjust the S pot to display a reading of 650.0 and the Z pot to read 10.0.

### 23.2 CURRENT RANGES (GCR1-7)


Full Scale = 10000 counts 1% FS = 100 counts

## CALIBRATION PROCEDURES FOR Q2000 AND Q9000

1. Apply an input equal to 1% of full scale (FS).
2. Null the input amplifier. Adjust the zero (Z) pot, R3 clockwise or counter-clockwise for a minimum reading on the display. The point where the digits reverse order (lower to higher) will be the null.
3. After adjusting the null, **slowly** adjust the internal zero-width (R25) pot to display the proper reading (1% of full scale).
4. Apply an input signal equal to 95% of the high end of the range selected and adjust the span pot (S), R4, for the proper reading (95% of full scale).
5. Repeat steps above as required for best overall linearity.

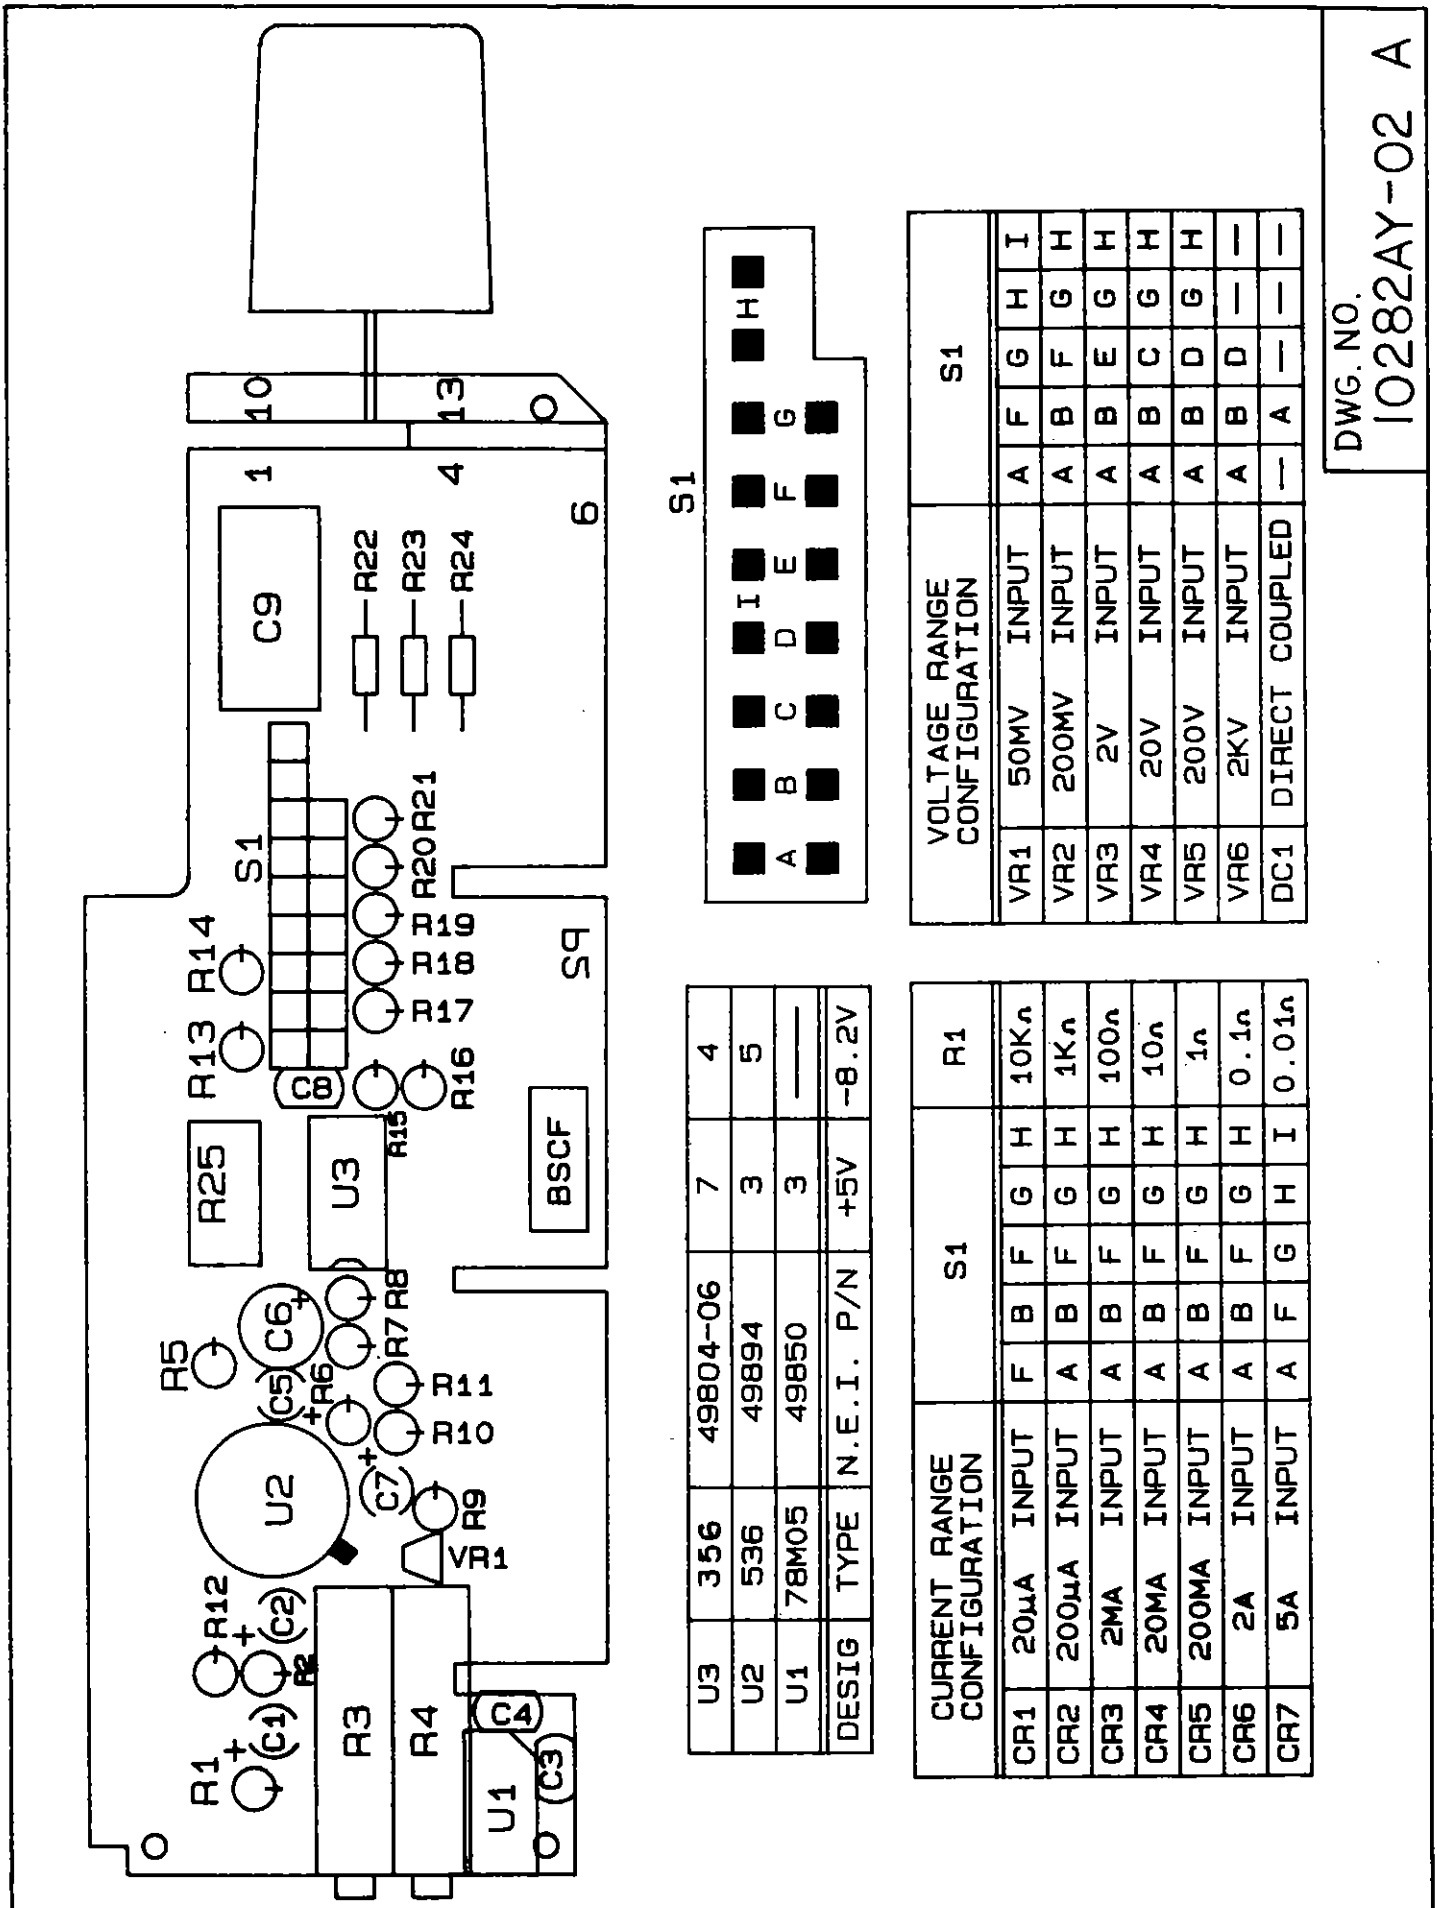


U3	356	49804-06	7	4
U2	536	49894	3	5
U1	78M05	49850	3	—
DESIG	TYPE	N.E.I. P/N	+5V	-8.2V

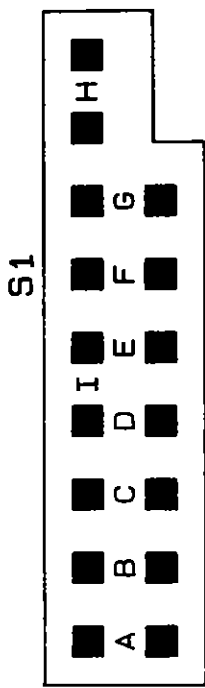

CURRENT RANGE CONFIGURATION		S1					R1
CR1	20μA INPUT	F	B	F	G	H	10K $\Omega$
CR2	200μA INPUT	A	B	F	G	H	1K $\Omega$
CR3	2mA INPUT	A	B	F	G	H	100 $\Omega$
CR4	20mA INPUT	A	B	F	G	H	10 $\Omega$
CR5	200mA INPUT	A	B	F	G	H	1 $\Omega$
CR6	2A INPUT	A	B	F	G	H	0.1 $\Omega$
CR7	5A INPUT	A	F	G	H	I	0.01 $\Omega$


VOLTAGE RANGE CONFIGURATION		S1					
VR1	50MV INPUT	A	F	G	H	I	
VR2	200MV INPUT	A	B	F	G	H	
VR3	2V INPUT	A	B	E	G	H	
VR4	20V INPUT	A	B	C	G	H	
VR5	200V INPUT	A	B	D	G	H	
VR6	2KV INPUT	A	B	D	—	—	
DC1	DIRECT COUPLED	—	A	—	—	—	

DWG. NO.  
10282AY-02 A

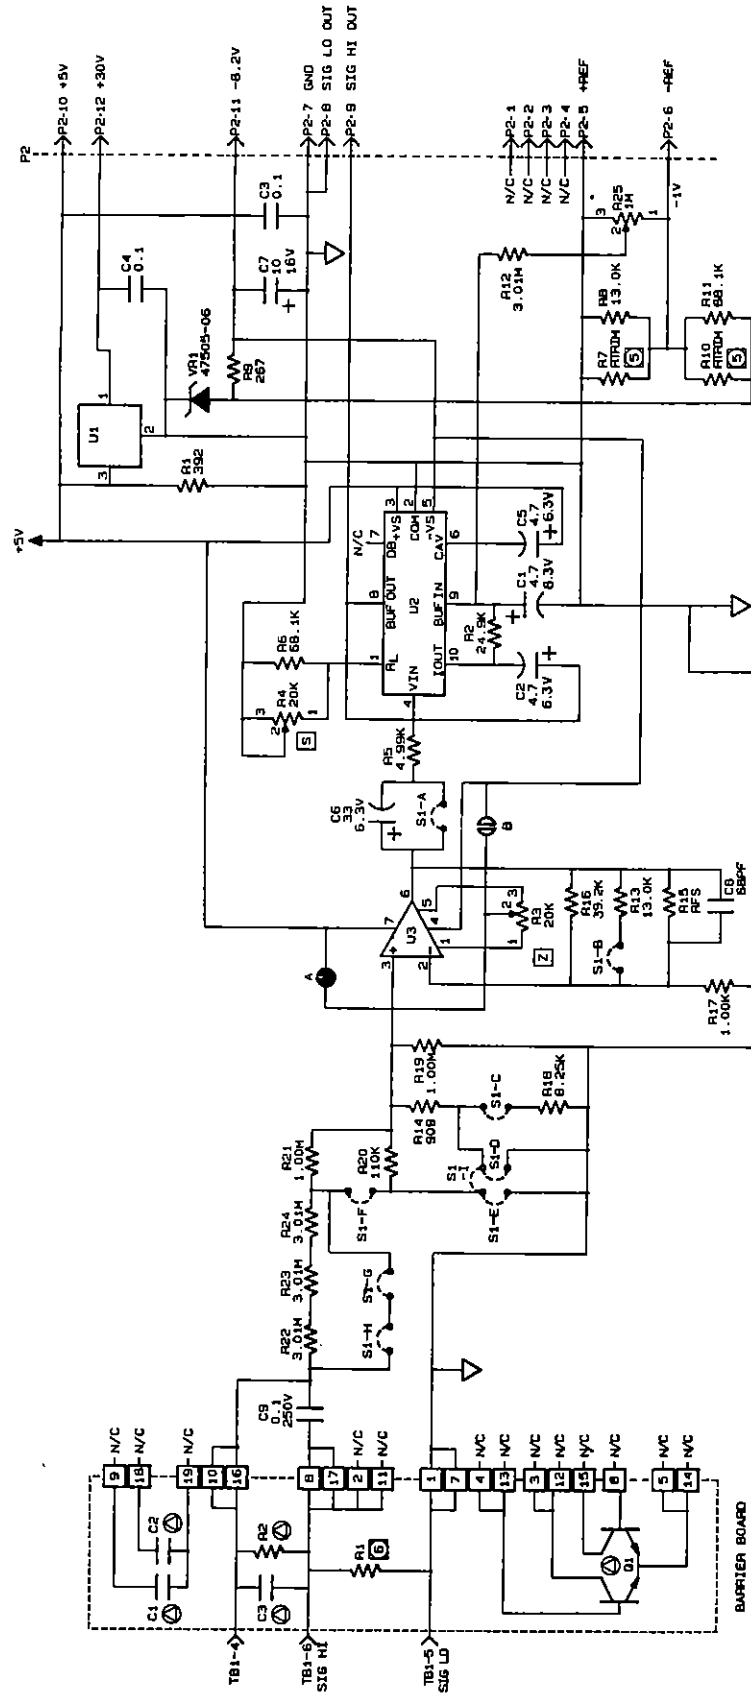


DWG. NO.  
10282SC-02 B



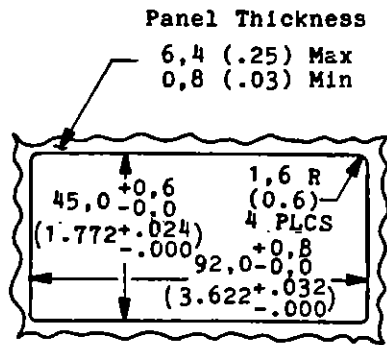


PANEL CUTOUT

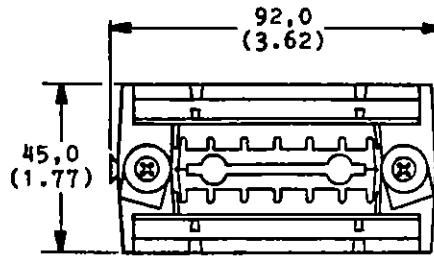

REAR VIEW

Terminal block cover and bezel not shown for clarity. Clamp rings rotated and slide retainers removed as shown for installation.

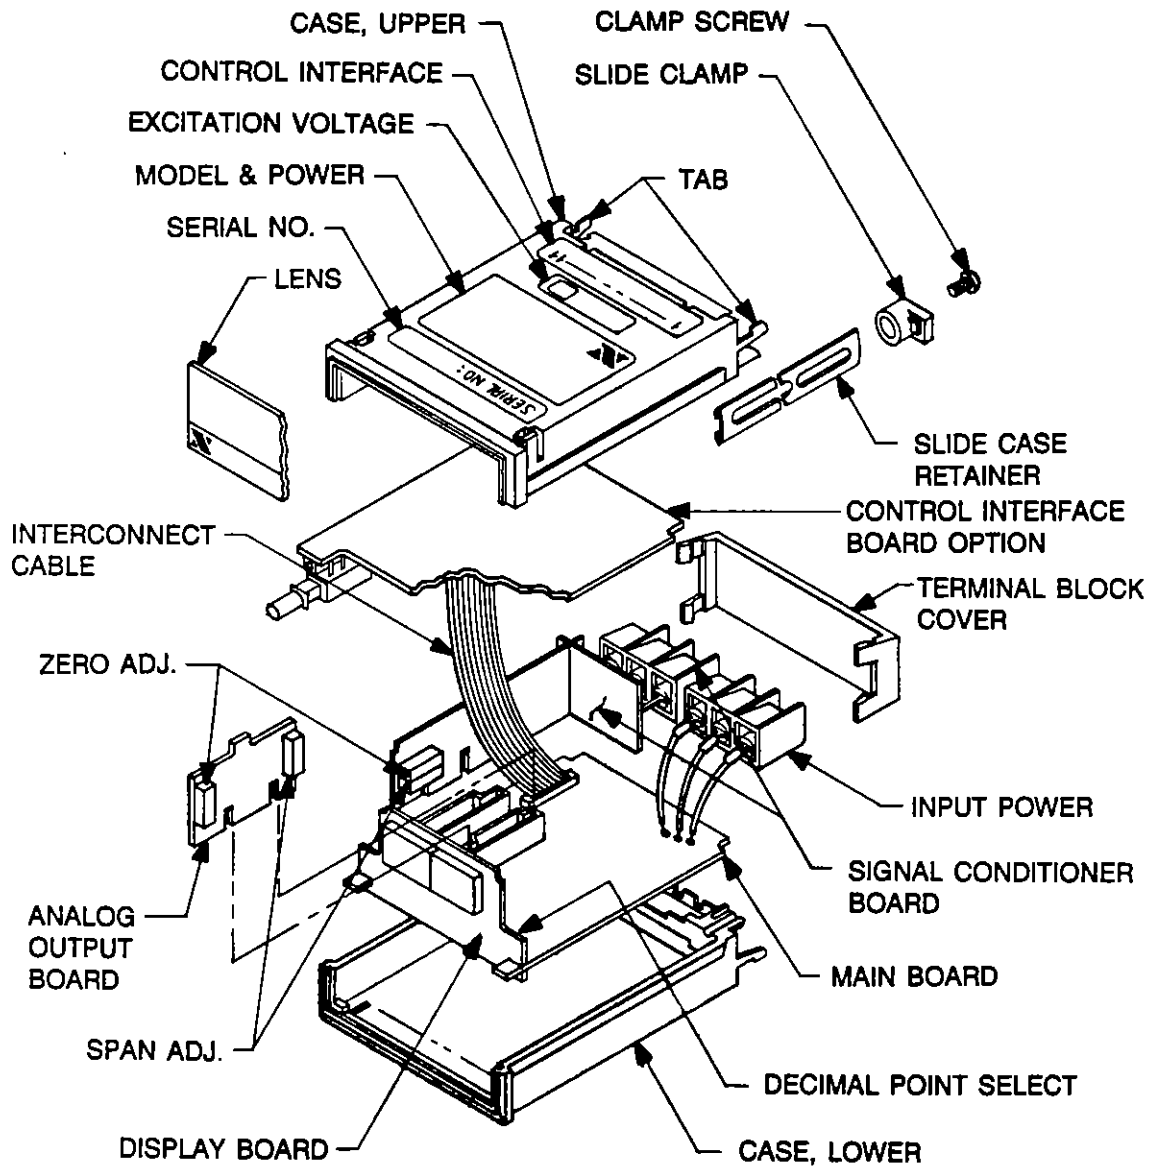



## 26.0 SIGNAL INPUT CONNECTIONS (TB1)

26.1 The signal input connections for the BSCF (Q2XXXF) AC RMS Voltage signal conditioner are made at the standard 3-terminal barrier strip:

Terminal Connection	Signal	Input
4	Signal HI (dc coupled)	●
5	Signal LO	● ————— AC
6	Signal HI (ac coupled)	● ————— COUPLED


Terminal Connection	Signal	Input
4	Signal HI (dc coupled)	● ————— DC
5	Signal LO	● ————— COUPLED
6	Signal HI	●

26.2 The signal input connections for the Q2XXXG (AC RMS Current) signal conditioner are made at the standard 3-terminal barrier strip:

Terminal Connection	Signal	Input
4	Signal HI (dc coupled)	●
5	Signal LO	● ————— AC
6	Signal HI (ac coupled)	● ————— COUPLED

Terminal Connection	Signal	Input
4	Signal HI (dc coupled)	● ————— DC *
5	Signal LO	● ————— COUPLED
6	Signal HI (ac coupled)	● —————

\* Terminal 4 & 6 must be connected. An alternate method is to replace R2 on the signal conditioner barrier board with a wire.

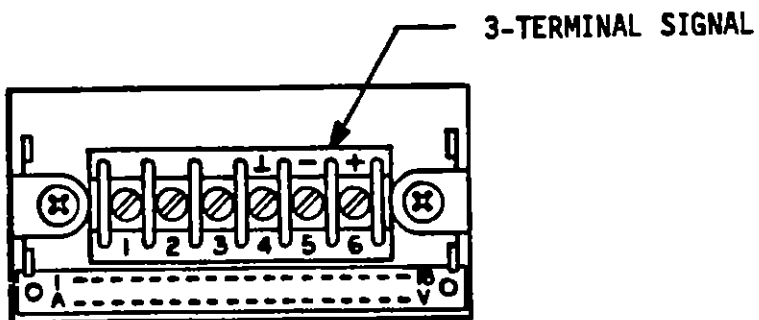

REAR TERMINAL VIEW

## Warranty/Disclaimer

NEWPORT ELECTRONICS, INC. warrants this unit to be free of defects in materials and workmanship for a period of one (1) year from date of purchase. In addition to NEWPORT's standard warranty period, NEWPORT ELECTRONICS will extend the warranty period for one (1) additional year if the warranty card enclosed with each instrument is returned to NEWPORT.

If the unit should malfunction, it must be returned to the factory for evaluation. NEWPORT's Customer Service Department will issue an Authorized Return (AR) number immediately upon phone or written request. Upon examination by NEWPORT, if the unit is found to be defective it will be repaired or replaced at no charge. NEWPORT's WARRANTY does not apply to defects resulting from any action of the purchaser, including but not limited to mishandling, improper interfacing, operation outside of design limits, improper repair, or unauthorized modification. This WARRANTY is VOID if the unit shows evidence of having been tampered with or shows evidence of being damaged as a result of excessive corrosion; or current, heat, moisture or vibration; improper specification; misapplication; misuse or other operating conditions outside of NEWPORT's control. Components which wear are not warranted, including but not limited to contact points, fuses, and triacs.

**NEWPORT is pleased to offer suggestions on the use of its various products. However, NEWPORT neither assumes responsibility for any omissions or errors nor assumes liability for any damages that result from the use of its products in accordance with information provided by NEWPORT, either verbal or written. NEWPORT warrants only that the parts manufactured by it will be as specified and free of defects. NEWPORT MAKES NO OTHER WARRANTIES OR REPRESENTATIONS OF ANY KIND WHATSOEVER, EXPRESSED OR IMPLIED, EXCEPT THAT OF TITLE, AND ALL IMPLIED WARRANTIES INCLUDING ANY WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED. LIMITATION OF LIABILITY: The remedies of purchaser set forth herein are exclusive and the total liability of NEWPORT with respect to this order, whether based on contract, warranty, negligence, indemnification, strict liability or otherwise, shall not exceed the purchase price of the component upon which liability is based. In no event shall NEWPORT be liable for consequential, incidental or special damages.**

CONDITIONS: Equipment sold by NEWPORT is not intended to be used, nor shall it be used: (1) as a "Basic Component" under 10 CFR 21 (NRC), used in or with any nuclear installation or activity; or (2) in medical applications or used on humans. Should any Product(s) be used in or with any nuclear installation or activity, medical application, used on humans, or misused in any way, NEWPORT assumes no responsibility as set forth in our basic WARRANTY/DISCLAIMER language, and additionally, purchaser will indemnify NEWPORT and hold NEWPORT harmless from any liability or damage whatsoever arising out of the use of the Product(s) in such a manner.

## Return Requests/Inquiries

Direct all warranty and repair requests/inquiries to the NEWPORT Customer Service Department. BEFORE RETURNING ANY PRODUCT(S) TO NEWPORT, PURCHASER MUST OBTAIN AN AUTHORIZED RETURN (AR) NUMBER FROM NEWPORT'S CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned AR number should then be marked on the outside of the return package and on any correspondence.

The purchaser is responsible for shipping charges, freight, insurance and proper packaging to prevent breakage in transit.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting NEWPORT:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS, consult NEWPORT for current repair charges. Have the following information available BEFORE contacting NEWPORT:

1. P.O. number to cover the COST of the repair,
2. Model and serial number of product, and
3. Repair instructions and/or specific problems relative to the product.

NEWPORT's policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering.

NEWPORT is a registered trademark of NEWPORT ELECTRONICS, INC.

© Copyright 2006 NEWPORT ELECTRONICS, INC. All rights reserved. This document may not be copied, photocopied, reproduced, translated, or reduced to any electronic medium or machine-readable form, in whole or in part, without prior written consent of NEWPORT ELECTRONICS, INC.



For immediate technical or application assistance please call:

**1-800-6397678®**  
**1-800-NEWPORT**

---

Newport Electronics, Inc.  
2229 South Yale Street • Santa Ana, CA • 92704 • U.S.A.  
TEL: (714) 540-4914 • FAX: (203) 968-7311  
Toll Free: 1-800-639-7678 • [www.newportUS.com](http://www.newportUS.com) • e-mail:[info@newportUS.com](mailto:info@newportUS.com)  
ISO 9001 Certified

---

Newport Technologies, Inc.  
976 Bergar • Laval (Quebec) • H7L 5A1 • Canada  
TEL: (514) 335-3183 • FAX: (514) 856-6886  
Toll Free: 1-800-639-7678 • [www.newport.ca](http://www.newport.ca) • e-mail:[info@newport.ca](mailto:info@newport.ca)

---

Newport Electronics, Ltd.  
One Omega Drive • River Bend Technology Centre  
Northbank, Irlam • Manchester M44 5BD • United Kingdom  
Tel: +44 161 777 6611 • FAX: +44 161 777 6622  
Toll Free: 0800 488 488 • [www.newportuk.co.uk](http://www.newportuk.co.uk) • e-mail:[sales@newportuk.co.uk](mailto:sales@newportuk.co.uk)

---

Newport Electronics spol s.r.o.  
Frystatska 184, 733 01 Karviná • Czech Republic  
TEL: +420 59 6311899 • FAX: +420 59 6311114  
Toll Free: 0800-1-66342 • [www.newport.cz](http://www.newport.cz) • e-mail: [info@newport.cz](mailto:info@newport.cz)

---

Newport Electronics GmbH  
Daimlerstrasse 26 • D-75392 Deckenpfronn • Germany  
TEL: 49 7056 9398-0 • FAX: 49 7056 9398-29  
Toll Free: 0800 / 6397678 • [www.newport.de](http://www.newport.de) • e-mail: [sales@newport.de](mailto:sales@newport.de)

---

Mexico and Latin America  
FAX: 001 (203) 359-7807  
En Español: 001 (203) 359-7803

---

<b>NEWPORTnet<sup>SM</sup> On-Line Service</b> <a href="http://www.newportUS.com">www.newportUS.com</a>
--

<b>Internet e-mail</b> <a href="mailto:info@newportUS.com">info@newportUS.com</a>
--

 **NEWPORT** Electronics, Inc.

10282ML-02 Rev N