BUSSMann[®]

Fuse Holders for $\frac{1}{4}$ " x 1 $\frac{1}{4}$ " and 5 x 20mm Fuses




HTB Panel Mount Series

Description

- For $\frac{1}{4}$ x 1 $\frac{1}{4}$ and 5 x 20mm fuses
- All holder bodies have the option of using
- 1/4" x 1 1/4" or 5 x 20mm carriers
- Withstands 15 to 20 Lb-In torque to mounting nut when mounting fuse holder to panel
- High temperature, flame retardant, Thermoplastic meets UL 94V0

Specifications						
Product	UL Rating	CSA Rating	Voltage	Fuse	Quick	
Code	(amps)	(amps)	Rating	Size	Connect	
HTB-X2I	20	16	250	1⁄4" x 1 1⁄4"	3/16"	
HTB-X4I	20	20 16 250 ¼" x 1 ½		1⁄4" x 1 1⁄4"	3/16"	
HTB-X6I	20	16	250	¼" x 1 ¼"	1/4"	
HTB-X8I	20	16	250	1⁄4" x 1 1⁄4"	1/4"	
HTB-X2M	16	16	250	5 x 20mm	3/16"	
HTB-X4M	16	16	250	5 x 20mm	3/16"	
HTB-X6M	16	16	250	5 x 20mm	1/4"	
HTB-X8M	16	16	250	5 x 20mm	1/4"	

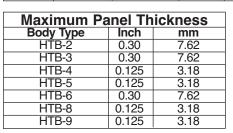

Replacement Parts




Agency Information

- UL Recognized: IZLT2, E14853
- CSA Component Acceptance: Class 6225-01, File 47235
- VDE Certified: 136128, HTB-XXM
- SEMKO Certification: Ref. #0146149/01, HTB-XXM
- CE

Mounting Dimensions - in (mm)

HTB-8, and -9



Dimensions - in (mm)

				Terminal	Options			
Knob Type Carrier			Solder/ ¾″ Quick-Connect		1/4" Quick-Connect		Carrier Options	
		Maximum Panel	In-Line	Rt. Angle	In-Line	Rt. Angle	¼″ x 1 ¼″ ("I" Equals Inches)	5 x 20mm ("M" Equals Metric)
Common Dimensional Data: Length (Knob Type) - 1.69 (42.9mm) Plus In-Line Terminal NOTE: Plus In-Line Terminal		Panei Thickness	0.34" (8.7mm)	0.33"	0.47" (11.9mm)	0.45" O	Knob	
0.47"	0.30″ 7.62mm	HTB-22I-R	HTB-24I-R	HTB-26I-R	HTB-28I-R	3	_	
Low Profile → Rear Hex Nut	← 0.09" NOM. (2.4mm) HTB-2		HTB-22M-R	HTB-24M-R	HTB-26M-R	HTB-28M-R	_	3
0.69" (17.5mm)	(23.0mm)	0.125″ 3.18mm	HTB-42I-R	HTB-44I-R	HTB-46I-R	HTB-48I-R	3	_
High Profile Rear Hex Nut	HTB-4		HTB-42M-R	HTB-44M-R	HTB-46M-R	HTB-48M-R	_	3
0.67"	0.30″	HTB-62I-R	HTB-64I-R	HTB-66I-R	HTB-68I-R	3	_	
Front Hex Nut		7.62mm	HTB-62M-R	HTB-64M-R	HTB-66M-R	HTB-68M-R	—	3
0.47"	(28.6mm)	0.125″	HTB-82I-R	HTB-84I-R	HTB-86I-R	HTB-88I-R	3	_
ow Profile	3.18mm	HTB-82M-R	HTB-84M-R	HTB-86M-R	HTB-88M-R	—	3	


Fuseholders and fuse carriers may be ordered separately

Dimensions - in (mm)

		Terminal Options					
Screwdriver Type Carrier		Solder/ 3/16" Quick-Connect		1/4" Quick-Connect		Carrier Options	
	Maximum	In-Line	Rt. Angle	In-Line	Rt. Angle	¼″ x ¼″ ("I" Equals Inches)	5 x 20mm ("M" Equals Metric)
	Panel					Screwdriver	Screwdriver
Common Dimensional Data: (Screwdriver Slotted) 1.75″ (44.5mm) NOTE: Plus In-Line Terminal			0.33" 1 0	0.47" (11.9mm)	0.45" (11.5mm)		
0.17"	0.30″ 7.62mm	HTB-32I-R	HTB-34I-R	HTB-36I-R	HTB-38I-R	3	_
Low Profile Rear Hex Nut HTB-3		HTB-32M-R	HTB-34M-R	HTB-36M-R	HTB-38M-R	—	3
0.41"	0.125″ 3.18mm HTB-5	HTB-52I-R	HTB-54I-R	HTB-56I-R	HTB-58I-R	3	_
High Profile Rear Hex Nut HTB-5		HTB-52M-R	HTB-54M-R	HTB-56M-R	HTB-58M-R	_	3
0.17" (4.37mm)	0.125″ 3.18mm	HTB-92I-R	HTB-94I-R	HTB-96I-R	HTB-98I-R	3	_
Low-Profile Snap-In HTB-9		HTB-92M-R	HTB-94M-R	HTB-96M-R	HTB-98M-R	_	3

Fuseholders and fuse carriers may be ordered separately.

Ordering Information

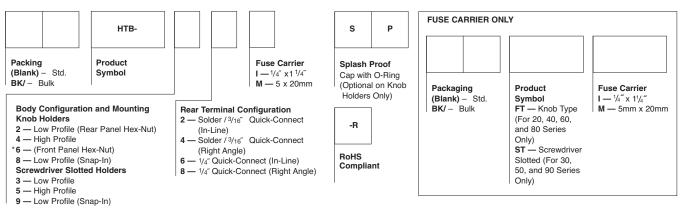

*Profile varies with panel thickness. Holder installs thru rear of panel.

Packaging				
Packaging Code Prefix Description				
Blank 10 fuse holders packed into a carton				
BK	100 fuse holders packed into a cardboard shelf package			

The only controlled copy of this Data Sheet is the electronic read-only version located on the Cooper Bussmann Network Drive. All other copies of this document are by definition uncontrolled. This bulletin is intended to clearly present comprehensive product data and provide technical information that will help the end user with design applications. Cooper Bussmann reserves the right, without notice, to change design or construction of any products and to discontinue or limit distribution of any products. Cooper Bussmann also reserves the right to change or update, without notice, any technical information contained in this bulletin. Once a product has been selected, it should be tested by the user in all possible applications.

Life Support Policy: Cooper Bussmann does not authorize the use of any of its products for use in life support devices or systems without the express written approval of an officer of the Company. Life support systems are devices which support or sustain life, and whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.

© 2009 Cooper Bussmann St. Louis, MO 63178 www.cooperbussmann.com





Bussmann[®]

PowerStor

