Touch Switch Type Temperature Controller

NEW

▣Features

- Realizes ideal temp. controlling with newly developed PID control algorithm and 100ms high speed sampling
- **Relay output and SSRP output embodied together : SSRP output makes phase control and cycle control possible.**
- Dramatically increased visibility using wide display part
- Mounting space saving with compact design : Approx. 38% reduced size compared with existing model(depth-based)
- SV/PV deviation indicatable

Please read "Caution for your safety" in operation manual before using.

▣Ordering information

T C 4 S – 1 4 R

Control output	N	Indicator – Without control output
	R	Relay output+SSRP output
Power supply	4	100-240VAC 50/60Hz
Alarm output	N	No alarm output
	1	Alarm1 output
(※1)	2	Alarm1 output+Alarm2 output
Size	S	DIN W48×H48mm(Terminal block type)
(※2)	SP	DIN W48×H48mm(Plug type)
	Y	DIN W72×H36mm
	M	DIN W72×H72mm
	H	DIN W48×H96mm
	W	DIN W96×H48mm
	L	DIN W96×H96mm
Digit	4	4Digit
Setting type	C	Set by touch switch
Item	T	Temperature controller

(※1) It is unavailable for TC4SP, TC4Y.
(※2) TC4SP sockets (PG-11, PS-11) are sold separately.

▣Specifications

Series		TC4S	TC4SP	TC4Y	TC4M	TC4H	TC4W	TC4L
Power supply		100-240VAC 50/60Hz						
Allowable voltage range		90~110% of rated voltage						
Power consumption		Max. 5VA						
Display method		7Segment(Red), Other display(Green, Yellow, Red LED)						
Character size		W7×H15mm		W7.4×H15mm	W9.5×H20mm	W7×H14.6mm	W9.5×H20mm	W11×H22mm
Input type	RTD	DIN Pt100Ω(Allowable line resistance max. 5Ω per a wire)						
	TC	K(CA), J(IC)						
Display method	TC, RTD	(★1) (PV ±0.5% or ±1℃ higher one) rdg ±1Digit (★2) ※TC4SP (Plug type) is (PV ±0.5% or ±2℃ higher one) rdg ±1Digit ☞Based on normal temperature(23℃ ±5℃)						
Control output	Relay	250VAC 3A 1a						
	SSRP	12VDC ±2V 20mA Max.						
Sub output		AL1, AL2 relay output : 250VAC 1A 1a(※TC4SP, TC4Y have AL1 only.)						
Control method		ON/OFF and P, PI, PD, PID control						

※**(★1)**(PV ±0.5% or ±2℃ higher one) rdg ±1Digit, except normal temperature range.
※**(★2)**TC4SP is (PV ±0.5% or ±3℃ higher one) rdg ±1Digit, except normal temperature range.

Downloaded from Elcodis.com electronic components distributor

▣Specifications

Series	TC4S	TC4SP	TC4Y	TC4M	TC4H	TC4W	TC4L
Hysteresis	1 ~ 100℃(KCA,JIC,PT1) / 0.1 ~ 50.0℃(PT2)						
Proportional band	0.1 ~ 999.9℃						
Integral time(I)	9999sec.						
Derivative time(D)	9999sec.						
Control period	0.5 ~ 120.0sec.						
Manual reset	0.0 ~ 100.0%						
Sampling period	100ms						
Dielectric strength	2000VAC 50/60Hz for 1min.(Between input terminal and power terminal)						
Vibration	0.75mm amplitude at frequency of 5~55Hz in each X, Y, Z directions for 2 hours						
Relay life cycle Mechanical	Mechanical : Min. 10,000,000 operations, Electrical : Min. 100,000 operations(250VAC 3A resistive load)						
Relay life cycle Electrical	Mechanical : Min. 10,000,000 operations, Electrical : Min. 300,000 operations(250VAC 1A resistive load)						
Insulation resistance	Min. 100MΩ(at 500VDC mega)						
Noise	Square shaped noise by noise simulator(pulse width 1㎲)±2kV R-phase and S-phase						
Memory retention	Approx. 10 years (When using non-volatile semiconductor memory type)						
Ambient temperature	-10 ~ 50℃(at non-freezing status)						
Storage temperature	-20 ~ 60℃(at non-freezing status)						
Ambient humidity	35 ~ 85%RH						
Unit weight	Approx. 97g	Approx. 84g	Approx. 127g	Approx. 127g	Approx. 118g	Approx. 118g	Approx. 172g
Approval	CE cULus						

▣Connections

※TC4 series has both Main Out and SSR Out. You may select the model as your needs.

●TC4S

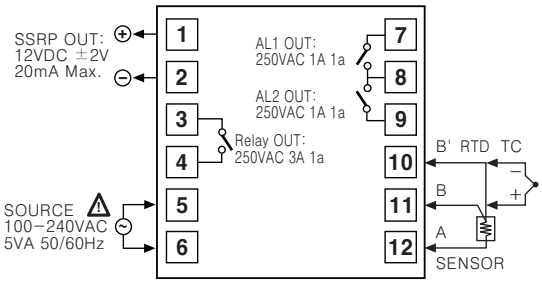

●TC4SP

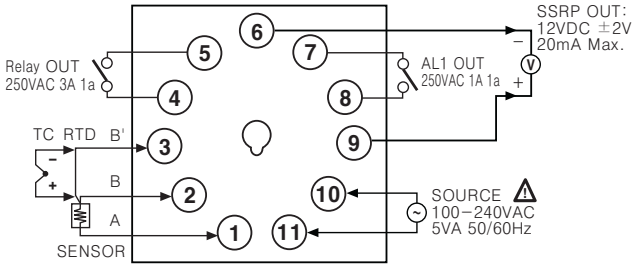

●TC4Y

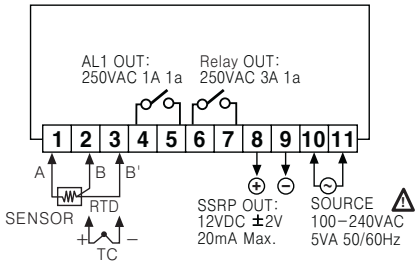

●TC4W

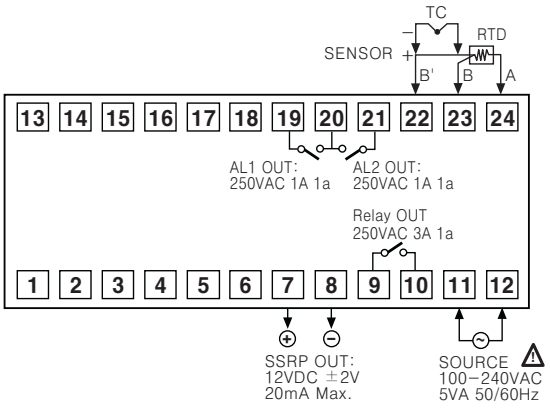

Downloaded from Elcodis.com electronic components distributor

●TC4M

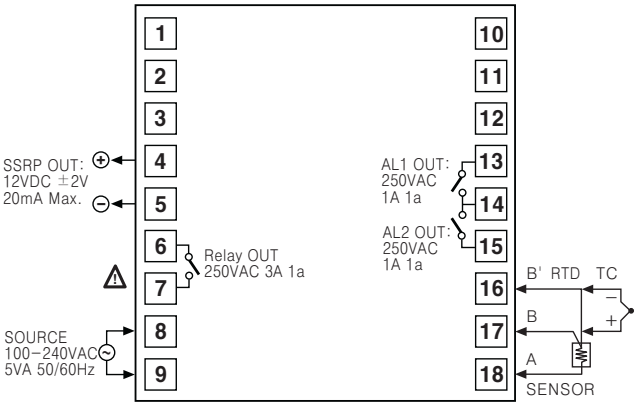

●TC4H/L

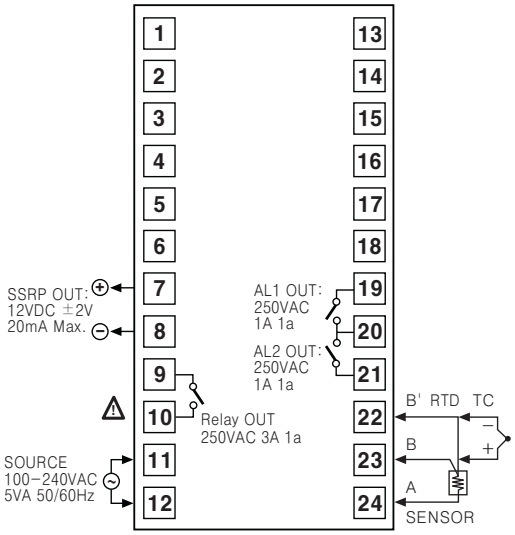

▣Dimensions

●TC4S

●Bracket

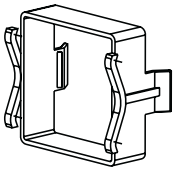

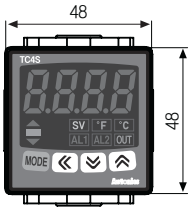

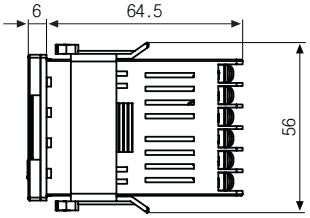

●Panel cut-out

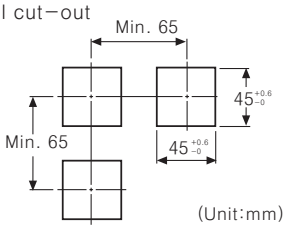

(Unit:mm)

●TC4SP

●Bracket

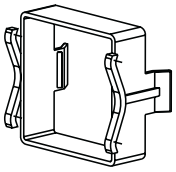

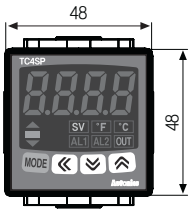

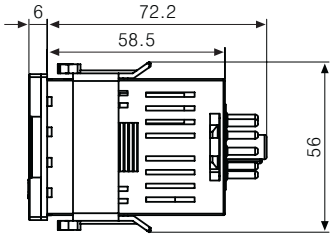

●Panel cut-out

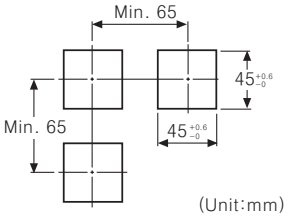

(Unit:mm)

●TC4Y

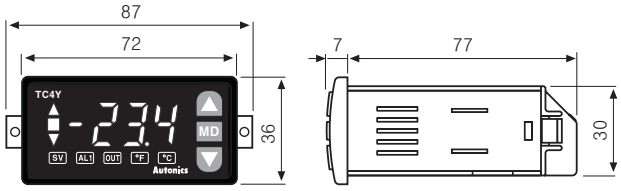

●Panel cut-out

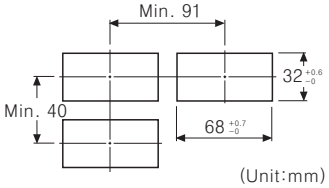

(Unit:mm)

●TC4M

●Bracket

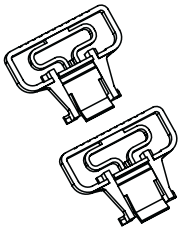

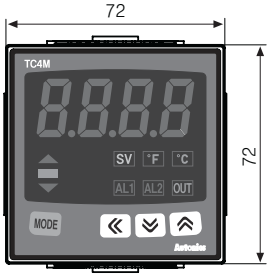

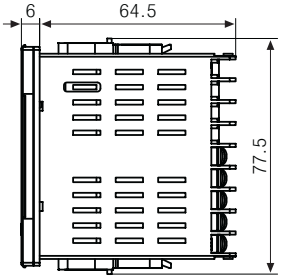

●Panel cut-out

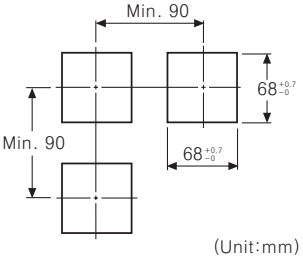

(Unit:mm)

Downloaded from Elcodis.com electronic components distributor

●**TC4H**

●Bracket

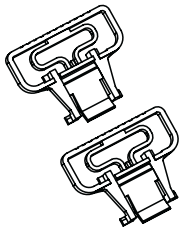

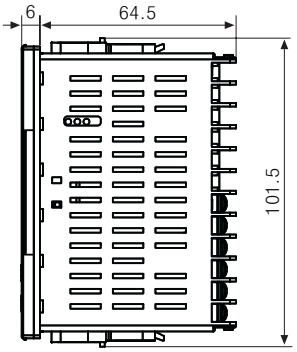

●Panel cut-out

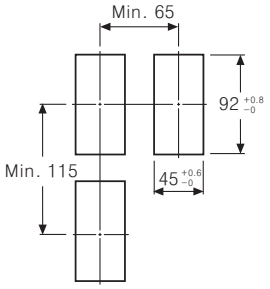

(Unit:mm)

●**TC4W**

●Bracket

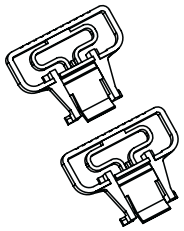

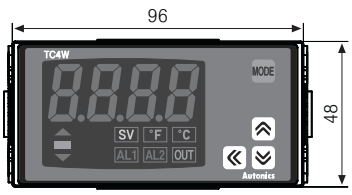

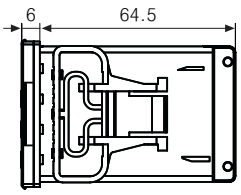

●Panel cut-out

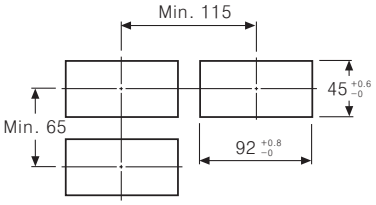

(Unit:mm)

●**TC4L**

●Bracket

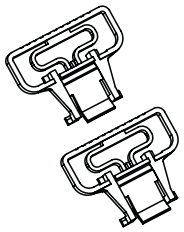

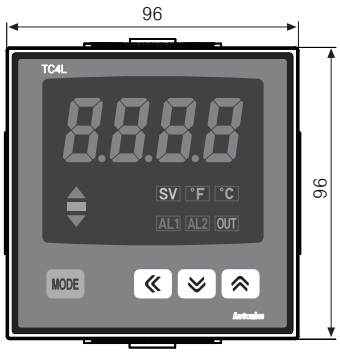

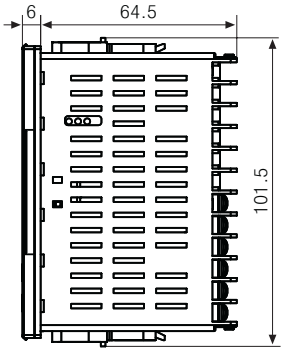

●Panel cut-out

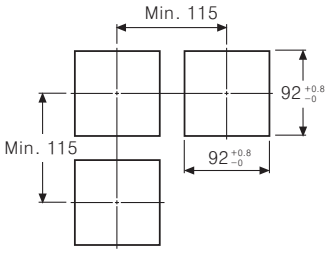

(Unit:mm)

▣Product mounting

●TC4S/SP(48×48mm) series

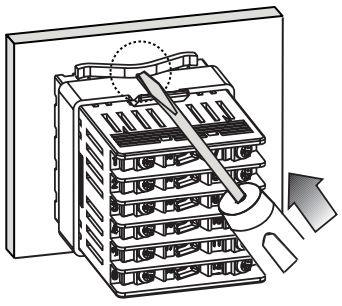

●TC4Y(72×36mm) series

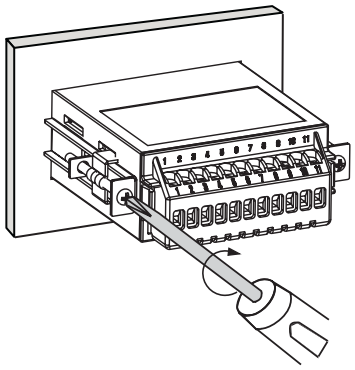

●Other series

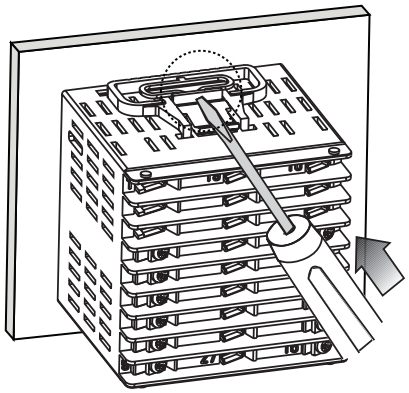

※Insert product into a panel, fasten bracket by pushing with tools as shown above.
(In case of TC4Y, fasten the bracket bolts.)

Downloaded from Elcodis.com electronic components distributor

▣SSRP(Solid State Relay Phase Output) output function[SSr.n]

- ●SSRP is a user selectable output type which phase control and cycle control are added to standard SSR drive output.
- ●Standard SSR output is still available by internal parameter setting [SSr.n]; in addition, "cycle control" with connecting Zero cross turn-on type SSR or Random turn-on type SSR and "phase control" with connecting Random turn-on type SSR are also available.
- ●Realizing high accuracy and cost effective temperature control with both current output(4-20mA) and linear output(cycle control and phase control).

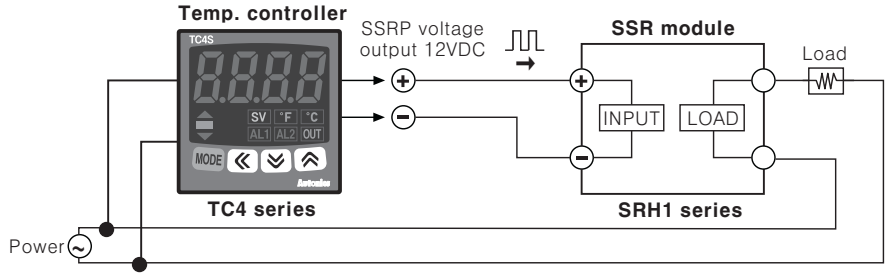

※You can select the functions with parameter settings.

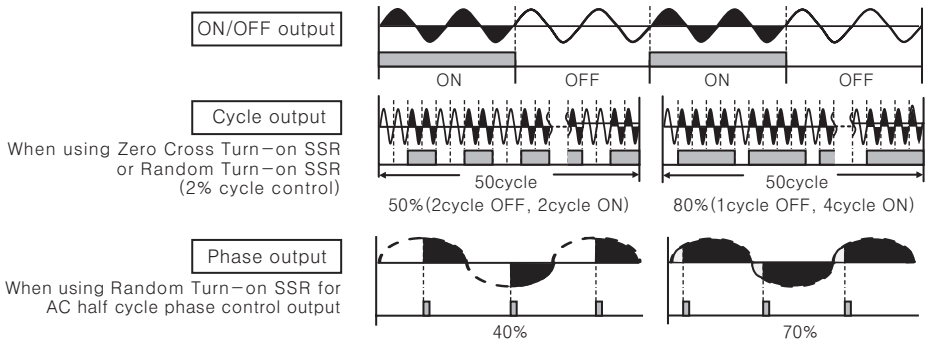

- ●Standard control mode[Stnd]
  A mode to control the load in the same way as RELAY output type.(ON: output level 100%, OFF: output level 0%)
- ●Cycle control mode[CYCL]
  A mode to control the load by repeating output ON / OFF according to the rate of output within setting cycle
  Having improved ON / OFF noise feature(ZERO CROSS type)
- ●Phase control mode[PHAS]
  A mode to control the load by controlling the phase within AC half cycle.
  Serial control is available
  RANDOM Turn-on type SSR must be used for this mode.

※When selecting phase or cycle control mode, the power supply for load and temperature controller must be the same.
※In case of selecting PID control type and phase / cycle control output modes, control cycle (t) is not allowed to set.

▣Parts description

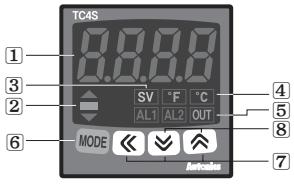

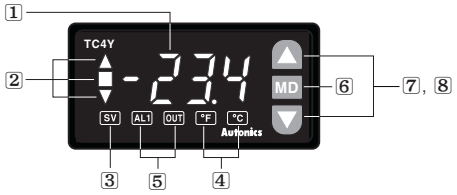

1 Temperature display
It shows current temperature(PV) in RUN mode and parameter and set value for each setting group in parameter change mode.

2 Deviation and Auto-tuning indicator
It shows current temperature(PV) based on set temperature(SV) by LED.
Deviation indicators(▲, ■, ▼) are flashed by every 1sec when operating auto-tuning.

3 Set temperature(SV) indicator
Press any front key once to check or change current set temperature(SV), set temperature(SV) indicator is on and preset set value is flashed.

4 Temperature unit(℃/°F) indicator : It shows current temperature unit.

5 Control/alarm output indicator
- -OUT : It will light up when control output(Main Control Output) is on.
  ※It will light up over 3.0% of operation in CYCLE/PHASE control.
- -AL1/AL2 : It will light up when alarm output AL1/AL2 are on.

6 MODE Key : Used when entering into parameter setting group, returning to RUN mode, moving parameter and saving setting values.

7 Adjustment : Used when entering into set value change mode, Digit moving and Digit Up/down.

8 FUNCTION key : Press ⋙+⋀ keys for 3 sec to operate function(RUN/STOP, alarm output cancel) set in inner parameter[di -U].
※Press ⋙+⋀ keys once in set value operation to move digit.

Downloaded from Elcodis.com electronic components distributor

▣Flow chart for setting group

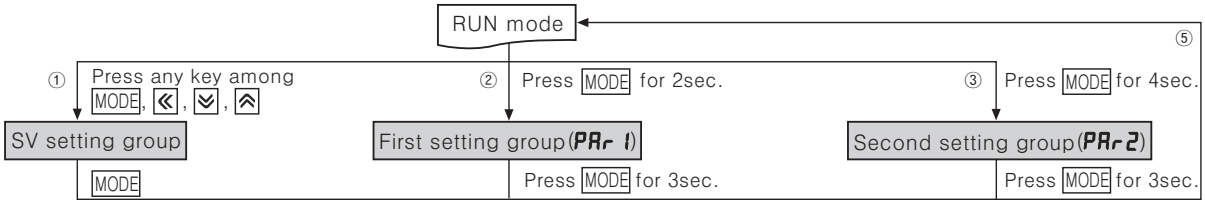

④

AL 1	Alarm1 setting value
AL2	Alarm1 setting value
At	Auto-tuning execute
P	Proportional band
I	Integral time
d	Derivation time
rESt	Manual reset
HYS	Hysteresis

In-t	Input type
Unit	Temperature unit
In-b	Input bias
nAuF	Input digital filter
L-Su	SV low limit
H-Su	SV high limit
o-Ft	Control operating type
C-nd	Control method
oUt	Control output type
SSr.n	SSRP output method
t	Control time
AL-1	Alarm1 mode
AL-2	Alarm2 mode
AHYS	Alarm hysteresis
LbAt	LBA monitoring time
LbAS	LBA detection setting value
LbAb	LBA detection band
dI-Y	Function key operation
Er.nu	Input error MV
LoC	Lock

※Parameter marked in ⬚ might not be displayed depending on other parameter settings.

①Press any key once in RUN mode, it advances to set value setting group.
②Press MODE key over 2sec in RUN mode, it advances to setting group 1.
③Press MODE key over 4sec in RUN mode, it advances to setting group 2.
④First parameter will be displayed on viewer when it advances to the setting group.
⑤Press MODE key over 3sec in the setting group, it returns to RUN mode.
[※Exception : Press MODE key once in setting group of set value, it returns to RUN mode.]

※If no key touched for 30sec, it will return to RUN mode automatically and the set value of parameter will not be changed.
※Press MODE key again within a sec after return to RUN mode by press MODE key over 3sec, it advances to the first parameter of previous setting group.
※Parameter setup
Setting group2 → Setting group1 → Setting group of set value
- Set parameter as the above considering parameter relation of each setting group.
- Check parameter set value after change parameter of setting group2.
- Parameter marked in ⬚ would not be displayed by another parameter setting.

※Indicator type displays colored parameter of setting group2.
※AL2 and AL-2 parameter display is available with only "Alarm output 1 + Alarm output 2" model.
※AHYS parameter will not be displayed when AL-1 or AL-2 is set to LBA or HBA.

▣Flow chart for SV setting group(※To change preset temperature 210℃ into 250℃.)

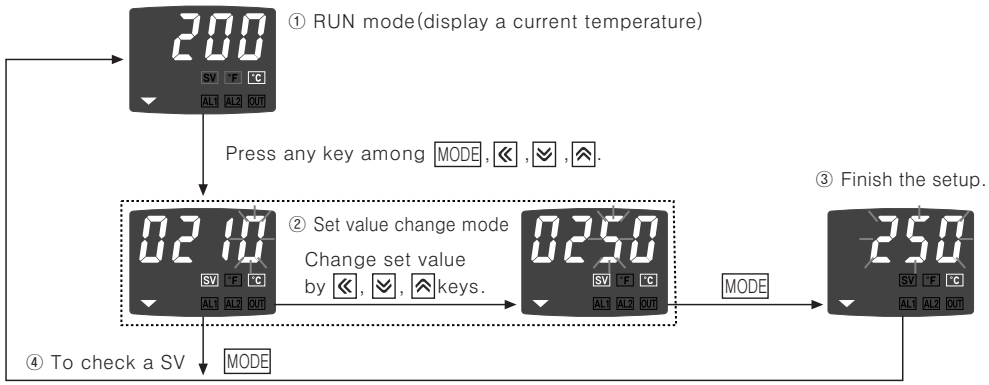

Downloaded from Elcodis.com electronic components distributor

▣Flow chart for first setting group

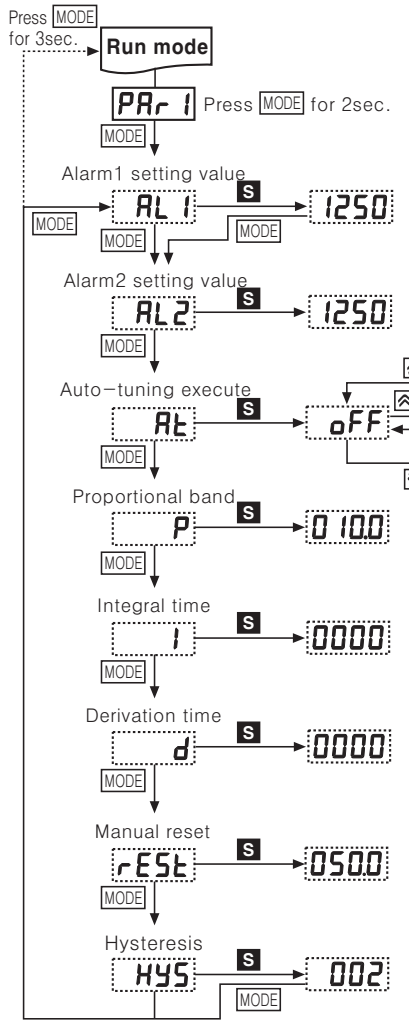

※ S : Press any key among ≪, ≫, ≫.

※After checking or changing setting value in each parameter, press MODE key to save and move to next parameter setting.

Setting range : Deviation alarm(−[F.S]~[F.S], Absolute value alarm(Input range)
※In case alarm operation mode (AL-1) is set to [AnO_/SbA. /LbA_], no parameters will be displayed.

Setting range : Deviation alarm(−[F.S]~[F.S], Absolute value alarm(Input range)
※In case alarm operation mode (AL-2) is set to [AnO_/SbA. /LbA_], no parameters will be displayed.

※It starts to operate auto−tuning when it is ON and set as OFF automatically after finish the operation.
※**Front deviation indicator(▲, ■, ▼)** will be flickering(cycle:1 sec) during auto tuning function.

Setting range : **0.1 ~ 999.9℃**

Setting range : **0 ~ 9999sec.**
※Integral operation will be OFF when set value is "0".

Setting range : **0 ~ 9999sec.**
※Derivative operation will be OFF when set value is "0".

※It will be displayed only if control method parameter(C-Ad) is set as [PId].

Setting range : **0.0 ~ 100.0%**
※It will be displayed in P/PD control and not in ON/OFF and PI/PID control.

Setting range : **1 ~ 100℃ [0.1~50.0℃]**
※It will be displayed in ON/OFF control.

▣Flow chart for second setting group

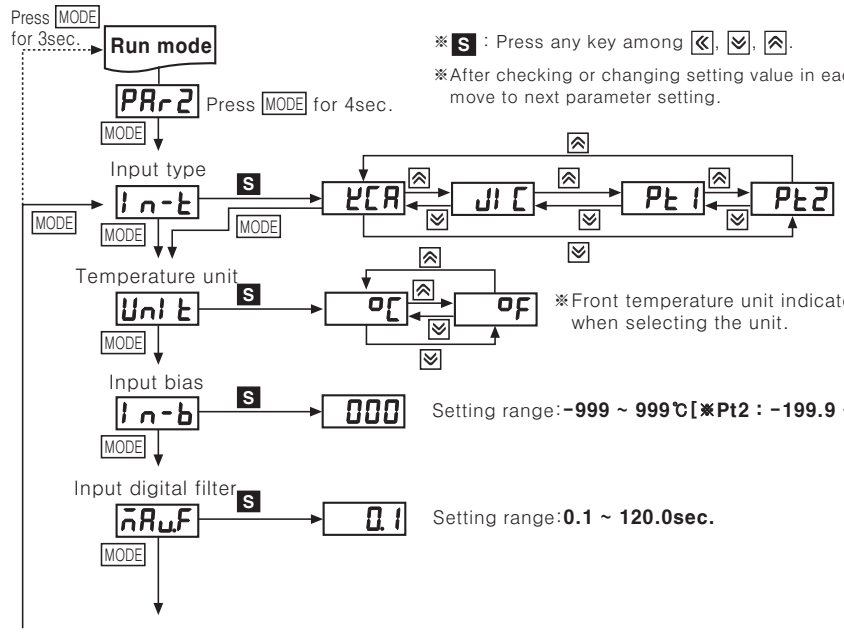

※ S : Press any key among ≪, ≫, ≫.

※After checking or changing setting value in each parameter, press MODE key to save and move to next parameter setting.

※Front temperature unit indicator will be flickering when selecting the unit.

Setting range:**−999 ~ 999℃[※Pt2 : −199.9 ~ 999.9℃]**

Setting range:**0.1 ~ 120.0sec.**

Downloaded from Elcodis.com electronic components distributor

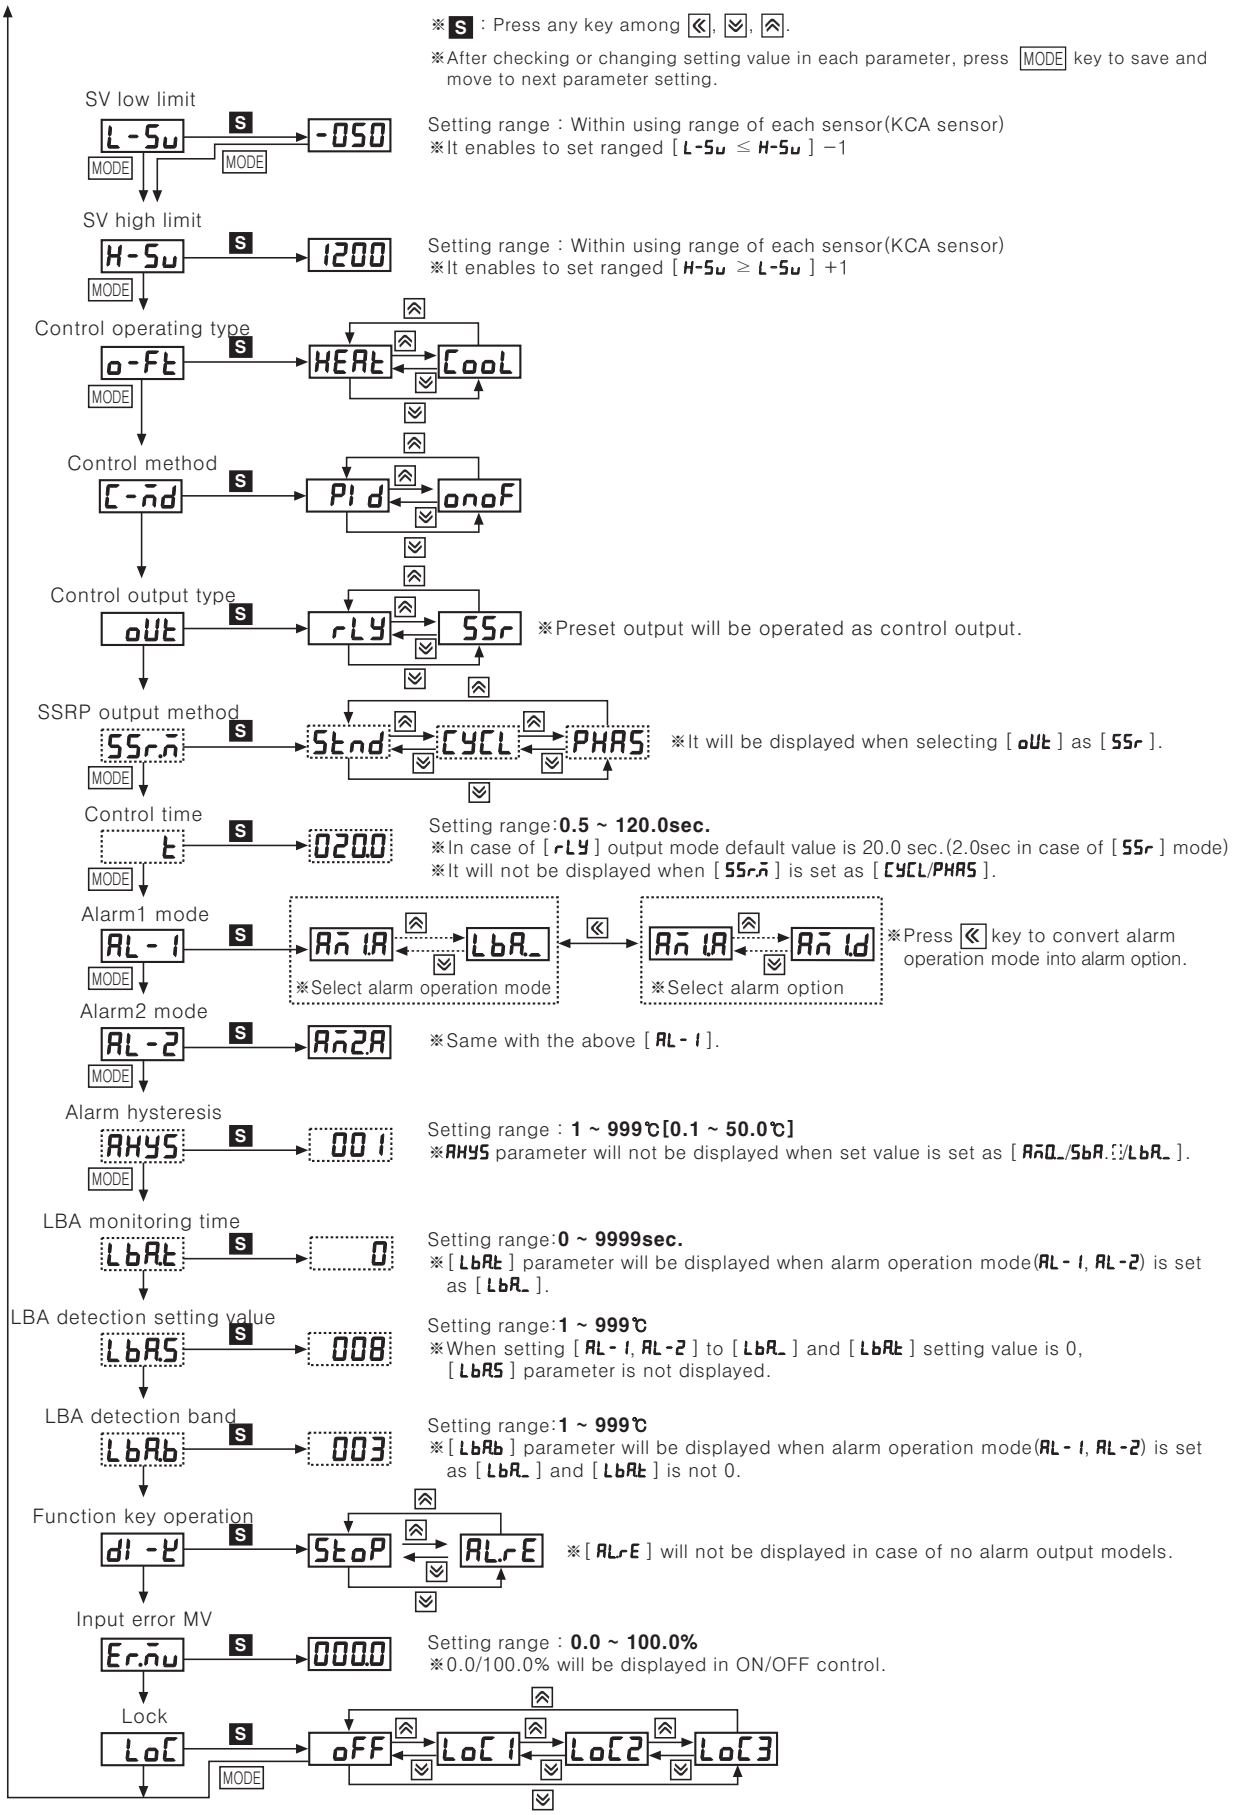

Downloaded from Elcodis.com electronic components distributor

▣Factory default

●First setting group

Mode	Setting value	Mode	Setting value	Mode	Setting value	Mode	Setting value
AL 1	1250	At	oFF	I	0	rESt	500
AL2	1250	P	100	d	0	HYS	2

●Second setting group

Mode	Setting value	Mode	Setting value	Mode	Setting value	Mode	Setting value	Mode	Setting value
In-t	KCA	L-SL	-50	oUt	rLY	AL-2	AM2A	LbAb	3
Unit	°C	H-SL	1200	SSr.M	Stnd	AHYS	1	dI-2	StoP
In-b	0	o-Ft	HEAt	t	20.0	LbA.t	0	Er.Mu	0.0
MAuF	0.1	C-Md	PId	AL-1	AM 1A	LbAS	8	LoC	oFF

▣Input sensor and range[In-t]

●Select proper input sensor type by user application.

Input sensor			Display	Input range ℃	Input range °F
ThermoCouple	K(CA)		KCA	−50 ~ 1200℃	−58 ~ 2192°F
	J(IC)		JIC	−30 ~ 500℃	−22 ~ 932°F
RTD	DIN rated	Pt 1	Pt 1	−100 ~ 400℃	−148 ~ 752°F
		Pt 2	Pt2	−100.0 ~ 400.0℃	−148.0 ~ 752.0°F

▣Function

See C−25 page for TC / TD common features.

◎SV / PV deviation display function

A function to display SV / PV deviation on front lamp

●When PV is higher than SV over +2℃(+2.0℃), ▲(RED) lamp is ON. (PV > SV + 2.0℃)

●When PV / SV deviation is ±2℃(±2.0℃), ■(GREEN) lamp is ON.(SV + 2.0℃ ≥ PV ≥ SV − 2.0℃)

●When PV is lower than SV over −2℃(−2.0℃), ▼(RED) lamp is ON.(PV < SV − 2.0℃)

◎Control output type selection[oUt]

●A function to select control output type; Relay output(rLY), SSRP voltage output(SSr).

※In case of selecting SSRP voltage output, SSRP output method(SSr.M) selection parameter is displayed.

◎Lock setting[LoC]

●It locks set value and parameter change of the group.

●It enables to check parameter set value of locked setting group.

Display	Description
oFF	Lock off
LoC 1	Lock setting group 2
LoC2	Lock setting group 1, 2
LoC3	Lock setting group 1, 2, SV setting group

※oFF, LoC 1 are available only for indicator(TC4□−N□N).

◎Error

●Error mark will flash(every 1sec) in PV viewer when error is occurred during the control operation.

Display	Description
oPEn	If input sensor is disconnected or sensor is not connected.
HHHH	If measured sensor input is higher than temperature range.
LLLL	If measured sensor input is lower than temperature range.

●It will operate normally, if input sensor is connected or returned to normal range under error oPEn / HHHH / LLLL status.

◎Output connections

●Application of relay output type

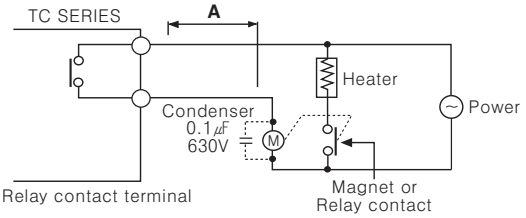

Keep power relay as far away as possible from temperature controller. If wires length of **A** is short, electromotive force occurred from a coil of magnet switch & power relay may flow in power line of the unit, it may cause malfunction. If wires length of **A** is short, please connect a mylar condenser 104(630V) across coil of the power relay "Ⓜ" to protect electromotive force.

●Application of SSRP output method

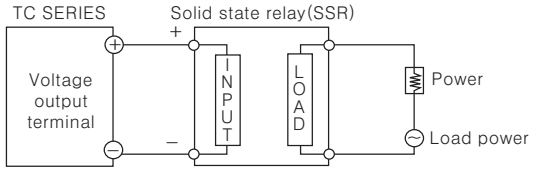

※SSR should be selected by the capacity of load, otherwise, it may short−circuit and result in a fire. Indirect heated should be used with SSR for efficient working.

※Please use a cooling plate or it may cause the capability deterioration, breakdown of SSR for a long usage.

※Refer to C−12 page for phase / cycle control connections.

Downloaded from Elcodis.com electronic components distributor