

High Precision, 2-color Display Digital Pressure Switch Series ZSE30/ISE30

How to Order Option 1 Without lead wire Nil Lead wire with connector (Lead wire length: 2 m) L ISE30 – 01 25 M For positive pressure For vacuum/low pressure ZSE30 -25 01 M Piping specifications • Option 2 Nil None R 1/8 01 Bracket (With M5 female thread) NPT 1/8 T1 Α (With M5 female thread) ø4 One-touch fitting Straight type C4H ø5/32" One-touch fiting Output specifications Panel mount 25 NPN output C6H ø6 One-touch fitting 65 PNP output в 26 1 to 5 V output N7H ø1/4" One-touch fitting 28 4 to 20 mA output ø4 One-touch fitting Elbow type C4L ø5/32" One-touch fitting Panel mount adapter + Front protective C6L ø6 One-touch fitting cover D N7L ø1/4" One-touch fitting

Option Part No.

When optional parts are required separately, use the following part numbers to place an order.

Option	Part no.	Note
Lead wire with connector	ZS-27-A	Lead wire length: 2 m
Bracket	ZS-27-B	With mounting screws (M3 x 5L: 2 pcs.)
Panel mount adapter	ZS-27-C	With M3 x 8L (2 pcs.)
Panel mount adater + Front protective cover	ZS-27-D	With M3 x 8L (2 pcs.)

•Unit specifications

 Nil
 With unit switching function

 M
 Fixed SI unit (International System of Units) Note)

 Note)
 Fixed unit: For vacuum/Low pressure: kPA

For positive pressure: MPa



High Precision, 2-color Display Digital Pressure Switch Series ZSE30/ISE30

Specifications



		ZSE30 (Vacuum/Low pressure)	ISE30 (Positive pressure)		
Rated pr	essure range	-100.0 to 100.0 kPa	-100.0 to 100.0 kPa 0.000 to 1.000 MPa		
Regulating pressure range		–101.0 to 101.0 kPa	-0.100 to 1.000 MPa		
Proof pre	essure	500 kPa	1.5 MPa		
Min. regu	ulating unit	0.2 kPa	0.001 MPa		
Fluid		Air, Inert gas, No	n-flammable gas		
Power su	upply voltage	12 to 24 VDC, Ripple (p-p) 10% or less	(With power supply polarity protection)		
Current of	consumption	45 mA or les	s (at no load)		
Switch o	utput Note 1)	NPN or PNP open col	lector output: 1 output		
	Max. load current	80	mA		
	Max. applied voltage	30 V (With 1	NPN output)		
	Residual voltage	1 V or less (With loa	ad current of 80 mA)		
	Response time	2.5 ms or less (Response time selections with	anti-chattering function: 20, 160, 640, 1280 ms)		
	Short circuit protection	Ye	es		
Repeata	bility	±0.2% F.S. ±2 digit or less	±0.2% F.S. ±1 digit or less		
	Voltage output	Dutput voltage: 1 to 5 V ±2.5% F.S. or less (With rated pressure range) Linearity: ±1% F.S. or less, Output impedance: Approx. 1 kΩ			
Analog output Note 3)		Output current: 4 to 20 mA ±2.5% F.S. or less (With rated pressure range) Linearity: ±1% F.S. or less			
	Current output	Maximum load impedance: 500Ω with power supply voltage of 12 V; 600Ω with power supply voltage of 24 V Minimum load impedance: 50Ω			
	. Hysteresis mode		•		
Hysteres	Window comparator mode	Adjustable (car	n be set from 0)		
Display		3 1/2 digit, 7-segment indicator, 2-color display (Red and green) Sampling cycle: 5 times/s			
Display a	accuracy	±2% F.S. ±2 digit	±2% F.S. ±1 digit		
		(at 25°C ambient temperature)	(at 25°C ambient temperature)		
Indicator	0	0 1	put is ON (Green)		
	ture characteristics		(based on 25°C)		
	iclosure		40		
dO Ital	erating temperature range	Operating: 0 to 50°C, Stored: -10 to			
Environmental resistance	perating humidity range		85% RH (No condensation)		
and	thstand voltage		en live parts and enclosure		
Environme esistance	sulation resistance		rts and enclosure (at 500 VDC)		
шĩ	oration resistance		ude in X, Y, Z directions for 2 hours each		
Im	pact resistance	100 m/s ² in X, Y, Z directions 3 times each			
Standard	4	Compliant with CE Markin	g and UL (CSA) standards		

Note 1) When switch output is selected, analog output is not available.

Note 2) When voltage output is selected, a simultaneous selection of switch output and current output is not available.


Note 3) When current output is selected, a simultaneous selection of switch output and voltage output is not available.

Piping Specifications

Part		01	T1	C4H	C6H	N7H	C4L	C6L	N7L
		R 1/8 M5 x 0.8	NPT 1/8 M5 x 0.8	_	_	_	_	—	_
Port size	One-touch fitting Straight type	_	_	ø4 mm ø5/32 inch	ø6 mm	ø1/4 inch	_	_	_
	One-touch fitting Elbow type	_	_	_			ø4 mm ø5/32 inch	ø6 mm	ø1/4 inch
Sensor pressure receiving area:				iving area: Sili	ng area: Silicon, Piping port: C3602 (Electroless nickel plated), O-ring: HNBR				
Wetted part material			O-ring: NBR			O-ring: NBR, fitting: PBT			
	With lead wire with connector (2 m)	81	g	76 g		78 g			
Weight	Without lead wire with connector	43	8 g	38 g		40 g			



Setting

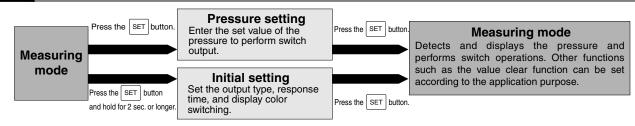

Initial Setting

Initial setting mode

Press and hold the SET button for 2 seconds or longer. Display monitor will be per Figure A below, and the switch will now be in the display color setting mode.




If the unit specification indicated at the time of ordering is "M", the fixed SI unit will be used. If it is Nil, refer to "Unit Switching Function" on page 16-2-8.

1. Display color setting

Select the color for LCD display.

Press the $\triangle UP$ or $\nabla DOWN$ button to choose a display color.

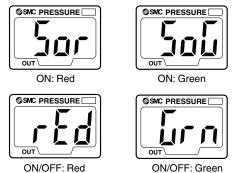


Press the SET button to set the color and proceed to the operating mode setting.

If the analog output is set, press the $\triangle \text{UP_or} \ensuremath{\,\bigtriangledown} \text{DOWN}$ button and select the desired display color from $\lim_{n \to \infty} (Green)$ or r Ed(Red). Press the SET button to exit this mode and return to the measuring mode.

2. Operating mode setting

This mode will let you select the switch operating mode. While the current operating mode is displayed, press the △UP or *¬*DOWN button to select a newly desired operating

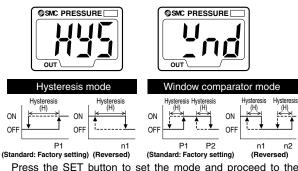

Press the SET button to set the mode and proceed to the output type setting.

3. Output type setting

The type of switch output can be set arbitrarily.

While the current output type is displayed, press the ∇DOWN button to switch between normally open no and normally closed n[.






Normally closed

Press the SET button to set the output type and proceed to the response time setting.

4. Response time setting

The switch output response time can be set arbitrarily. Chattering can be prevented with a response time setting. While the current response time is displayed, press the $\triangle UP$ or ∇DOWN button to select a new response time.

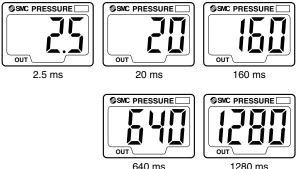


Press the SET button to set the response time and proceed to the auto preset setting.

If the operating mode is the window comparator mode, press the SET button to return to the measuring mode.

5. Auto preset setting

This function stores the measuring pressure that is set during the auto preset mode as a basic value.

While the current setting is displayed, press the $\triangle UP$ or ∇DOWN button to select it as an auto preset setting.

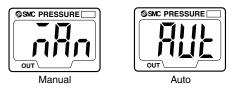

Press the SET button to set the auto preset and return to the measuring mode.


Downloaded from Elcodis.com electronic components distributor



Pressure setting

Manual setting

Press the SET button in the measuring mode to display the set value. P_{\perp} and the current set value blink alternately.

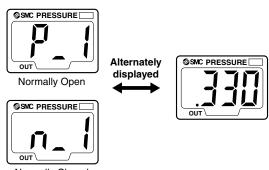

Normally Closed

Press the SET button to display the next set value. Press the \triangle UP or ∇ DOWN button to change the value. (Refer to "How to Set Value" on the lower right hand corner of this page.)

Hysteresis mode

In this mode, hysteresis (H) and the set value for hysteresis are displayed alternately after setting P1. Press the SET button to return to the normal measuring mode. Press the $\triangle UP$ or $\nabla DOWN$ button to change the value. (Refer to "How to Set Value" below right.)

Window comparator mode

In this mode, P2 and the current set value are displayed alternately after setting P1. Press the SET button to display the next set value (H: hysteresis). Press the $\bigtriangleup \text{UP}$ or $\bigtriangledown \text{DOWN}$ button to change the value. (Refer to "How to Set Value" at right.)

Next, H and the set value for hysteresis will be displayed alternately. Press the SET button to return to the normal measuring mode. Press the $\triangle UP$ or $\nabla DOWN$ button to change the value.

(Refer to "How to Set Value" at right.)

Pressure set value can be verified without holding or stopping the switch output operation.

Auto preset setting

1. Auto preset preparation mode

While in the measuring mode, press the SET button to activate the auto preset preparation mode, and RP I will be displayed. Proceed to prepare the devices to perform the pressure setting. While RP I is still displayed, press both the △UP and ▽DOWN buttons simultaneously to return to the measuring mode.




preset functions. When $\frac{1}{2}$ is displayed, start the system

operation and change the pressure. The set value will be

While # IL is still displayed, press the SET button to complete

the setting and return to the normal measuring mode.

SMC PRESSURE

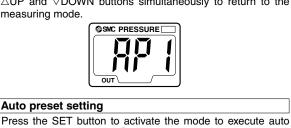

PS ZSP ISA2 **IS** ZSM PF2 IF

Data

ISE

PSE

^zSE3

How to Set Value

2. Auto preset setting

automatically detected and stored.

To enter a value such as the one for pressure setting:

оит

1. Press the $\triangle UP$ or $\nabla DOWN$ button to change the set value. The first digit blinks.



- 2. Press the $\triangle UP$ or $\nabla DOWN$ button to set the value arbitrarily. (If there is no button operation for more than 10 seconds, the current value will be automatically set and the function will return to the set value display mode.)
- 3. With every push of the SET button, the next (higher) digit blinks.



3rd digit

When the left-most digit is zero, ", " or ", " will blink. If the SET button is pressed while the left-most digit is blinking, the right-most digit will now blink.



4. Press and hold the SET button for 1 second or longer to return to the set value display mode.



Setting

Function setting

Display calibration


During measuring mode, press the SET and \bigtriangledown DOWN buttons simultaneously and hold for 2 seconds or longer. FSL and current measured value will be displayed.

Press the \triangle UP or ∇ DOWN button to change the set value. If there is no button operation for more than 2 seconds after changing the set value, the display mode returns to displaying FSL and the current measured value.




Current measured value

Press the SET button to display the adjusted value (percent). The adjusted value and F_{2} will be alternately displayed.

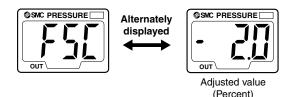

Press the SET button to return to the normal measuring mode.



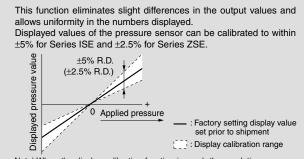

Note) When the display calibration function is used, the regulating pressure value may change ± 1 digit.

Peak/Bottom hold function

This function constantly detects and updates the maximum and minimum pressure values and allows to hold the display value.


To use a peak hold function, press and hold the \triangle UP button for 1 second or longer. The maximum pressure value is held and blinks repeatedly. Press and hold the \triangle UP button again for 1 second or longer to release this function and return to the measuring mode.

To use a bottom hold function, press the \bigtriangledown DOWN button for 1 second or longer. The minimum pressure value is held and blinks repeatedly. Press and hold \bigtriangledown DOWN button again for 1 second or longer to release this function and return to the measuring mode.

Key lock function

This function prevents incorrect operations such as changing the set value accidentally. Press the SET button and hold for 4 seconds or longer to display the current Loc or UnL setting. Press the $\triangle UP$ or $\forall DOWN$ button to select the setting and set this function with the SET button. Use the Locmode to avoid accidental button operation. To release a key lock function, press the SET button and hold for 4 seconds or longer to display the current setting, and select the UnL mode.



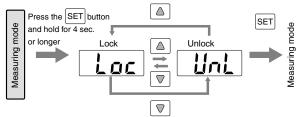


Zero out (Zero ADJ) function

This function clears and resets the displayed value as long as the measuring pressure is within \pm 70 digits of the atmospheric pressure.

(Due to individual product differences, the setting range varies $\pm 10\%$ F.S.)

This function is effective in detecting pressure fluctuations that exceed a certain amount without being affected by the supply pressure. Press and hold the \triangle UP and ∇ DOWN buttons simultaneously to reset the display. Release the buttons to return to the measuring mode.

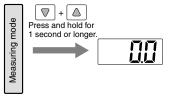

Unit Conversion Function

When not selecting "M" for unit specification Desired display unit can be selected.

Press the $\triangle UP$ or $\nabla DOWN$ button to switch the unit, and the set value is automatically converted.


The conversion order is: $PA \Leftrightarrow GF \Leftrightarrow bAr \Leftrightarrow PSi \Leftrightarrow inH \Leftrightarrow mmH$ Press the SET button to set the unit and proceed to the display color setting.

```
For vacuum/low pressure Pa⇔kgf/cm<sup>2</sup>⇔bar⇔psi⇔inchHg⇔mmHg
For positive pressure MPa⇔kgf/cm<sup>2</sup>⇔bar⇔psi
```

Indication of Units

Displayed unit	ISE30	ZSE30
Pa	0.001 MPa	0.2 kPa
kgf/cm ²	0.01	0.002
bar	0.01	0.002
psi	0.2	0.05
mmHg	—	2
inchHg	—	0.2
	—	0.2

Description

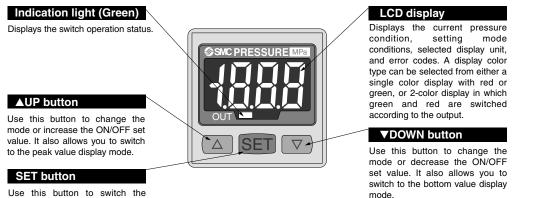

mode and set the set value.

Error Correction

Take the following corrective solutions when errors occur.

Error description	LCD display	Condition	Solution		
over- current error	Er l	Load current of switch output is more than 80 mA.	Shut off the power supply. After eliminating the output factor that caused the excess current, turn the power supply back on.		
Residual pressure error	Er3	Pressure is applied during the zero out operation as follows: When the switch for positive pressure is used: ± 0.071 MPa or more. When the switch positive pressure is used: ± 7.1 kPa or more. After displaying for 3 seconds, it will return to the measuring mode. Due to the individual product difference, the setting range varies $\pm 10\%$ F.S.	Bring the pressure back to atmospheric pressure and try using the zero out function.		
Applied pressure error	ннн	Supply pressure exceeds the maximum regulating pressure.	Reduce/Increase supply pressure to		
	LLL	Supply pressure is below the minimum regulating pressure.	within the regulating pressure range.		
	ЕгЧ	Internal data error			
System	٤rБ	Internal data error	Shut off the power supply. Turn the		
error	Er٦	Internal data error	power supply back on. If the power should not come back on.		
	Er8	Internal data error	please contact SMC for an inspection.		


Example of Internal Circuit and Wiring

-25

NPN open collector output

Maximum 30 V, 80 mA Residual voltage:



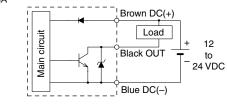

ZSE⊏ ISE□

PSE

^zSE3

PS

ZSE¹

ZSP

ISA2

IS

ZSM


PF2□

IF

Data


-26 Analog output type 1 to 5 V (±2.5% F.S.)

Output impedance: 1 kΩ

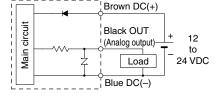


-28

Analog output type 4 to 20 mA (±2.5% F.S.) Maximum load impedance: Power supply voltage 12 V: 300 Ω Power supply voltage 24 V: 600 Ω Minimum load impedance: 50 Ω

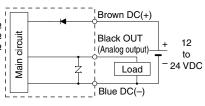



-65 PNP open collector Maximum 80 mA

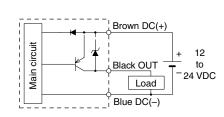

Series ZSE30/ISE30


Dimensions

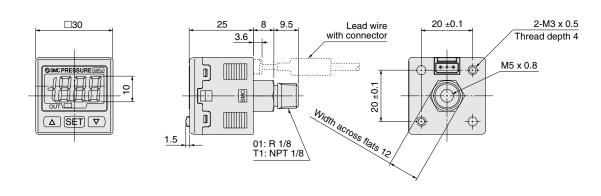

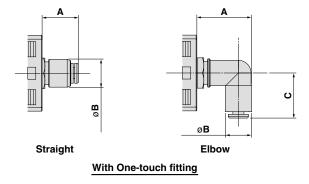

					(mm)
One-touch fitting	Stra	light	Elbow		
size	Α	В	Α	В	С
ø4, ø5/32"			20	10.4	18
ø6	14.4	11.2	22.4	12.8	20
ø1/4"			22.8	13.2	20.5

With bracket

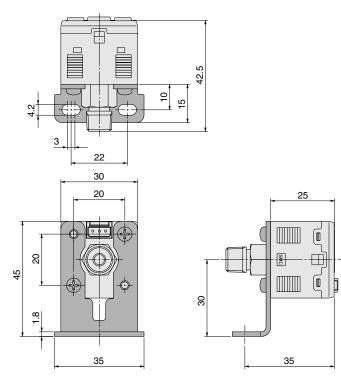

16-2-10




Downloaded from $\underline{\text{Elcodis.com}}$ electronic components distributor


High Precision, 2-color Display Digital Pressure Switch Series ZSE30/ISE30

Dimensions

Panel mount

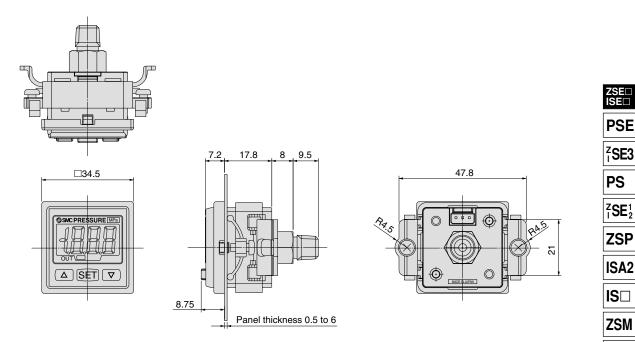

Panel mount adapter + Front protective cover

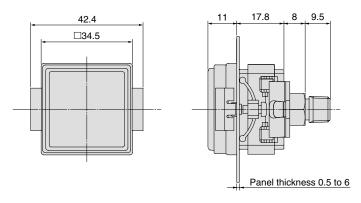

PF2□

IF□


Data

Series ZSE30/ISE30


31⁰_{-0.4}


Dimensions

Panel fitting dimension

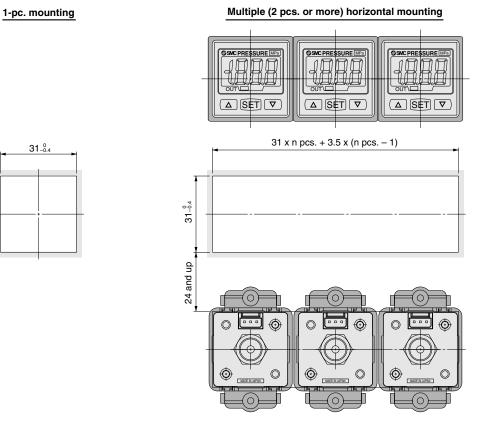

Multiple (2 pcs. or more) vertical mounting

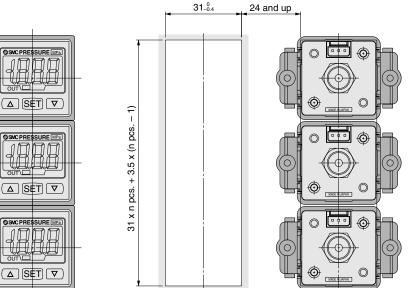

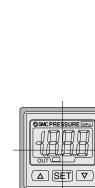

Series ZSE30/ISE30

Specific Product Precautions 1

Be sure to read before handling.

Handling

AWarning

- 1. Do not drop, bump, or apply excessive impacts (980 m/s²) while handling. Although the body of the sensor may not be damaged, the internal parts of the sensor could be damaged and lead to a malfunction.
- 2. The tensile strength of the cord is 35 N. Applying a greater pulling force on it can cause a malfunction. When handling, hold the body of the sensor-do not dangle it from the cord.
- 3. Do not exceed the screw-in torgue of 7 to 9 N m when installing piping. Exceeding this value may cause malfunctioning of the sensor.
- 4. Do not use pressure sensors with corrosive and/or flammable gases or liquids.
- 5. Allow a sufficient margin of tube length in piping in order to prevent application of torsional, tensile or moment load to the tubes and fittings.
- 6. When a brand of tubing other than SMC is used, make sure that the tolerance of the tube's O.D. satisfies the following specifications.
 - 1) Nylon tubing: ±0.1 mm or less
 - 2) Soft nylon tubing: ±0.1 mm or less
 - 3) Polyurethane tubing: +0.15 mm or less, -0.2 mm or less
- 7. The applicable fluid is air. Please consult with SMC if the switch is to be used with other types of fluids.

Connection


/ Warning

- 1. Incorrect wiring can damage the switch and cause a malfunction or erroneous switch output. Connections should be done while the power is turned off.
- 2. Do not attempt to insert or pull the pressure sensor or its connector when the power is on. A switch output malfunction may occur.
- 3. Wire separately from power lines and high voltage lines, avoiding wiring in the same conduit with these lines. Malfunctions may occur due to noise from these other lines.
- 4. If a commercial switching regulator is used, make sure that the F.G. terminal is grounded.

Operating Environment


- 1. Our pressure switches are CE marked; however, they are not equipped with surge ISE protection against lightning. Lightning surge countermeasures should be applied directly to system components as necessary.
- 2. Our pressure switches do not have an explosion proof rating. Never use in the presence of an explosive gas as this may cause a serious explosion.
- 3. Do not use in an environment where static electricity can cause problems, otherwise system failure or malfunction may result.

Mounting

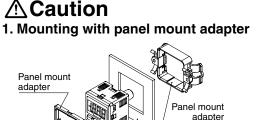


Panel

To release push the clips outward as shown on the picture, and pull back towards you.

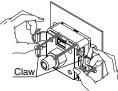

2. Mounting with bracket

Mount a bracket to the body using two M3 x 5L mounting screws and install on piping with hexagon socket head cap screws. The switch can be installed horizontally depending on the installation location.

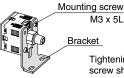


Tightening torque for bracket mounting screw should be 0.5 to 0.7 N m.

Series ZSE30/ISE30 Specific Product Precautions 2 Be sure to read before handling.

Connection/Removal of Connector


- To connect the connector, insert it straight while pinching the lever, and then push the lever into the jack of the housing and lock it.
- To remove the connector, pull it straight out while applying pressure with your thumb to the lever and unhooking it from the jack.

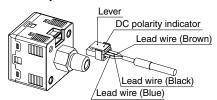

• Do not attempt to insert or pull the pressure sensor or its connector when the power is on. A switch output malfunction may occur.

Piping

- Cut the tube perpendicularly.
- Hold the tube and insert it into the One-touch fitting carefully and securely all the way to the bottom.

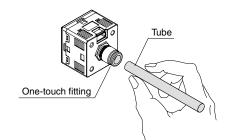

Regulating Pressure Range and Rated Pressure Range

ACaution

Set the pressure within the rated pressure range.

The regulating pressure range is the range of pressure that is possible in setting.

The rated pressure range is the range of pressure that satisfies the specifications (accuracy, linearity, etc.) on the sensor. Although it is possible to set a value outside the rated pressure range, the specifications will not be guaranteed even if the value stays within the regulating pressure range.

Switch		Pressure range				
Switch	1	-100 kPa	-100 kPa 0 100 l		500 kPa	1 MPa
For vacuum/ low pressure	ZSE30	–100 kPa –101 kPa		100 kPa 101 kPa		
For positive pressure	ISE30	–100 kPa (–0.1 MPa)	0			1 MPa 1 MPa

Rated pressure range of switch

Regulating pressure range of switch

