# **DPTO 22** SNAP Load Cell Modules

# **SNAP Load Cell Modules**

#### Features

- SNAP-AILC works with 2 mV/V or 3 mV/V load cells; SNAP-AILC-2 works with or 3 mv/V or 4 mV/V load cells
- Provides both direct ADC readings and filtered values
- Convenient pluggable wiring terminals
- Module converts power from an external 24 VDC power supply to isolated 10 VDC for bridge excitation for up to four 350 ohm load cells.
- Nugged packaging

#### Description

The SNAP-AILC and SNAP-AILC-2 modules each provide one channel of transformer and optically-isolated analog-to-digital conversion for load cell inputs.

These modules support 6- or 4-wire load cells (4-wire is at reduced performance). Both modules provide isolated 10 VDC bridge excitation for up to four parallel 415/350 ohm load cells as a load cell front end. For both modules, 24 VDC is required at the separate connector on top of the module.

The bridge and 10 VDC bridge power are isolated from the 24 VDC bridge source and the 5 VDC source used by the mounting rack.

The 24 VDC input is reverse-polarity protected and may be used for multiple modules. The 10 VDC bridge source is current limited so that an external fault on the load cell is isolated and will not affect another load cell module.

There are two channels of data: channel 1 is unfiltered, and channel 2 is filtered by a 0 to -48dB programmable digital filter. The filtered data has a fast settling feature with a programmable fast settle level. This feature decreases settling time when there are large step changes in the load cell output and high filter weights. For more information, see "Using the Filter Weight and Fast Settling Features" on page 3.

As part of the SNAP PAC System, these modules can be used with all SNAP PAC brains and rack-mounted controllers, both standard wired and Wired+Wireless<sup>™</sup> models. The modules snap onto Opto 22 SNAP PAC mounting racks, and field connections are made by a pluggable terminal strip on top of the module.

The SNAP-AILC and SNAP-AILC-2 are configured using PAC Manager or PAC Control.

SNAP racks use a retention rail locking system that holds modules securely to the rack. Normally, a hold-down screw is not required. However, for applications that require additional module security, each module has provisions for two 4-40 by



SNAP-AILC Load Cell Module

1/2-inch standard machine screws to hold each module in position on the SNAP rack.

**Notes for legacy products:** SNAP-AILC and SNAP-AILC-2 modules can also be used with legacy SNAP Ultimate, SNAP Ethernet, and SNAP Simple brains that have analog capability, and with SNAP M-series and B-series mounting racks. These modules cannot be used with the serial B3000 brain.

The SNAP-AILC is also supported by legacy software ioManager, and both modules are supported by ioControl. See the following table for minimum firmware and software versions required.

Firmware and Software Versions Required		
SNAP-AILC	SNAP-AILC-2	
Processor firmware 6.1c or higher	Processor firmware 7.1d or higher	
PAC Manager or ioManager 7.0a or higher	PAC Manager	
PAC Control or ioControl 6.1c or higher	PAC Control or ioControl 7.1d or higher	

For more information on legacy products, see Opto 22 form #1688, SNAP PAC System Migration Technical Note, and form #1693, Legacy and Current Product Comparison and Compatibility Charts.

#### Part Number

Part	Description
SNAP-AILC	Load cell input, 10 VDC excitation, 2 or 3 mV/V input sensitivity
SNAP-AILC-2	Load cell input, 10 VDC excitation, 3 or 4 mV/V input sensitivity

DATA SHEET Form 1590-110124

PAGE

1

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com

SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3007 • support@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3007 • support@opto22.com • 2011 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# **Specifications**

Input Range Sensitivity: SNAP-AILC SNAP-AILC-2	2 mV/V or 3 mV/V (Over range $\pm$ 2.2 mV or $\pm$ 3.3 mV) 3 mV/V or 4 mV/V (Over range $\pm$ 3.3 mV or $\pm$ 4.4 mV)	
Input Resistance	100 Megohms differential	
Resolution: Analog Scale Points	>22 bits + sign (± 6,400,000 counts = ± 100% of scale)	
Response Time, Data Freshness	See the following table	
DC Reversal (Input)	0.015% (±1000 counts of reading @ 6,400,000 F.S.)	
DC Common Mode Rejection	>-120 dB	
AC Common Mode Rejection	>-120 dB @ 60 Hz	
Maximum Survivable Input	± 15 volts across module load cell connector	
Maximum Operating Common Mode Voltage	250 V	
Accuracy (% Full Scale): Offset Gain	± 0.05% (= 3,200 counts out of 6,400,000, out of box) ± 0.05% (= 3,200 counts out of 6,400,000, out of box)	
Usable Resolution at Default Configuration (Fast)	38 nV - sign and 19 bits (±524,288 counts @ channel 2) At filter weight 64, settles to 99.9% of final reading in 3.9 s.	
DRIFT: Gain Offset	40 PPM / °C 10 PPM / °C	
Isolation: Optical	4000 V	
Isolation: Transformer	1500 V	
Rack Power Requirements	5.00 VDC to 5.20 VDC @ 120 mA	
24V Bridge Supply: Input Voltage Input Current Output Fault Current	24 VDC nominal (22 V min. to 30 V max.) 40 mA for one load cell or 115 mA for four load cells 124 mA typical (field fault—shorted bridge)	
Ambient Temperature: Operating Storage	0 to 70 °C -25 to 85 °C	
Torque, hold-down screws	4 in-lb (0.45 N-m)	
Torque, connector screws	5.26 in-lb (0.6 N-m)	
Agency Approvals	CE, RoHS, DFARS	
Warranty	Lifetime	

Form 1590-110124 DATA SHEET

PAGE 2

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2011 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# **SNAP Load Cell Modules**

#### SNAP-AILC and SNAP-AILC-2 Configuration Options

Both modules can be configured as "Fast" or "Slow," depending on the response you need. Configure modules in PAC Control or PAC Manager.

	Fast (Default)		Slow (Configuration option)	
ADC Notch Filter (Channel 1)	60 Hz (-3 dB @ 125 Hz)		20 Hz (-3 dB @ 42 Hz)	
Data Freshness (Channel 1)	9 ms		25.8 ms	
Noise Reduction (Channel 2)	At filter weight 64 (default): -3 dB T.C. = 567 ms	At filter weight 8: -18 dB T.C. = 72 ms	At filter weight 64: -3 dB T.C. = 1626 ms	At filter weight 8: -18 dB T.C. = 206 ms
Settle Time to % of Final Reading (Channel 2)	At filter weight 64 (default): 2.637 s to 99.0% 3.924 s to 99.9% 5.238 s to 99.99%	At filter weight 8: 0.31 s to 99.0% 0.47 s to 99.9% 0.62 s to 99.99%	At filter weight 64: 7.56 s to 99.0% 11.25 s to 99.9% 15.00 s to 99.99%	At filter weight 8: 0.9 s to 99.0% 1.3 s to 99.9% 1.8 s to 99.99%

#### Using the Filter Weight and Fast Settling Features

There are two channels of data on the SNAP-AILC and SNAP-AILC-2 modules. The first channel provides raw Analog-to-Digital (ADC) data, while the second channel provides filtered data.

The filtered reading is calculated by the module from channel 1 data after every ADC conversion. Filtered output is calculated as follows:

Ynew = ( (X - Y) / W ) + Y	
Ynew = Y = X =	new filtered reading last filtered reading new ADC reading = filter weight (range: 1 to 255)
vv =	liner weight (range. 1 to 255)

You configure filtering in PAC Control software using these two commands: Set Analog Load Cell Filter Weight and Set Analog Load Cell Fast Settle Level.

#### Set Analog Load Cell Filter Weight

The Set Analog Load Cell Filter Weight command sets the filter weight on channel 2 of a load cell module to a range of 1 to 255. Noise is reduced by up to 255, at the expense of settling time.

For maximum resolution, set the filter weight to less than half the peak-to-peak system noise as seen while trending the data in PAC Display.

#### Set Analog Load Cell Fast Settle Level

The Set Analog Load Cell Fast Settle Level command sets the fast settling trigger level (FSTL). The filtered weight is reduced when the difference between the ADC data and the filtered data is greater than the FSTL. This feature is useful to decrease settling time when there are large step changes in the load cell output and a large filter weight.

For more information on the weight filtering and fast settling features, see the commands Set Analog Load Cell Filter Level and Set Analog Load Cell Fast Settle Level in the *PAC Control Command Reference* (Opto 22 form #1701).

0PT0

Ŋ

DATA SHEET Form 1590-110124

PAGE

3


Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2011 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.



#### Wiring: SNAP-AILC and SNAP-AILC-2 Modules



**OPTO 22** 

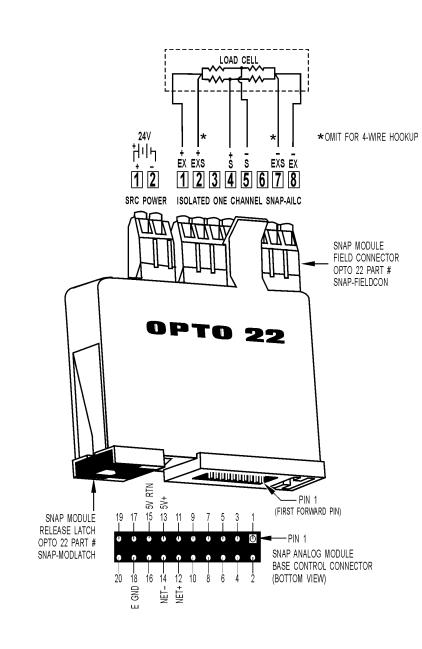


Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2011 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# **SNAP Load Cell Modules**

#### **Dimensions**

#### **SNAP-AILC and SNAP-AILC-2 Modules**

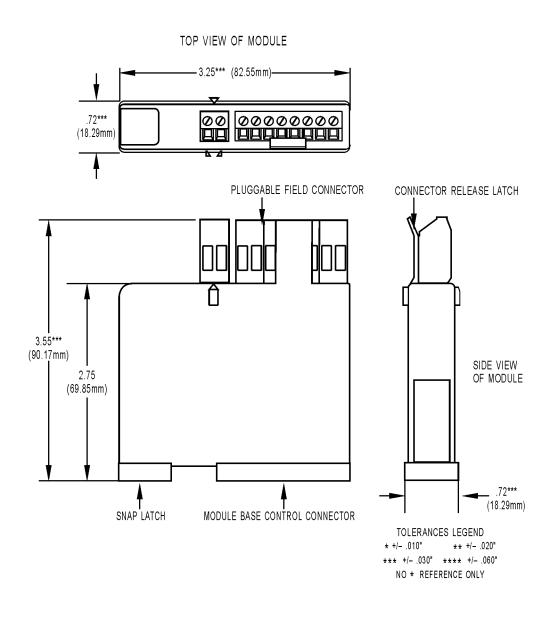

Form 1590-110124 DATA SHEET

5

**OPTO 22** 

**SNAP Load Cell Modules** 

Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • www.opto22.com PAGE SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2011 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

#### Downloaded from Elcodis.com electronic components distributor

### **Products**

Opto 22 develops and manufactures reliable, flexible, easy-touse hardware and software products for industrial automation, remote monitoring, and data acquisition applications.

#### **SNAP PAC System**

Designed to simplify the typically complex process of understanding, selecting, buying, and applying an automation system, the SNAP PAC System

consists of four integrated components:

- SNAP PAC controllers
- PAC Project<sup>™</sup> Software Suite
- SNAP PAC brains
- SNAP I/O<sup>™</sup>

#### **SNAP PAC Controllers**

Programmable automation controllers (PACs) are multifunctional, multidomain, modular controllers based on open standards and providing an integrated development environment.

Opto 22 has been manufacturing PACs for many years. The latest models include the standalone SNAP PAC S-series and the rack-mounted SNAP PAC R-series. Both handle a wide range of digital, analog, and serial functions and are equally suited to data collection, remote monitoring, process control, and discrete and hybrid manufacturing.

SNAP PACs are based on open Ethernet and Internet Protocol (IP) standards, so you can build or extend a system without the expense and limitations of proprietary networks and protocols.

#### PAC Project Software Suite

Opto 22's PAC Project Software Suite provides full-featured and cost-effective control programming, HMI (human machine interface) development and runtime, OPC server, and database connectivity software to power your SNAP PAC System.

These fully integrated software applications share a single tagname database, so the data points you configure in PAC Control<sup>™</sup> are immediately available for use in PAC Display<sup>™</sup>, OptoOPCServer<sup>™</sup>, and OptoDataLink<sup>™</sup>. Commands are in plain English; variables and I/O point names are fully descriptive.

PAC Project Basic offers control and HMI tools and is free for download on our website, www.opto22.com. PAC Project Professional, available for separate purchase, adds OptoOPCServer, OptoDataLink, options for Ethernet link redundancy or segmented networking, and support for legacy Opto 22 serial *mistic*<sup>™</sup> I/O units.

#### **SNAP PAC Brains**

While SNAP PAC controllers provide central control and data distribution, SNAP PAC brains provide distributed intelligence for I/O processing and communications. Brains offer analog, digital, and serial functions, including thermocouple linearization; PID loop control; and optional high-speed digital counting (up to 20 kHz), quadrature counting, TPO, and pulse generation and measurement.

#### SNAP I/O

I/O provides the local connection to sensors and equipment. Opto 22 SNAP I/O offers 1 to 32 points of reliable I/O per

module, depending on the type of module and your needs. Analog, digital, serial, and special-purpose modules are all mixed on the same mounting rack and controlled by the same processor (SNAP PAC brain or rack-mounted controller).

# Quality

Founded in 1974 and with over 85 million devices sold, Opto 22 has established a worldwide reputation for high-quality products. All are made in the U.S.A. at our manufacturing facility in Temecula, California. Because we do no statistical testing and each part is tested twice before leaving our factory, we can guarantee most solid-

state relays and optically isolated I/O modules for life.

# **Free Product Support**

Opto 22's Product Support Group offers free, comprehensive technical support for Opto 22 products. Our staff of support engineers represents decades of training and experience. Product support is available in English and Spanish, by phone or email, Monday through Friday, 7 a.m. to 5 p.m. PST.

# **Free Customer Training**

Hands-on training classes for the SNAP PAC System are offered at our headquarters in Temecula, California. Each student has his or her own learning station; classes are limited to nine students. Registration for the free training class is on a firstcome, first-served basis. See our website, www.opto22.com, for more information or email training@opto22.com.

# **Purchasing Opto 22 Products**

Opto 22 products are sold directly and through a worldwide network of distributors, partners, and system integrators. For more information, contact Opto 22 headquarters at 800-321-6786 or 951-695-3000, or visit our website at www.opto22.com.

#### www.opto22.com

www.opto22.com • Opto 22 • 43044 Business Park Drive • Temecula, CA 92590-3614 • Form 1335-090113 SALES 800-321-6786 • 951-695-3000 • FAX 951-695-3095 • sales@opto22.com • SUPPORT 800-835-6786 • 951-695-3080 • FAX 951-695-3017 • support@opto22.com © 2011 Opto 22. All rights reserved. Dimensions and specifications are subject to change. Brand or product names used herein are trademarks or registered trademarks of their respective companies or organizations.

# ing an nt.

٠

Ŋ

Ŋ