#### **RTE Series – Analog Timers**

# **Switches & Pilot Lights**

• 20 time ranges and 10 timing functions • Time delays up to 600 hours

Key features of the RTE series include:

- Space-saving package
- High repeat accuracy of ± 0.2%
- ON and timing OUT LED indicators
- Standard 8- or 11-pin and 11-blade termination
- 2 form C delayed output contacts
- 10A Contact Rating



**Relays & Sockets** 

Timers

Cert. No. E9950913332316 (EMC, RTE) Cert. No. BL960813332355 (LVD, RTE) PRODUCT SERVICE







#### **Contact Ratings**

CE

Contact	Configuration	2 Form C, DPDT (Delay output)
	ole Voltage / ole Current	240V AC, 30V DC / 10A
	m Permissible 1g Frequency	1800 cycles per hour
	Resistive	10A 240V AC, 30V DC
Rated	Inductive	7A 240V AC, 30V DC
Load	Horse Power Rating	1/6 HP 120V AC, 1/3 HP 240V AC
Life	Electrical	500,000 op. minimum (Resistive)
LIIE	Mechanical	50,000,000 op. minimum

General Specificati	ions								
Operation System			Solid state CMOS C	Circuit					
Operation Type			Multi-Mode						
Time Range			0.1sec to 600 hours						
Pollution Degree			2 (IE60664-1)						
Over voltage category			III (IE60664-1)						
		AF20	100-240V AC(50/60	IHz)					
Rated Operational Volt	age	AD24	24V AC(50/60Hz)/24	4V DC					
		D12	12V DC						
		AF20	85-264V AC(50/60H	łz)					
Voltage Tolerance		AD24	20.4-26.4V AC(50/6	0Hz)/21.6-26.4V DC					
		D12	10.8-13.2V DC						
Input off Voltage			Rated Voltage x10% minimum						
Ambient Operating Ten	nperatur	e	-20 to +65°C (without freezing)						
Ambient Storage and T	ransport	Temperature	-30 to +75°C (without freezing)						
Relative Humidity			35 to 85%RH (without reezing)						
Atmospheric Pressure			80kPa to 110kPa (Operating), 70kPa to 110kPa (Transport)						
Reset Time			100msec maximum						
Repeat Error			±0.2%, ±20msec*						
Voltage Error			±0.2%, ±20msec*						
Temperature Error			±0.5%, ±20msec*						
Setting Error			±10% maximum						
Insulation Resistance			100MΩ minimum (500V DC)						
			Between power and output terminals: 2000V AC, 1 minute						
Dielectric Strength			Between contacts of different poles: 2000V AC, 1 minute						
			Between contacts of	of the same pole:100	OV AC, 1 minute				
Vibration Resistance			10 to 55Hz amplitude 0.5mm <sup>2</sup> hours in each of 3 axes						
			Operating extremes	s: 98m/sec² (10G)					
Shock Resistance			Damage limits: 490	m/sec <sup>2</sup> (50G)					
			3 times in each of 3	3 axes					
Degree of Protection			IP40 (enclosure) (IE0	C60529)					
	TYPE		RTE-P1, -B1		RTE-P2, -B2				
	THE .								
Power Consumption		120V AC/60Hz	6.5VA		6.6VA				
	AF20	120V AC/60Hz 240V AC/60Hz	6.5VA 11.6VA		6.6VA 11.6VA				
(Approx.)		240V AC/60Hz							
(мрргох.)	AF20	240V AC/60Hz	11.6VA		11.6VA				
(Approx.) Mounting Position	AF20 24V AC 6	240V AC/60Hz	11.6VA 3.4VA/1.7W		11.6VA 3.5VA/1.7W				
Mounting Position	AF20 24V AC 6	240V AC/60Hz	11.6VA 3.4VA/1.7W 1.6W	mm	11.6VA 3.5VA/1.7W				
	AF20 24V AC 6	240V AC/60Hz GoHz/DC	11.6VA 3.4VA/1.7W 1.6W Free		11.6VA 3.5VA/1.7W				
Mounting Position	AF20 24V AC 6	240V AC/60Hz 60Hz/DC RTE-P1, P2	11.6VA 3.4VA/1.7W 1.6W Free 40Hx 36W x 77.9D		11.6VA 3.5VA/1.7W				




\*For the value of the error against a preset time, whichever the largest. applies.

**Terminal Blocks** 

Downloaded from Elcodis.com electronic components distributor

### Part Numbering Guide

RTE series part numbers are composed of 4 part number codes. When ordering a RTE series part, select one code from each category. Example: **RTE-P1AF20** 



#### Part Numbers: RTE Series

	Description	Part Number Code	Remarks
<sup>①</sup> Series	RTE series	RTE	For internal circuits, see next page.
@ Terminal Style	Pin	Р	Select one only.
	Blade	В	
	ON-delay, interval, cycle OFF, cycle ON	1	Each function group has different timing functions.
③ Function Group	ON-delay, cycle OFF, cycle ON, signal ON/OFF delay, OFF-delay, one-shot	2	See page 794.
	100 to 240V AC(50/60Hz)	AF20	
④ Input Voltage	24V AC(50/60Hz)/24V DC	AD24	
	12V DC	D12	

#### **Part Numbers**

Voltage	Power T	riggered	Start Input	Triggered
vonage	8-Pin	Blade	11-Pin	Blade
12V DC	RTE-P1D12	RTE-B1D12	RTE-P2D12	RTE-B2D12
24V AC/DC	RTE-P1AD24	RTE-B1AD24	RTE-P2AD24	RTE-B2AD24
100-240V AC	RTE-P1AF20	RTE-B1AF20	RTE-P2AF20	RTE-B2AF20

#### Time Range Determined by Time Range Selector and Dial Selector

	Dial	0 - 1	0 - 3	0 - 10	0 - 30	0 - 60
	Second	0.1 sec - 1 sec	0.1 sec - 3 sec	0.2 sec - 10 sec	0.6 sec - 30 sec	1.2 sec - 60 sec
Range	Minute	1.2 sec - 1 min	3.6 sec - 3 min	12 sec - 10 min	36 sec - 30 min	1.2 min - 60 min
Ran	Hour	1.2 min - 1 hr	3.6 min - 3 hr	12 min - 10 hr	36 min - 30 hr	1.2 hr - 60 hr
	10 Hours	12 min - 10 hr	36 min - 30 hr	2 hr - 100 hr	6 hr - 300 hr	12 hr - 600 hr

IDEC

RTE-P1

#### **Timing Diagrams**

**Display Lights** 

rer Po

Item	Terminal Nu	mber	Operat	ion	
Power	(1) 2 - 7 (2) A - B				
Delayed	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9	(NC)			
Contact	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9	(NO)			
	PWR				

RTE-B1

#### C: Cycle 1 (power start, OFF first)

Set Time

A: ON-Delay 1 (power start)

Set timer for desired delay, apply power to coil. First transfer of contacts occurs after preset delay has elapsed, after the next elapse of preset delay contacts return to original position. The timer now cycles between on and off as long as power is applied (duty ratio 1:1).

ltem	Terminal Nu	nber			0p	eration		
Power	(1) 2 - 7 (2) A - B							
Delayed	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9	(NC)						
Contact	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9	(NO)						
Indicator	PWR							
Indicator	OUT							
Set Time	et Time		← T	←→ T				

#### RTE-P1, -B1

1. RTE-B1: Do not apply voltage to terminals #2, #5 & #8.

2. IDEC sockets are as follows: RTE-P1: SR2P-06\* pin type socket, RTE-B1: SR3B-05\* blade type socket, (\*-may be followed by suffix letter A,B,C or U).

#### B: Interval (power start)

Set timer for desired delay, apply power to coil. Contacts transfer immediately, and return to original position after preset time has elapsed. Reset occurs with removal of power.

Item	Terminal Nu	mber	Operation	
Power	(1) 2 - 7 (2) A - B			
Delayed	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9	(NC)		
Contact	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9	(NO)		
Indicator	PWR			
Indicator	OUT			
Set Time			<b>←</b>	

C: Cycle 3 (power start, ON first)

Functions in same manner as Mode C, with the exception that first transfer of contacts occurs as soon as power is applies. The ratio is 1:1. Time On = Time Off

ltem	Terminal Nu	mber			Op	eration		
Power	(1) 2 - 7 (2) A - B							
Delayed	(1) 1 - 4, 5 - 8 (2) 1 - 7, 3 - 9	(NC)						
Contact	(1) 1 - 3, 6 - 8 (2) 4 - 7, 6 - 9	(NO)						
Indiantes.	PWR							
Indicator	OUT							
Set Time				←→ T				 


Relays & Sockets


**RTE Series** 

## IDEC

#### Timing Diagrams con't

RTE-P2, -B2





A: ON-Delay 2 (signal start)

When a preset time has elapsed after the start input turned on while power is on, the NO output contact goes on.

Item	Terminal Nur	nber	Operat	ion	
Power	(A) 2 - 10 (B) A - B				
Start	(A) 5 - 6 (B) 2 - 5				
Delayed	(A) 1 - 4, 8 - 11 (B) 1 - 7, 3 - 9	(NC)			
Contact	(A) 1 - 3, 9 - 11 (B) 4 - 7, 6 - 9	(NO)			
Indicator	PWR				
ITUICALUI	OUT				
Set Time			<b>∢</b> ► T		

#### C: Cycle 4 (signal start, ON first)

When the start input turns on while power is on, the NO contact goes on. The output oscillates at a preset cycle (duty ratio 1:1).

ltem	Terminal Nur	nber					Operat	ion					
Power	(A) 2 - 10 (B) A - B												
Start	(A) 5 - 6 (B) 2 - 5												
Delayed	(A) 1 - 4, 8 - 11 (B) 1 - 7, 3 - 9	(NC)											
Contact	(A) 1 - 3, 9 - 11 (B) 4 - 7, 6 - 9	(NO)											
	PWR												
Indicator	OUT												
Set Time				<>	<b>∢</b> →	<b>* •</b>	<b>~ ~ &gt;</b>	<b>←</b> →	<b>→</b>	<b>→</b>		**	
out nille				т	т	т	т	т	т	т	т	Та	

#### E: Signal OFF-Delay

When power is turned on while the start input is on, the NO output contact goes on. When a preset time has elapsed after the start input turned off, the NO output contact goes off.

Item	Terminal Nur	nber				Op	eration				
Power	(A) 2 - 10 (B) A - B										
Start	(A) 5 - 6 (B) 2 - 5										
Delayed	(A) 1 - 4, 8 - 11 (B) 1 - 7, 3 - 9	(NC)									
Contact	(A) 1 - 3, 9 - 11 (B) 4 - 7, 6 - 9	(NO)									
Indicator	PWR										
Indicator	OUT										
Set Time				κ→ T	-		<del>∢ ≻</del> Ta	← → T		<b>≺ →</b> Ta	

1. RTE-P2: Do not apply voltage to terminals #5, #6 & #7.

2. RTE-B2: Do not apply voltage to terminals #2, #5 & #8.

 IDEC sockets are as follows: RTE-P2: SR3P-05\* pin type socket, RTE-B2: SR3B-05\* blade type socket, (\*-may be followed by suffix letter A,B,C or U).

#### B: Cycle 2 (signal start, OFF first)

When the start input turns on while power is on, the output oscillates at a preset cycle (duty ratio 1:1), starting while the NO contact off.

ltem	Terminal Nur	Operation											
Power	(A) 2 - 10 (B) A - B												
Start	(A) 5 - 6 (B) 2 - 5												
Delayed Contact	(A) 1 - 4, 8 - 11 (B) 1 - 7, 3 - 9	(NC)											
	(A) 1 - 3, 9 - 11 (B) 4 - 7, 6 - 9	(NO)											
Indicator	PWR												
	OUT												
Set Time				<b>←</b> →						<u>ج</u>	<u>ج</u>	 <del>∢</del> → Ta	

#### D: Signal ON/OFF-Delay

When the start input turns on while power is on, the NO output contact goes on. When a preset time has elapsed while the start input remains on, the output contact goes off. When the start input turns off, the NO contact goes on again. When a preset time has elapsed after the start input turned off, the NO contact goes off.

ltem	Terminal Nur	nber	Operation										
Power	(A) 2 - 10 (B) A - B												
Start	(A) 5 - 6 (B) 2 - 5												
Delayed Contact	(A) 1 - 4, 8 - 11 (B) 1 - 7, 3 - 9	(NC)											
	(A) 1 - 3, 9 - 11 (B) 4 - 7, 6 - 9	(NO)											
Indicator	PWR												
Indicator	OUT												
Set Time		•	->		<>			←→		← →	<b>* *</b>		

F: One-Shot (signal start)

When the start input turns on while power is on, the NO output contact goes on. When a preset time has elapsed, the NO output contact goes off.


Item	Terminal Nur	nber		Operation	
Power	(A) 2 - 10 (B) A - B				
Start	(A) 5 - 6 (B) 2 - 5				
Delayed Contact	(A) 1 - 4, 8 - 11 (B) 1 - 7, 3 - 9	(NC)			
	(A) 1 - 3, 9 - 11 (B) 4 - 7, 6 - 9	(NO)			
Indicator	PWR				
	OUT				
Set Time					


Switches & Pilot Lights

Switches & Pilot Lights

**Display Lights** 


#### **Temperature Derating Curves**






#### Instructions

#### Installation of Hold-Down Springs **DIN Rail Mount Socket**



Hold-down Spring (sold separately) SFA-202 (use two springs)



Hold-down Spring (sold separately) SFA-203 (use two springs)

#### **Switch Settings**



Operator Mode Selector ②Scale Selector ③Time Range Selector

- 1. Turn the selectors securely using a flat screwdriver 4mm wide (maximum). Note that incorrect setting may cause malfunction. Do not turn the selectors beyond their limits.
- 2. Since changing the setting during timer operation may cause malfunction, turn power off before changing.

#### Safety Precautions

Special expertise is required to use Electronic Timers.

- All Electronic Timers are manufactured under IDEC's rigorous guality control system, but users must add a backup or fail safe provision to the control system when using the Electronic Timer in applications where heavy damage or personal injury may occur should the Electronic Timer fail.
- Install the Electronic Timer according to instructions described in this catalog.
- Make sure that the operating conditions are as described in the specifications. If you are uncertain about the specifications, contact IDEC in advance.
- In these directions, safety precautions are categorized in order of importance under Warning and Caution.

#### Warnings

Warning notices are used to emphasize that improper operation may cause severe personal injury or death.

- Turn power off to the Electronic timer before starting installation, removal, wiring, maintenance, and inspection on the Electronic Timer.
- Failure to turn power off may cause electrical shocks or fire hazard.

• Do not use the Electronic Timer for an emergency stop circuit or interlocking circuit. If the Electronic Timer should fail, a machine malfunction, breakdown, or accident may occur.

#### Caution

Caution notices are used where inattention might cause personal injury or damage to equipment.

- The Electronic Timer is designed for installation in equipment. Do not install the Electronic Timer outside equipment.
- Install the Electronic Timer in environments described in the specifications. If the Electronic Timer is used in places where it will be subjected to high-temperature, high-humidity, condensation, corrosive gases, excessive vibrations, or excessive shocks, then electrical shocks, fire hazard, or malfunction could result.
- Use an IEC60127-approved fuse and circuit breaker on the power and output line outside the Electronic Timer.
- Do not disassemble, repair, or modify the Electronic Timer.
- When disposing of the Electronic Timer, do so as industrial waste.

**Terminal Blocks** 

**Relays & Sockets** 

## IDEC

#### Accessories

#### **DIN Rail Mounting Accessories**

**DIN Rail/Surface Mount Sockets and Hold-Down Springs** 


	DIN Rail Mount Socket	Applicable Hold-Down Springs			
Style	Appearance	Use with Timers	Part Number	Appearance	Part Number
11-Pin Screw Terminal (dual tier)		RTE-P2	SR3P-05		054.000
11-Pin FingerSafe Socket		RTE-P2	SR3P-05C		SFA-203
8-Pin Screw Terminal	SELE IN IL		SR2P-06		
8-Pin Fingersafe Socket		RTE-P1 SR2P-05C		SFA-202	
11-Blade Screw Terminal	CAR IN TO IN	RTE-B1 RTE-B2	SR3B-05		
DIN Mounting Rail Length 1000mm		—	BNDN1000		


#### **Panel Mounting Accessories**

#### Flush Panel Mount Adapter and Sockets that use an Adapter

Accessory	Description	Appearance	Use with	Part No.
Panel Mount Adapter	Adaptor for flush panel mounting RTE timers		All RTE timers	RTB-G01
	8-pin screw terminal		RTE-P1	SR6P-M08G
	11-pin screw terminal	(Shown: SR6P-M08G Wiring Socket Adapter)	RTE-P2	SR6P-M11G
Sockets for use with Panel Mount Adapter	8-pin solder terminal		RTE-P1	SR6P-S08
	11-pin solder terminal		RTE-P2	SR6P-S11

#### **Dimensions**





RTE-P1 (8 pin) Terminal Style




RTE-P2 (11 pin)Terminal Style




RTE-B1/RTE-B2 (11 blade) Terminal Style


Panel Mount Adapter RTE Timer, 8-Pin and 11-Pin with SR6P-S08 or SR6P-S11



#### RTE Timer, 8-Pin with SR6P-M08G

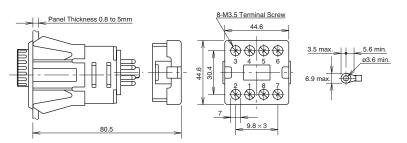

#### RTE Timer, 11-Pin with SR6P-M11G

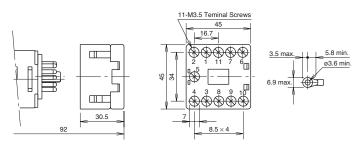

804