Type: ELRM44V-30

Earth Leakage Relay (Variable) - Type A


- 44mm (2.5 modules) wide DIN rail housing
- Designed to monitor and detect true RMS earth fault currents (up to 30A) in conjunction with a separate toroid
- ā LED bargraph provides constant indication of any leakage current
- Microprocessor controlled with internal monitoring (self-checking)
- Adjustable Sensitivity (IDn) 30mA to 30A
- Adjustable Time Delay (Dc) - 0 (instantaneous)* to 10 seconds Separate "Test" and "Reset" push buttons
- Connection facility for remote "Test" and "Reset" push buttons or N.O. contacts
- Toroid open circuit detection forces unit to trip (Red LED flashes during this condition)
- 2 Relay outputs - Standard Output (S.O.) and Positive Safety Output (P.S.O.)
- LED indication of Supply status and fault condition after unit has tripped



Terminal Protection to IP20

FUNCTION DIAGRAM supply fault curren Trip level (I∆n) Reset level output output button button

INSTALLATION



- BEFORE INSTALLATION, ISOLATE THE SUPPLY.
- Connect the unit as shown in the diagram below (N.B. certain features may not be required and therefore do not need to be connected).
- Apply power, the green "supply on" LED will illuminate and the "positive safety output" relay will energise. The relay will de-energise if:
 - a, the fault current level exceeds the set trip level (I Δ n) ***
 - b, there is a failure of the connection between the relay and the toroid ** (Note the red "tripped" LED will flash during this condition)
 - c, the supply to the unit is removed d, the relay fails internally

 - ** causes the "standard output" relay to energise in response to the fault condition
- Prior to a fault occurring, the LED bargraph will indicate the % of IDn being detected (the display is scaled between 25, 50, and 75% of the actual trip level). After all 3 LED's have illuminated and the unit trips due to an excessive fault current, the red "tripped" LED will illuminate. The unit will now remain in a latched condition.

- The unit can be placed into a fault condition by pressing the "Test" button on the front of the unit (or by pressing the remote "Test" button - if fitted). The output relays operate accordingly.
- Press the "Reset" button on the front of the unit (or remotely if fitted) to reset the unit. The output relays revert back to their "non-tripped" state
- The unit can also be reset by interrupting the power supply
- To satisfy regulations, it is recommended that the device be tested periodically to ensure correct operation.

Troubleshooting

If the unit fails to operate correctly check that all wiring and connections are good.

Note:

The operating function of this unit is classed as a Type A for which tripping is ensured for residual sinusoidal alternating currents and residual pulsating direct currents, whether applied suddenly or slowly rising. Additionally, this unit is protected against nuisance tripping \mathcal{N} . This unit will also satisfy the requirements for Type AC devices which only need to detect residual alternating currents.

CONNECTION DIAGRAM 12 - 125V DC 24V AC A1 (+ve) A3 115V* AC Only The Earth MUST NOT pass through the C.T. For single phase application only the live and neutral need to be passed through the C.T. A2 (-ve) *Dual voltage only available as 115V/230V AC. For 115V, connect across terminals 6 and 7 For all other voltages, connect across terminals 5 and 7. $\otimes \otimes \otimes \otimes \otimes \otimes$ *Cabling: For distances >1m, use twisted pair 1 2 3 4 5 6 7 8 9 10 11 12 13 14 $\otimes \otimes \otimes \otimes \otimes \otimes \otimes$ shown in the de-energised state (i.e. where power is not present on the supply terminals) C.T. 50m* max.

TECHNICAL SPECIFICATION

Supply voltage Un (5, 6, 7): 12 - 125V DC (85 - 110% of U) (see connection diagram) 24, 115/230, 400V AC (85 - 115% of Un) All AC supplies are galvanically isolated between the supply and the Please state Supply voltage when ordering. toroid and remote test/reset connections 50/60/400Hz (AC supplies) Isolation: Over voltage cat. III
Rated impulse withstand voltage: 800V (24V AC supplies), 2.5kV (115V AC supplies) 4kV (230V, 400V AC supplies) 6VA (AC supplies) 5W (DC supplies) (1.2 / 50µS) IEC 60664 Power consumption (max.): Monitored leakage current: 0 to 30A (15 - 400Hz) (through external toroid with 1000:1 ratio and connected to terminals 8 and 9) Sensitivity Ian (see Accessories) 30, 100, 300, 500mA, 1, 3, 5, 10, 20, 30A (user selectable) Trip level limits: 80 - 90% of I∆n Reset Value: ≈ 85% of tripped level 0*, 60, 150, 250, 500, 800mS, 1, 2.5, 5, 10 sec. (user selectable) Time delay Δt

Dims

to DIN 43880

*Actual delay for "0" or "Instanta

For IAn setting of 30mA, the time delay is fixed to 0 (instantaneous) and is not adjustable (i.e. any other time delay cannot be selected when 30mA is set).
 The unit is factory set to 30mA trip and instantaneous delay. Adjustment of these settings can be

neous" is <25mS when fault current @ $5 \times ID$ n.

nade if necessary to suit the requirements of the installation. A seal is supplied allowing to ecure the clear window and hence prevent any unnecessary adjustment of the settings.

Reset time: LED indication:	≈ 2S (from supply interruption)			
Power supply present:	Green			
Paramanh	Green x 3 (25, 50 and 75% of actual trip level)			
Tripped:	Red (see "INSTALLATION" to the left)			
Memory:	storage of the leakage fault and reset with the "Reset" push button			
Ambient temp: Relative humidity:	-20 to +55°C (-5 to +40°C in accordance with IEC 60755) +95%			
Output :	I x SPNO, I x SPDT relays			
Output rating:		S.O. (12, 13, 14)	P.S.O. (10, 11)	
	ACI (250V)	8A (2000VA)	6A (1500VA)	
	AC15 (250V)	2.5Å	4A	
	DC1 (25V)	8A (200W)	6A (150W)	
Electrical life:	≥ 150,000 ops	at rated load		
Dielectric voltage:	2kV AC (rms) IEC 60947-1			
Rated impulse withstand voltage:				
Remote "Test" / "Reset" (1, 2, 3)	Requires N.O.	contacts. (i.e. push be	uttons)	
Minimum trigger time:	$>$ 80mS (Actual trigger time = 80mS + Δt setting for remote "test"			
Housing:	Grey flame retardant Lexan UL94 VO			
Weight:	≈ 190g (AC power supplies) ≈ 110g (DC power supply)			
Mounting option:	ounting option: On to 35mm symmetric DIN rail to BS5584:1978			
	(EN50 002, DIN 46277-3)			
Terminal conductor size:	≤ 2.5mm² stranded, ≤ 4mm² solid			
Approvals:	Conforms to: IEC60755, 60947, 62020, 61543.			
	IEC 61000-4-2, -3, -4, -5 , -6, -12 and -16. CISPR 22.			
	CE and Co			


() Numbers in brackets shown above refer to terminal numbers on the relay housing.

Options

1. For other supply voltages, alternative trip levels or time delays, please consult the sales office.

Accessories - Toroids

[Toroid Type:	Internal diameter:	l∆n (min.) A
ſ	BZCT035	35mm Ø	0.03
ſ	BZCT070	70mm Ø	0.03
[BZCT120	120mm Ø	0.1
	BZCT210	210mm Ø	0.3

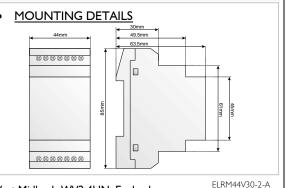

Broyce Control Ltd., Pool Street, Wolverhampton, West Midlands WV2 4HN. England

Telephone: +44 (0) 1902 773746 Facsimile: +44 (0) 1902 420639 Email: sales@broycecontrol.com Web: http://www.broycecontrol.com The information provided in this literature is believed to be accurate (subject to change without prior notice); however, use of such information shall be entirely at the user's own risk