

Distinctive Characteristics

Low profile body of MRF model accommodates space limitations required for PCB mounting. For the MRA and MRK bushing mount models, the range of behind panel body depths is .323" to .669" (8.2mm to 17.0mm).

Positive detent mechanism for distinct feel and audible feedback.

Metal bushing and housing construction increases durability.


Adjustable stopper plate allows 2–12 position settings.

High contact reliability achieved by the self-cleaning contact mechanism.

Break-before-make contact timing with sliding contacts in MRA and rotary contactor disk in MRF and MRK models.

Interior housing seal and molded-in PC terminals, plus shaft rubber o-ring on MRF and MRK and polyamide cover on MRF model, allow cleaning after automated soldering.

Exterior rubber washer and double flatted bushing on MRA and MRK give protection in splashproof applications.

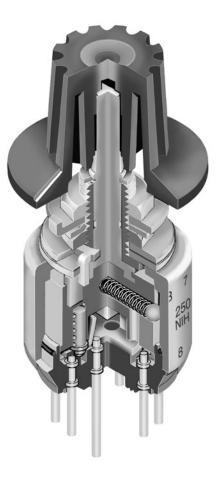

Actual Size





General Specifications

Electrical Capacity (Resistive Load)

For MRA:250mA @ 125V ACFor MRF or MRK:0.4VA maximum @ 28V AC/DC maximum
(Applicable Range 0.1mA ~ 0.1A @ 20mV ~ 28V)
Note: Find additional explanation of operating range in Supplement section.

Other Ratings

Contact Resistance:	10 milliohms maximum for MRA; 50 milliohms maximum for MRF & MRK
Insulation Resistance:	100 megohms minimum @ 500V DC
Dielectric Strength:	1,000V AC minimum for 1 minute minimum for MRA
-	500V AC minimum for 1 minute minimum for MRF & MRK
Mechanical Life:	30,000 operations minimum
Electrical Life:	10,000 operations minimum
Range of Operating Torque:	0.02 ~ 0.07Nm for MRA; 0.005 ~ 0.02Nm for MRF & MRK
Contact Timing:	Nonshorting (break-before-make)
Ũ	MRA – self-cleaning, sliding contact; MRF & MRK – self-cleaning, rotary contactor disk
Indexing:	30°

Materials & Finishes


Muleiluis & I IIIsiles	
Shaft:	Brass with nickel plating
Stopper Plate:	Steel with zinc plating for MRA & MRK; polyamide cover with stopper for MRF
Bushing/Housing:	Zinc alloy with zinc plating
Movable Contacts:	
	Copper with silver plating for MRA; phosphor bronze with gold plating for MRF & MRK
End Contacts & Terminals:	Brass with silver plating for MRA; phosphor bronze with gold plating for MRF & MRK
Common Contacts & Terminals:	Brass with silver plating for MRA; phosphor bronze with gold plating for MRF & MRK
Base:	Diallyl phthalate for MRA; fiberglass reinforced polyamide for MRF & MRK
Environmental Data	
Operating Temperature Range:	–10°C through +70°C (+14°F through +158°F)
Humidity:	90 ~ 95% humidity for 96 hours @ 40°C (104°F)
Vibration:	10 ~ 55Hz with peak-to-peak amplitude of 1.5mm traversing the frequency range
	& returning in 1 minute; 3 right angled directions for 2 hours
Shock:	50G (490m/s ²) acceleration (tested in 3 right angled directions, with 3 shocks in each direction)
Installation	
Mounting Torque:	.686Nm (6.08 lb•in)
Cap Installation Force:	19.6 ~ 29.4N (4.41 ~ 6.61 lbf) for MRA & MRK
Cap installation force.	17:0 ~ 27:414 (4:41 ~ 0:01 Ibl) 101 MKA & MKK
December	
Processing	
Soldering Time & Temperature:	Wave Soldering for MRA: See Profile A in Supplement section.
	Waye Soldering for MRE & MRK. See Profile B in Supplement section

Ing Time & temperature: Wave Soldering for MKA: See Profile A in Supplement section.
Wave Soldering for MRF & MRK: See Profile B in Supplement section.
Manual Soldering for MRF & MRK: See Profile B in Supplement section.
Manual Soldering for MRF & MRK: See Profile B in Supplement section.
Cleaning: Automated cleaning recommended. Stopper plate, as well as washers for MRA & MRK, must be in place to maintain automated cleaning. See Cleaning specifications in Supplement section.

Standards & Certifications

UL Recognition or CSA Certification: MRA, MRF, & MRK models have not been tested for UL recognition or CSA certification. These switches are designed for use in a low-voltage, low-current, logic-level circuit. When used as intended in a logic-level circuit, the results do not produce hazardous energy.



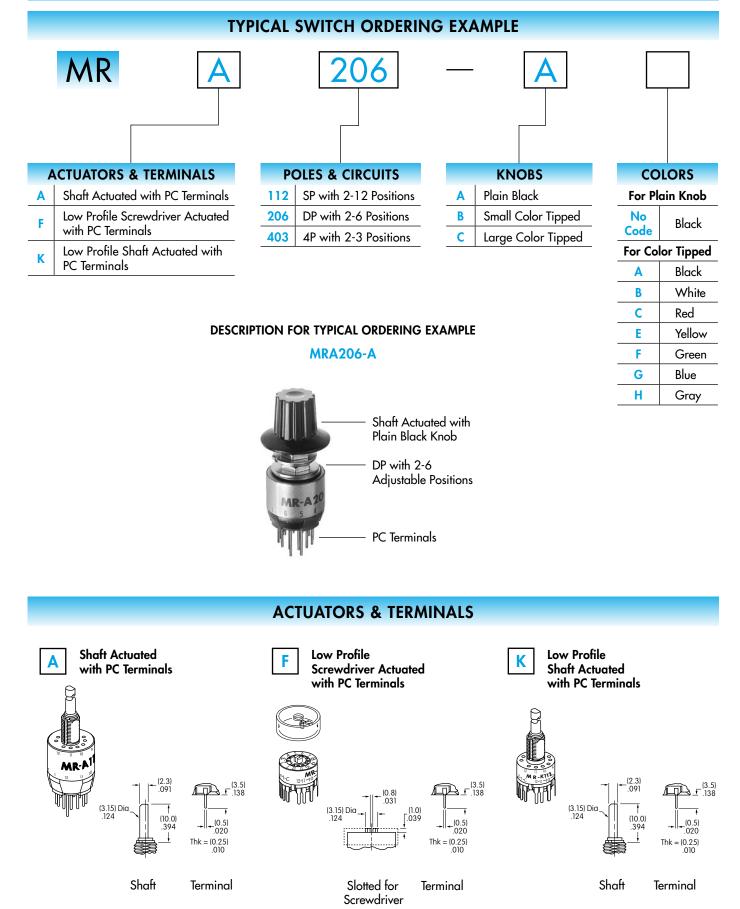

NKK Switches • email: sales@nkkswitches.com • Phone (480) 991-0942 • Fax (480) 998-1435 • www.nkkswitches.com 05-08

Downloaded from Elcodis.com electronic components distributor



Half-Inch Diameter Process Sealed Rotaries Series MR


	POLES & CIRCUITS						
Pole	Model	Number of Positions	Stopper Settings	Number of Terminals	Schematics		
	MRA112	2-12	2, 3, 4, 12	1 COM, 12 LOAD	A		
SP	MRF112	2-12	2, 3, 4, 12	1 COM, 12 LOAD			
	MRK112	2-12	2, 3, 4, 12	1 COM, 12 LOAD	1 2 3 4 5 6 7 8 9 10 11 12		
DP	MRA206	2-6	2, 3, 4, 5, 6	2 COM, 12 LOAD	A B		
	MRF206	2-6	2, 3, 4, 5, 6	2 COM, 12 LOAD	//		
	MRK206	2–6	2, 3, 4, 5, 6	2 COM, 12 LOAD	1 2 3 4 5 6 1 2 3 4 5 6		
4P	MRA403	2-3	2, 3	4 COM, 12 LOAD	А В С D Р Р Р Р		
	MRF403	2–3	2, 3	4 COM, 12 LOAD			
	MRK403	2–3	2, 3	4 COM, 12 LOAD			

POSITION SETTING FOR MRA, MRF, & MRK MODELS

Each switch is supplied with the stopper set for the maximum number of positions allowed for that model. Prior to installation, the desired position setting should be made. Contact factory for continuous rotation.


MRF Models

- 1. Remove the protective cover from the switch body.
- 2. Turn the shaft counterclockwise to the extreme left by using a screwdriver.
- Inside the cover is a magnifying lens which would be positioned over the number which is to be the maximum position used; when the cover is then snapped into the switch, the projection beside the lens fits into the correct hole for setting the stop.

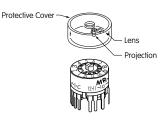

MRK & MRA Models


- Using the actuator knob, turn the shaft counterclockwise to the extreme left. If the shaft is not turned counterclockwise to the extreme left, proper setting cannot be achieved. At this extreme position, the white line on the knob points to the number 1 position shown on the side of the switch.
- Remove the knob from the shaft and loosen the nut far enough to allow raising the stopper plate, plus washer(s), for resetting to the desired position.
- 3. Note the position numbers on the side of the switch; these correspond to the terminal numbers and stopper holes. Insert the stopper in the hole numbered for the maximum desired number of stop settings. Satisfactory switch functioning cannot be assured if the stopper plate is not properly positioned.
- 4. Tighten the nut (beveled side up) firmly against the stopper plate.

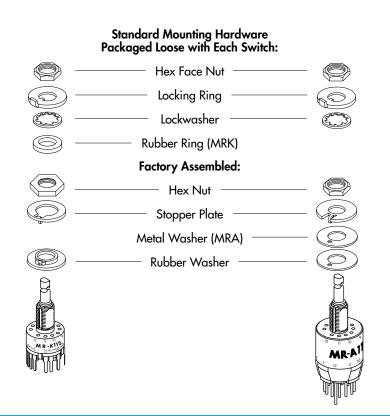



TYPICAL SWITCH DIMENSIONS




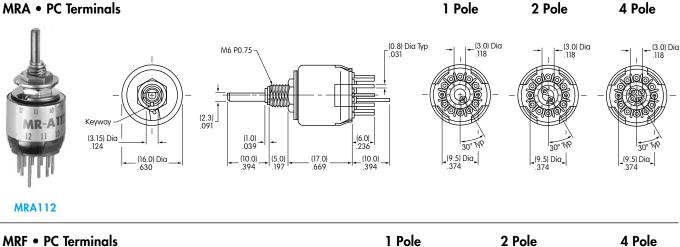



1 Pole



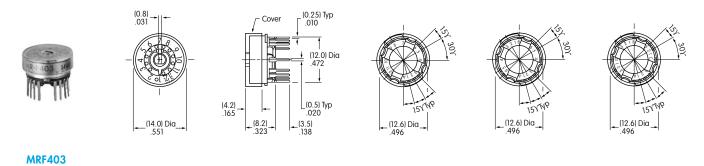


MRK • PC Terminals

1 Pole


2 Pole

4 Pole

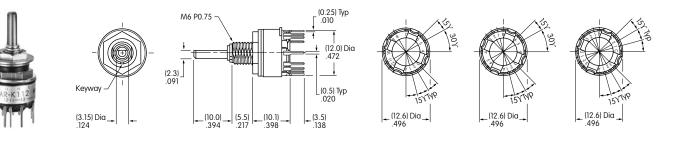



MRK112

MRK devices are designed to be panel mounted. Installation without panel mounting will affect reliability.

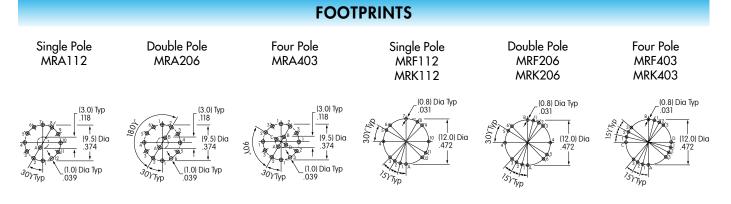



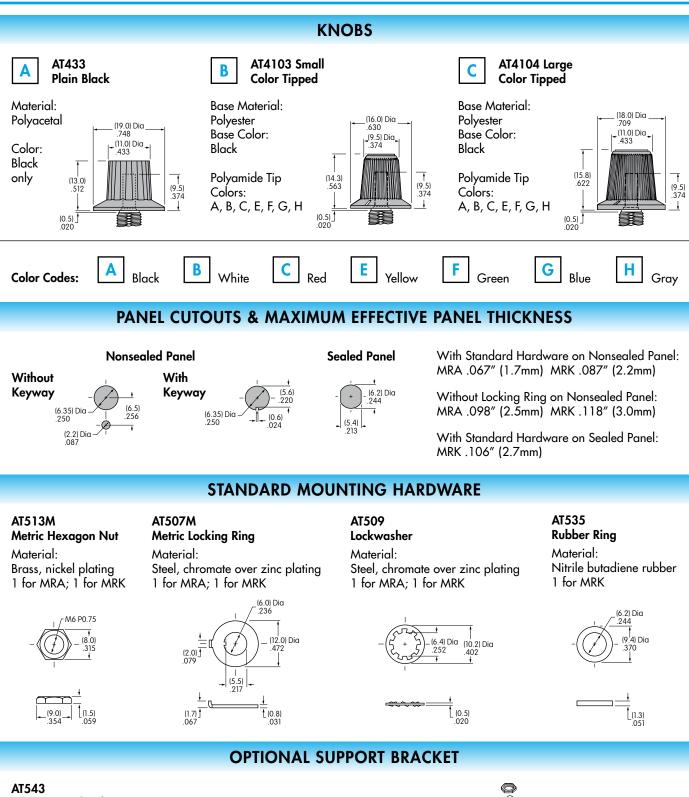

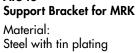

(18.0)

(3.8) Typ

 \square

(14 0)

(18.0)

587

(0.5) Typ

.020

(0.8) Typ



+

(17.2)

(17.5)

689

(1.2) Dia Typ

A support bracket

the MRK is mounted

only to a PC board

and does not have

a panel.

the bushing through

is needed when