


DELTAplus

DIN Rail Mounted electricity meters

Technical Documentation



ABB

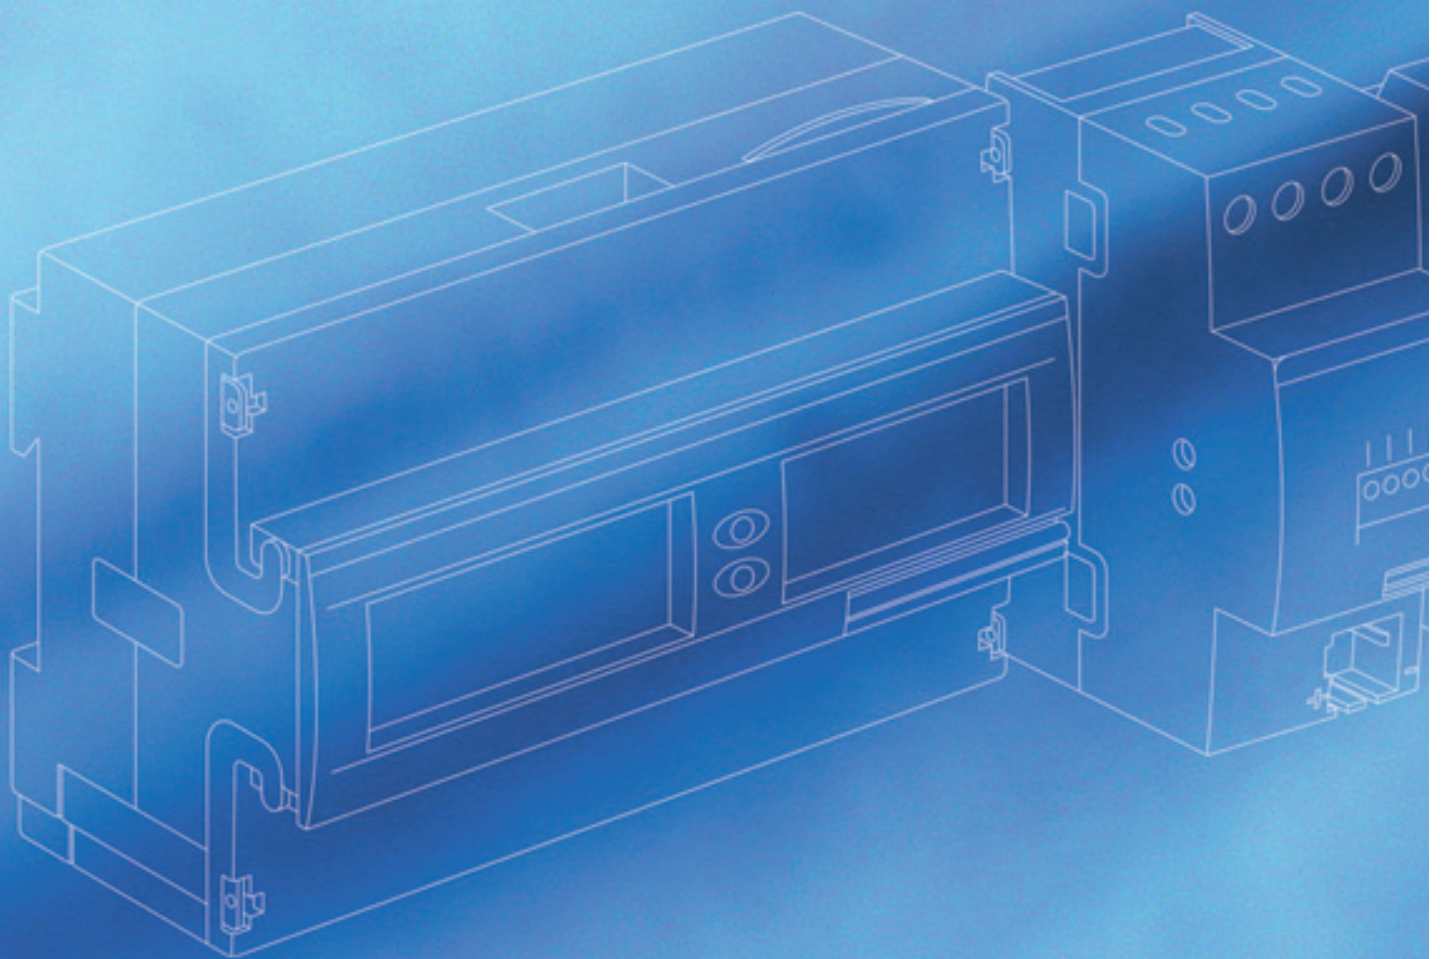



DELTAplus

Table of Contents

DELTAplus

General Description	4
Chapter 1:	
Assortment	5
Assortment	
Direct connected meters	6
Assortment	
Transformer connected meters	7
Assortment	
Accessories	8
Chapter 2:	
Technical Data	9
Wiring Diagrams and Pulses	11
Chapter 3	
with LON-bus and M-bus Communication	12
with EIB communication	13
Chapter 4:	
Symbols, Definitions and Dimensions	14
Chapter 5:	
Electricity Metering	15

1

2

3

4

5

DELTAplus

General Description



The DELTAplus Meter is an electronic electricity meter for DIN rail mounting in distribution boards or small enclosures. The meter is designed according to ABB's ProM standard.

Features

The DELTAplus Meter is easy to read with its LCD (Liquid Crystal Display) with 7 mm high digits and several symbols.

The meter has a polarity independent, solid state (semiconductor) relay that generates pulses proportionally to the measured energy.

A red LED (Light Emitting Diode) flashes proportionally to the energy measured. The DELTAplus Meter can be equipped with inputs or outputs for control and alarm handling as well as pulse counting. The meter is equipped with unique instrumentation functions enabling it to read the essential electrical units.

Communication

DELTAplus Meters with integrated EIB, M-bus or LON-bus communication, are easy to read remotely in a cost-effective way without conversions via traditional pulsed output. The DELTAplus meter is also equipped with an IR output that can be connected to the ABB Serial Communication Adapter.

Programming

Selection of the information in the LCD-display and programming of the DELTAplus Meter is performed via two programming buttons. These buttons can be sealed.

Installation check

An installation check that controls the installation runs all the time on all DELTAplus Meters.

Primary measurement function

The DELTAplus Meter offers a primary measurement function when connected to external voltage (VT) or current (CT) transformers. The VT and CT transformer ratios, can easily be set with the two programming buttons. This function enables the real energy consumption to be displayed.

Type Approved

All DELTAplus Meters are type approved according to the international standards IEC 61036 (for active energy) and IEC 61268 (for reactive energy). These standards cover all technical aspects, climate conditions, electromagnetic compatibility (EMC), electrical and mechanical requirements, and accuracy. The DELTAplus meter carries approval from ie. PTB, NMI and the Swedish National Testing and Research Institute, as a revenue classified meter.

Instrumentation

There are instrumentation functions in DELTAplus meters which enable it to read essential electrical units. This means that the user can read out the following from the DELTAplus meters:

- Power in kW
- Current in A
- Voltage in V
- Frequency in Hz
- Power factor

DELTAplus Assortment

DELTAplus type designation key

Pos	1	2	3	4	5	6-8
Basic						
Standard	D or S					
Measuring						
Active - CT/VT connected	A					
Active - direct connected	B					
Active & reactive - CT/VT connected	C					
Active & reactive - direct connected	D					
Communication						
Pulses, Ir-port			B			
Mbus, Ir-port			M			
Lon, Ir-port			L			
EIB, pulses, Ir-port			E			
Accuracy						
Class 1				1		
Class 2 (DB...,DD...and SB...types)				2		
Voltage						
1 x 57-288 V					1	
3 x 100-500 V					2	
3 x 57-288 / 100-500V					3	
Optional functionality						
See "type" columns for last digits						xxx

1

DELTAplus, main data

- Fully conform to IEC 61036 (active energy) and IEC 61268 (reactive energy)
- Direct connected 5(80)
- CT connected 1(6)
- CT-VT ratios programmable (up to 999 999)
- Accuracy class 1 and 2
- Tariff 2 or 4
- Communication pulse and/or serial
- Installation check automatic
- Instrumentation yes
- Display 7 digits
- IR output yes
- Operating temperature -40° C to +55° C

DIRECT Connected meters

Pulse/IR communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/	DBB 23000	0980800	2CMA180800R1000	Active	2			
100-500	DBB 23001	0980811	2CMA180811R1000	Active	2	2		
	DBB 23002	0980813	2CMA180813R1000	Active	2	4		
	DBB 13000	0980801	2CMA180801R1000	Active	1			
	DBB 13001	0980812	2CMA180812R1000	Active	1	2		
	DDB 13000	0980810	2CMA180810R1000	Active & Reactive	1			
3x100-500	DBB 22000	0980802	2CMA180802R1000	Active	2			
	DBB 22001	0980814	2CMA180814R1000	Active	2	2		
	DBB 22002	0980815	2CMA180815R1000	Active	2	4		
1x57-288	DBB 21000	0980804	2CMA180804R1000	Active	2			
	DBB 21001	0980816	2CMA180816R1000	Active	2	2		
	DBB 21002	0980817	2CMA180817R1000	Active	1	2		
	DBB 11001	0980818	2CMA180818R1000	Active	1	2		

For other types, please contact Customer service

DELTAplus

Assortment

Direct connected meters

M-bus-communication/IR- Communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/ 100-500	DBM 23000	0980840	2CMA180840R1000	Active	2			
	DBM 23001	0980850	2CMA180920R1000	Active	2	2		
	DBM 23002	0980851	2CMA180921R1000	Active	2	4		
	DBM 23070	0980841	2CMA180841R1000	Active	2			1
	DBM 23020	0980852	2CMA180922R1000	Active	2		2	
3x100-500	DBM 22000	0980842	2CMA180842R1000	Active	2			
	DBM 22001	0980853	2CMA180923R1000	Active	2	2		
	DBM 22002	0980854	2CMA180924R1000	Active	2	4		
1x57-288	DBM 21000	0980843	2CMA180843R1000	Active	2			

1

LON-bus-communication/IR-Communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-28 / 100-500	DBL 23000	0980820	2CMA180820R1000	Active	2			
	DBL 23003	0980829	2CMA180829R1000	Active	2	2		
	DBL 23004	0980830	2CMA180830R1000	Active	2	4		
	DBL 23070	0980821	2CMA180821R1000	Active	2			1
3x100-500	DBL 22000	0980822	2CMA180822R1000	Active	2			
	DBL 22003	0980831	2CMA180831R1000	Active	2	2		
	DBL 22004	0980832	2CMA180832R1000	Active	2	4		
1x57-288	DBL 21000	0980833	2CMA180833R1000	Active	2			

EIB-bus-communication/IR-communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/ 100-500	SBE 23000	99839053	2CMA139053R1000	Active	2			
	SBE 23004	99839055	2CMA139055R1000	Active	2	4		
	SBE 13000	99839049	2CMA139049R1000	Active	1			
3x100-500	SBE 22000	99839052	2CMA139052R1000	Active	2			
1x57-288	SBE 21000	99839051	2CMA139051R1000	Active	2			

For other types, please contact Customer service

DELTAplus

Assortment

Transformer connected meters

Pulse/IR-communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/	DAB 13000	0980806	2CMA180806R1000	Active	1			
100-500	DCB 13000	0980808	2CMA180808R1000	Active & Reactive	1			
	DAB 13001	0980870	2CMA180870R1000	Active	1	2		
	DCB 13001	0980872	2CMA180872R1000	Active & Reactive	1	2		
	DAB 13002	0980871	2CMA180871R1000	Active	1	4		
	DCB 13002	0980873	2CMA180873R1000	Active & Reactive	1	4		
3x100-500	DAB 12000	0980807	2CMA180807R1000	Active	1			
	DCB 12000	0980809	2CMA180809R1000	Active & Reactive	1			
1x57-288	DAB 11000	0980819	2CMA180819R1000	Active	1			

1

M-bus-communication/IR-communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/	DAM 13000	0980844	2CMA180844R1000	Active	1			
100-500	DCM 13000	0980847	2CMA180852R1000	Active & Reactive	1			
	DAM 13001	0980855	2CMA180855R1000	Active	1	2		
	DAM 13002	0980856	2CMA180856R1000	Active	1	4		
	DAM 13070	0980845	2CMA180845R1000	Active	1			1
	DCM 13070	0980848	2CMA180848R1000	Active & Reactive	1			1
3x100-500	DAM 12000	0980846	2CMA180846R1000	Active	1			

LON-bus-communication/IR-communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/	DAL 13000	0980823	2CMA180823R1000	Active	1			
100-500	DCL 13000	0980828	2CMA180828R1000	Active & Reactive	1			
	DAL 13003	0980834	2CMA180834R1000	Active	1	2		
	DAL 13004	0980835	2CMA180835R1000	Active	1	4		
	DAL 13070	0980824	2CMA180824R1000	Active	1			1
3x100-500	DAL 12000	0980825	2CMA180825R1000	Active	1			
	DCL 12000	0980836	2CMA180836R1000	Active & Reactive	1			
	DAL 12070	0980826	2CMA180826R1000	Active	1			1

EIB-bus-communication/IR-communication

VOLTAGE	TYPE	ARTICLE No.	ABB ID	MEASURING	CLASS	TARIFFS	I/O	ADD.PULSE OUTPUT
3x57-288/	SAE 13000	99839046	2CMA139046R1000	Active	1			
100-500	SCE 13000	99839056	2CMA139056R1000	Active & Reactive	1			
	SAE 13004	99839048	2CMA139048R1000	Active	1	4		
3x100-500	SAE 12000	99839045	2CMA139045R1000	Active	1			


For other types, please contact Customer service

DELTAplus


Assortment

Accessories


1

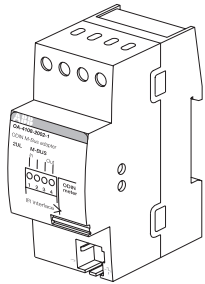


99 837 090 / 91

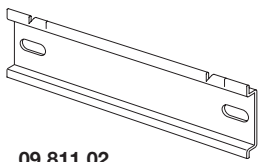


09 811 02

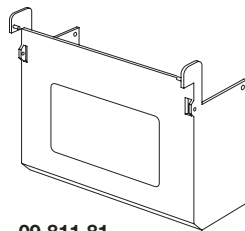


09 811 81

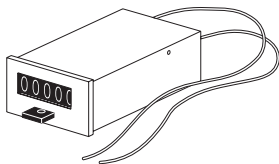

09 811 04

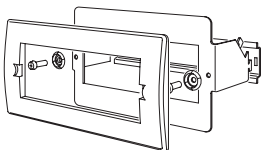

09 811 84

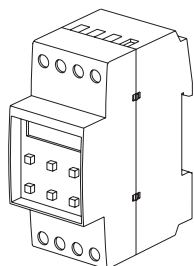


19 102 30


The table below, figures, and drawings describe the DELTAplus accessories.

ARTICLE No.	ABB ID	TYPE	APPLICATION	DRAWING
99 837 090	2CMA137090R1000	Serial Comm. Adapter	M-Bus *)	1
99 837 091	2CMA137091R1000	Serial Comm. Adapter	RS232 *)	1
09 811 02	2CMA132540R1000	DIN-rail	Wall mounting	-
09 811 81	2CMA132633R1000	Long cover	Wall mounting	2
09 811 04	2CMA132541R1000	External counter	Panel mounting	3
09 811 84	2CMA132635R1000	Front mounting kit	Panel mounting	4
19 102 30	GHV0215569R0001	Time switch clock		-
		DTS 7/2 for tariff control		


D. 1

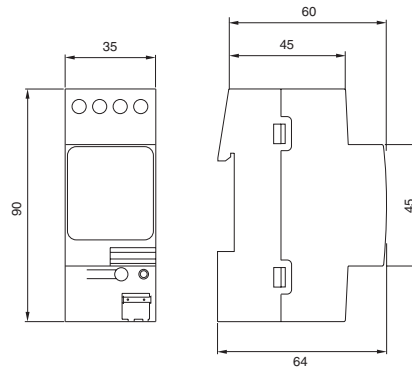


D. 2

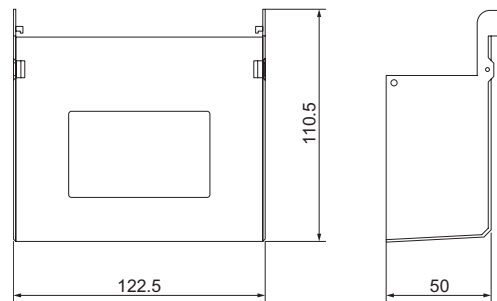

D. 3

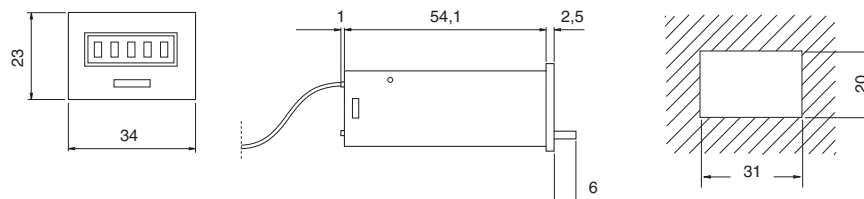

D. 4

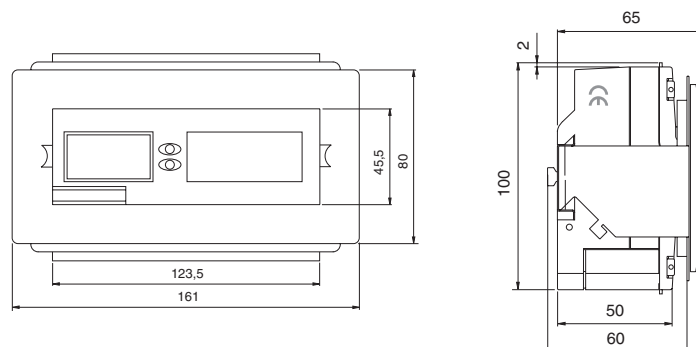

*) For more information, please contact Customer service.

DELTAplus

Technical Data

	DIRECT CONNECTED METERS	TRANSFORMER CONNECTED METERS
VOLTAGE/CURRENT UNITS		
Voltage [V]	3 x 57-288 / 100-500 (4-wire) 3 x 100-500 (3-wire) 1 x 57-288 (Single phase)	3 x 57-288 / 100-500 (4-wire) 3 x 100-500 (3-wire) 1 x 57-288 (Single phase)
Voltage range	-20% to +15% of nominal voltage	-20% to +15% of nominal voltage
Power consumption of voltage circuits	< 3 VA, 2 W/phase	< 3 VA, 2 W/phase
Current [A]		
- base	5	1
- max	80	6
Starting current [mA]	< 20	< 2
Power consumption of current circuits	< 6 VA/phase	< 0.08 VA/phase
GENERAL DATA		
Frequency [Hz]	50/60 ± 5%	50/60 ± 5%
Standards	<ul style="list-style-type: none"> • IEC 61036 for active energy meters of class 1 and 2 • IEC 61268 for reactive energy meters of class 2 • Pulse output according to DIN 43864 (SO) IEC 62053-31 	<ul style="list-style-type: none"> • IEC 61036 for active energy meters of class 1 and 2 • IEC 61268 for reactive energy meters of class 2 • Pulse output according to DIN 43864 (SO) IEC 62053-31
Display of energy	LCD with 7 digits, height 7 mm	LCD with 7 digits, height 7 mm
Accuracy	According to IEC 61036 Cl. 2 or Cl. 1	According to IEC 61036 Cl. 1
Voltage transformer ratio		1 - 9 999
Current transformer ratio		1 - 9 999
Maximum transformer ratio		CT x VT max = 999 999
Connection area [mm ²]:		0.5 - 10
• Current terminals		
• Voltage terminals	1.0 - 25	0.5 - 10
DIMENSIONS		
Width [mm]	122.5	122.5
Height [mm]	97	97
Weight [g]	337.5	303.5
DIN modules	7	7
ENVIRONMENT		
Resistance to heat and fire	According to IEC 60695-2-1: <ul style="list-style-type: none"> • Terminal 960° C • Cover 650° C 	According to IEC 60695-2-1: <ul style="list-style-type: none"> • Terminal 960° C • Cover 650° C
Humidity	75% yearly average, 95% on 30 days/year	75% yearly average, 95% on 30 days/year
Protection against penetration of dust and water	According to IEC 60529: <ul style="list-style-type: none"> • IP20 on terminal block without protective enclosure 	According to IEC 60529: <ul style="list-style-type: none"> • IP20 on terminal block without protective enclosure
Temperature range [°C]:		
• Operating	-40 to +55	-40 to +55
• Storing	-40 to +70	-40 to +70

2

DELTAplus

Technical Data

DIRECT CONNECTED METERS

TRANSFORMER CONNECTED METERS

PULSE OUTPUT

Connection area [mm ²]	0 - 2.5 (For combined meters 0 - 0.5)	0 - 2.5 (For combined meters 0 - 0.5)
External pulse voltage [V]	0 - 247 AC/DC (polarity independent)	0 - 247 AC/DC (polarity independent)
Maximum current [mA]	0 - 100	0 - 100
Pulse length [ms]	100	100
Pulse frequency	Programmable	Programmable (primary registering)

VISIBLE PULSE INDICATOR

Red LED with frequency [imp/kWh]	1000	5000 (secondary registering)
Pulse width [ms]	40	40

2

ELECTROMAGNETIC COMPATIBILITY (EMC)

Impulse voltage test	6 kV 1.2/50 μ s (IEC 600-60)	6 kV 1.2/50 μ s (IEC 600-60)
Fast transient burst test [kV]	4 (IEC 61000-4-4)	4 (IEC 61000-4-4)
Radio frequency immunity	80 MHz - 1 GHz at 10 V/m (IEC 61000-4-3)	80 MHz - 1 GHz at 10 V/m (IEC 61000-4-3)
Immunity to conducted disturbance	150 kHz - 80 MHz (IEC 61000-4-6)	150 kHz - 80 MHz (IEC 61000-4-6)
Radio frequency emission	According to CISPR 22 class B	According to CISPR 22 class B
Electrostatic discharge (ESD) [kV]	15 (IEC 61000-4-2)	15 (IEC 61000-4-2)

MATERIAL


Transparent front glass, bottom case, upper case and terminal cover	Polycarbonate	Polycarbonate
Terminal block	Glass-fibre reinforced polycarbonate	Glass-fibre reinforced polycarbonate
Protection class	II	II
Glow wire test	According to IEC 60 695-2-1	According to IEC 60 695-2-1

TARIFF INPUTS (OPTIONAL)

Maximum voltage [V]	276 AC	276 AC
Maximum wire size [mm ²]	2.5	2.5
Input voltage range [V]	0 - 20 AC ("voltage off") 57 - 276 AC ("voltage on")	0 - 20 AC ("voltage off") 57 - 276 AC ("voltage on")
Terminal wire area [mm ²]	0-2.5	0-2.5
Lon and M-bus	0.5	0.5
EIB	0.5	0.5

DELTAplus

Wiring Diagrams and Pulses

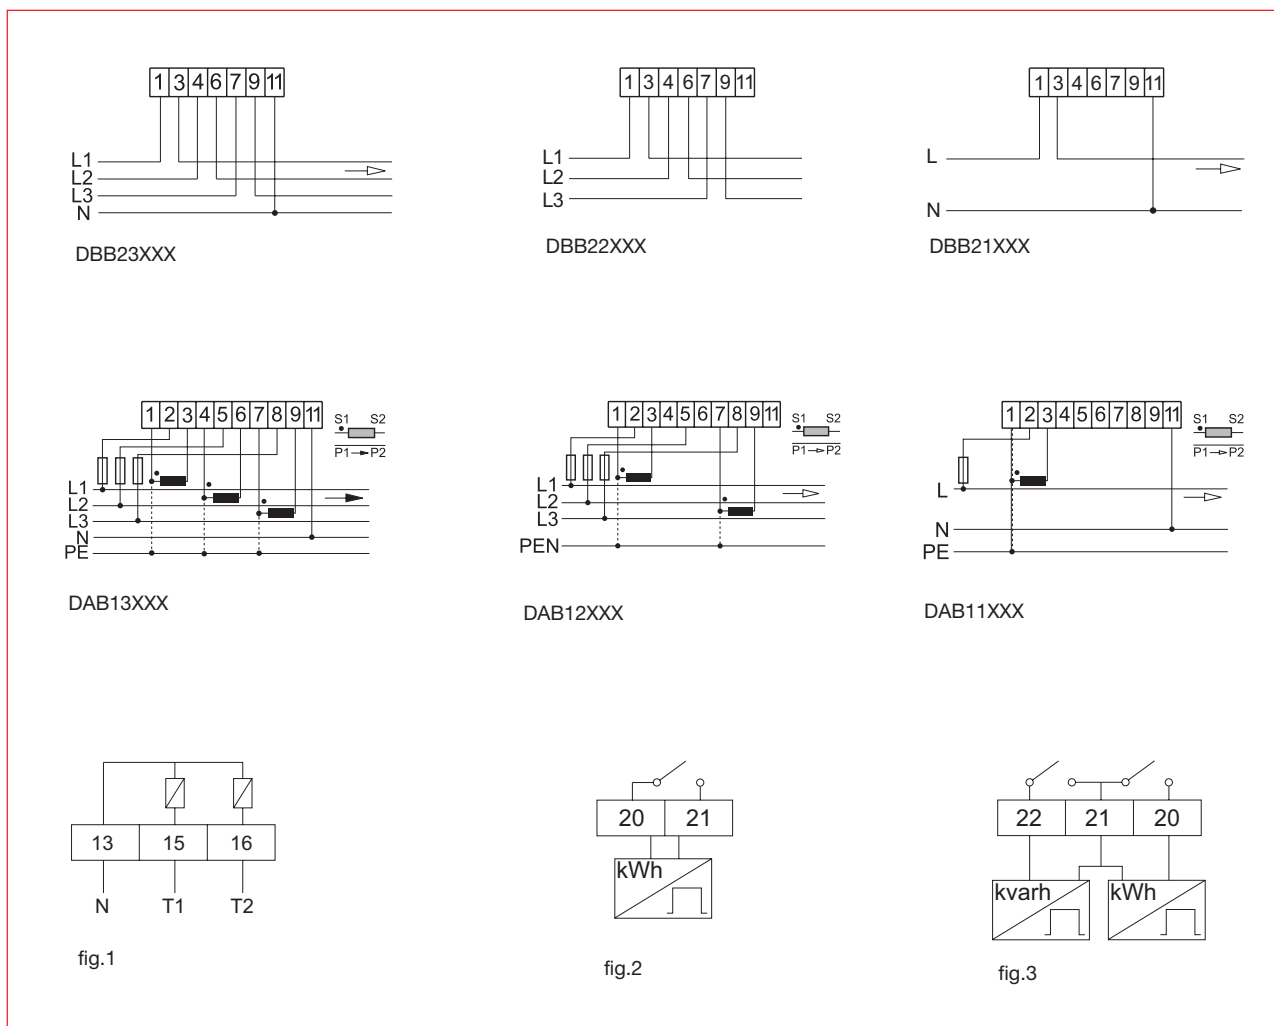

2

Direct connected meters

Three phase system

With neutral conductor (see DBB23XXX)

Without neutral conductor (see DBB22XXX)

One phase system

With neutral conductor (see DBB21XXX)

Transformer connected meters

Three phase system

With neutral conductor (see DAB13XXX)

Without neutral conductor (see DAB12XXX)

One phase system

With neutral conductor (see DAB11XXX)

Tariff input

Tariff control by external power supply up to 230 V AC(see fig.1)

T1 = tariff input 1

T2 = tariff input 2

Pulse output

External power supply up to 247 V AC or DC.

Active energy meters (see fig.2)

Combined meters (see fig.3)

Tariff input

ACTIVE TARIFF	INPUT (T1)	INPUT (T2)
Tariff 1	0*	0
Tariff 2	1**	0
Tariff 3	0	1
Tariff 4	1	1

*0 means < 20V

**1 means > 57V - 276V

Pulse frequency

DIRECT CONNECTED METERS [IMP/KWH]	TRANSFORMER CONNECTED METERS [IMP/KWH PRIMARY REGISTERING]
	0.01
	0.1
1	1
10	10
100	100
500	500
640	640
1 000	1000
5 000	


DELTAplus

with LON-bus and M-bus Communication


Inputs or Outputs (option)

The meter can be provided with inputs and outputs. The input can be used as a sabotage alarm or as a pulse counter, e.g., for a water meter. The output can be used as an ON and OFF function, for example to switch off the current by remote control. The inputs/outputs are of the opto-switch type and are galvanically isolated from other electronics in the meter. There are two input/output voltage variants; high and low, see technical data. Both variants are for AC/DC voltage and are polarity independent.


LON-bus

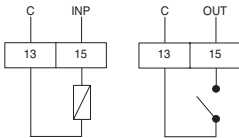


M-bus

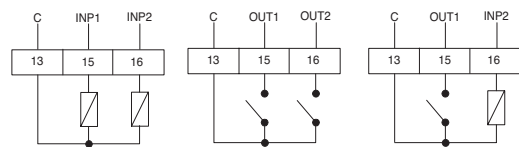

Installation (LON-bus)

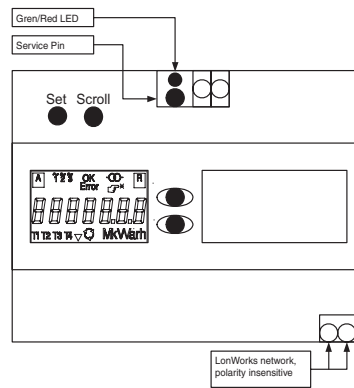

Installation (M-bus)

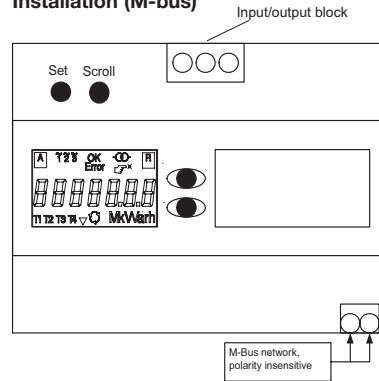

Instrumentation (Standard)

Read electrical units and functions, depending on type of DELTAplus meter. Secondary values on the bus-output and primary values on the display.

DESCRIPTION

- Active energy, total and per tariff
- Reactive energy, total and per tariff
- Transformer ratio
- Status of inputs and outputs
- Current and voltage per phase
- Active power per phase and total
- Reactive power per phase and total
- Apparent power per phase and total
- Power factor, line frequency
- Status on installation check
- Interruption counter for line voltage
- Manufacturer and serial number

Technical data

INPUT

Voltage range	0-40 V AC/DC 0-2 V no pulse count 4.5-40 V pulse count
Input resistance	8-13 kohm
Min. pulse length and pause	30 mS

OUTPUT

Voltage range	0-400 VDC, 0-282 V AC
Output resistance	12-36 ohm
Max. current	120 mA

3

Functions Inputs and Outputs


The input counts and stores pulses. The status can be read both via the bus and on the LCD display. The output can be controlled from a PC by switching ON and OFF and the status can be read at each transmission of data from the meter.

LON-bus Protocol

The software is compatible with LonMark 3.2 and uses the LonMark-profile Utility Data Logger 1.0. A description of network variables is noted in the DELTAplus User's Manual, which can be ordered from ABB.

M-bus Protocol

The protocol is based on international standard IEC 870. The bus system is adapted for remote reading of energy meters and works on the principle of master slave.

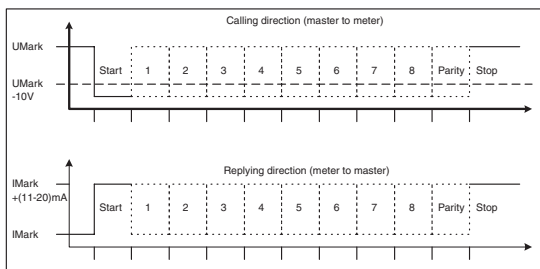

Baud rate

300, 600, 1200, 2400, 4800, 9600.

Technical Information

Operating and display elements: Service pin and LED. Bus interference: FTT-10A. Communication rate: 78 kbps.

A software clock is implemented in the Lon-interface to enable readings from the meter to be time-recorded. The clock is based on a timer in the Neuron and is to be set following a power failure. It copes with leap years but not daylight-saving time. The accuracy is ± 2 seconds per 24 hours.

DELTAplus

with EIB Communication

Additional EIB DELTAplus meter Features:

Integrated EIB communication interface

Remote reading of the following meter data:

Meter readings in Wh (varh)

Current capacity W (var)

Meter status and error information.

Control of the following meter functions:

Change of charges, synchronised inquiry of meter readings and

Management of error information.

Network monitoring function:

Logging and display of up to 24 electrical measured variables.

Automatic check function for wiring with "installation self-test"

Technical Data of EIB-Connection

Network log:

ABB i-bus® EIB (European Installation Bus)

ABB i-bus® EIB connection:

Bus supply terminal at the front (top)

Number of participants:

Max. 64 per line (potential total of 14,000 participants)

Transmission medium:

Twisted pair, YCYM or J-Y(St)Y 2x2x0.8 mm

Line lengths:

Total length of single line \leq 1,000 m

-between two participants \leq 700 m

-between power supply and participant \leq 350 m

For more technical details of the DELTAplus with EIB connection, please contact your local ABB EIB sales organisation.


3



DELTAplus

Symbols, Definitions and Dimensions

Type label

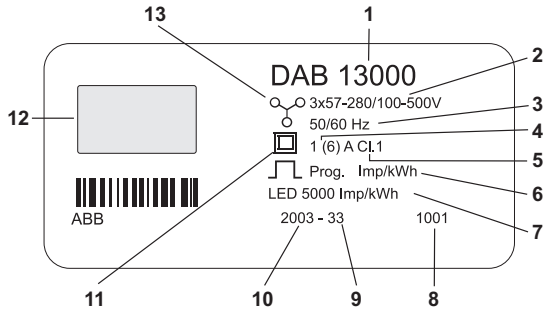

No.	SYMBOL	No.	SYMBOL
1.	Type designation	8	Serial number
2.	Voltage	9	Week of manufacture
3.	Frequency	10	Year of manufacture
4.	Nominal and max. current	11	Protective class
5.	Accuracy class	12	Approval symbols
6.	Pulse output frequency	13	Network type
7.	LED frequency		

Symbols for electricity meters

Meters with 1 drive system




which have one current and one voltage coil (used for single phase 2-conductor circuits)

Meters with 2 drive systems



each with a voltage and current coil connected as per the two watt-meter method (used for the three phase 3-conductor circuits).


Meters with 3 drive systems

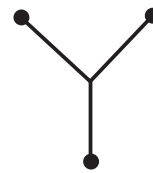


each with a voltage and current coil connected as per the three watt-meter method (used for the three phase 4-conductor circuits).

4


Terminal area, transformer connected meter

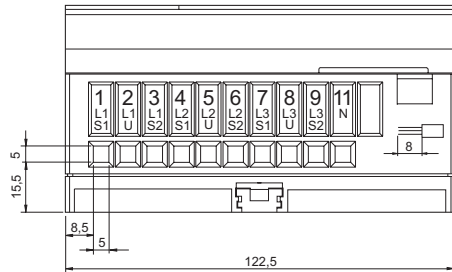


Terminal area, direct connected meter

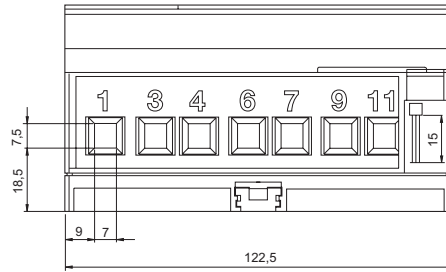

Front view, all meters

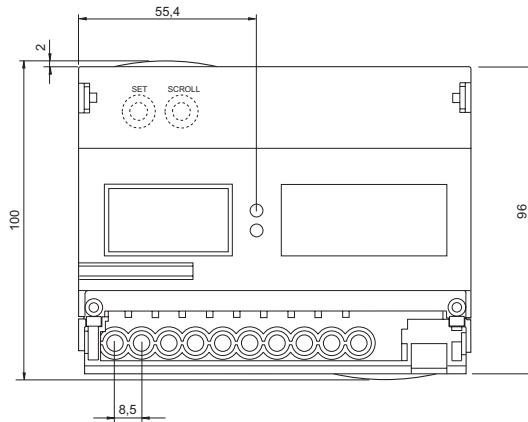

Side view, all meters

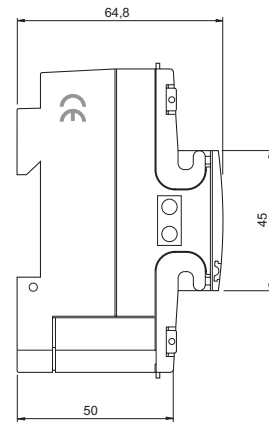

DELTAplus


Electricity Metering

Introduction


In most cases, the three-watt meter method is used for power measurements in three phase systems with a current-carrying neutral conductor. Where metering is the basis for billing, this is a requirement. High voltage installations often do not have any current-carrying neutral conductor, therefore the two-watt meter measurement method can be used. Both voltage and current transformers are commonly used. Single phase metering can be used if a three-phase load is balanced. If the DELTAplus meter is directly connected to the mains, the device must be protected by fuses (the possibility to isolate the meter is recommended) on the incoming side. In order to allow maintenance of DELTAplus Meters with current transformers connected, a short circuiting terminal block should be installed near the meter. The voltage supply to the meter must be protected by a max. 10A fuse.

Active and Reactive Power

Active power is needed to perform work. However, consumer equipment often cause a phase shift between current and voltage as a result of the inductive nature of the load, for example in motor drives. The maximum permissible phase shift is governed by the terms of the consumers' contract with the electricity supplier. If the consumers exceed the specified maximum, they will be liable to an extra charge and would be well advised to install compensation equipment, usually in the form of capacitor banks. Thus it can be seen that the reactive component of the power also is of interest for measurement.

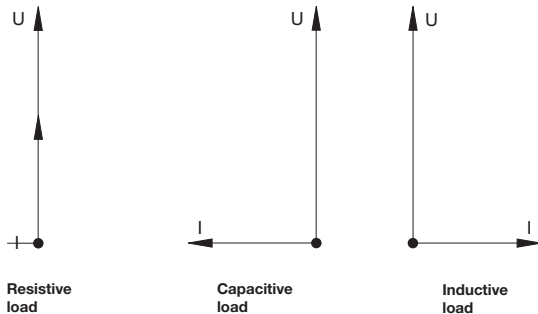


Resistive loads cause no phase shifts. Inductive loads cause a phase shift in one direction, while capacitive loads produce a phase shift in the opposite direction. As a result, inductive and capacitive loads can be used to compensate each other. The phase shift of the current compared to the voltage results in the power being divided into active and reactive components. The angle between the actual power vector and the active power component is described as phase displacement angle, often referred to as φ .




Methods of Measuring Power

The single-watt meter method (single phase)

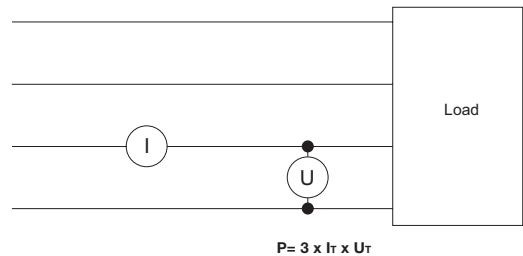


In three phase systems the single-watt meter method only gives correct results with a symmetrical load on the phases. Since in practice perfectly balanced systems are very rare, this method should not be used for accurate measurements.

The two-watt meter method

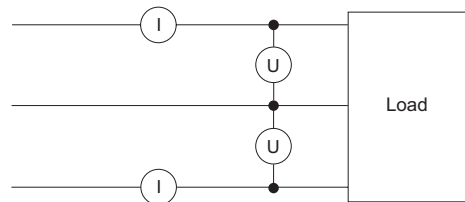

The two-watt meter method is used in three phase systems without a neutral conductor, irrespective of the load symmetrical or asymmetrical.

The three-watt meter method

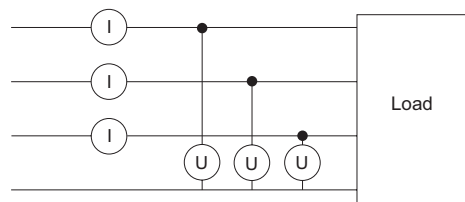

The three watt-meter method is usually used in three phase systems having a neutral conductor. This method can deal with asymmetrical and symmetrical loads.



ABB Automation Technologies AB

Cewe-Control

Box 1005, SE-611 29 Nyköping, Sweden

Telephone +46 155 29 50 00

Telefax +46 155 28 81 10

<http://www.abb.com/lowvoltage>

2CMC481002D0008/29567
Österbergs & Sörmlandstryck, 25887
Sweden Production: Lenmandia Nov 05