

# $C \in$

## **Model Number**

## UB800-18GM40-E4-V1


Single head system

#### **Features**

- Short design, 40 mm
- Function indicators visible from all directions
- Switch output
- 5 output modes
- **Program input**
- **Temperature compensation**

# **Curves**

# Characteristic response curve

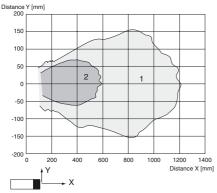

Curve 1: flat surface 100 mm x 100 mm Curve 2: round bar, Ø 25 mm

# **Technical data** General specifications

aenerai specifications			
Sensing range	50 800 mm		
Adjustment range	70 800 mm		
Unusable area	0 50 mm		
Standard target plate	100 mm x 100 mm		
Transducer frequency	approx. 255 kHz		
Response delay	approx. 100 ms		

#### Indicators/operating means

LED green	rowel on
LED yellow	indication of the switching state

flashing: program function object detected permanently red: Error LFD red

# **Electrical specifications**

Operating voltage U<sub>B</sub> 10 ... 30 V DC , ripple 10 %SS

No-load supply current  $I_0$ ≤ 20 mA

Input Input type 1 program input

operating distance 1: -U<sub>B</sub> ... +1 V, operating distance 2: +6 V

red, flashing: program function, object not detected

input impedance: > 4,7 k $\Omega$  program pulse:  $\geq$  1 s Output

Output type 1 switch output E4, npn NO/NC, programmable Rated operational current Ie 200 mA, short-circuit/overload protected Default setting Switch point A1: 70 mm Switch point A2: 800 mm

≤ 3 V Voltage drop U<sub>d</sub> ≤1 % Repeat accuracy Switching frequency f ≤ 4 Hz

Range hysteresis H 1 % of the set operating distance ± 1.5 % of full-scale value

Temperature influence **Ambient conditions** 

-25 ... 70 °C (248 ... 343 K) Ambient temperature Storage temperature -40 ... 85 °C (233 ... 358 K)

Mechanical specifications

Protection degree

Connection V1 connector (M12 x 1), 4-pin

Material

Housing brass, nickel-plated Transducer epoxy resin/hollow glass sphere mixture; foam

polyurethane, cover PBT

Mass 25 g Compliance with standards and


directives

Standard conformity

Standards EN 60947-5-2:2007


IEC 60947-5-2:2007

#### **Dimensions**

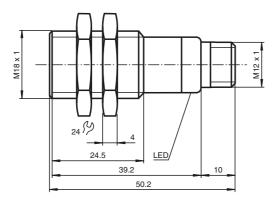

## **Electrical Connection**

Standard symbol/Connections: (version E4, npn)

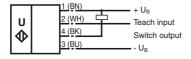

Core colours in accordance with EN 60947-5-2.

# **Pinout**

## Connector V1



# Adjusting the switching points

The ultrasonic sensor features a switch output with two teachable switching points. These are set by applying the supply voltage -U\_B or +U\_B to the TEACH-IN input. The supply voltage must be applied to the TEACH-IN input for at least 1 s. LEDs indicate whether the sensor has recognised the target during the TEACH-IN procedure. Switching point A1 is taught with -U\_B, A2 with +U\_B.

Five different output functions can be set

- 1. Window mode, normally-open function
- 2. Window mode, normally-closed function
- 3. one switching point, normally-open function
- 4. one switching point, normally-closed function
- 5. Detection of object presence

## TEACH-IN window mode, normally-open function


- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Set target to far switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>

## TEACH-IN window mode, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>

# **Additional Information**

## Programmable output modes

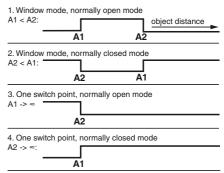

5. A1 -> ∞, A2 -> ∞: Object presence detection mode Object detected: Switch output closed No object detected: Switch output open

# **Accessories**

### **UB-PROG2**

Programming unit

#### **OMH-04**

Mounting aid

#### **BF 18**

Mounting flange

#### **BF 18-F**

Mounting flange

# BF 5-30

Mounting flange

#### V1-G-2M-PVC

Cable connector

## V1-W-2M-PUR

Cable connector

- Set target to far switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>

# TEACH-IN switching point, normally-open function

- Set target to near switching point
- TEACH-IN switching point A2 with +U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -UB

## TEACH-IN switching point, normally-closed function

- Set target to near switching point
- TEACH-IN switching point A1 with -U<sub>B</sub>
- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A2 with +U<sub>B</sub>

#### **TEACH-IN** detection of objects presence

- Cover sensor with hand or remove all objects from sensing range
- TEACH-IN switching point A1 with -U<sub>B</sub>
- TEACH-IN switching point A2 with +U<sub>B</sub>

### Default setting of switching points

A1 = blind range, A2 = nominal distance

## **LED Displays**

Displays in dependence on operating mode	Red LED	Yellow LED
TEACH-IN switching point:		
Object detected	off	flashes
No object detected	flashes	off
Object uncertain (TEACH-IN invalid)	On	off
Normal operation	off	Switching state
Fault	on	Previous state

#### Installation conditions

If the sensor is installed at places, where the environment temperature can fall below 0 °C, for the sensors fixation, one of the mounting flanges BF18, BF18-F or BF 5-30 must be used.

In case of direct mounting of the sensor in a through hole using the steel nuts, it has to be fixed at the middle of the housing thread. If a fixation at the front end of the threaded housing is required, plastic nuts with centering ring (accessories) must be used.