

3.1/2 DIGIT SINGLE CHIP DIGITAL MULTIMETER LSI

GENERAL DESCRIPTION


The NJU9212 is 3.1/2 digit single chip digital multimeter LSI with auto-ranging function. It consists of 3.1/2 digit dual-slope A/D converter, voltage reference, controller, oscillator, battery-life detector and LCD driver.

The NJU9212 provides the optimized functions for battery operated pencil or pocket type digited multimeter like as low operating voltage (3V), auto-ranging, LCD display direct driving, piezo buzzer direct driving and battery life indicator.

FEATURES

- Low Operating Current
- Low Operating Voltage (3V)
- Dual-slope A/D Converter
- Auto-ranging
- LCD Display Direct Driving
- Voltage Doubler for LCD Driver On-chip
- Voltage Regulator for LCD Driving
- Piezo Buzzer Direct Driving
- Power-on Initialize
- Battery-life Detector
- Package Outline -- QFP64/Chip
- C-MOS Technology


BLOCK DIAGRAM

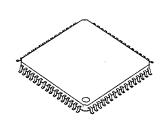


PACKAGE OUTLINE

NJU9212F

PIN CONFIGURATION

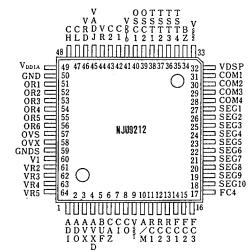

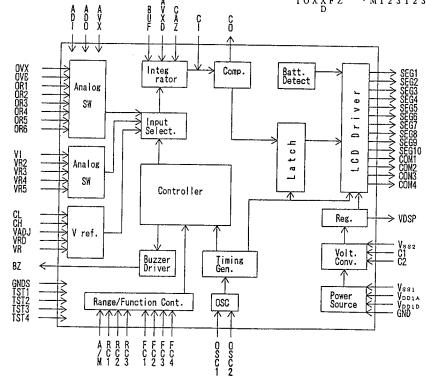

New Japan Radio Co., Ltd.

5-30------

Downloaded from Elcodis.com electronic components distributor

TERMINAL DESCRIPTION

NO.	SYMBOL	FUNCTION
1 2	ADI ADO	$AC \rightarrow DC$ Conversion Input Terminal AC \rightarrow DC Conversion Output Terminal
3 4	AVX AVXD	ADC "+" Input Terminal in AC Voltage Input ADC "-" Input Terminal in AC Voltage Input
5	BUF	Buffer Amplifier Output
6 7 8	CAZ CI CO	Auto-Zero Capacitor Connecting Terminal Integral Capacitor Connecting Terminal Comparator Dutput Terminal
10	A/M	Auto/Manual Selecting H Level: Auto Input Terminal L Level: Manual
11-13	RC1-RC3	Range Selecting Terminals (Note 1)
14–17	FC1-FC4	Function Selecting Terminals (Note 1)
18-27 28-31 32	SEG1-10 COM1-4 VDSP	LCD Segment Driver Output Terminals LCD Common Driver Output Terminals LCD Driving Voltage Monitor Terminal
34	BZ	Piezo Buzzer Driving Output Terminal
39,40	OSC2, OSC1	Quartz Crystal Connecting Terminals
42,43	C1,C2	Voltage Doubler Capacitor Connecting Terminals
44 45 46	VR VADJ VRD	Reference Voltage Output Terminal Reference Voltage Adjustment Terminal Reference Voltage Monitor Terminal
47,48	CL,CH	Reference Capacitor Connecting Terminals
51-56	OR1-6	Reference Resistor Connecting Terminals for Resistance Measurement
57 58	OVS OVX	Reference Voltage Input Terminal for Resistance Measurement Measuring Voltage Input Terminal for Resistance Measurement
60	VI	Voltage Measurement Input Terminal
61-64	VR2-VR5	Bleeder Resistor Connecting Terminals
35-38	TST1-TST4	Test Terminals 1~4 (Normally Open)
9 33 41 50 59	V _{SS1} V _{SS2} V _{DDID} V _{DDIA} GND GNDS	Analog, Digital GND Terminal LCD Driving Voltage Supply Terminal Digital Block Voltage Supply Terminal Analog Block Voltage Supply Terminal Analog Block Center point Voltage Supply Terminal GND Sensing Terminal in Integral Operation

5

(Note 1) With Pull-Up resistance except the A/M terminal.

-New Japan Radio Co.,Ltd.-

FUNCTIONAL DESCRIPTION


(1) MEASUREMENT FUNCTION

Measurement Function	Range	Auto or Manual
DC Voltage	200mV~400V 5-Ra	nge Auto/Manual Range
AC Voltage	2V ~ 400V 4-Ra	nge Auto/Manual Range
Resistance	100Ω~20MΩ 6-Ra	nge Auto/Manual Range
Diode Check		
Continuity Check		

(2) MEASUREMENT FUNCTION SELECTION (By the FC1 \sim FC4 terminals input)

FUNCTION	FC1	FC2	FC3	FC4
DCV ACV Ω →+ CONTI	ŦĹŦŦŦ	HHHL	H H L H	HHHHL

- (3) MEASUREMENT FUNCTION SELECTION SWITCH The mechanical lock type or rotary type switch is required.
- (4) THE KEY INPUT CONFIRMATION SOUND OF SWITCH OPERATION / SYSTEM RESET Piezo buzzer driving signal for the key input confirmation sound and the system reset signal are output, when the switch is operated.
 - a) THE KEY INPUT CONFIRMATION SOUND SIGNAL(2kHz)
 2kHz clock is output from BZ terminal about 31.25mS period at the rising or falling edge of input signals to the FC1 ~ FC4 terminals. This signal can drive a Piezo Buzzer directly.

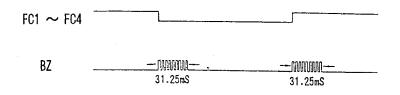

5 - 32



b) SYSTEM RESET SIGNAL

The range-set, counter-reset and auto-reset are performed synchronizing the rising or falling edge of input signals to the FC1 \sim FC4 terminals.


[Range-Set]

When the function was changed in the auto-range mode, the range is set as follows:

FUNCTION RANGE POINT		
DCV 200mV P1 ACV 2 V P3 Ω 200 Ω P1 →+ 2 V P3 CONT I 2kΩ P3		

[COUNTER RESET]

When the function is changed even if the A/D conversion period, the counter reset signal is output internally and the LSI is initialized. Afterward, the A/D conversion is start from auto-zero cycle.

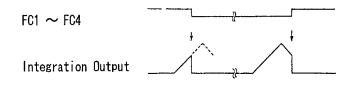

(5) CONTINUITY CHECK FUNCTION

When select continuity check function, 200Ω range of Ω function is set automatically. If the measured value is less than 190Ω , the buzzer sound is output continuously and the measured resistor value is displayed.


(6) DIODE CHECK FUNCTION

When select diode check function, $2k\Omega$ range of $k\Omega$ function is set automatically and measured a diode forward voltage by supplied 1.5V. If the input terminals are open, the voltage corresponding to the battery voltage is displayed. 5

5-33

(7) FULL AUTO-RANGE FUNCTION (A/M=H Level)

① The following flow is performed by range control terminal (RC1):

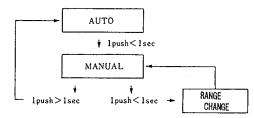

Apply the Momentary-type switch for the range control.


FUNCTION	AUT	0	MANUAL	
FUNCTION		1 PUSH	1 PUSH (<1sec.)	RANGE CONTROL
DCV	RNG1 ~ RNG5	→ HOLD	RNGi→RNGi+1 (RNG5→RNG1)	$200 \mathrm{mV} \sim 400 \mathrm{V}$
ACV	RNG1 ~ RNG4	→ HOLD	RNGi→RNGi+1 (RNG4→RNG1)	2V ~ 400V
Ω	RNG1 \sim RNG6	\rightarrow HOLD	RNGi→RNGi+1 (RNG6→RNG1)	$200 \Omega \sim 20 M \Omega$

2 AUTO-RETURN FUNCTION

When the range selecting terminal is kept L level over than 1 sec or a function is changed by $FC1 \sim FC4$ terminals, the range can be changed a function to auto range from any fixed range.

③ THE RANGE SELECTING CONFIRMATION SIGNAL

2kHz clock is output on BZ terminal about 31.25mS period at the falling edge of the RC1 terminal input. This signal can drive a Piezo Buzzer directly.

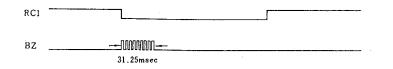

Downloaded from Elcodis.com electronic components distributor




(8) MANUAL RANGE FUNCTION (A/M=L Level)

① Manual range is selected by RC1~RC3 as follows:

RC1	RC2	RC3	DCV	ACV	DCI,ACI	Ω
Н	H	H	RNG2, 2V	RNG1, 2V	RNG1, 2mA	RNG2, $2K\Omega$
L	H	H	RNG3, 20V	RNG2, 20V	RNG2, 20mA	RNG3, 20K Ω
Н	L	H	RNG4, 200V	RNG3, 200V	RNG3, 200mA	RNG4, 200K Ω
L	L	H	RNG5, 400V	RNG4, 400V	RNG4, 2000mA	RNG5, 2000K Ω
Н	H	L	RNG5, 400V	RNG4, 400V	RNG5, 20A	RNG6, 20M Ω
L	H	L	RNG1, 200mV	RNG1, 2V	RNG1, 2mA	RNG1, 200 Ω


② MODE CHANGE OPERATION CONFIRMATION SOUND SIGNAL(2kHz)

2kHz clock is output on BZ terminal about 31.25mS period at the rising or falling edge of RC1 \sim FC3 terminals input. This signal can drive a Piezo Buzzer directly.

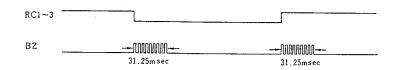

(9) CHATTER-FREE FUNCTION

All input terminals for control are build with the chatter-free circuits which eliminate chattering input less than 62.5mS

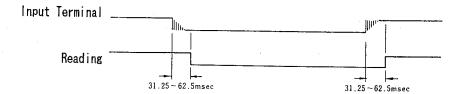

(10) BUZZER DRIVING SIGNAL

Adding to the switch operation confirmation signal output by FC1 \sim FC4 and RC1 \sim RC3, the buzzer driving signals is also output at the following conditions.

(1) Alarm sound for over range (except Ω)



-New Japan Radio Co.,Ltd.-

② Confirmation for continuity


5

5-35



(11) LCD DISPLAY FUNCTION

LCD Display pattern

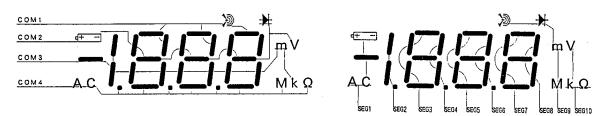

			Ð	₩
d <u>+ -</u>	b3 f2 ^{a2}	b2 f1 ^{a1}	61 f0 a0	₀₀ mV
AC	c3 P3	c2 e1 e1 e1	c1 e0 P1 d0	° ⁰ Μ k Ω

• Segment Assignment

	SEG1	SEG2	SEG3	SEG4	SEG5	SEG6	SEG7	SEG8	SEG9	SEG10
COM 1			a2	b2	a1	b1	a0	b0) >·***	
COM 2	BATT		f2	g2	f1	g1	f0	g0	→+	V
COM 3	-	b3/c3	e2	c2	e1	c1	e0	c0	m	К
COM 4	AC	p3	d2	p2	d1	p1	d0		М	Ω

-New Japan Radio Co.,Ltd.



5-37

• Display Mark Explanation

- ① [BATT MARK] (. . .)
 - [4] is displayed when either the V_{DD} or V_{ss} becomes lower than 1.1V~1.3V.
- ② [-] [-] is displayed when the DCV input is "-".
- ③ [AC]
 - [AC] is displayed when the ACV mode is selected.
- ④ [≫]
 - [>>] is displayed when the continuity check function is selected.
- **⑤** [**≯**]
- [♥] is displayed when the diode check function is selected.
- (6) [mV] [mV] is displayed when 200mV range of DCV is selected.
- 0 [V]
- [V] is displayed when 2V, 20V, 200V and 400V range of DCV and ACV is selected. (8) [Ω]
- [\Omega] is displayed when the 200 Ω range and continuity function is selected. (9 [k Ω]

-New Japan Radio Co.,Ltd.

- [k\Omega] is displayed when $2k\Omega,\,20k\Omega,\,200k\Omega$ and $2000k\Omega$ range is selected. [M\Omega]
 - [M\Omega] is displayed when the 20M Ω range is selected.

(12) Power-On Initialization

When turn on the power, the power-on-initialization circuits performs

- All LCD Display ON
- Piezo buzzer driving signal output (about 62.5mS)
- Initializing the internal circuits.

5

MARSOLUTE MAXIMUM RATINGS

(Ta=25℃)

	A E T E R	SYMBOL	RATINGS	UNIT
Supply Voltage		V _{DD1} -V _{SS1} GND -V _{SS1}	4.0 2.0	۷
Control Termina	al Input Voltage	VID	$V_{DD1} \sim V_{SS1}$	٧
Analog Terminal	Input Voltage	VIA	$V_{DD1} \sim V_{SS1}$	V
Soldering Tempe	erature	Tsol	260	C
Soldering Time		tsol	10	sec
Operating Tempe	erature Range	Topr	$0 \sim + 50$	°C
Storage Tempera	ture Range	Tstg	- 40 ~ +125	C
Input Current	Power Supply Term. ORI Terminal Oth. Terminals	dd, gnd, ss ori 1, o	士 50 士 50 士 10	mA

ELECTRICAL CHARACTERISTICS

(Ta=25°C, V_{DD1} =3.0V, GND=1.5V, DC 200mV Range)

PARAMETER	SYMBOL	CONDI	TIONS	MIN	ТҮР	MAX	UNIT
Operating Voltage	V _{DD1} GND		* 1	1.8	3.0	3.6 1.8	V
Operating Current					1.0	1.0	mA
Sampling Time	Ts				100		ms
Sampling Rate	Nr		<u> </u>		2		Times/ sec
Linearity	Lin					±0.2	360
Rollover Error	Ep	R1=10MΩ				±0.1	%F.S
Zero Input Reading	Zero	R1=series i	R1=series input resistor			0	٧
Step Up Voltage	Vss2	V _{ss2} Termin		- 2.8		V	
Input Voltage	VIH	FC1~FC4, R	FC1~FC4, RC1~RC4,				٧
	VIL	A/M Termina	ls			0.55	٧
Input Pull-up Resistance	Rı	FC1~FC4, R Terminals	C1~RC4	100	300	500	kΩ
Buzzer Driving Current	Іон		Vон=2.7V	0.25	0.75		mA
	lor	BZ Terminal	Vol=0.3V	0.25	0.75		mA
Open-circuit Voltage for OHM Measurements	۷Ω	200Ω~20MΩ	2		0.43		V
	V _H	COM1~COM4			-1.03		
Output Voltage	VL	SEG1~SEG10 (LCD driving waveform)			-2.07		V
	VDSP				-3.10		
		VI	Vin=OmV			± 10	рĄ
Input Leakage Current	Ιп	Terminal	Vin=±200mV			±100	рĄ


* 1) V_{DD1A} and V_{DD1D} are same voltage, so V_{DD1} is a generic term.

5-38-



LCD Driving Waveform

(1/4duty,DC200mV Range, Vin=OmV)

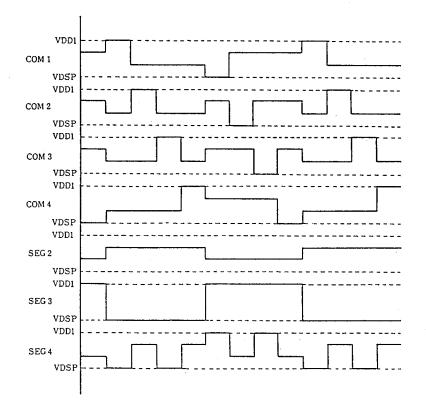


5

5-39

— New Japan Radio Co.,Ltd.

APPLICATION CIRCUIT (Auto-Range DMM)

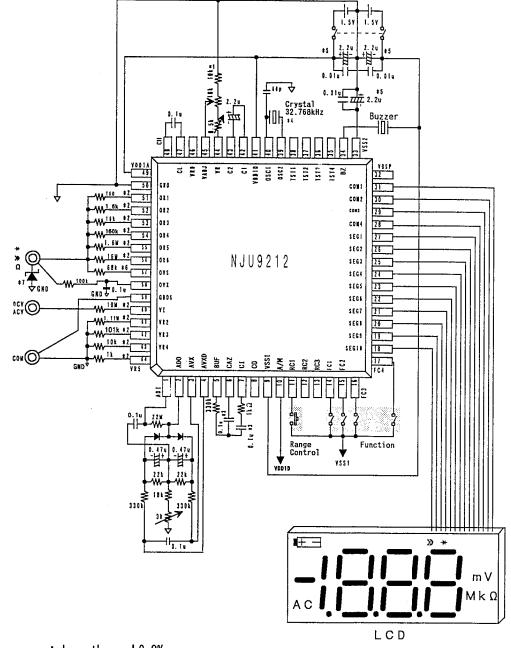

5

- *1 : Accuracy : less than $\pm 0.2\%$ The relative error of temperature characteristics : less than ± 50 ppm.
- *2 : Accuracy : less than ±0.5% No mentioned resistor : less then ±1.0%
- *3 : Polypropylene film capacitor
- *4 : Quartz Crystal : 32.768kHz, Cl \leq 30k Ω
- *5 : Decoupling Capacitor should be connected between V_{DD} and GND, V_{SS1} and GND, V_{SS2} and GND.
- *6 : Diode-check-function, if you demand to indicate at accuracy when input-terminal is released ,replace resistance of 68kΩ with variable-resistance and regulate it.
- *7 : Surely, connect Zenner-diode for input protection.
- *8 : If you demand to high level accuracy, regulate resistance for attenuator.

5-40————New Japan Radio Co.,Ltd.—

MEMO

[CAUTION] The specifications on this databook are only given for information , without any guarantee as regards either mistakes or omissions. The application circuits in this databook are described only to show representative usages of the product and not intended for the guarantee or permission of any right including the industrial rights.

New Japan Radio Co.,Ltd.